


## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

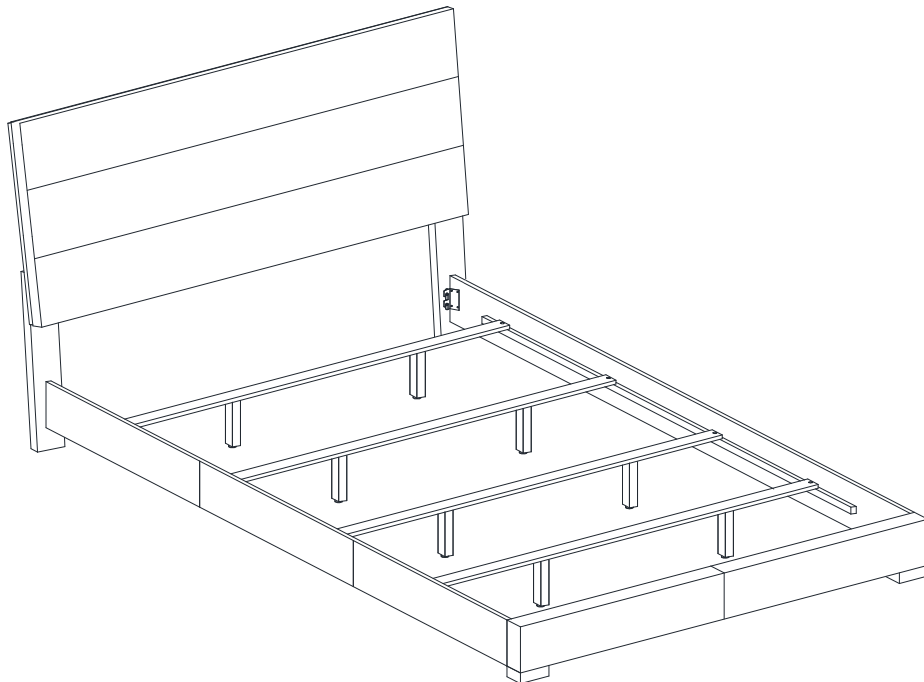

*Fine Furniture for every stage of life*

## **203501KW (B1&B2)** **California King Bed**

# ITEM: 203501KW (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION


### B1 ( BOX 1)

A HEADBOARD PANEL




1PC

B RIGHT HEADBOARD  
LEG



1PC

C LEFT HEADBOARD  
LEG



1PC

### B2 ( BOX 2)

D BED SLAT




4PCS

E BED SLAT SUPPORT  
WITH LEVELER




8PCS

F BED RAIL




2PCS

G FOOTBOARD LEG




2PCS

H FOOTBOARD PANEL



1PC

HB  
203501KW (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

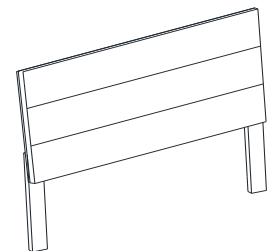

1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 203501KW (B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





### WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 203501KW (B1)

|   |                                                |                                                                                   |      |   |                                           |                                                                                     |      |
|---|------------------------------------------------|-----------------------------------------------------------------------------------|------|---|-------------------------------------------|-------------------------------------------------------------------------------------|------|
| 1 | <b>BOLT</b><br>(M6 x 30mm - BLK)               |  | 6PCS | 3 | <b>FLAT WASHER</b><br>(1/4" X 13mm - BLK) |  | 6PCS |
| 2 | <b>SMALL ALLEN WRENCH</b><br>(M4 x 60MM - BLK) |  | 1PC  | 4 | <b>LOCK WASHER</b><br>(1/4" - BLK)        |  | 6PCS |

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203501KW (B2)

|   |                                                   |                                                                                     |      |   |                                                |                                                                                       |     |
|---|---------------------------------------------------|-------------------------------------------------------------------------------------|------|---|------------------------------------------------|---------------------------------------------------------------------------------------|-----|
| 5 | <b>SHORT FLAT HEAD SCREW</b><br>(M4 x 32mm - RBW) |  | 8PCS | 8 | <b>SMALL ALLEN WRENCH</b><br>(M4 x 60MM - BLK) |  | 1PC |
| 6 | <b>LONG FLAT HEAD SCREW</b><br>(M4 x 50mm - RBW)  |  | 6PCS | 9 | <b>BIG ALLEN WRENCH</b><br>(M5 x 65MM - BLK)   |  | 1PC |
| 7 | <b>BOLT</b><br>(M4 x 40mm - BLK)                  |  | 8PCS |   |                                                |                                                                                       |     |

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **203501KW (B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

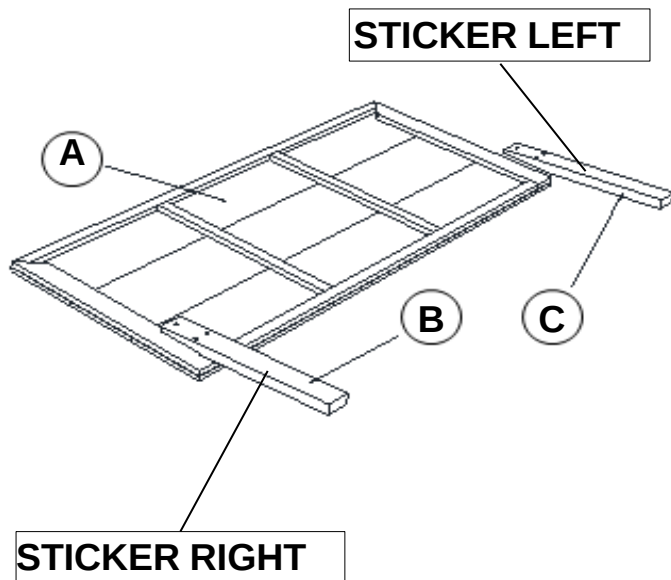


### STEP 2

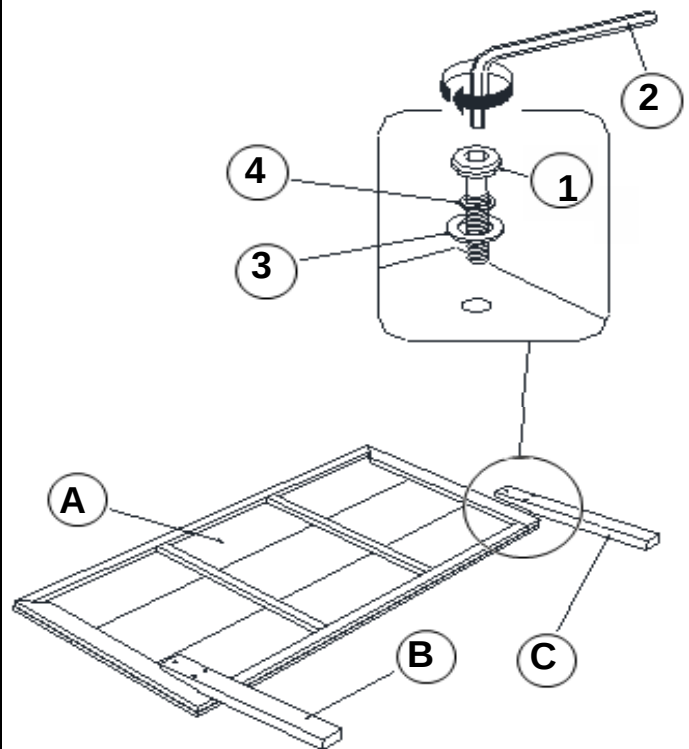

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

### STEP 3

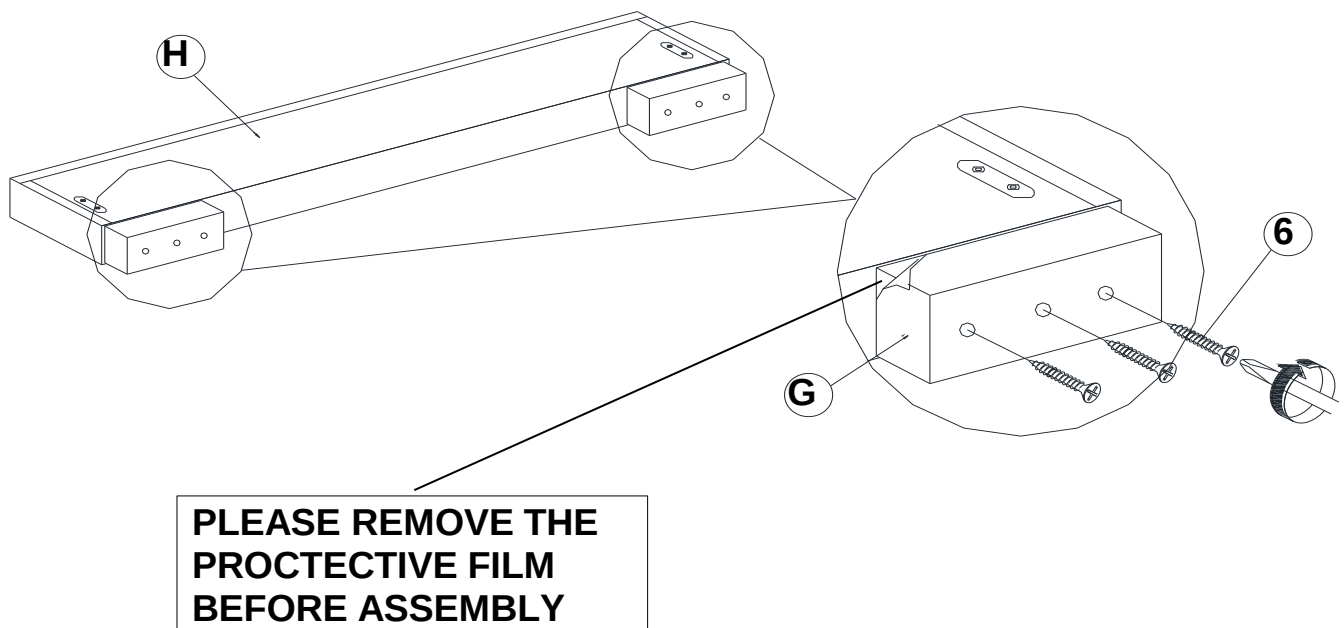


ITEM: **203501KW (B1&B2)**




## ASSEMBLY INSTRUCTIONS


### STEP 4

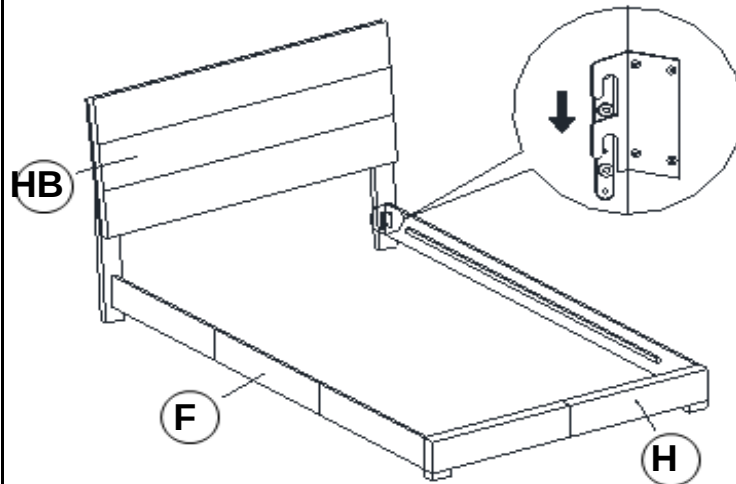


### STEP 5

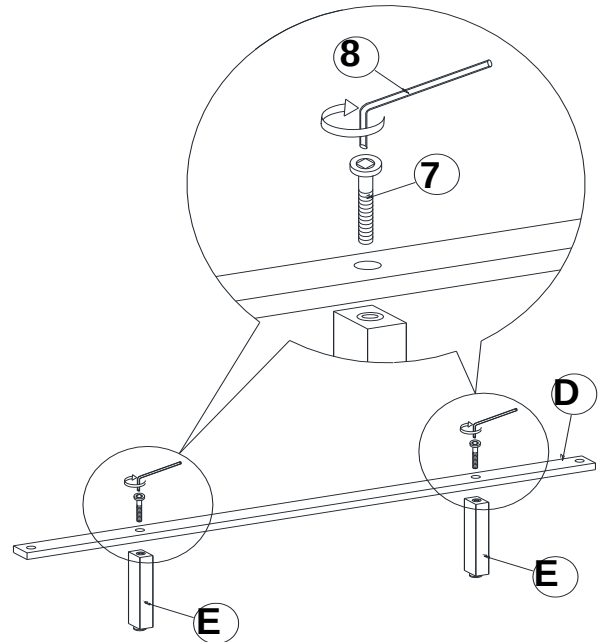

### STEP 6

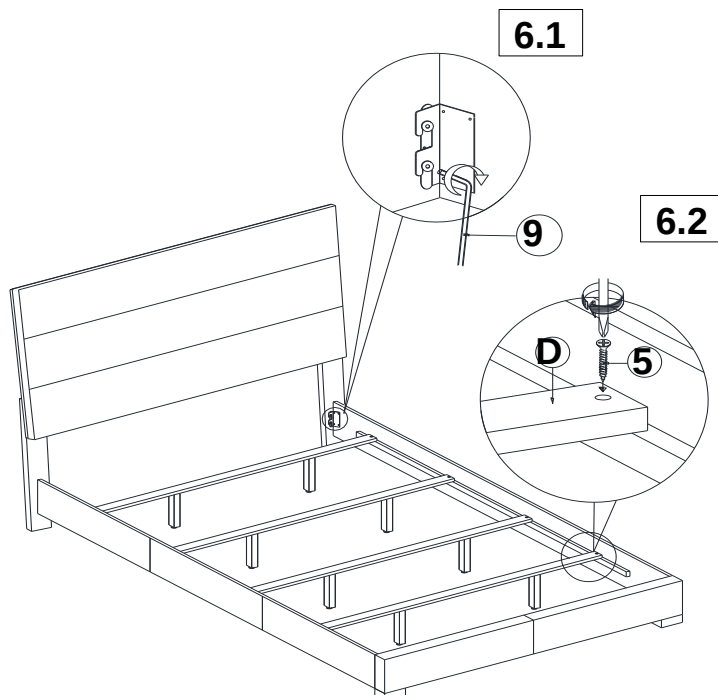


### STEP 7 COMPLETE

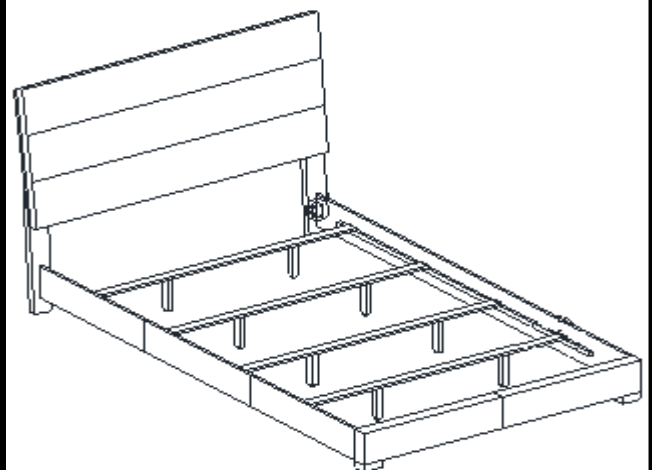

ITEM: **203501KW**



Inner Size : 72.75"W X 85.25"D

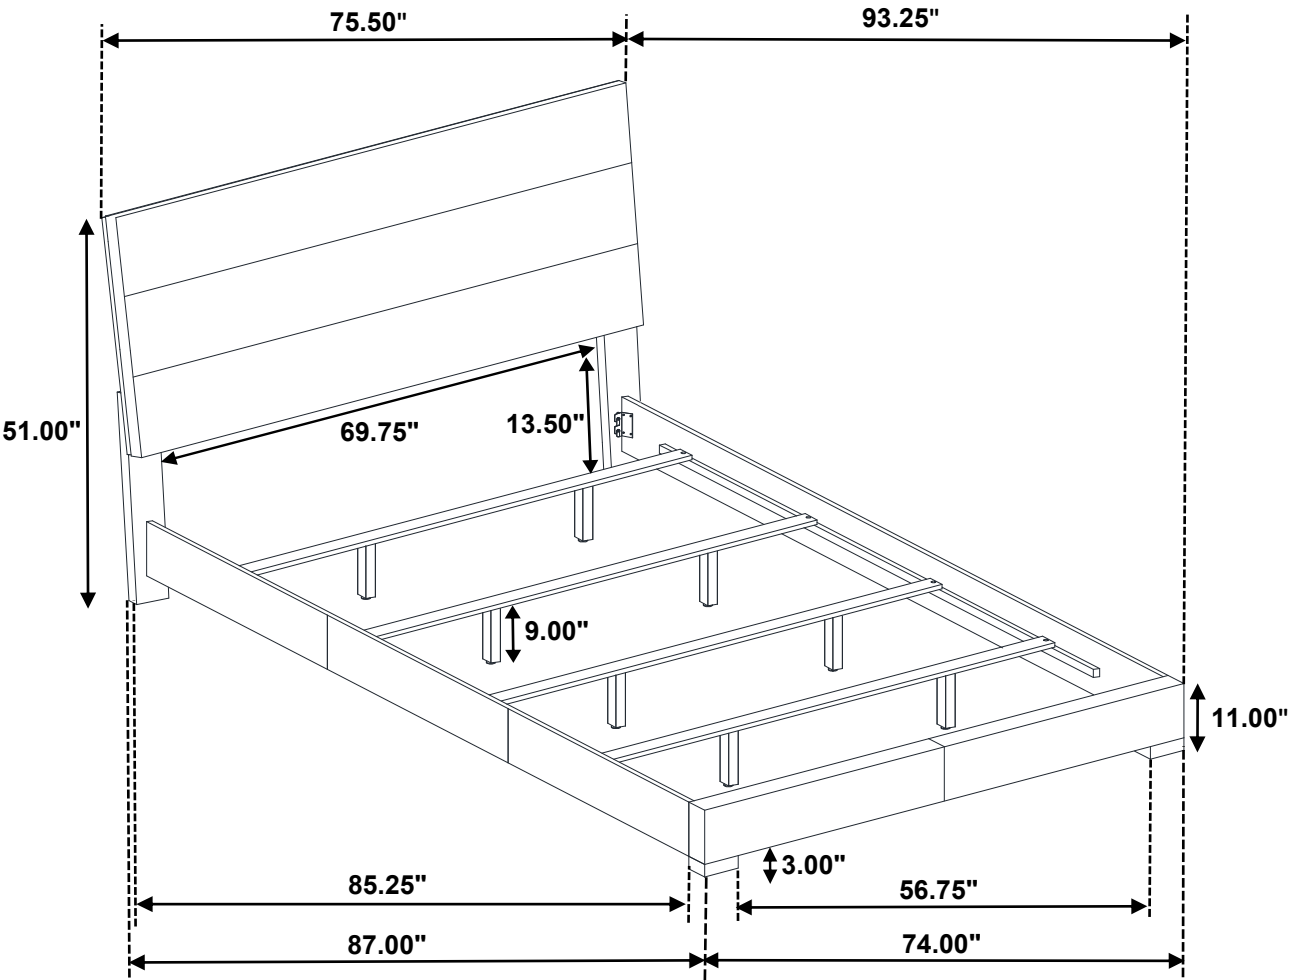

Note : Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*



**203502**  
***Nightstand***

ITEM: **203502**

## ASSEMBLY INSTRUCTIONS



### REMOVAL OF PROTECTIVE FILM

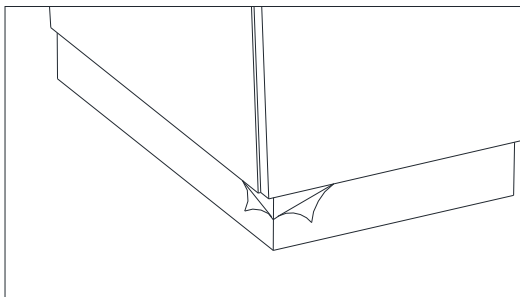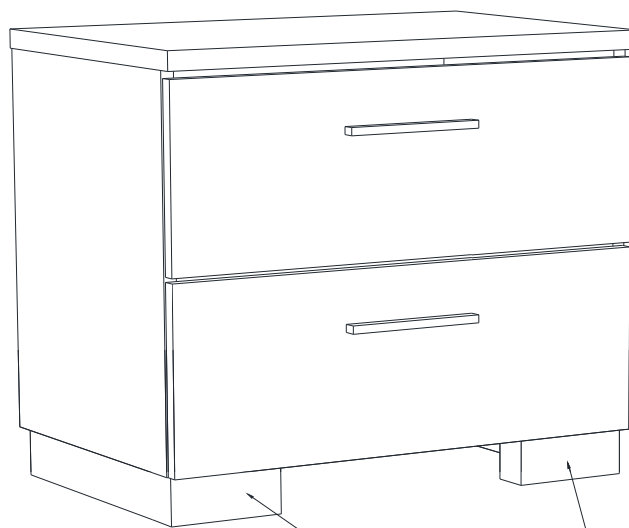


**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



ITEM: **203502**



**Inner Size of Drawer : 20.00"W x 12.50"D x 5.00"H x 0.25"T**

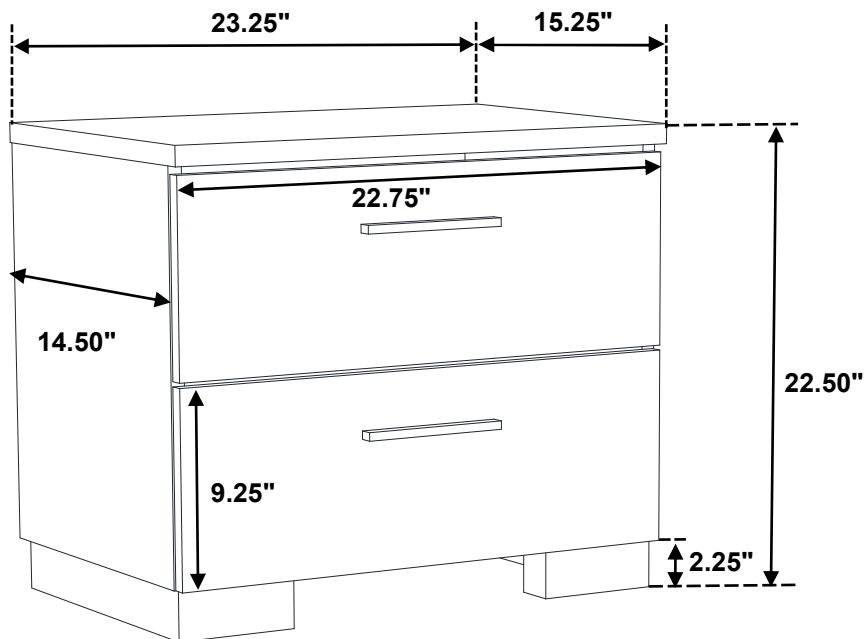

**Note : Dimension tolerance  $\pm$  5%**



## *ASSEMBLY INSTRUCTIONS* *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**203503**  
***Dresser***


REVISION 0 : 05/16/2014  
REVISION 1 : 05/27/2014  
REVISION 2 : 07/26/2019

ITEM: **203503**

## ASSEMBLY INSTRUCTIONS



### REMOVAL OF PROTECTIVE FILM

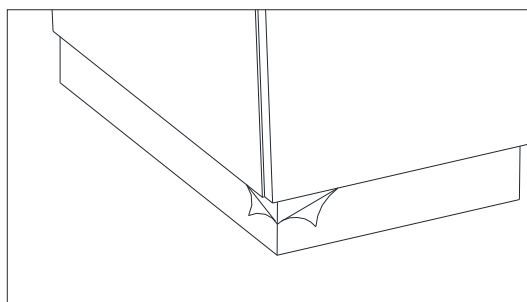


**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



ITEM: **203503**




**Inner Size of Drawer : 28.75"W x 12.50"D x 5.00"H x 0.25"T**

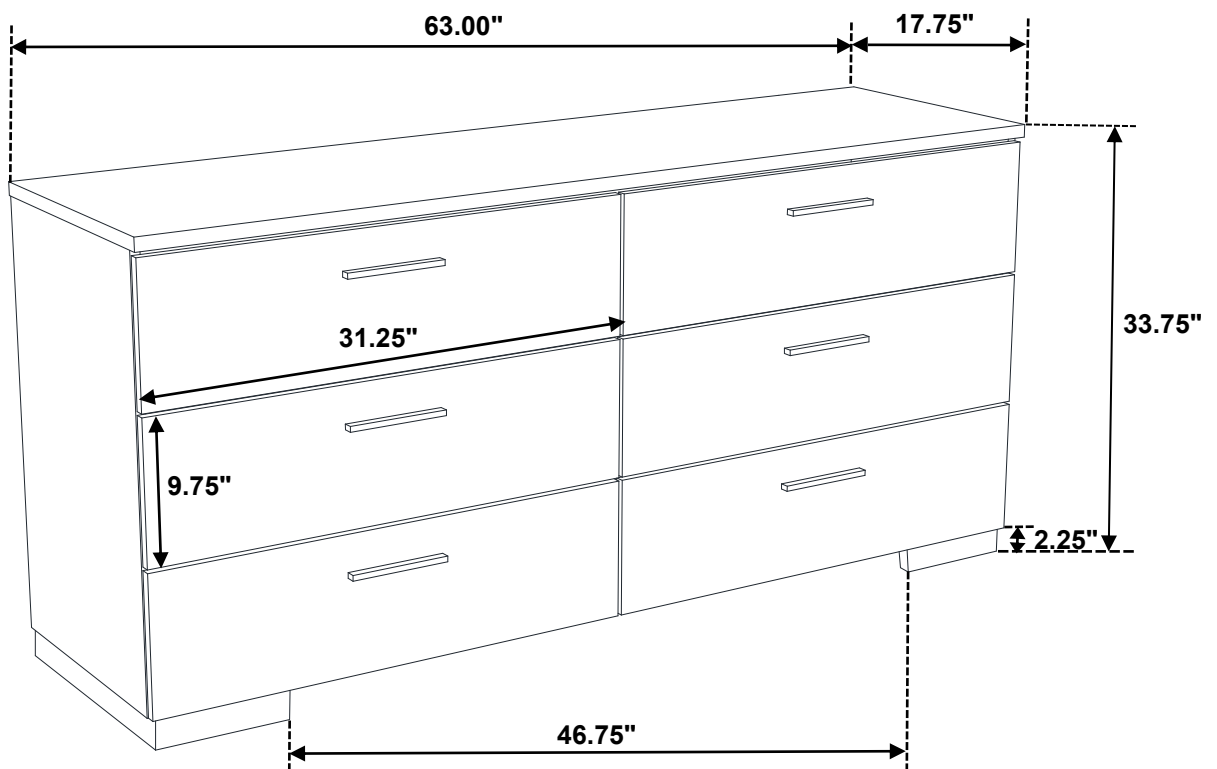

**Note : Dimension tolerance  $\pm$  5%**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

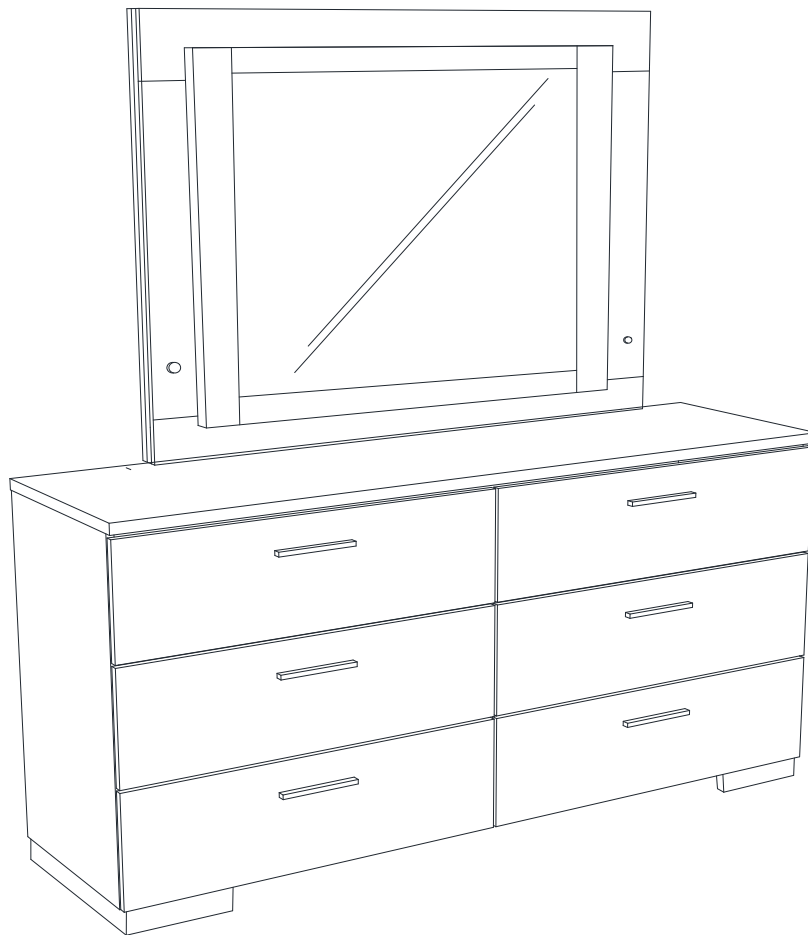

*Fine Furniture for every stage of life*

**203504LED**  
**LED Mirror**

ITEM: **203504LED**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME


10 MINUTES

## PARTS IDENTIFICATION

A

MIRROR

1PC

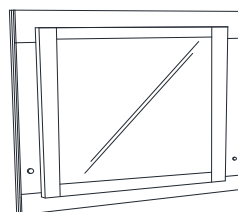

B

DRESSER  
FROM BOX ITEM # 203503


1PC



C

MIRROR SUPPORT  
(PACK WITH DRESSER)

2PCS



D

ADAPTER PLUG

1PC



## HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW  
(M4 x 32mm - RBW)

10PCS



### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **203504LED**




## ASSEMBLY INSTRUCTIONS

### STEP 1

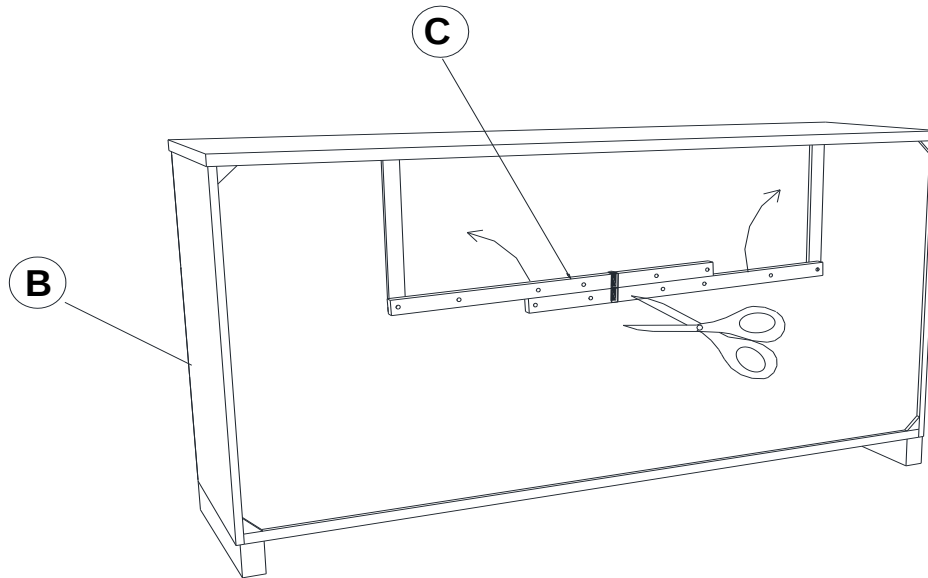

### STEP 2

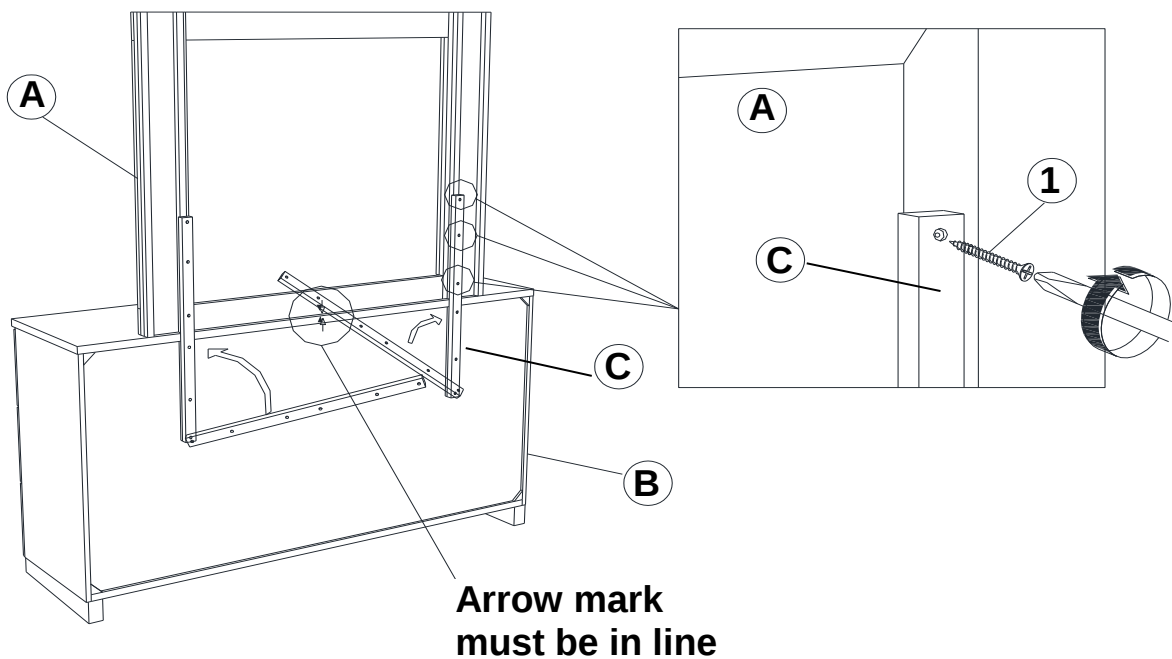


**\*\*BACK VIEW**

ITEM: **203504LED**



## ASSEMBLY INSTRUCTIONS


### STEP 3

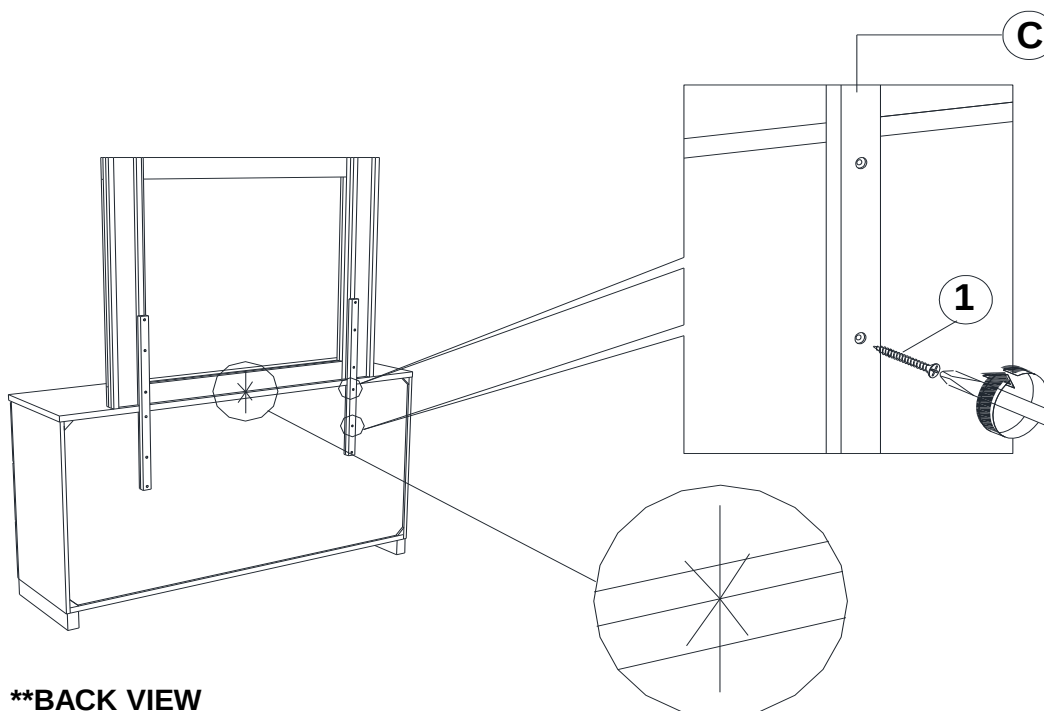

**Arrow Marking Must Be Aligned**

### STEP 4


### **COMPLETE**

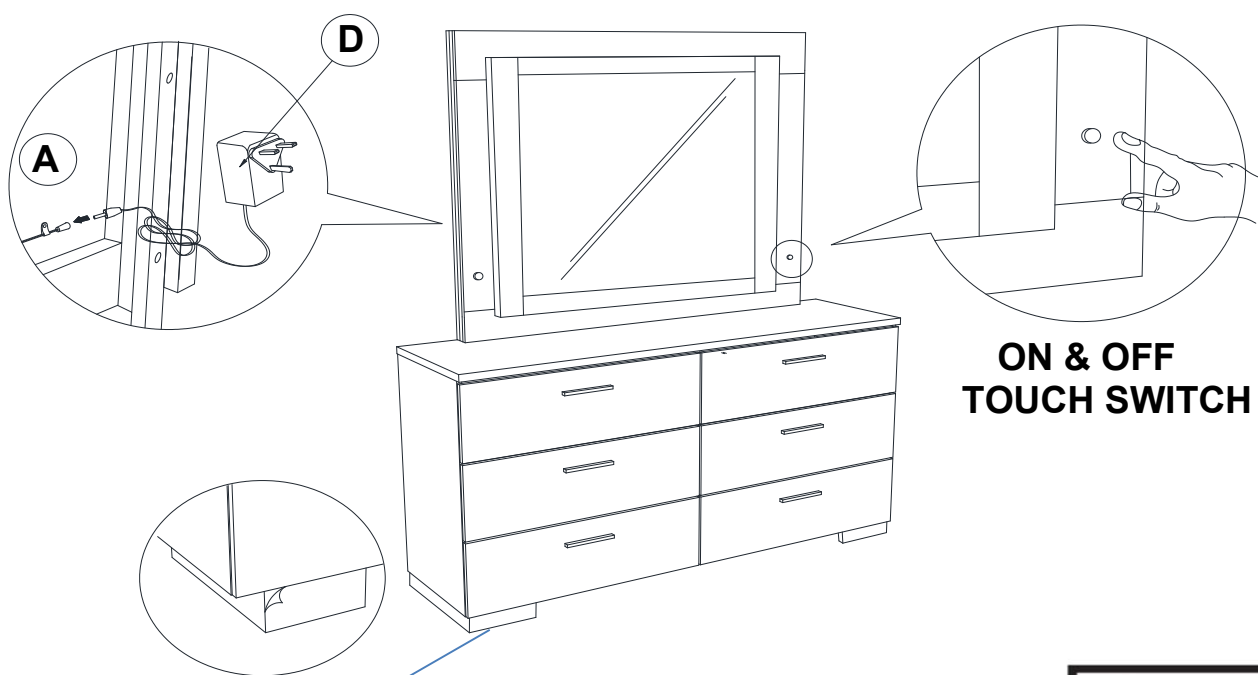

**PLEASE REMOVE THE  
PROTECTIVE FILM BEFORE USE**



ITEM: **203504LED**

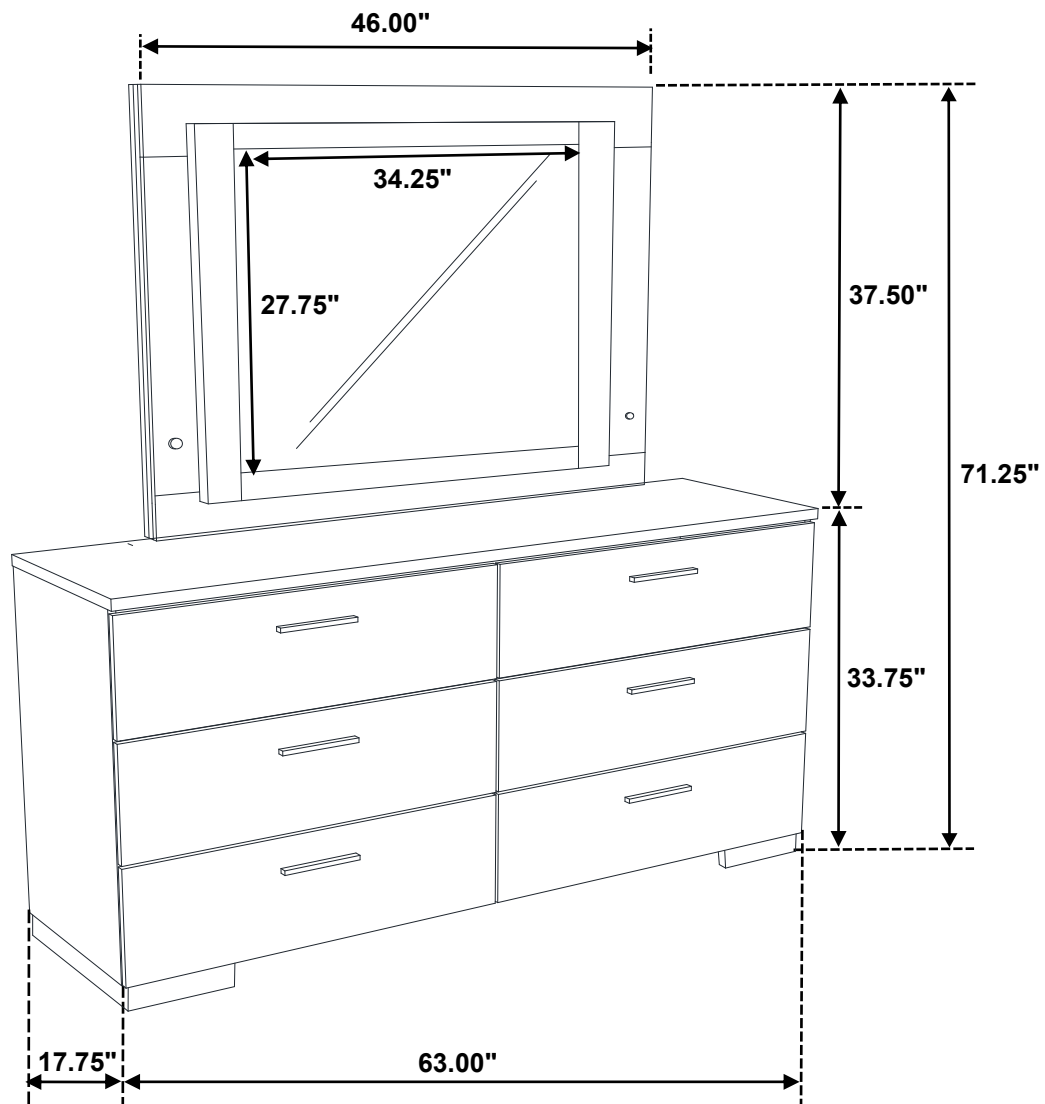

Note : Dimension tolerance  $\pm 5\%$