


THE IMAGES ARE FOR REFERENCE ONLY


STEP 1: LEG INSTALLATION

WITH THE ASSISTANCE OF ANOTHER PERSON, POSITION THE METAL LEG AGAINST THE UNDERSIDE OF THE TABLETOP, AS SHOWN IN DETAIL A1. ENSURE THAT THE MOUNTING HOLES ON THE LEG ALIGN PRECISELY WITH THE PRE-DRILLED HOLES ON THE SURFACE.

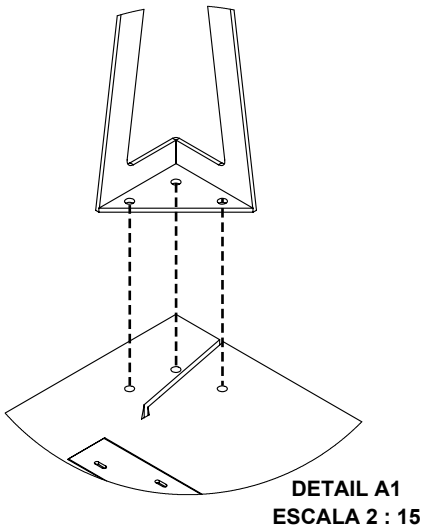


STEP 2: FASTENING THE LEG

INSERT THE 5/16" X 1-1/4" HEXAGONAL HEAD WOOD SCREWS THROUGH THE ALIGNED HOLES ON THE LEG AND INTO THE PRE-DRILLED HOLES IN THE COUNTERTOP (CTOP), AS SHOWN IN DETAIL B1. USE A POWER DRILL ONLY TO SECURE ALL SCREWS. DO NOT OVERTIGHTEN TO AVOID DAMAGING THE COMPONENTS.

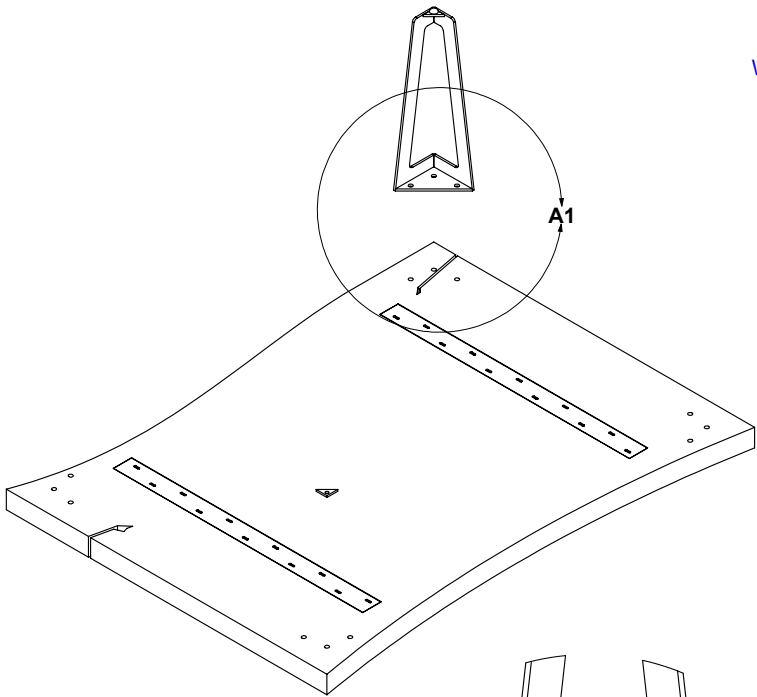


HEXAGONAL HEAD
WOOD SCREW- 5/16 X 1-1/4"

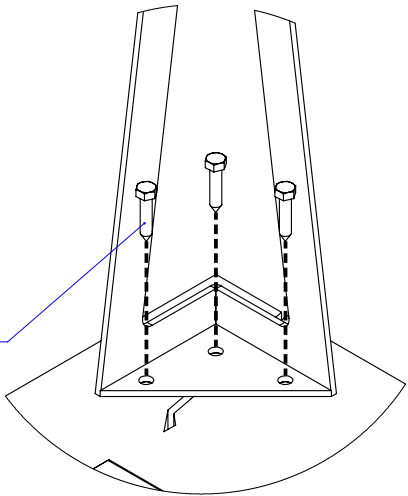

DETAIL B1
ESCALA 1 : 5

STEP 3: FINAL POSITIONING

CAREFULLY TURN THE TABLE OVER AND PLACE IT IN THE DESIRED LOCATION, ENSURING IT SITS LEVEL AND STABLE.

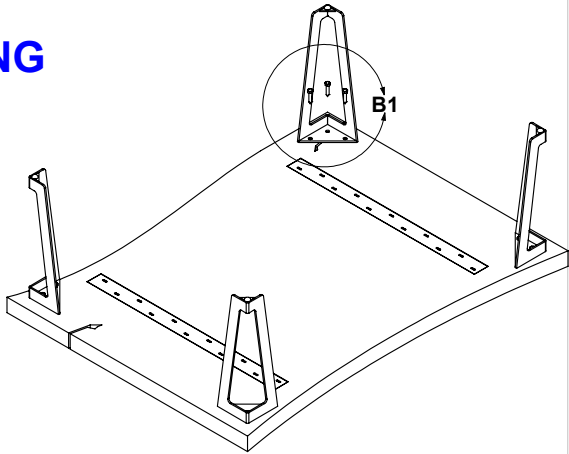

DESCRIPTION	#
HEXAGONAL HEAD WOOD SCREWS 5/16 X 1-1/4"	12



ASSEMBLY INSTRUCTIONS

I-MIX-E015