


ASSEMBLY INSTRUCTIONS

MY-10700-X-TF2

MY-10700-X-TF3

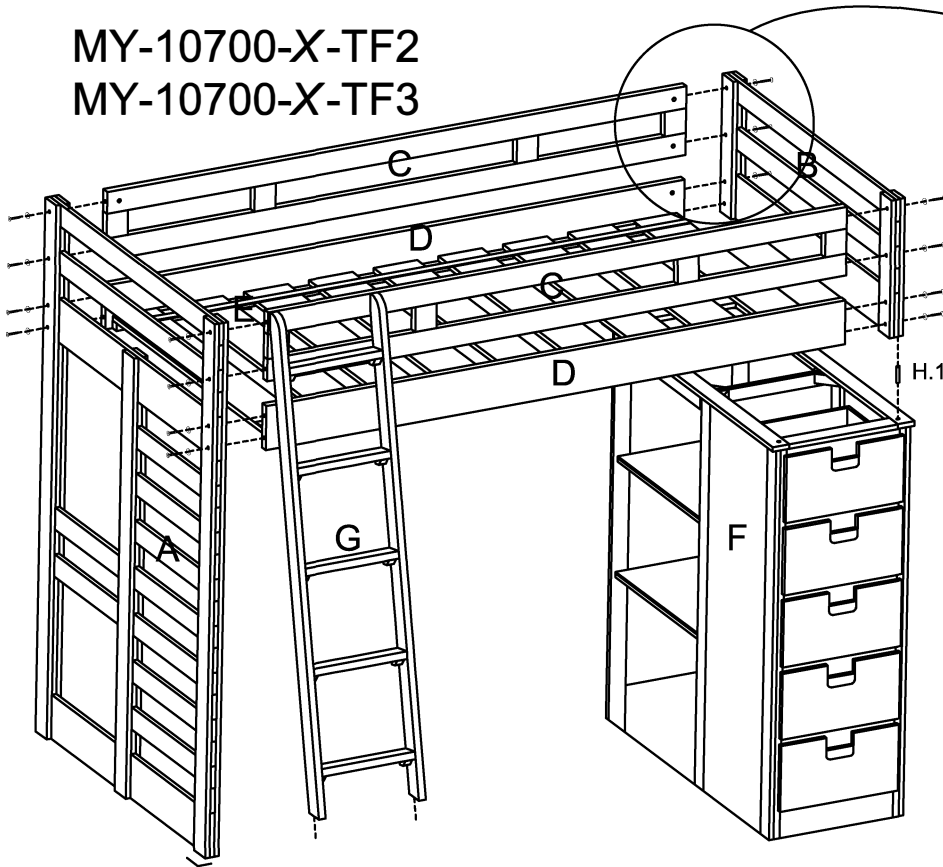

STEP 1

STEP 2

STEP 3

PART LIST			
No.	SKU	DESCRIPTION	Qty
A	MY-10700-X-C26	Tall Twin Bunk End	1
B	MY-10700-X-C15	3/3 Upper Loft End	1
C	MY-10700-X-C14	Guard Rails	2
D	MY-10700-X-C27	Side Rails	2
E	MY-10700-UC27	Twin Roll-out Slats	1
F	MY-10700-X-C16/ MY-10700-X-C12	5 Drawers Loft Bookcase OR Loft Desk	1
G	MY-10700-X-C17	Loft Ladder	1

* Half in the Tall Twin Bunk End box and half in the 3/3 Upper Loft End box

HARDWARE LIST			
No.	DESCRIPTION	SKU	Qty
H.0	FLAT WASHER	PMY-10700-BLHW	16 (8+8) *
H.1	METAL DOWELS		2
H.2	ALLEN BOLT 1/4 4"		16 (8+8) *
H.3	BARREL NUTS		16 (8+8) *
H.4	WOOD SCREW 1"		34
H.5	METAL SQUARE		2
	ALLEN WRENCH		1


TOOLS REQUIRED: DRILL AND FLAT HEAD SCREWDRIVER

Make sure you have all parts before beginning assembly. Two persons are needed for assembly. Do not fully tighten all bolts until assembly is completed.


1. Insert two Metal Dowels (H.1) into the predrilled holes of the upper corner of the 5 Drawers Loft Bookcase or Loft Desk (F), and place the 3/3 Upper Loft End (B) on the 5 Drawers Loft Bookcase or Loft Desk (F), as shown in the detail picture.
2. Attach two Metal Squares (H.5) at the Loft Desk (F) or at the Loft Bookcase (F) and 3/3 Upper Loft End (A) with 4 Wood Screw 1" (H.4) for each Metal Square as shown in the next page.
3. Attach two Side Rails (D) and two Guard Rails (C) to the Tall Twin Bunk End (A) and 3/3 Upper Loft End (B) with 16 Allen Bolts (H.2), 16 Flat Washer (H.0) and 16 Barrel Nuts (H.3), and tighten.
4. Place Twin Roll out Slats Kit (E) across the upper bed surface stretching slats from bed end to bed end. Secure all the 9 slats with 18 Wood Screws (H.4) as shown in the next page.
5. Add the mattress not to exceed 6" in thickness including foundation.

ASSEMBLY INSTRUCTIONS


MY-10700-X-TT2

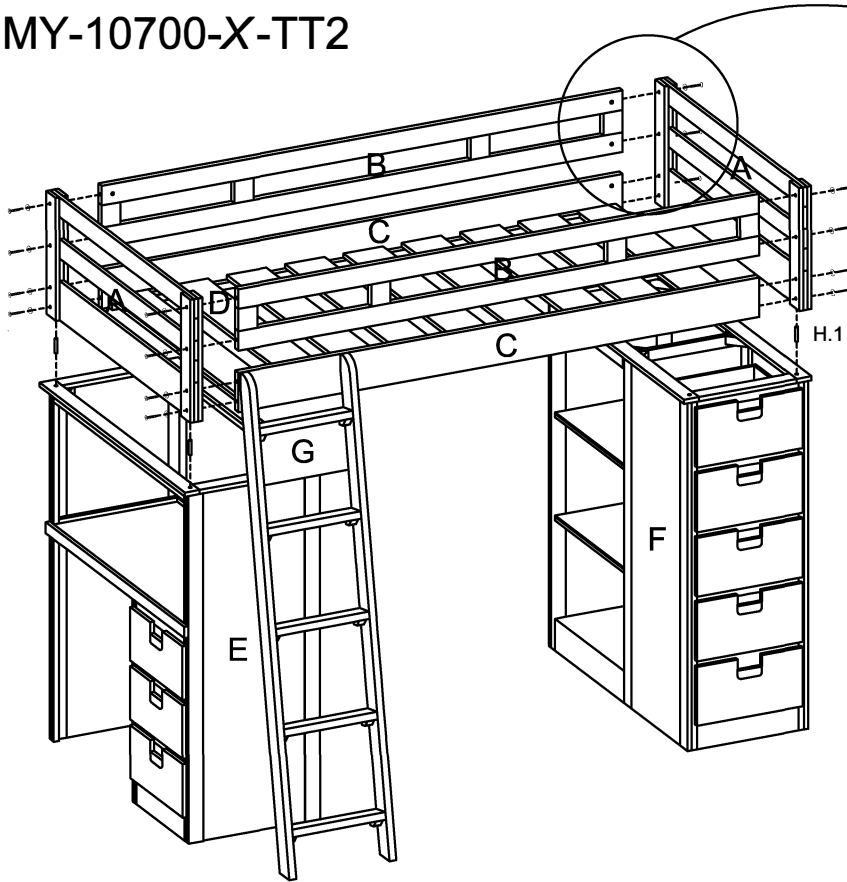


STEP 1

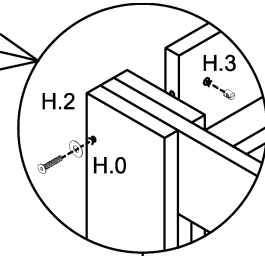

STEP 2

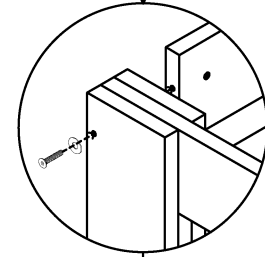

STEP 3

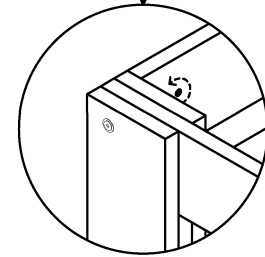

PART LIST			
No.	SKU	DESCRIPTION	Qty
A	MY-10700-X-C15	3/3 Upper Loft End	2
B	MY-10700-X-C14	Guard Rails	2
C	MY-10700-X-C27	Side Rails	2
D	MY-10700-UC27	Twin Roll-out Slats	1
E	MY-10700-X-C16	Loft Desk	1
F	MY-10700-X-C12	5 Drawers Loft Bookcase	1
G	MY-10700-X-C17	Loft Ladder	1

* Half in the first $\frac{3}{4}$ Upper Loft End box and half in the second $\frac{3}{4}$ Upper Loft End box.


HARDWARE LIST			
No.	DESCRIPTION	SKU	Qty
H.0	FLAT WASHER	PMY-10700-BLHW	16 (8+8) *
H.1	METAL DOWELS		2 (2+2) *
H.2	ALLEN BOLT 1/4 4"		16 (8+8) *
H.3	BARREL NUTS		16 (8+8) *
H.4	WOOD SCREW 1"		34
H.5	METAL SQUARE		4 (2+2) *
	ALLEN WRENCH		1

TOOLS REQUIRED: DRILL AND FLAT HEAD SCREWDRIVER



Make sure you have all parts before beginning assembly. Two persons are needed for assembly. Do not fully tighten all bolts until assembly is completed.

1. Insert two Metal Dowels (H.1) into the predrilled holes of the upper corner of the 5 Drawers Loft Bookcase or Loft Desk (E/F), and place the $\frac{3}{4}$ Upper Loft End (B) on the 5 Drawers Loft Bookcase or Loft Desk (E/F), as shown in the detail picture.
2. Attach four Metal Squares (H.5) at the Loft Desk (E) or at the Loft Bookcase (F) and $\frac{3}{4}$ Upper Loft End (A) with 4 Wood Screw 1" (H.4) for each Metal Square as shown in the next page.
3. Attach two Side Rails (D) and two Guard Rails (C) to the two $\frac{3}{4}$ Upper Loft End (B) with 16 Allen Bolts (H.2), 16 Flat Washer (H.0) and 16 Barrel Nuts (H.3), and tighten.
4. Place Twin Roll out Slats Kit (E) across the upper bed surface stretching slats from bed end to bed end. Secure all the 9 slats with 18 Wood Screws (H.4) as shown in the next page.
5. Add the mattress not to exceed 6" in thickness including foundation.

METAL SQUARE DETAIL

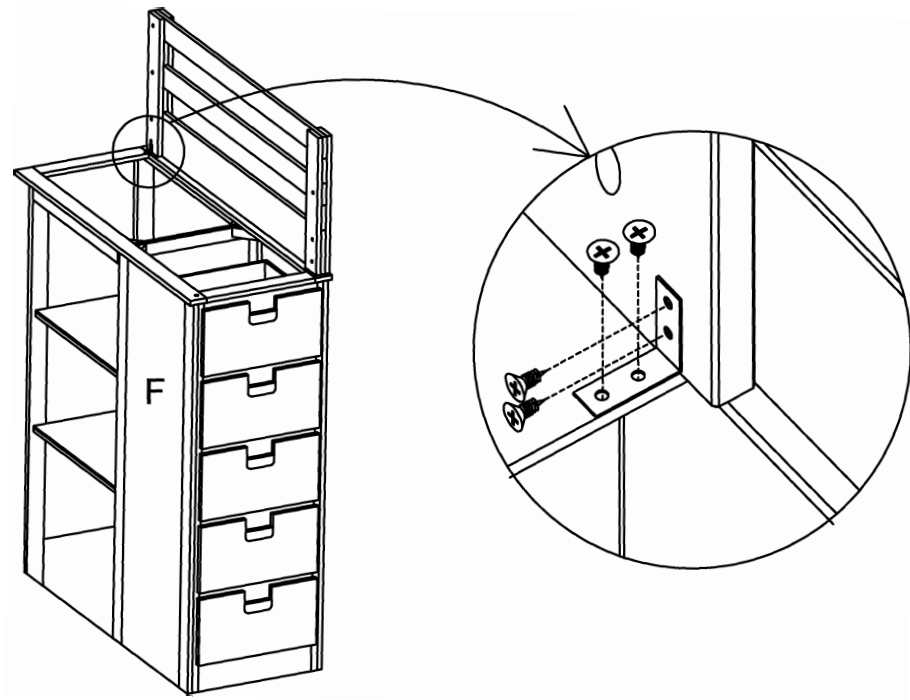


ROLL OUT SLAT KIT INSTALLATION

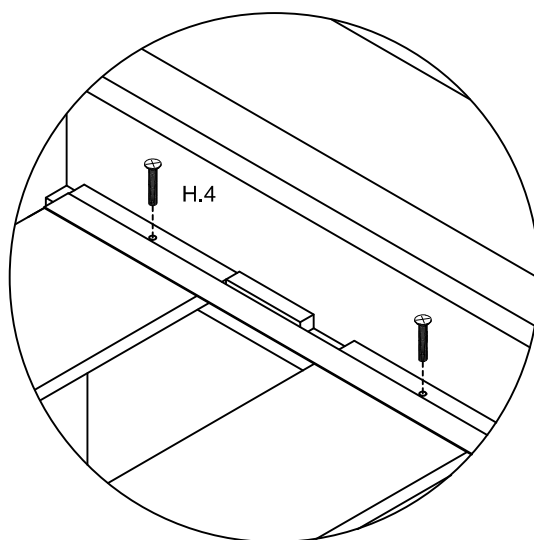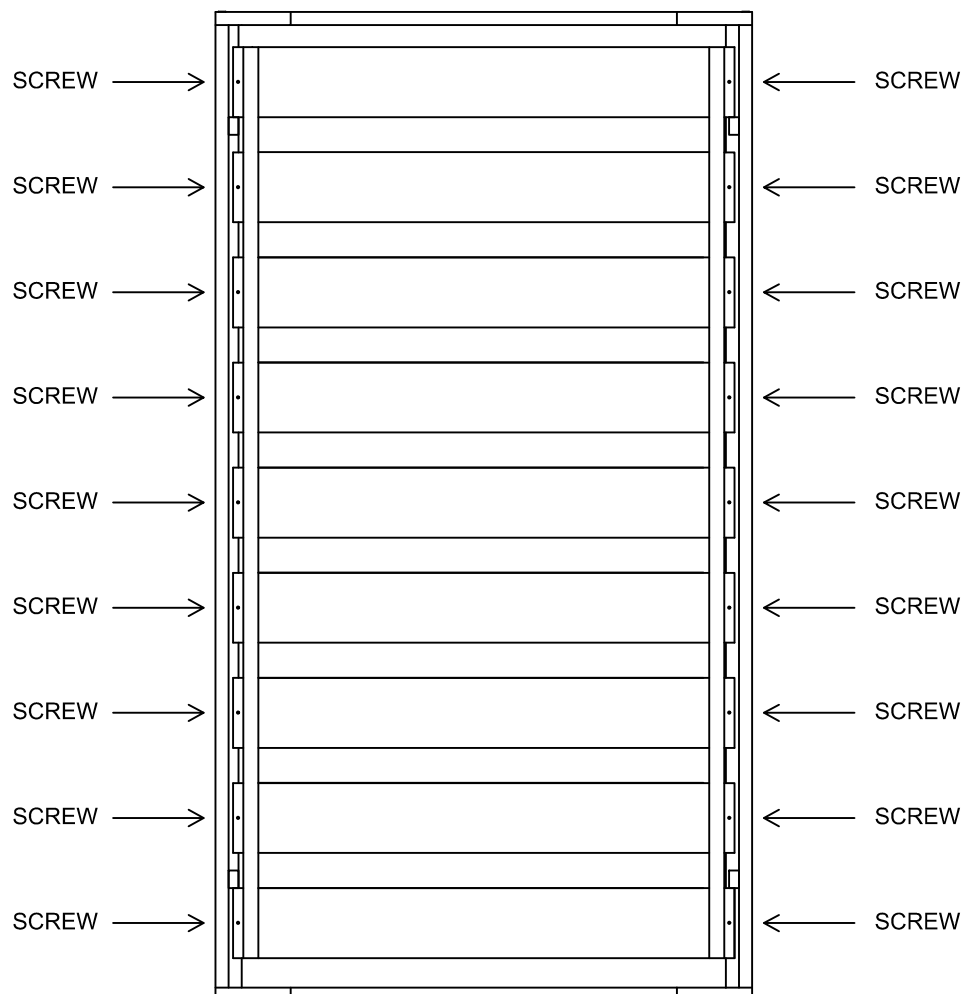


OPTIONAL ITEMS COMBINATIONS

THE 5 DRAWERS LOFT BOOKCASE OR LOFT DESK CAN BE REVERSED DEPENDING ON CONSUMER PREFERENCE

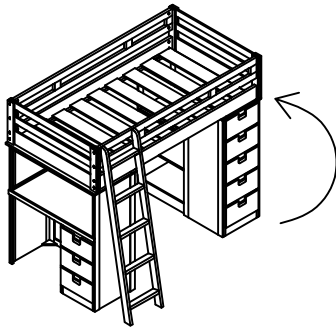


OPTION 1

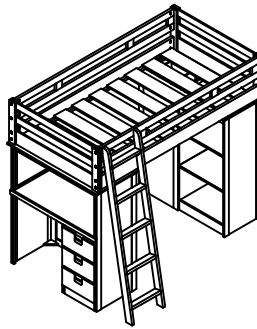


OPTION 2

WITH TWO 5 DRAWERS LOFT BOOKCASES OR WITH TWO LOFT DESKS *

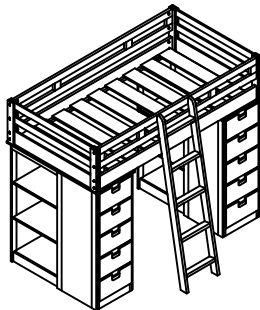


OPTION WITH TWO 5 DRAWERS LOFT BOOKCASE

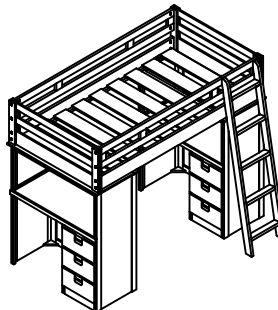


OPTION WITH TWO LOFT DESK

WITH TWIN ROLLER BED OR WITHOUT TWIN ROLLER BED *


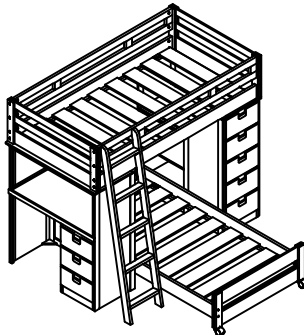


WITH TWIN ROLLER BED

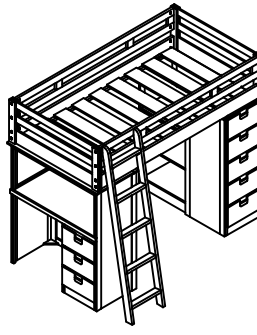


WITHOUT TWIN ROLLER BED

STAIRCASE CAN BE ON THE LEFT OR THE RIGHT SIDE OF THE SUPER LOFT

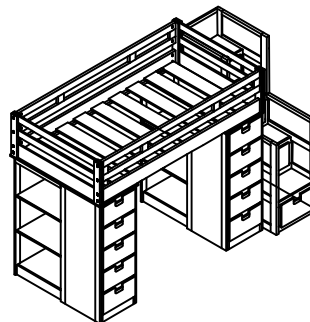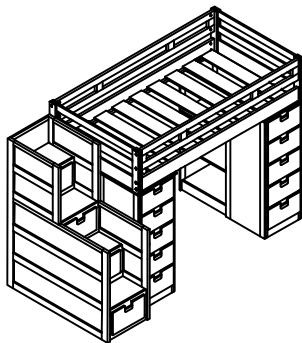

* TWIN ROLLER BED IS NOT POSSIBLE TO USE WITH TWO LOFT DESKS

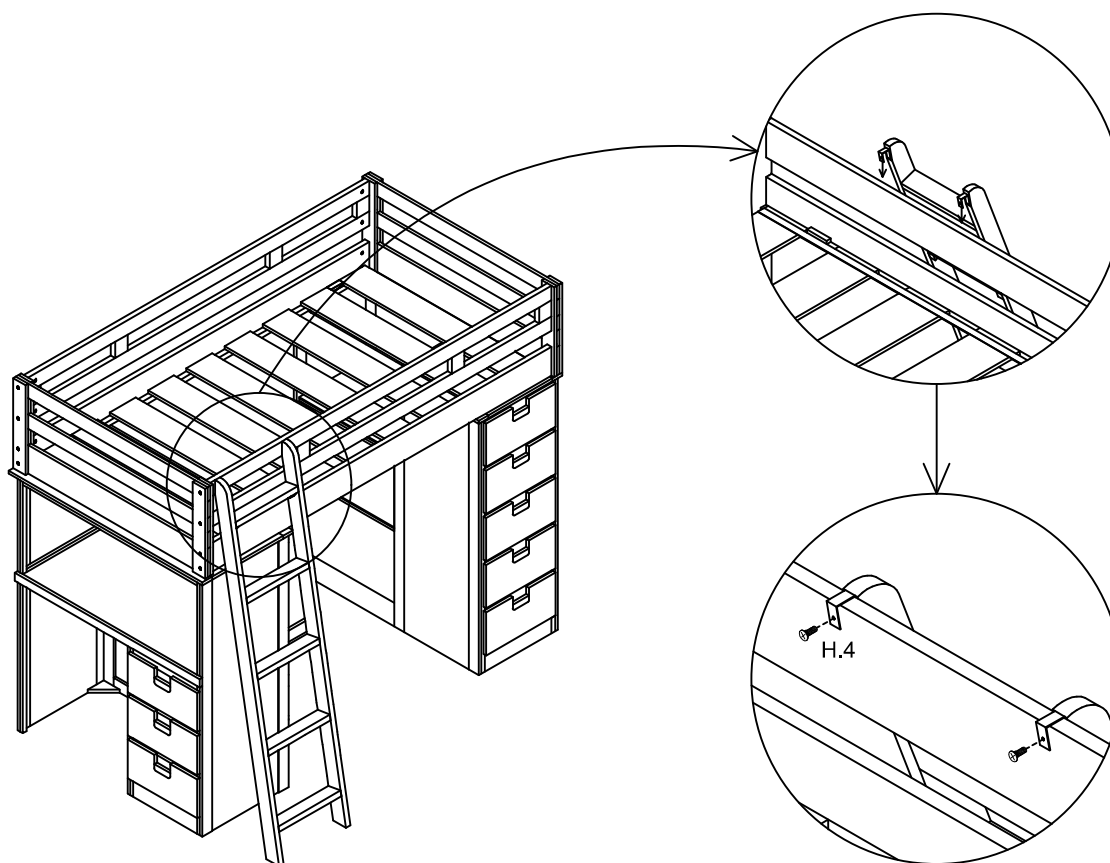

Make sure you have all parts before beginning assembly. Two persons are needed for assembly. Do not fully tighten all bolts until assembly is completed.

1. Decide where you prefer to install the Ladder (G), on the guard rail or on the Headboard/Footboard.
2. Lift the Ladder (G) and place the hooks on the side of the bed chosen.
3. Secure the Ladder to the bed with 2 Wood Screws (H.4), with the help of a drill or a screwdriver.

SAFETY WARNING

Our Bunk Beds have been tested by an Independent Laboratory and are certified to be in compliance with: ASTM F-1427-19, "Standard Consumer Safety Specification for Bunk Beds" and U.S. Government specifications 16 Code of Federal Regulations, parts 1213 and 1513.

SAFETY WARNINGS

1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent likelihood of entrapment or falls.
3. Surface of mattress must be at least five inches (127 mm) below the upper edge of guardrails.
4. Do not allow children under 6 years of age to use the upper bunk.
5. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
6. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder or the bed ends for entering or leaving the upper bunk.
9. Do not use substitute parts. Contact manufacturer or dealer for replacement parts.
10. Use of a night light may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall. (This applies only to bunk beds without two full-length guardrails)
12. The use of water or sleep flotation mattress is prohibited.
13. Keep these instructions for future reference.

STRANGULATION HAZARD

14. Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.

SIZE OF MATTRESS AND FOUNDATION

Your Twin bed is designed to use a mattress 38" in width and 75" in length.

Your Full bed is designed to use a mattress 54" in width and 75" in length.

The total thickness of the mattress and foundation (slat kit, bunk board, etc.) combined must not exceed 6"

Note: There must be at least 5" from mattress sleeping surface to top edge of guardrail.

REPLACEMENT PART

Replacement parts, including additional guardrail, may be obtained from your furniture dealer: Baramhf (Vila furniture)