



New  
Classic®  
FURNITURE

## ASSEMBLY INSTRUCTION

BA9698-110 VALENTINO 6/6-6/0 K LIGHTED HEADBOARD

BA9698-310 VALENTINO 5/0 Q LIGHTED HEADBOARD

BA9698-410 VALENTINO 4/6 F HEADBOARD

BA9698-510 VALENTINO 3/3 T HEADBOARD



Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and hardware list shown below.

PARTS LIST			
NO	DESCRIPTION	SKETCH	QTY
A	Headboard		1pc
B	Headboard Left Side Facing (LSF) Leg		1pc
C	Headboard Right Side Facing (RSF) Leg		1pc

HARDWARE LIST			
NO	DESCRIPTION	SKETCH	QTY
1	Allen Key - M5		1pc
2	Bolt - M8 x 1-3/8"		6pcs
3	Spring Washer - 5/16"		6pcs
4	Flat Washer - M8		6pcs
5	AC/DC Adapter		1pc

PLACE WOOD PARTS ON A  
CLEAN NON-ABRASIVE SURFACE

**Step 1:** Assemble the LSF LEG (B) and RSF LEG (C) to the Headboard (A) by using the Allen Key (1) with hardware Bolt (2), Spring Washer (3), and Flat Washer (4).

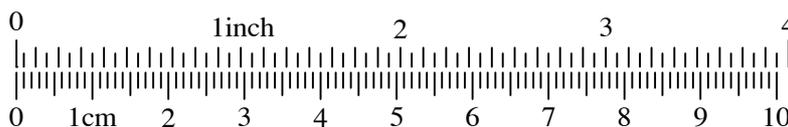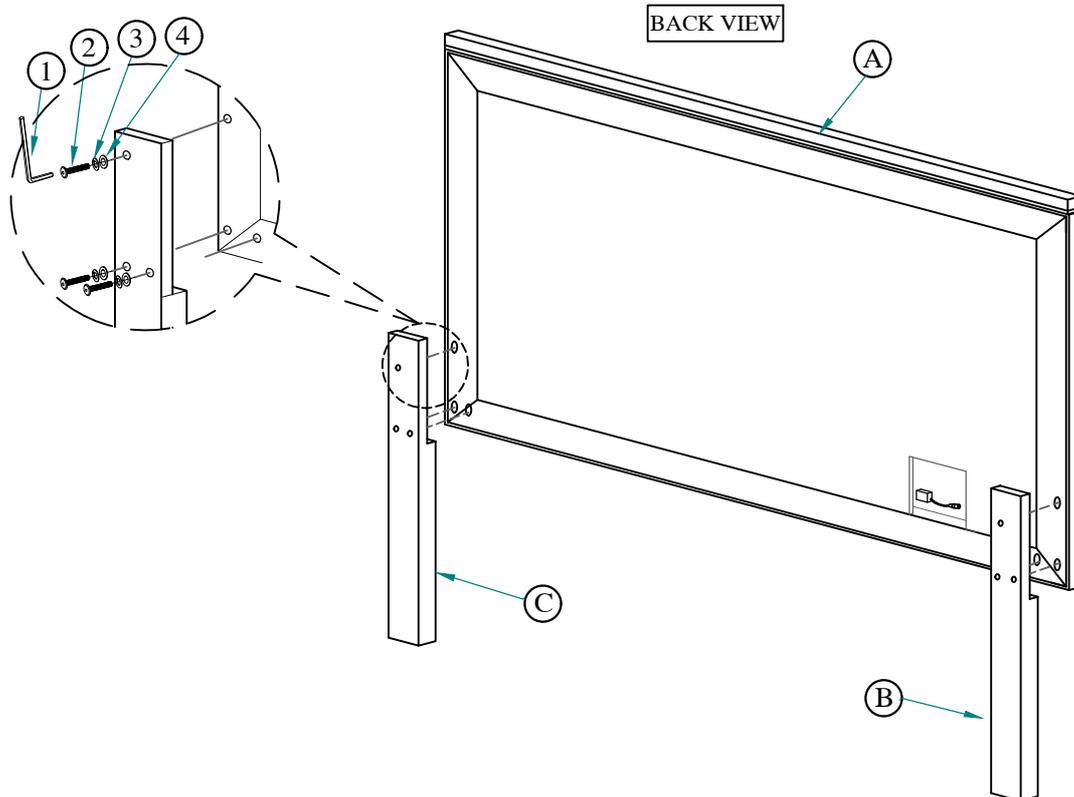



## ASSEMBLY INSTRUCTION

BA9698-110 VALENTINO 6/6-6/0 K LIGHTED HEADBOARD


BA9698-310 VALENTINO 5/0 Q LIGHTED HEADBOARD

BA9698-410 VALENTINO 4/6 F HEADBOARD

BA9698-510 VALENTINO 3/3 T HEADBOARD

**Step 2:** Connect the AC/DC Adapter (5) to the wire on the back of Headboard (A).

PLACE WOOD PARTS ON A  
CLEAN NON-ABRASIVE SURFACE

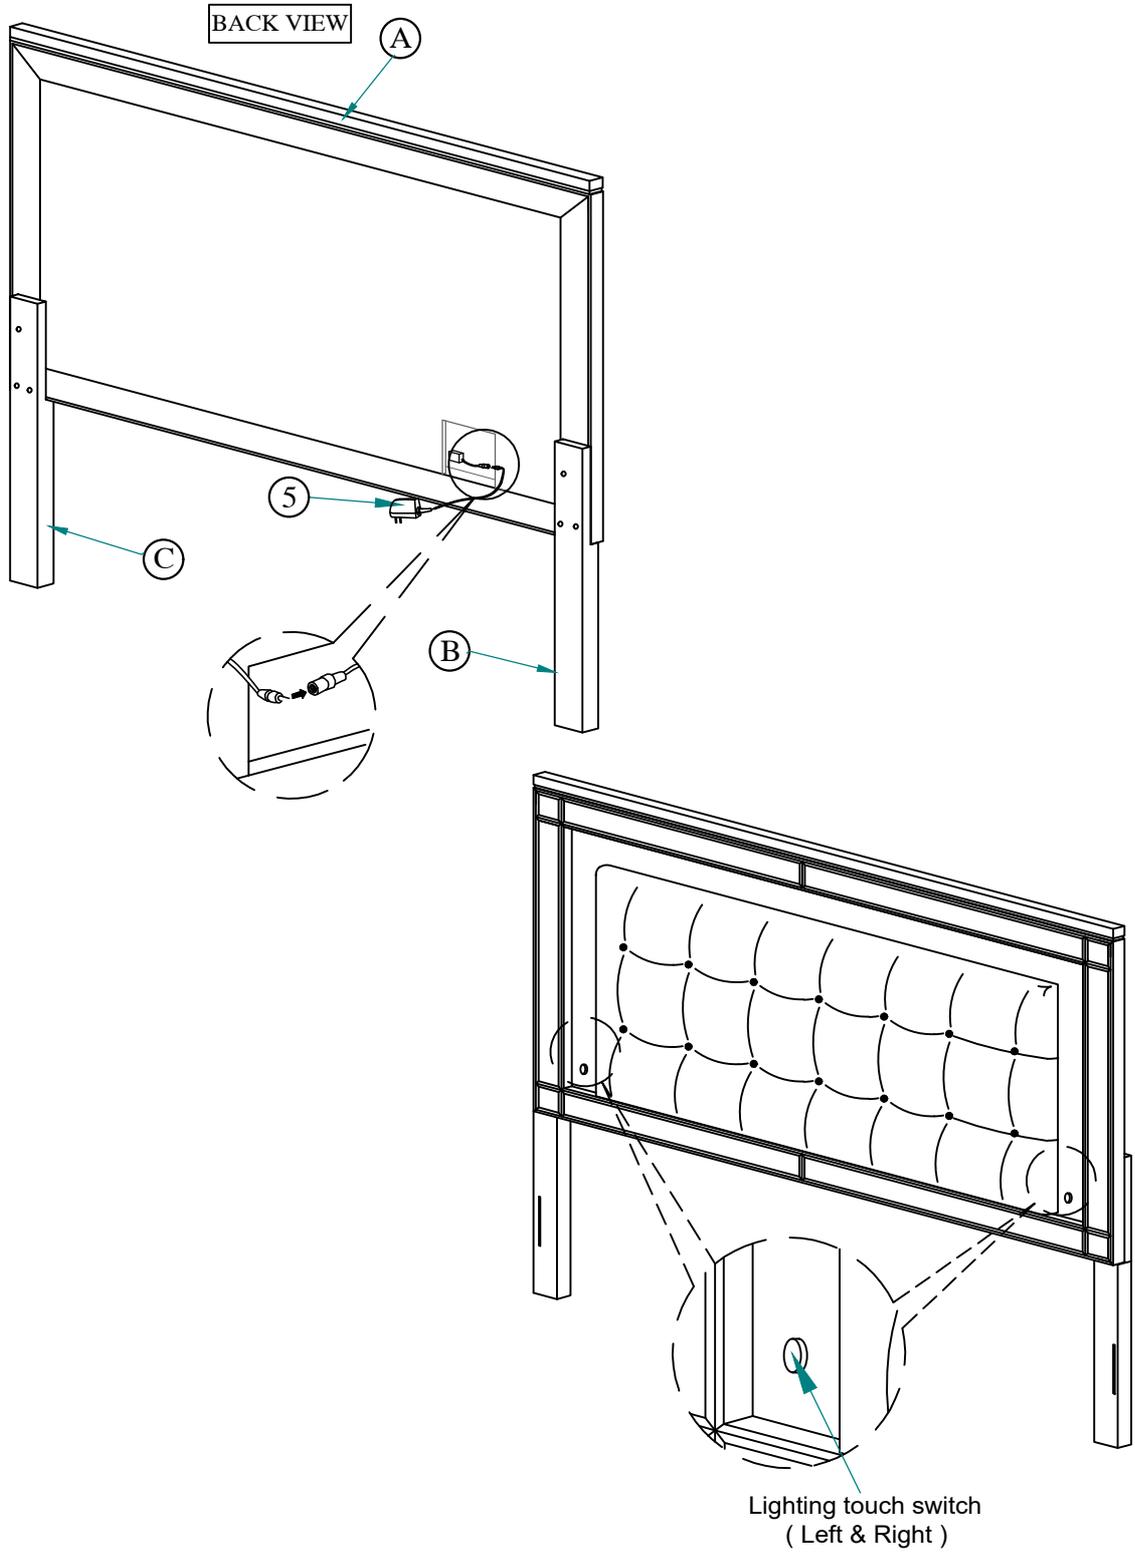

**Assembly completed**

