


Linda Storage Bed

Assembly Installation Guide


DESCRIPTION:

Headboard
Footboard
Side Rails
Slat & Support Legs Storage
Drawers

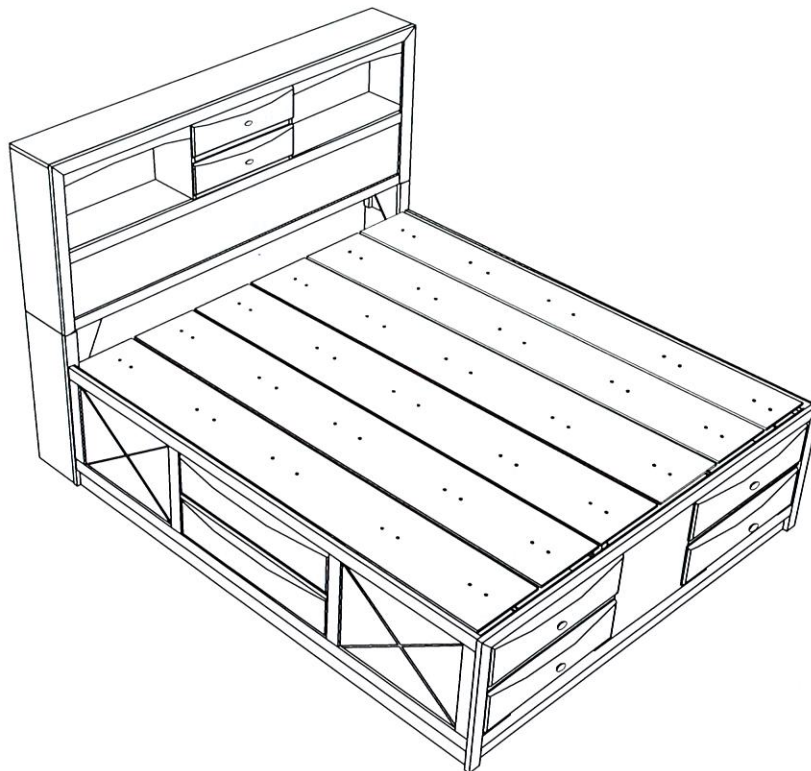


INSTALLATION AREA

A

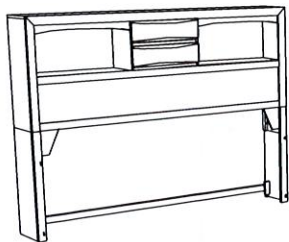


B


+

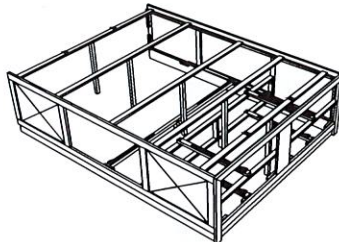

C

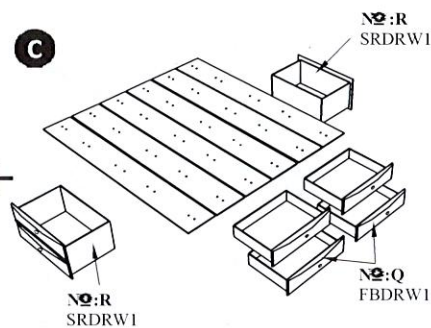

A

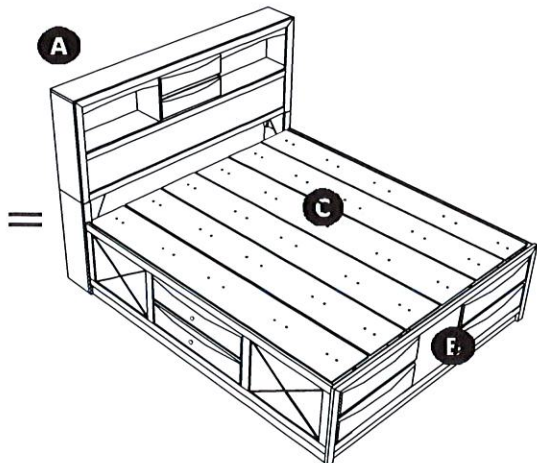


Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person : this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly, and follow the assembly step to assemble your newly purchased product correctly and efficiently .

Drawer NO:Q & NO:R are identical & compatible, to each other regardless left or right.

During assembly, do not tighten any hardware until the complete unit has been assembled.



2 PERSON
installation recommended



20 - 25
minutes for installation

A




Headboard
Assembly
Installation

STEP
01

Rotate the Headboard (A) down and
turn to back.

Box 1 : № A

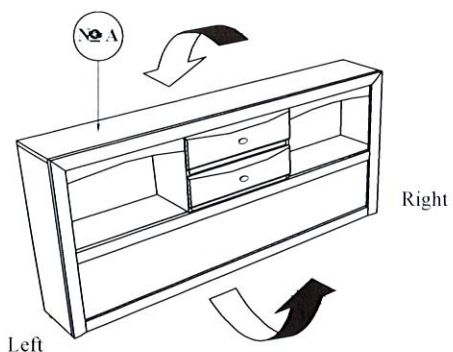


STEP
02

Attach and tighten the Headboard Leg

L/R (C) to the Headboard (A).



Box 1 : № C(L) + № C(R)

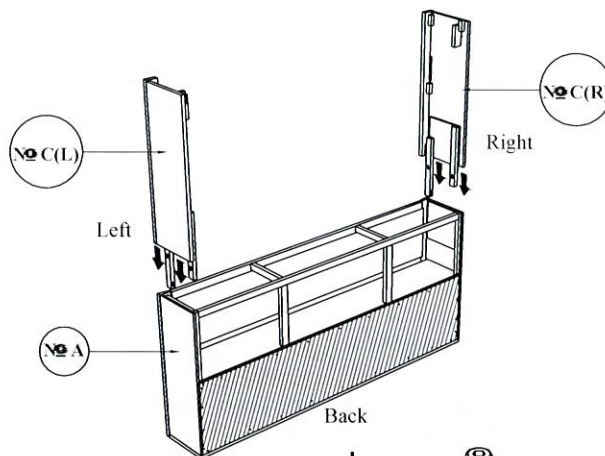

STEP
03

Insert Spring washer (5), Flat Washer (6), tighten JCBC bolt (3) by using
an Allen Key (7).



Box 1 : № 3 + № 5 + № 6 + № 7

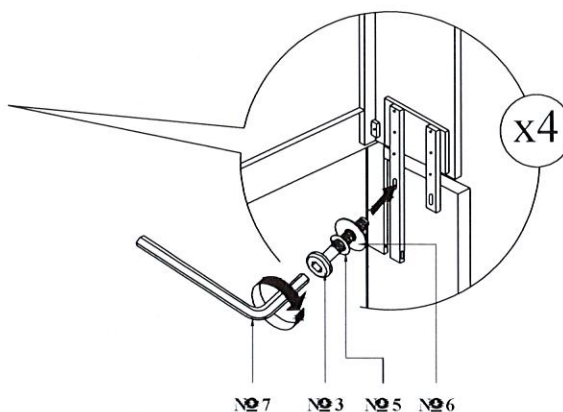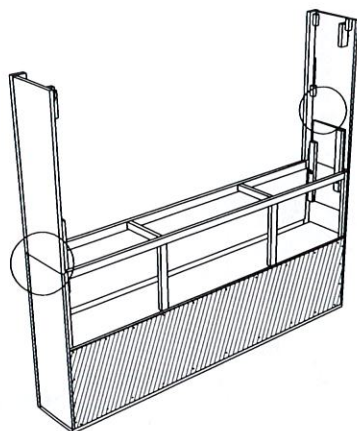

STEP
04

Insert Spring washer (5), Flat Washer (6), tighten JCBC bolt (4) by using
an Allen Key (7).

Box 1 : № 4 + № 5 + № 6 + № 7

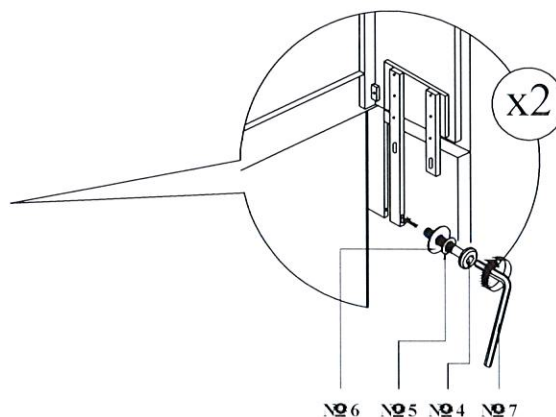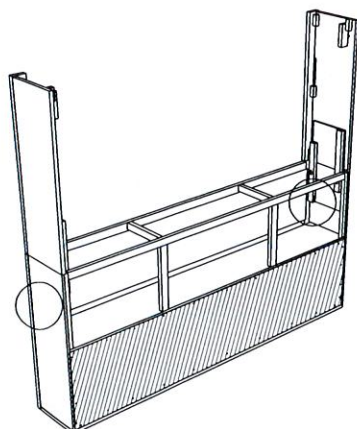

B




Footboard
Structure
Assembly
Installation

STEP
07

Attach the Side Rail (H) to the Headboard Leg L/R (C). Insert Spring Washer (12), Flat Washer (13), tighten JCBC (10) using an Allen Key (15).

Box 2 : No H + No 10 + No 12 + No 13 + No 15

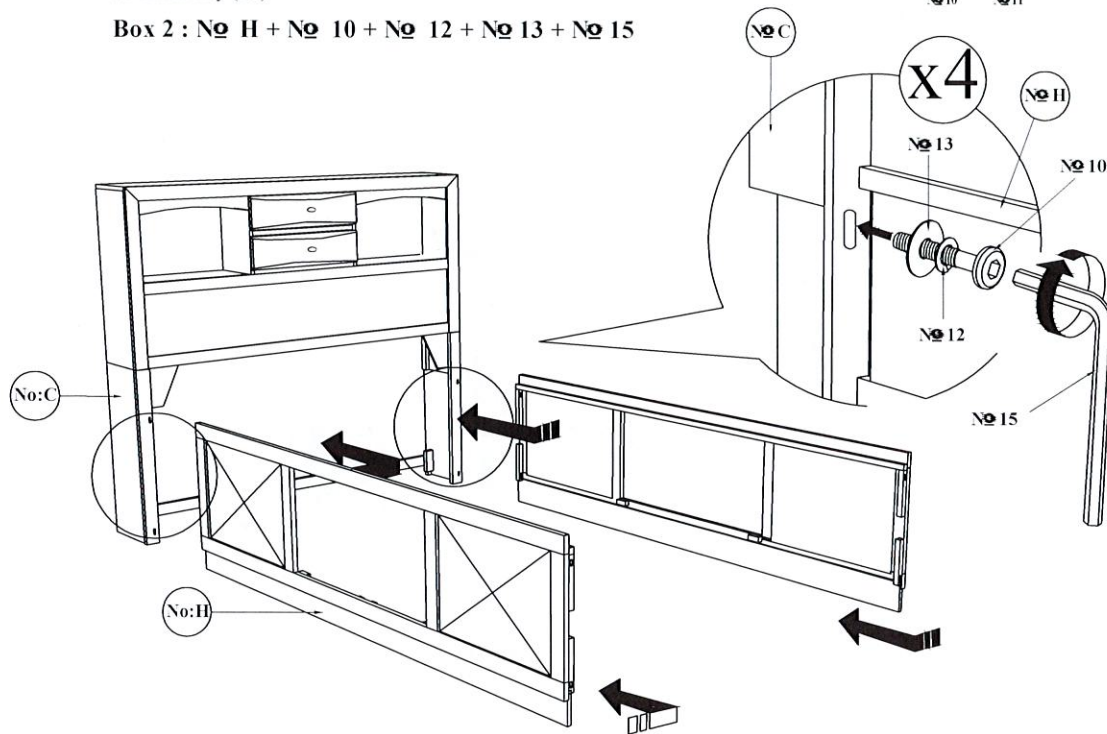


STEP
08

Attach the Side Rail (H) to the Footboard (B). Insert Spring Washer (12), Flat Washer (13), tighten JCBC (10) using an Allen Key (15).

Box 1 : No B

Box 2 : No 10 + No 12 + No 13 + No 15

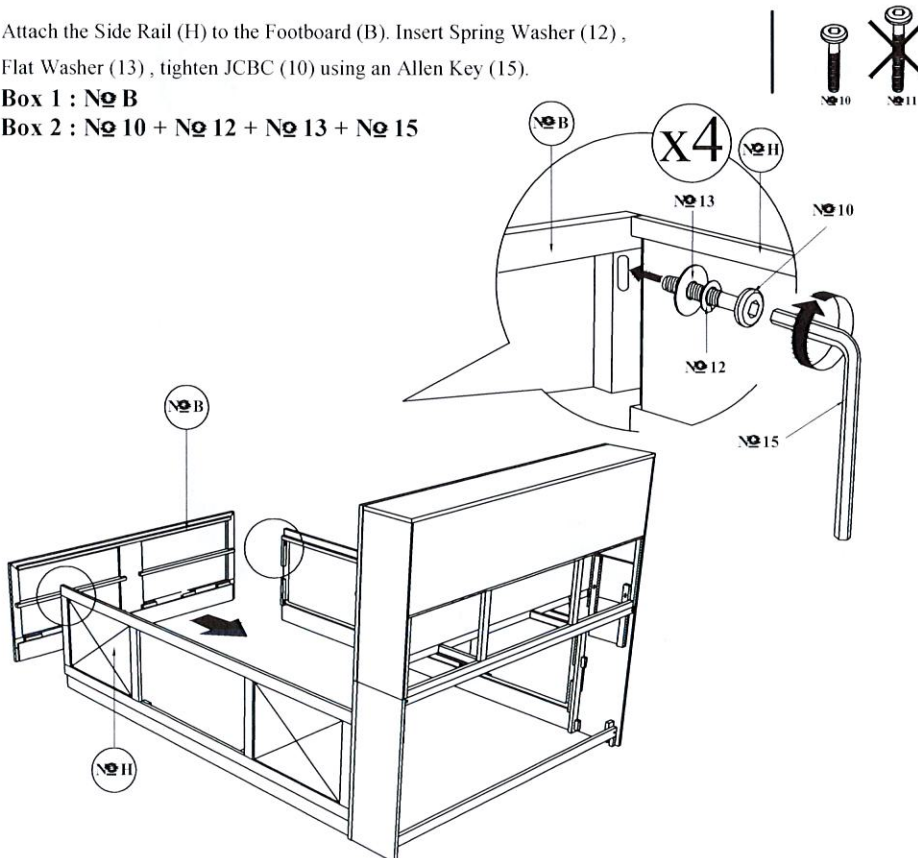


B

Footboard
Structure
Assembly
Installation

STEP
11

Attach the Drawer Support Rail (E) to the Footboard (B) using CSK Screw (8) and tighten with Screw Driver. (Not included)


Box 1 : № E
Box 2 : № 8

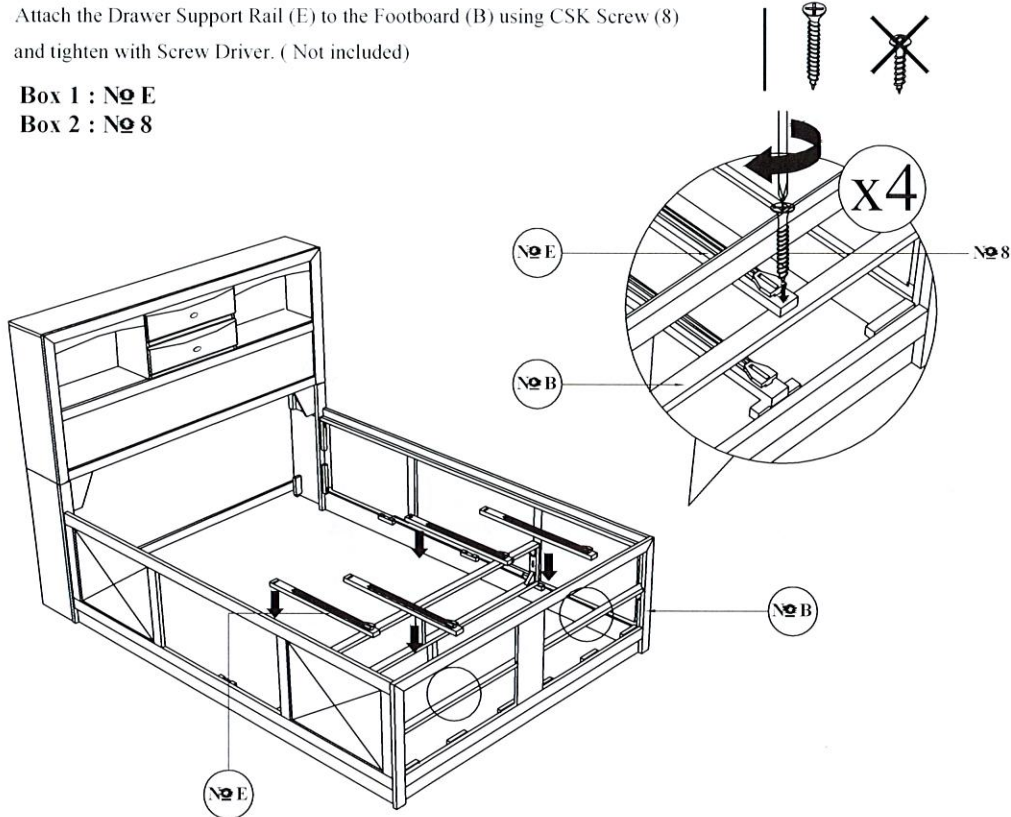

STEP
12

Attach the Drawer Support Rail (E) to the Footboard Drawer Frame (J). Insert Spring Washer (12), Flat Washer (13) & tighten JCBC Bolt (10) using an Allen Key (15).

Box 2 : № 10 + № 12 + № 13 + № 15

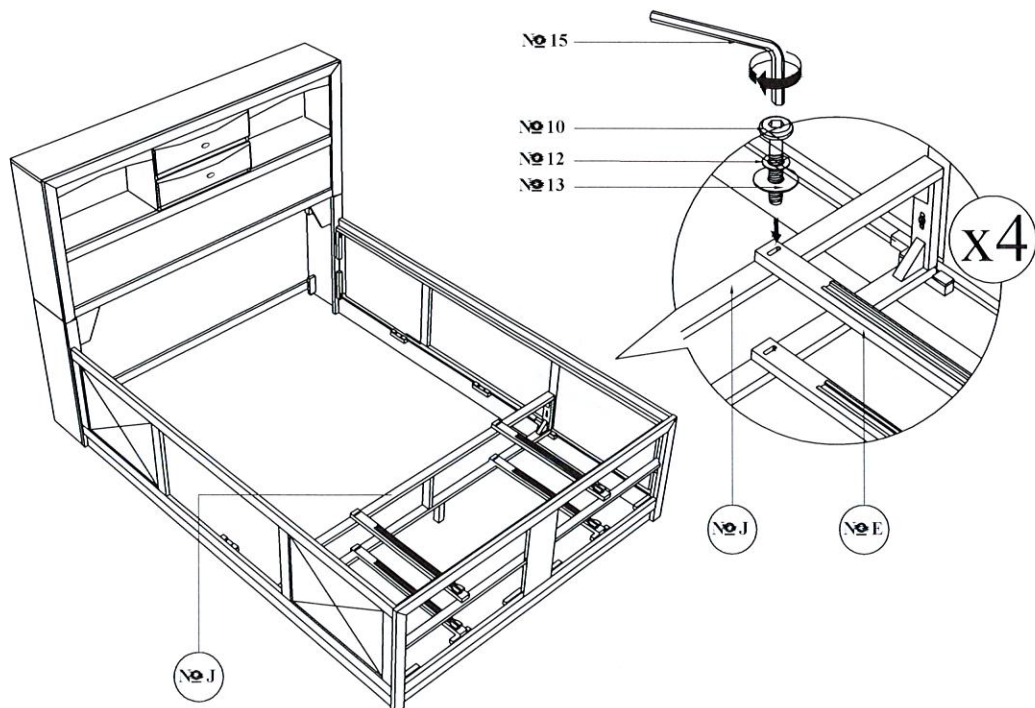


B

Footboard
Structure
Assembly
Installation

STEP
15

Attach Bed Slat (I) & (P) to the Bed Slat Support (N). Tighten JCBC Bolt (11) using an Allen Key (15). (Loosen and tighten the Adjuster to stability of bed)


Box 2 : No I + No N + No O + No P + No 11 + No 15

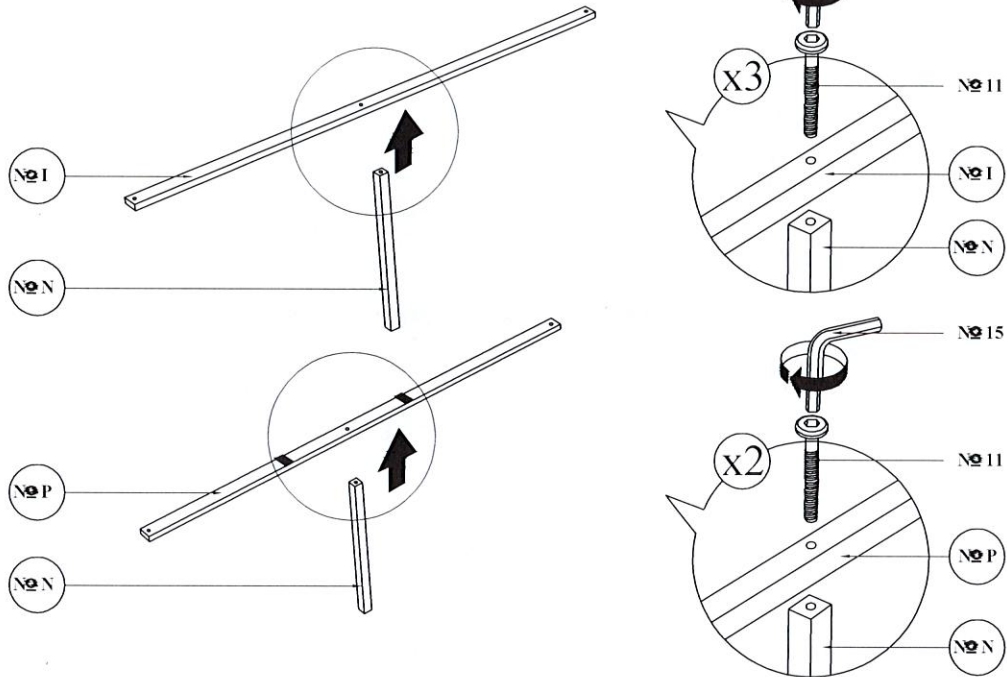

STEP
16

Attach Z-Bracket (14) to the Bed Slat Support (N) and Support Leg 2 (F). Use Panhead Screw (9) and tighten with Screw Driver. (Not included)


Box 2 : No 9 + No 14

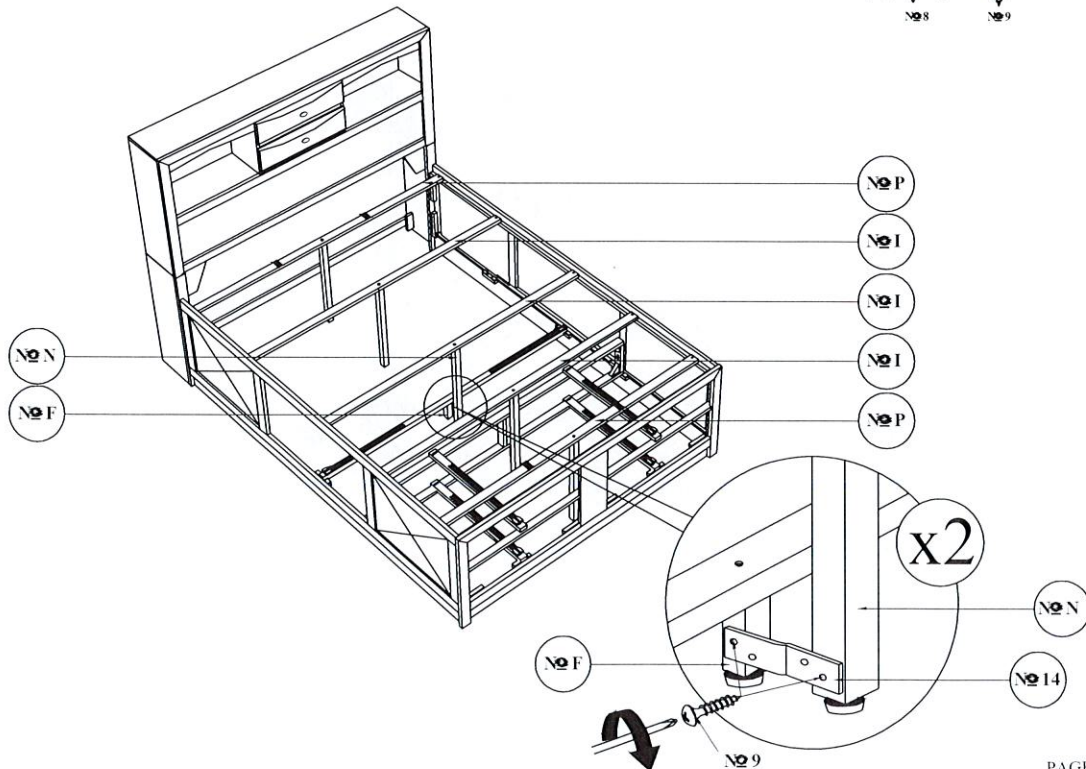


C

STEP
19

Attention! Screw on this markings on concealed panel slat (K).




Conceal
Panel & Drawer
Assembly
Installation

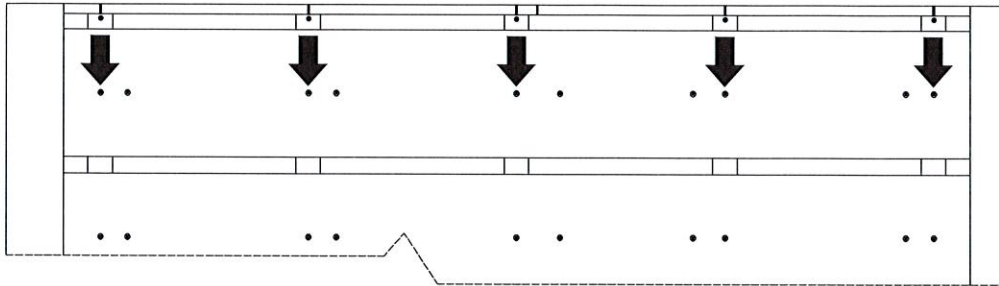


STEP
20

Realign the Concealed Panel Slat (K) as shown.
Box 2 : № K

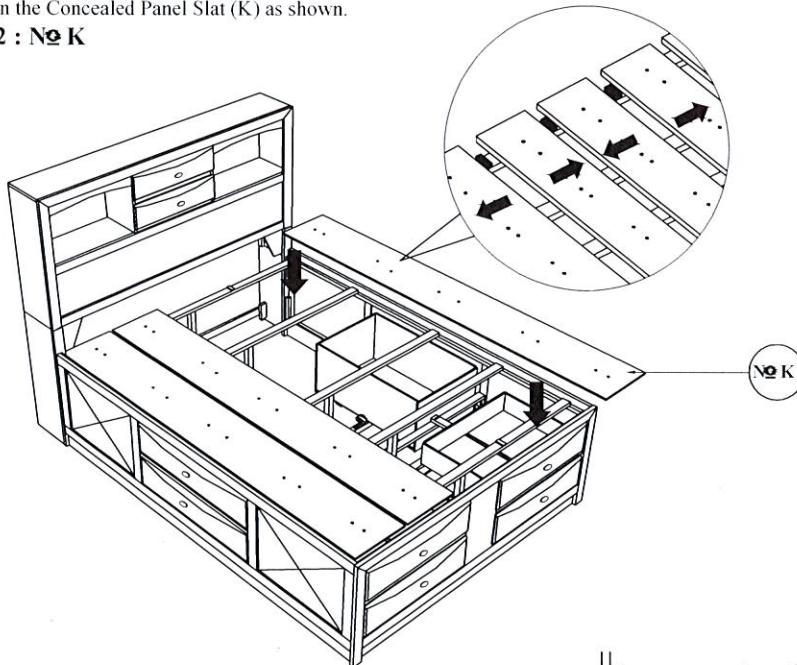


STEP
21

Attach Concealed Panel (K) over the Bed Slat (I) using Panhead
Screw (9) and tighten with Screw Driver. (Not included)
Box 2 : № 9

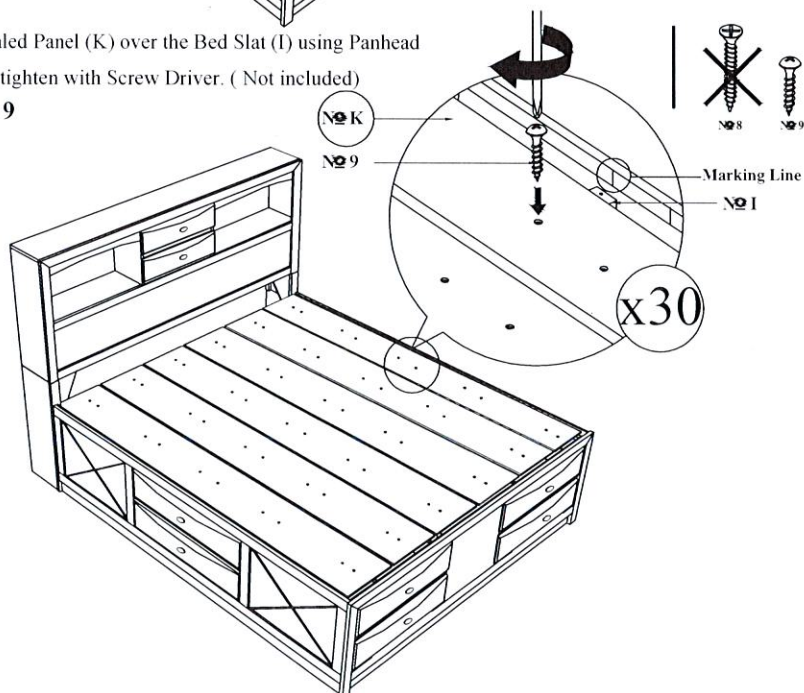


ASSEMBLY INSTRUCTIONS


STEP 1 : Take out the Mirror support rails (B) from the carton box.

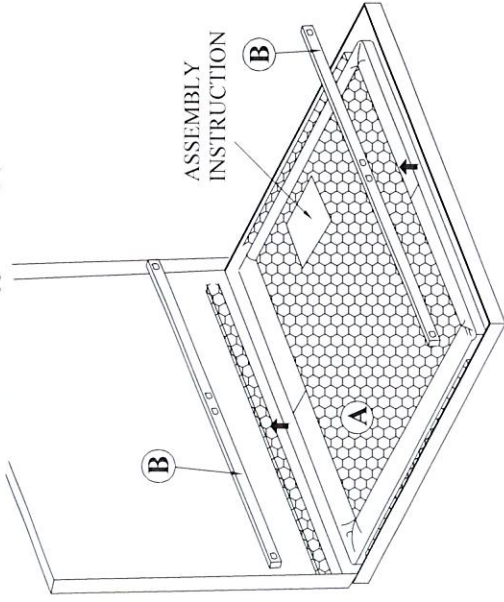

STEP 2 : Attach Mirror Support Rail (B) to Mirror (A) as shown and tighten with CSK Screw (1)

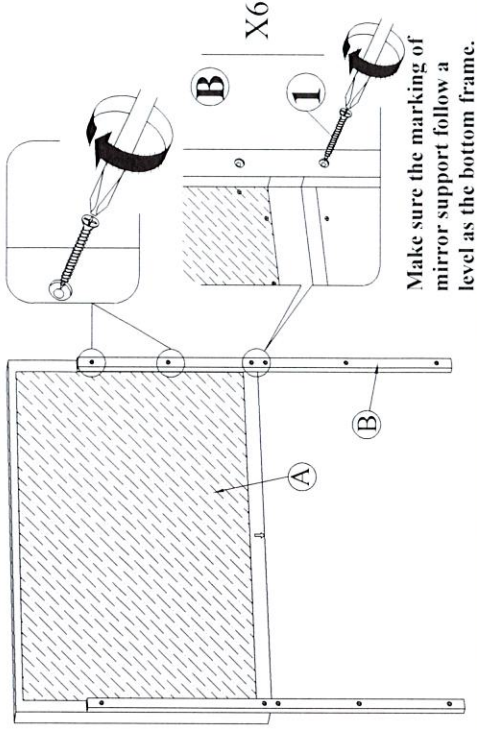



STEP 3 : Place the Mirror (A) on the top of Dresser (C) as shown. Aims at two arrows the align center and tighten with CSK Screw (1)

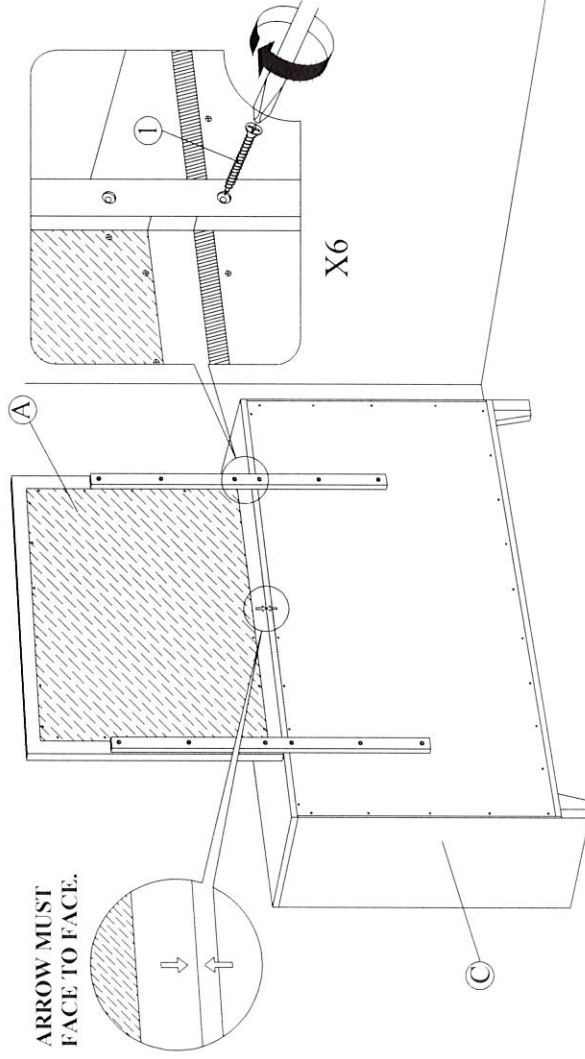



COMPLETED ASSEMBLY !!!

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

001A FAMILY
DRESSER & MIRROR

(BOX 1) BOX OF MIRROR			
NO	ITEM	QTY	
A	MIRROR FRAME: 	1 PC	
B	MIRROR SUPPORT 	2 PCS	

(BOX 2) BOX OF DRESSER			
NO	ITEM	QTY	
C	DRESSER 	1 PC	

(BOX 1) HARDWARE LIST			
NO	ITEM	QTY	
1	FLAT HEAD CHIPBOARD SCREW M4 x 32MM 	12 PCS	