



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

# **501208(B1-B3)**

## **Sleeper Sectional**

# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.












ASSEMBLY TIME






15 MINUTES

## PARTS IDENTIFICATION








### B1 (BOX 1)

A	LEFT SOFA SEAT		1PC	F	BACK CUSHION WITH " F " LABEL		2PCS
B	LONG BACK FRAME		1PC	G	PILLOW		2PCS
C	SHORT BACK FRAME		1PC	H	LEG		2PCS
D	SOFA ARM		1PC	I	BUN FOOT		4PCS
E	BACK CUSHION WITH " E " LABEL		2PCS				

### B2 (BOX 2)

F	BACK CUSHION WITH " F " LABEL		2PCS	K	LOVESEAT BACK FRAME		1PC
I	BUN FOOT		4PCS	N	CASTER WITH SCREW		2SETS
J	LOVESEAT SEAT		1PC				

### B3 (BOX 3)

C	SHORT BACK FRAME		1PC	I	BUN FOOT		2PCS
F	BACK CUSHION WITH " F " LABEL		1PC	L	CHAISE ARM		1PC
G	PILLOW		1PC	M	CHAISE SEAT		1PC
H	LEG		4PCS				

# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION



### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 501205(B1)

1	<b>FLAT HEAD SCREW</b> (M5 x 45mm - BLK)		8PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		4PCS
3	<b>THREAD BOLT</b> (Ø5/16 x 4" - BLK)		2PCS
4	<b>HEX NUT</b> (Ø5/16 x 1/2" - BLK)		2PCS
5	<b>LOCK WASHER:</b> (Ø5/16" x 12mm)		2PCS
6	<b>FLAT WASHER</b> (Ø5/16 x 3/4" - BLK)		2PCS
7	<b>WRENCH</b> (1/2"x 3 1/2" - BLK)		1PC

### Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 501205(B2)

1	<b>FLAT HEAD SCREW</b> (M5 x 45mm - BLK)		4PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		2PCS

### Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 501205(B3)

1	<b>FLAT HEAD SCREW</b> (M5 x 45mm - BLK)		10PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		2PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 501208(B1-B3)


## ASSEMBLY INSTRUCTIONS




### STEP 1

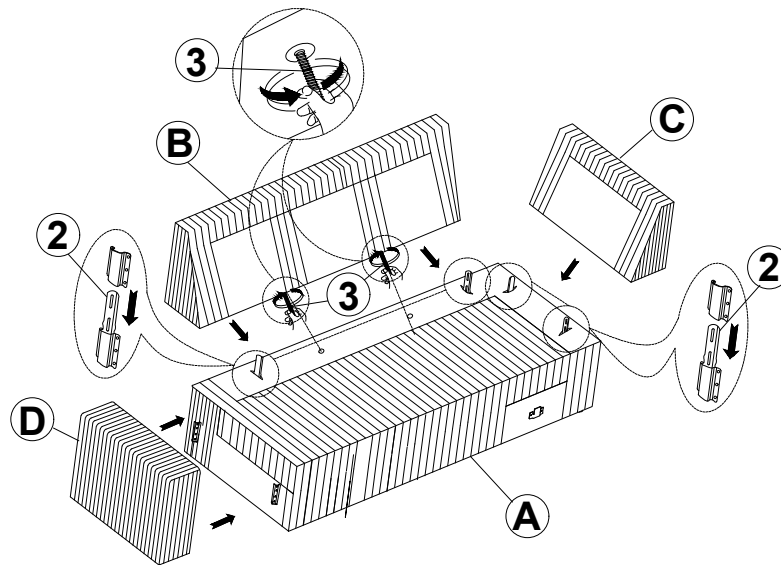

### STEP 2

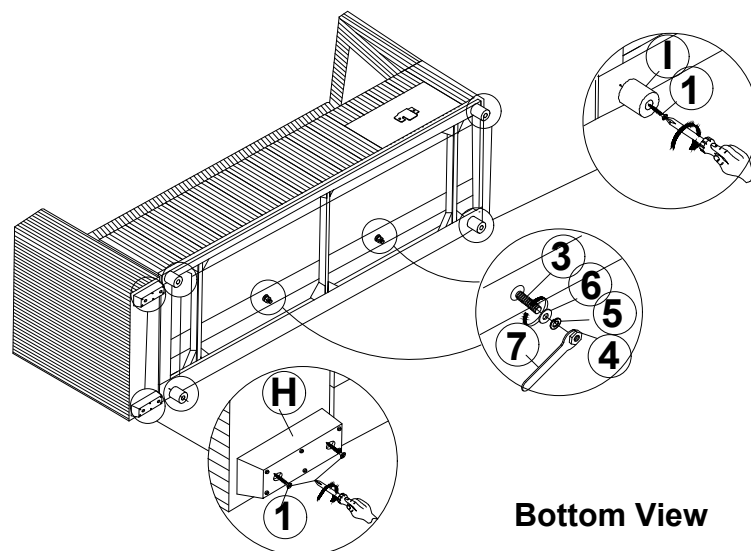


### STEP 3

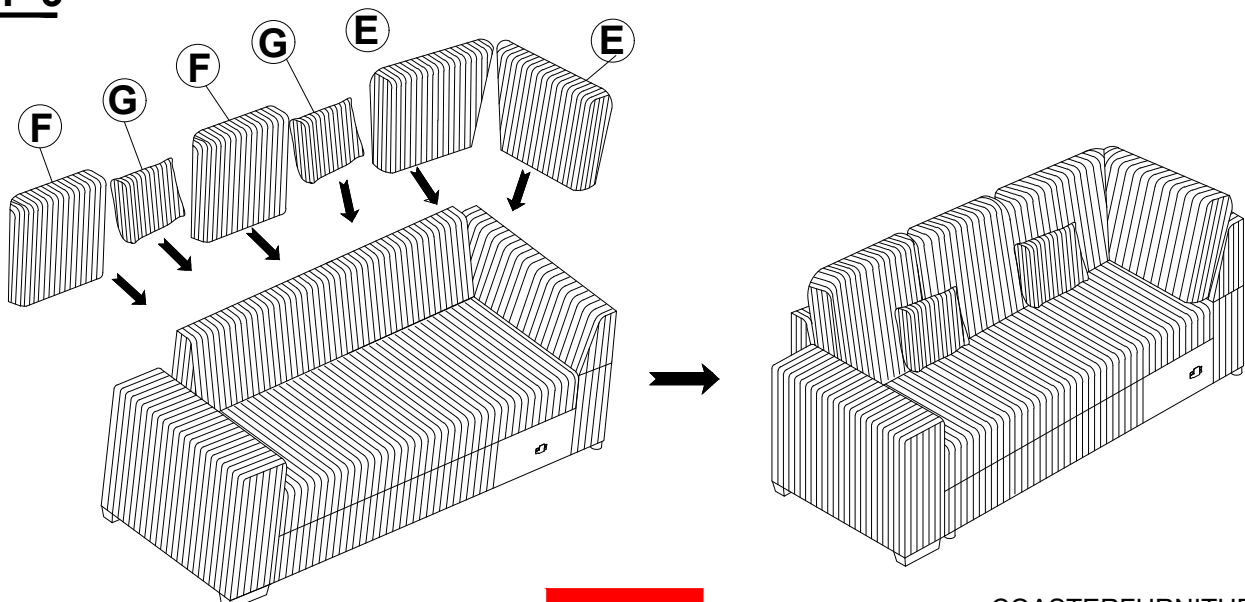

# ITEM: 501208(B1-B3)


## ASSEMBLY INSTRUCTIONS

### STEP 4

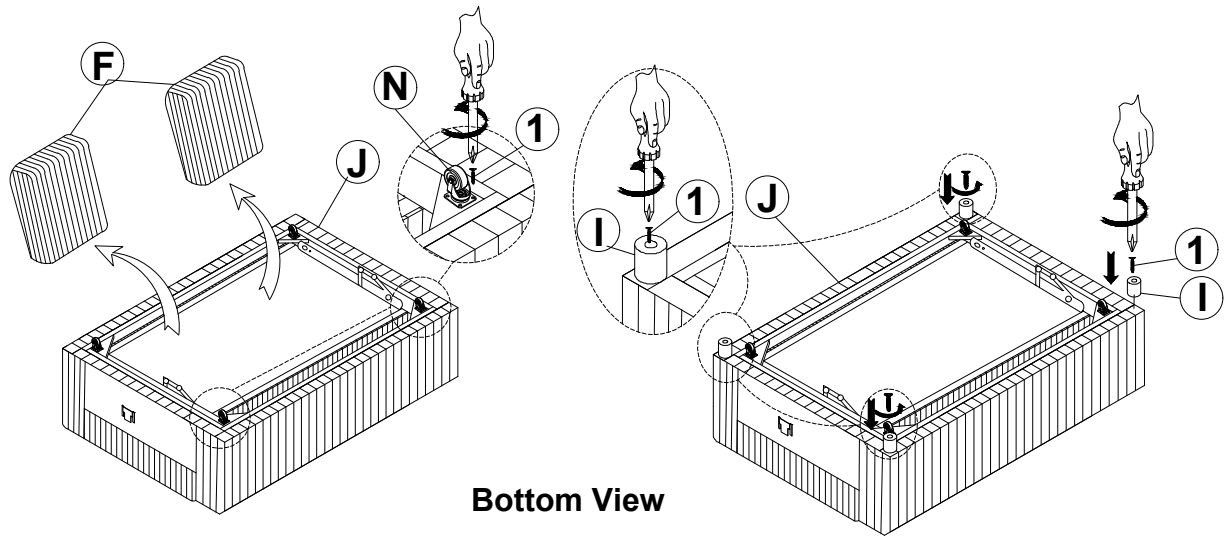


Bottom View

### STEP 5

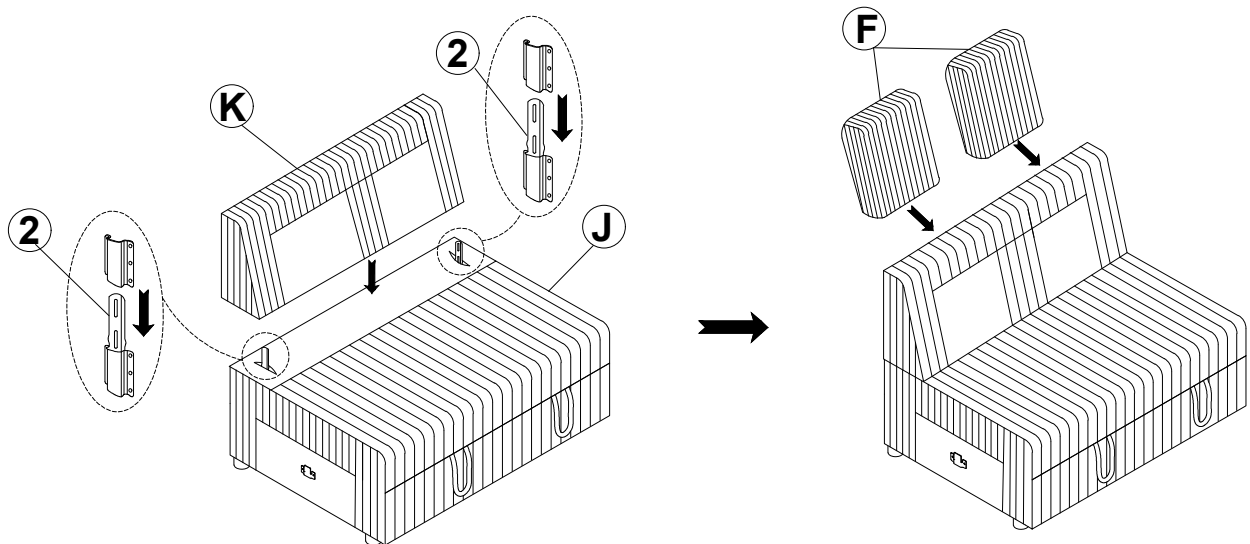



### STEP 6

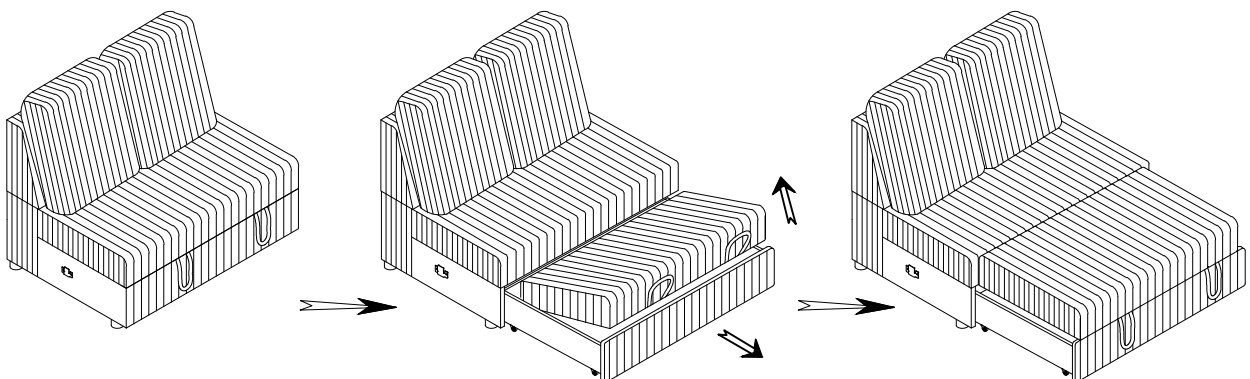


# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 7

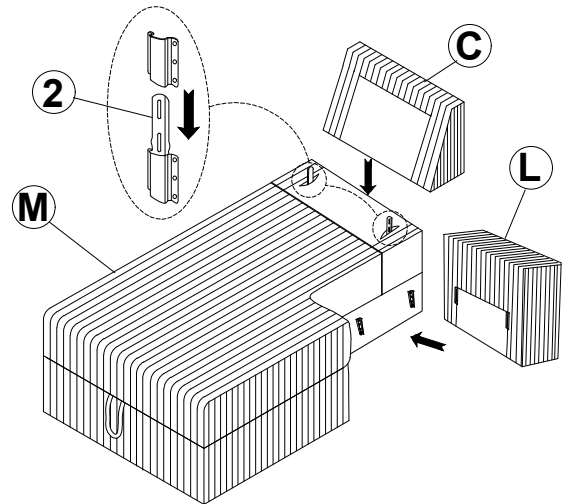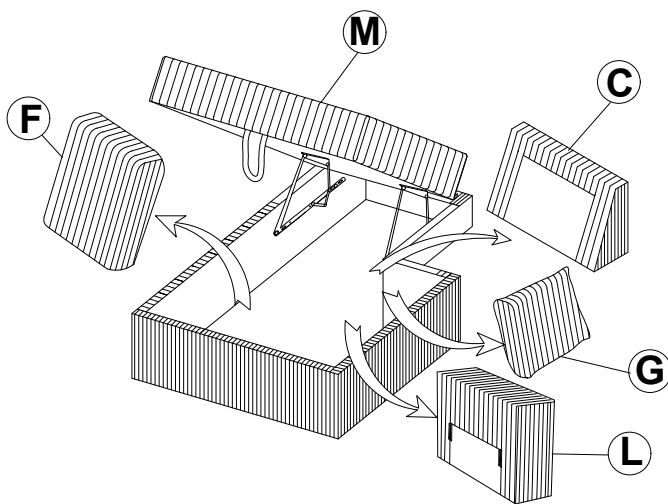

### STEP 8

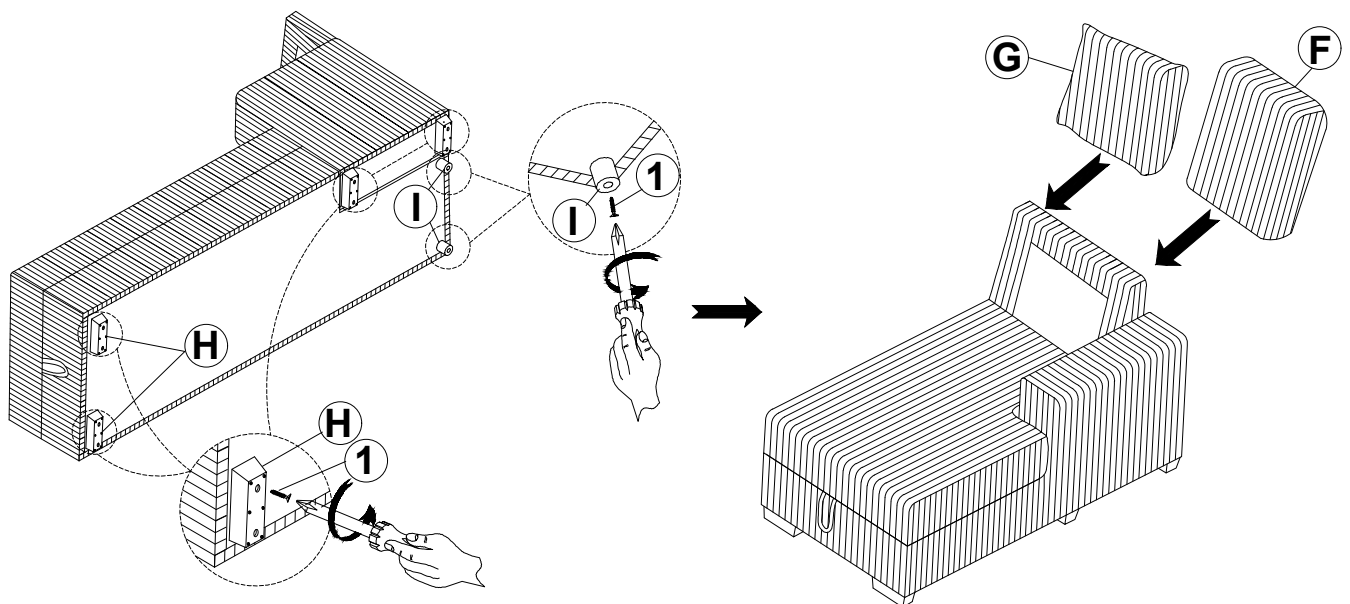


Bottom View




ITEM: **501208(B1-B3)**

## ASSEMBLY INSTRUCTIONS


### STEP 9

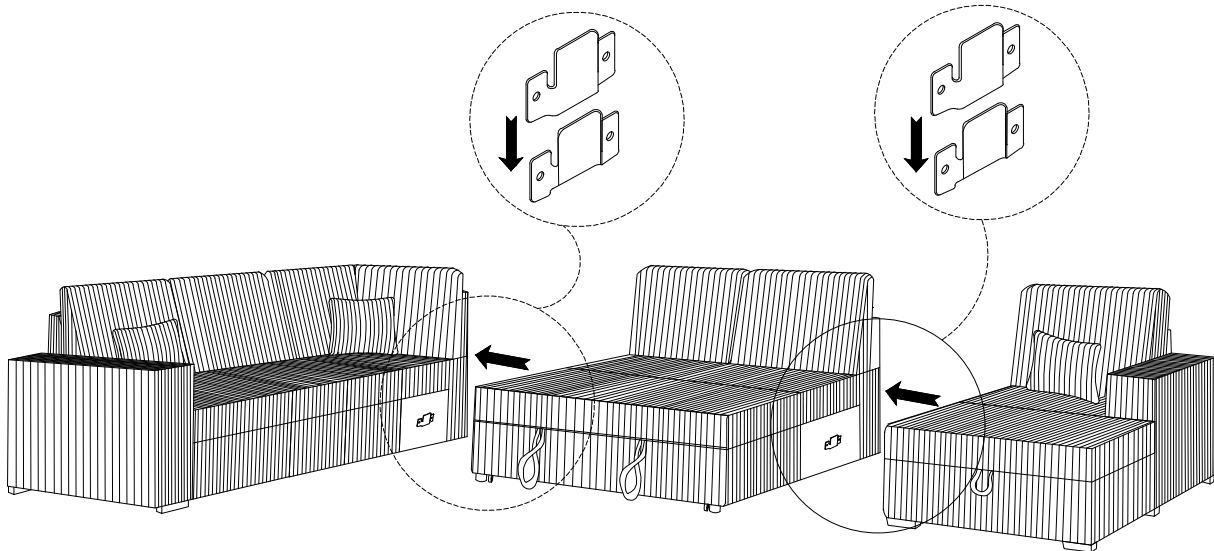

### STEP 10 COMPLETE

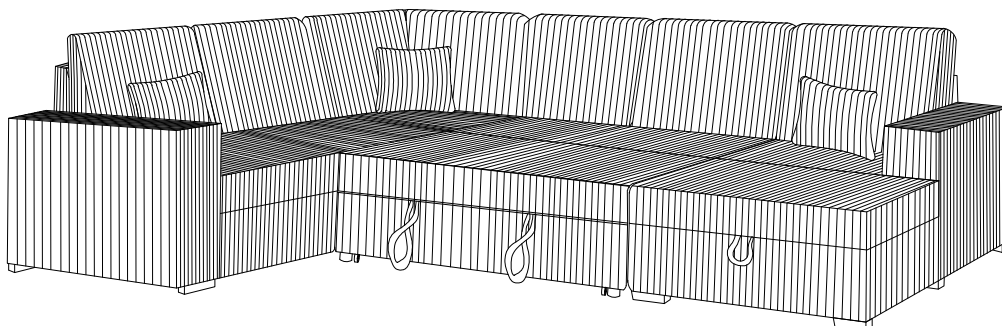

ITEM: 501208(B1-B3)

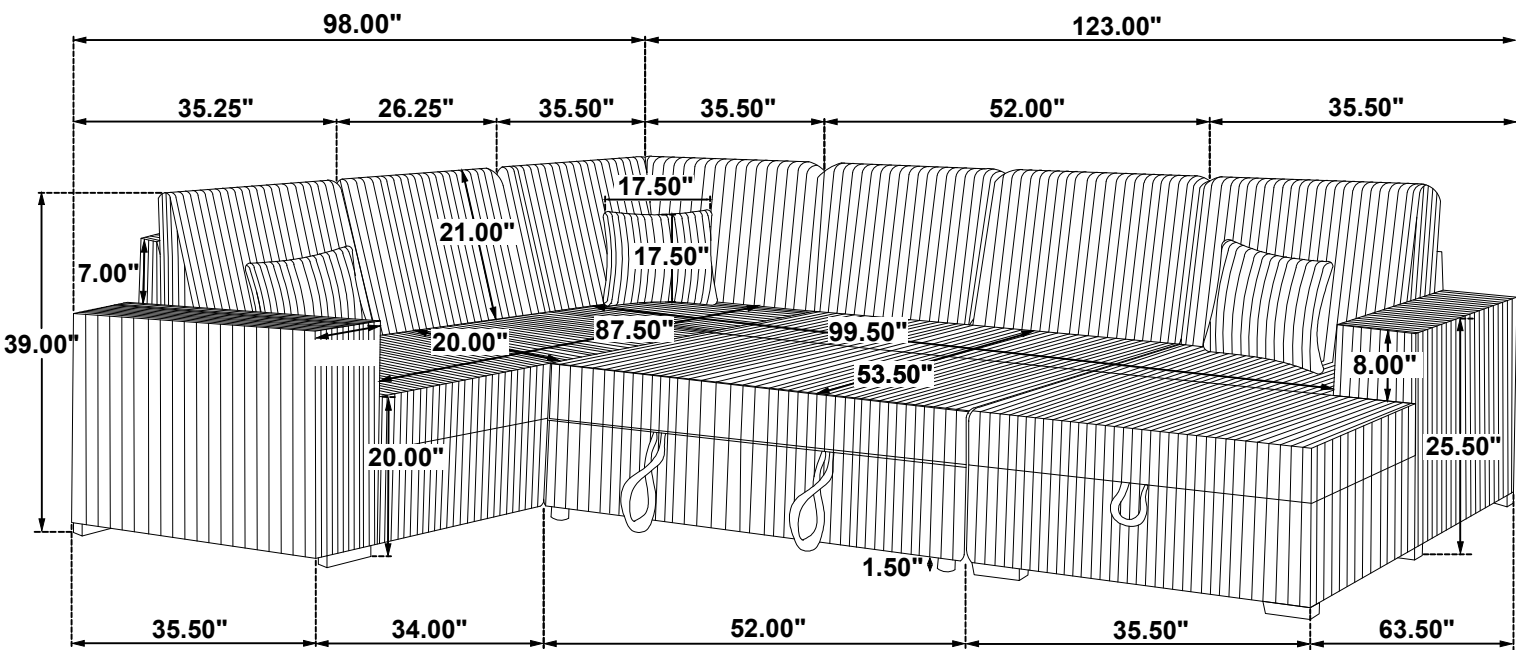

Note: Dimension tolerance  $\pm 5\%$





# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

# **501208(B1-B3)**

## **Sleeper Sectional**

# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.












ASSEMBLY TIME






15 MINUTES

## PARTS IDENTIFICATION








### B1 (BOX 1)

A	LEFT SOFA SEAT		1PC	F	BACK CUSHION WITH " F " LABEL		2PCS
B	LONG BACK FRAME		1PC	G	PILLOW		2PCS
C	SHORT BACK FRAME		1PC	H	LEG		2PCS
D	SOFA ARM		1PC	I	BUN FOOT		4PCS
E	BACK CUSHION WITH " E " LABEL		2PCS				

### B2 (BOX 2)

F	BACK CUSHION WITH " F " LABEL		2PCS	K	LOVESEAT BACK FRAME		1PC
I	BUN FOOT		4PCS	N	CASTER WITH SCREW		2SETS
J	LOVESEAT SEAT		1PC				

### B3 (BOX 3)

C	SHORT BACK FRAME		1PC	I	BUN FOOT		2PCS
F	BACK CUSHION WITH " F " LABEL		1PC	L	CHAISE ARM		1PC
G	PILLOW		1PC	M	CHAISE SEAT		1PC
H	LEG		4PCS				

# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION



### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 501208(B1)

1	<b>FLAT HEAD SCREW</b> (M4 x 45mm - BLK)		8PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		4PCS
3	<b>THREAD BOLT</b> (Ø5/16 x 4" - BLK)		2PCS
4	<b>HEX NUT</b> (Ø5/16 x 1/2" - BLK)		2PCS
5	<b>LOCK WASHER:</b> (Ø5/16" x 12mm)		2PCS
6	<b>FLAT WASHER</b> (Ø5/16 x 3/4" - BLK)		2PCS
7	<b>WRENCH</b> (1/2"x 3 1/2" - BLK)		1PC

### Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 501208(B2)

1	<b>FLAT HEAD SCREW</b> (M4 x 45mm - BLK)		4PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		2PCS

### Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 501208(B3)

1	<b>FLAT HEAD SCREW</b> (M4 x 45mm - BLK)		10PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		2PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 501208(B1-B3)


## ASSEMBLY INSTRUCTIONS

### STEP 1


The seat frame (A) will be assembled onto the handrail (D).

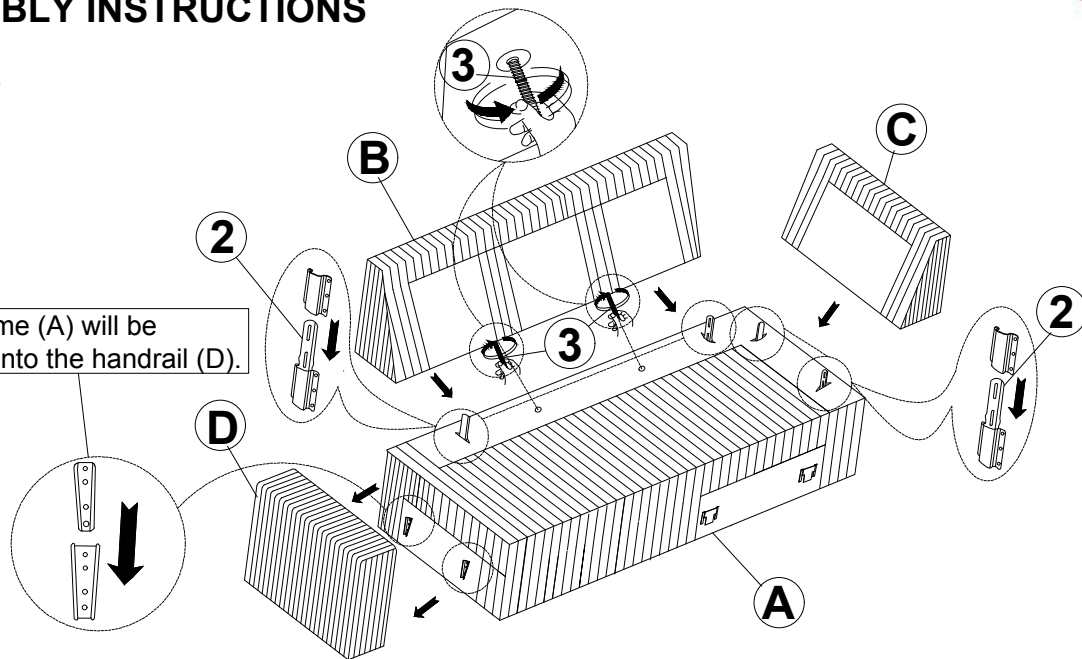

### STEP 2

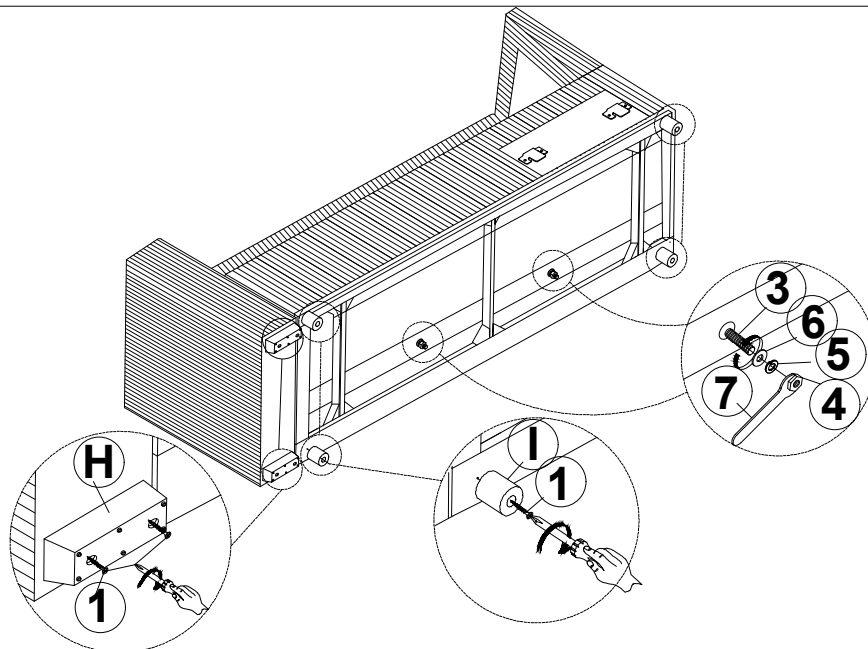


### STEP 3

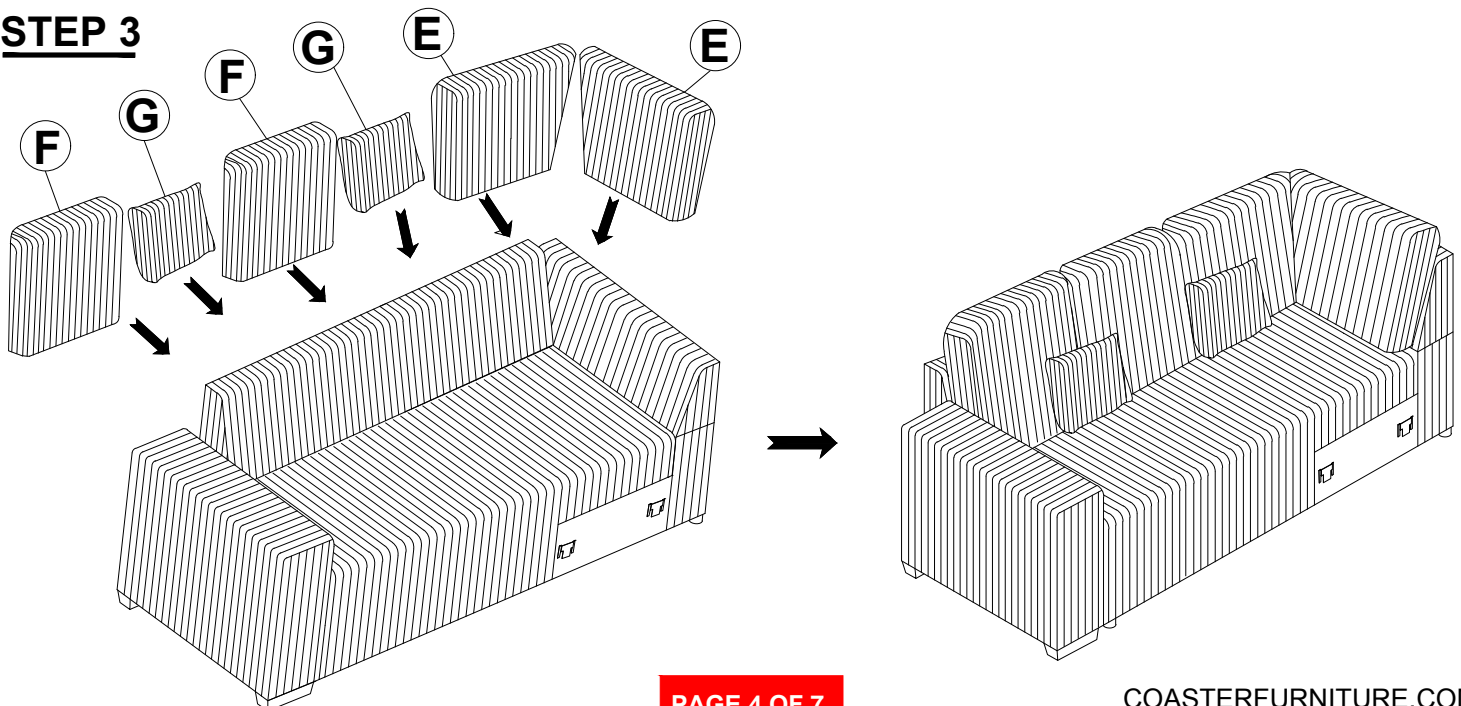


# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS


### STEP 4

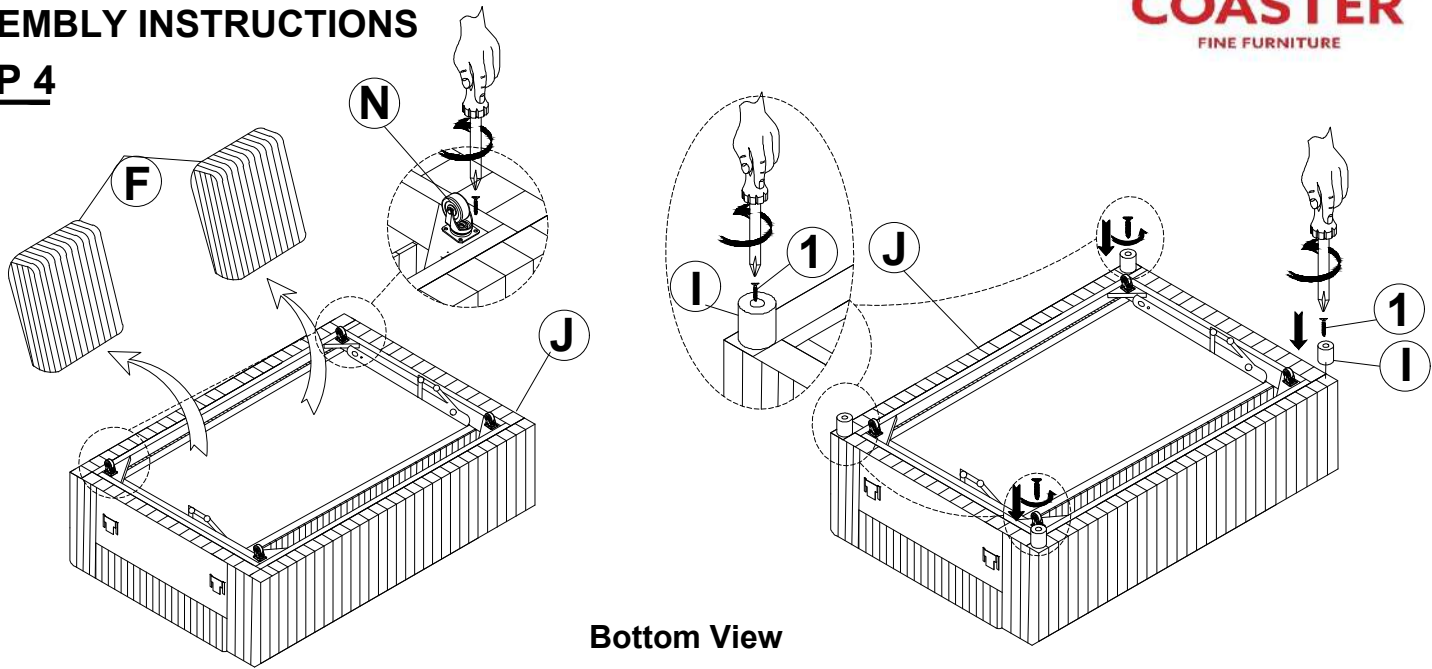



### STEP 5

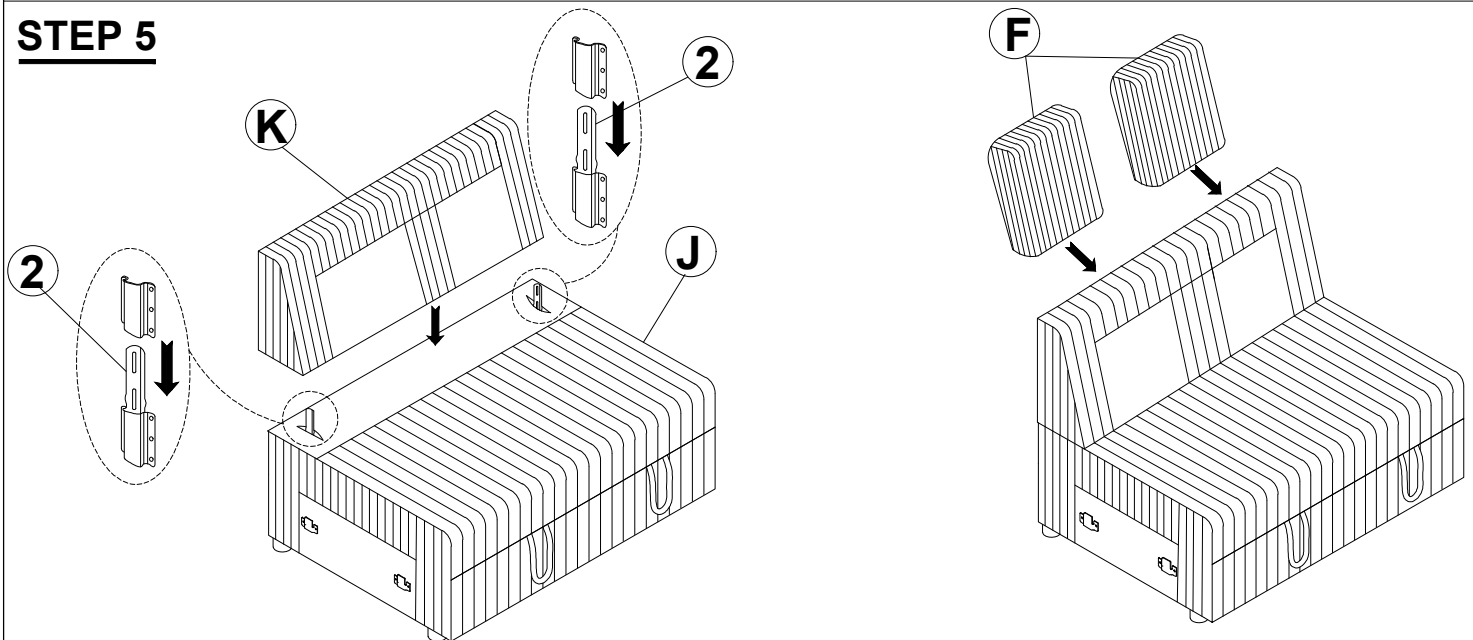



### STEP 6

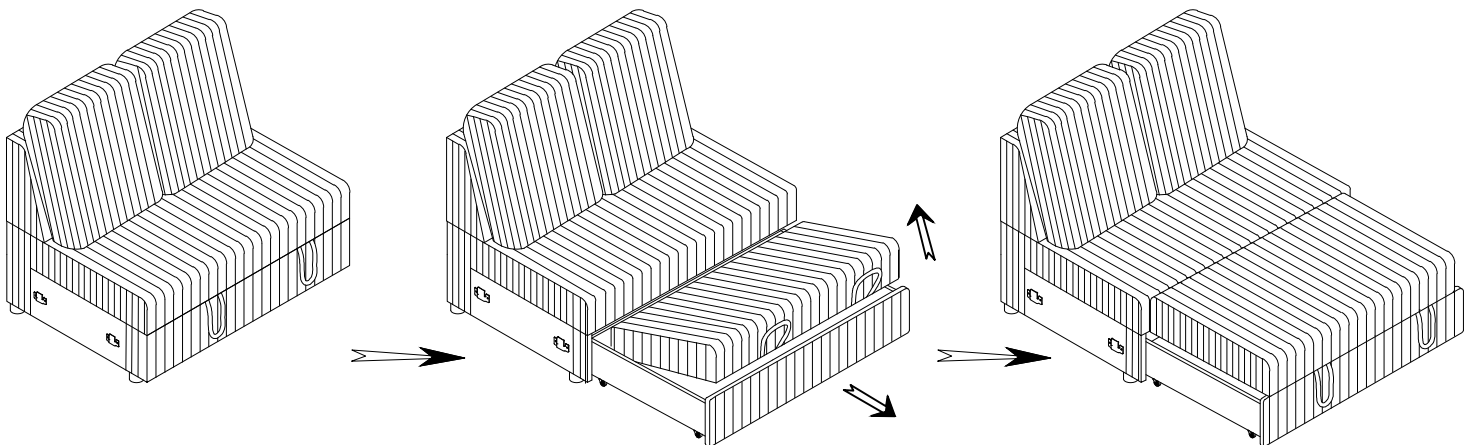

## STEP 7

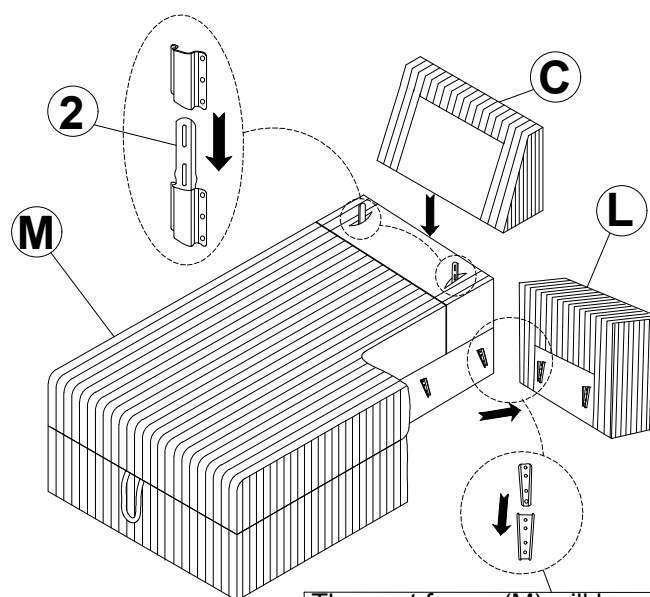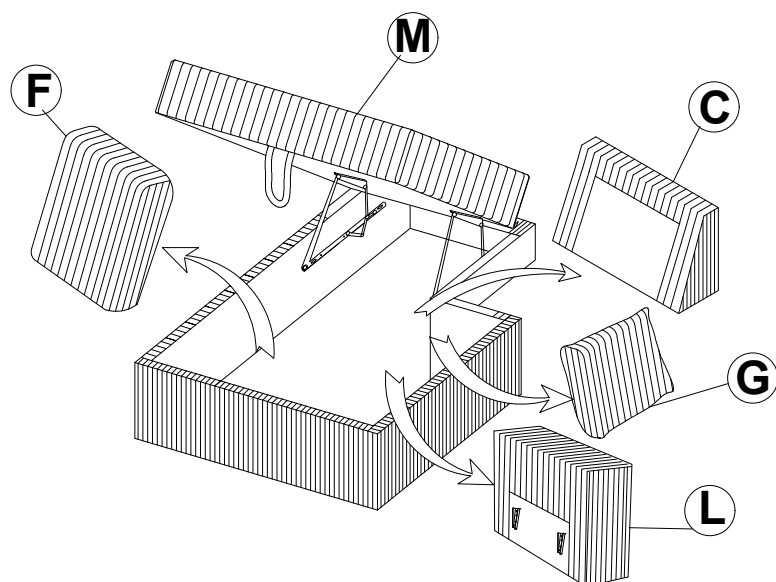

## STEP 8

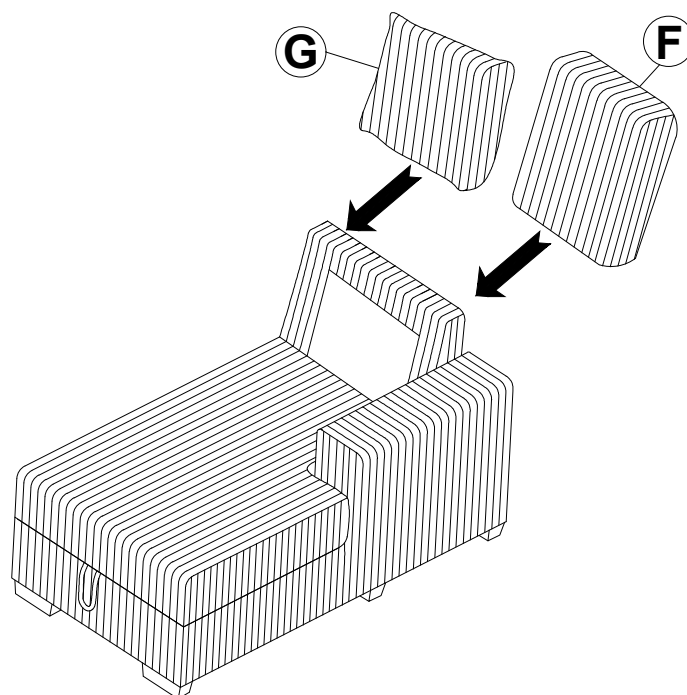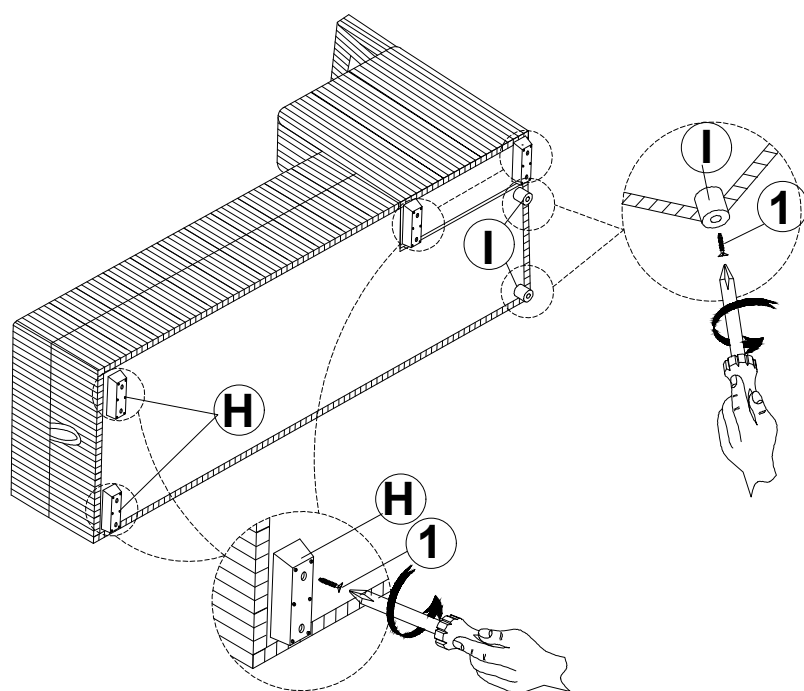





# ITEM: 501205(B1-B3)

## ASSEMBLY INSTRUCTIONS


### STEP 9

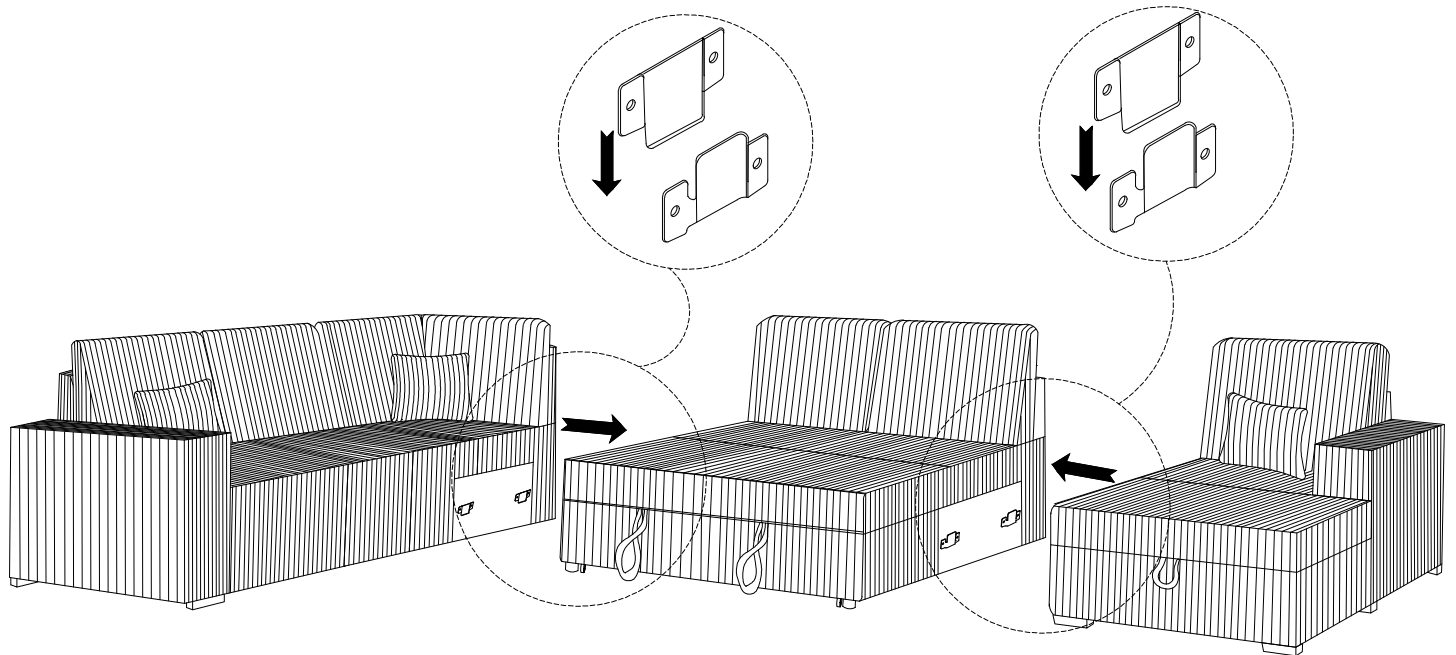

### STEP 10 COMPLETE

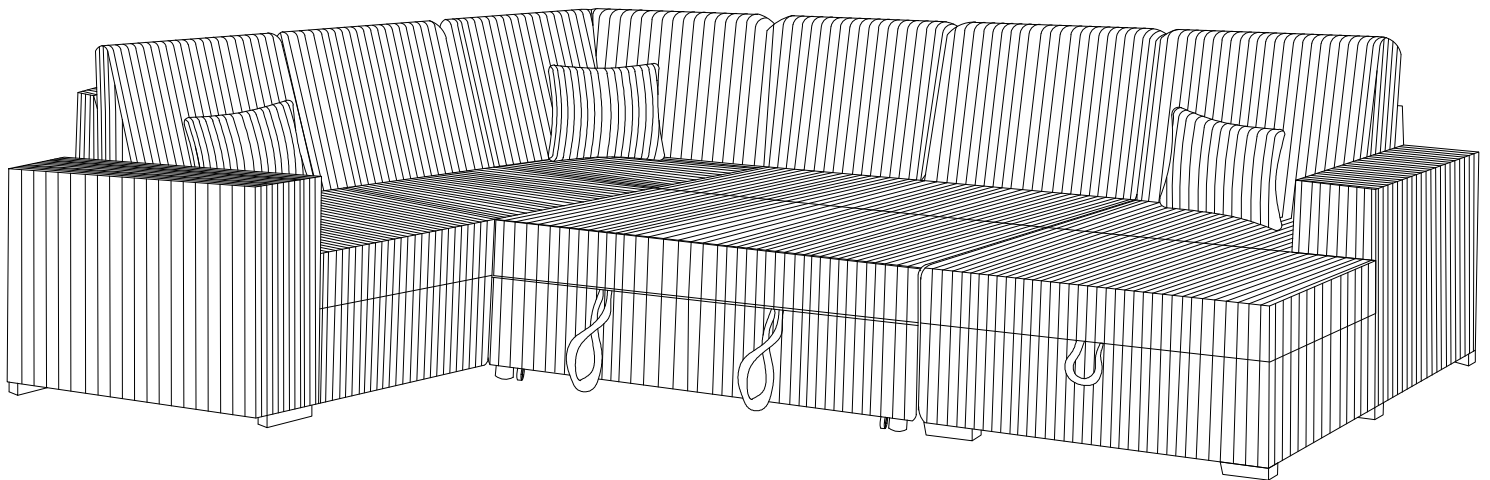

ITEM: 501208(B1-B3)

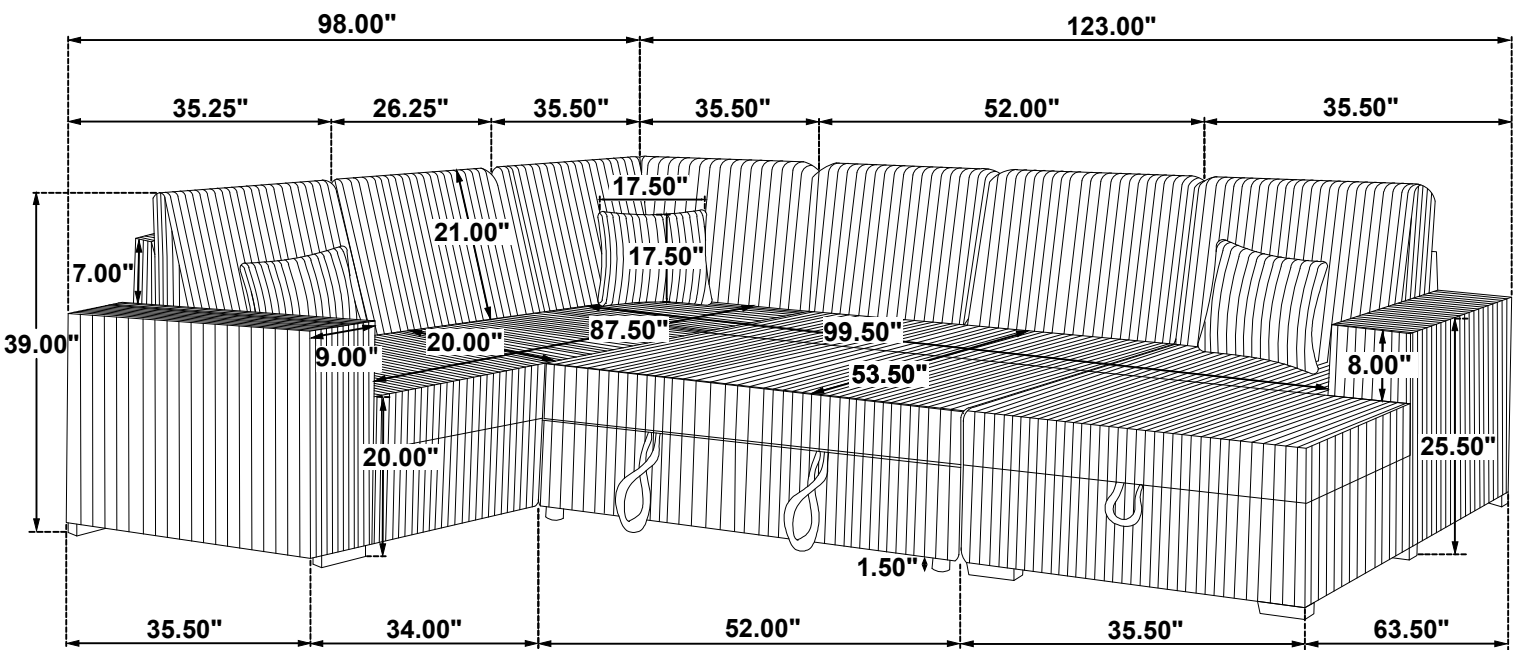

Note: Dimension tolerance  $\pm 5\%$



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

# **501208(B1-B3)**

## **Sleeper Sectional**

# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.












ASSEMBLY TIME






15 MINUTES

## PARTS IDENTIFICATION








### B1 (BOX 1)

A	LEFT SOFA SEAT		1PC	F	BACK CUSHION WITH " F " LABEL		2PCS
B	LONG BACK FRAME		1PC	G	PILLOW		2PCS
C	SHORT BACK FRAME		1PC	H	LEG		2PCS
D	SOFA ARM		1PC	I	BUN FOOT		4PCS
E	BACK CUSHION WITH " E " LABEL		2PCS				

### B2 (BOX 2)

F	BACK CUSHION WITH " F " LABEL		2PCS	K	LOVESEAT BACK FRAME		1PC
I	BUN FOOT		4PCS	N	CASTER WITH SCREW		2SETS
J	LOVESEAT SEAT		1PC				

### B3 (BOX 3)

C	SHORT BACK FRAME		1PC	I	BUN FOOT		2PCS
F	BACK CUSHION WITH " F " LABEL		1PC	L	CHAISE ARM		1PC
G	PILLOW		1PC	M	CHAISE SEAT		1PC
H	LEG		4PCS				

# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.










### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION



### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 501208(B1)

1	<b>FLAT HEAD SCREW</b> (M4 x 45mm - BLK)		8PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		4PCS
3	<b>THREAD BOLT</b> (Ø5/16 x 4" - BLK)		2PCS
4	<b>HEX NUT</b> (Ø5/16 x 1/2" - BLK)		2PCS
5	<b>LOCK WASHER:</b> (Ø5/16" x 12mm)		2PCS
6	<b>FLAT WASHER</b> (Ø5/16 x 3/4" - BLK)		2PCS
7	<b>WRENCH</b> (1/2"x 3 1/2" - BLK)		1PC

### Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 501208(B2)

1	<b>FLAT HEAD SCREW</b> (M4 x 45mm - BLK)		4PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		2PCS

### Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 501208(B3)

1	<b>FLAT HEAD SCREW</b> (M4 x 45mm - BLK)		10PCS
2	<b>BASS METAL</b> (6" x 1-1/4" x 3/8" - BRW)		2PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 501208(B1-B3)


## ASSEMBLY INSTRUCTIONS

### STEP 1


The seat frame (A) will be assembled onto the handrail (D).

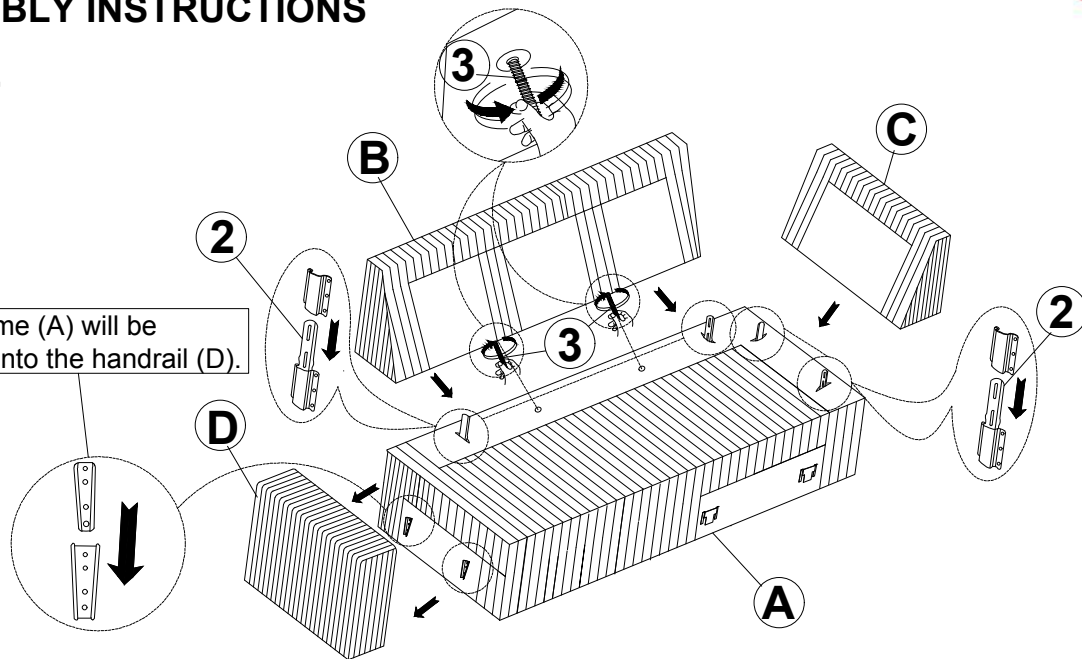

### STEP 2

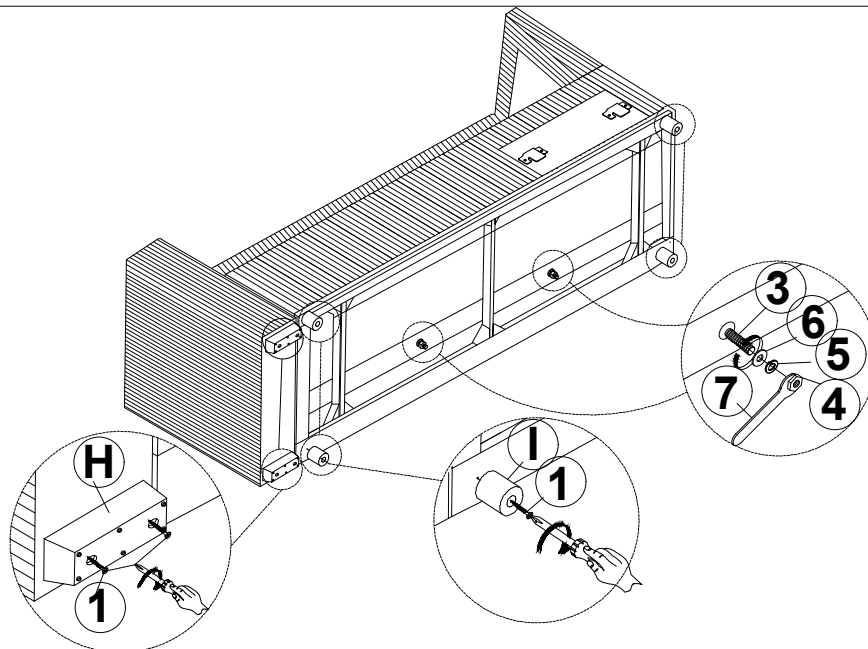

### STEP 3

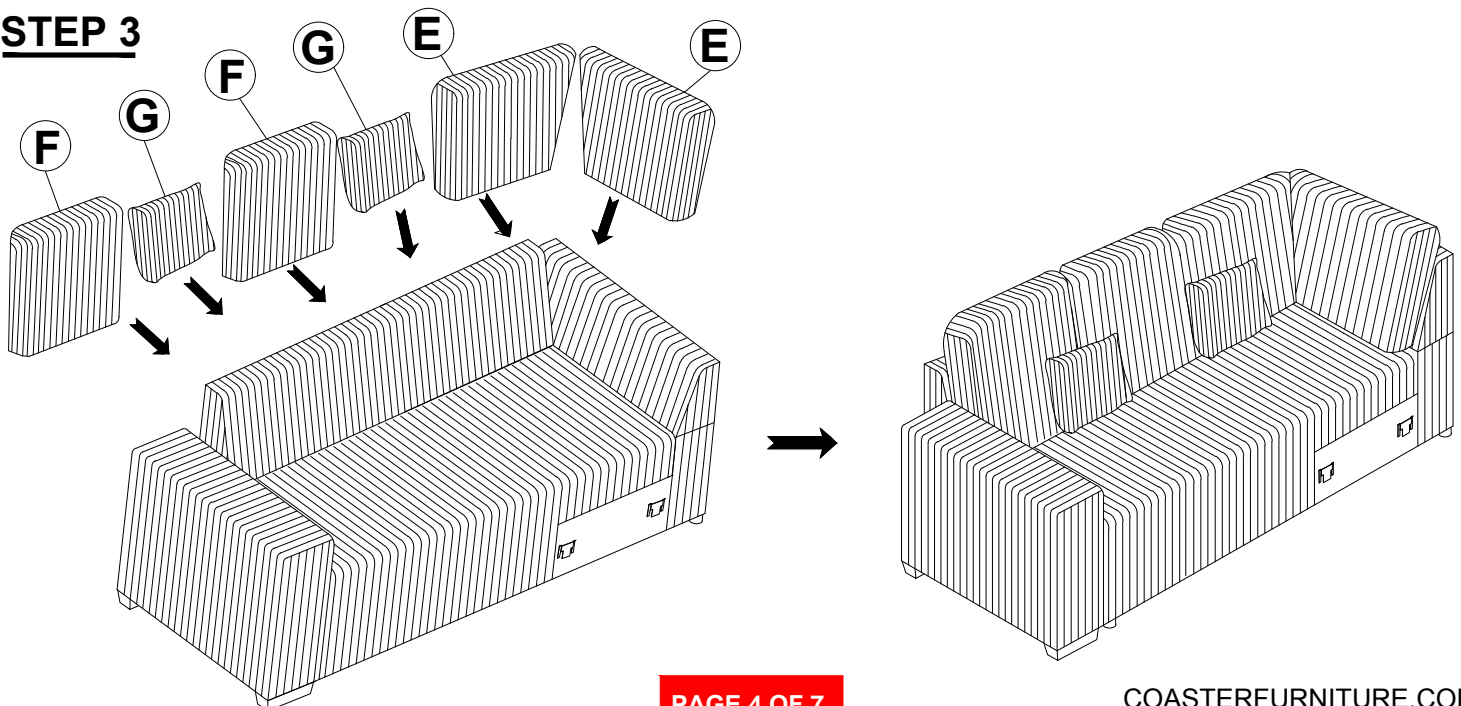




# ITEM: 501208(B1-B3)


## ASSEMBLY INSTRUCTIONS

### STEP 4

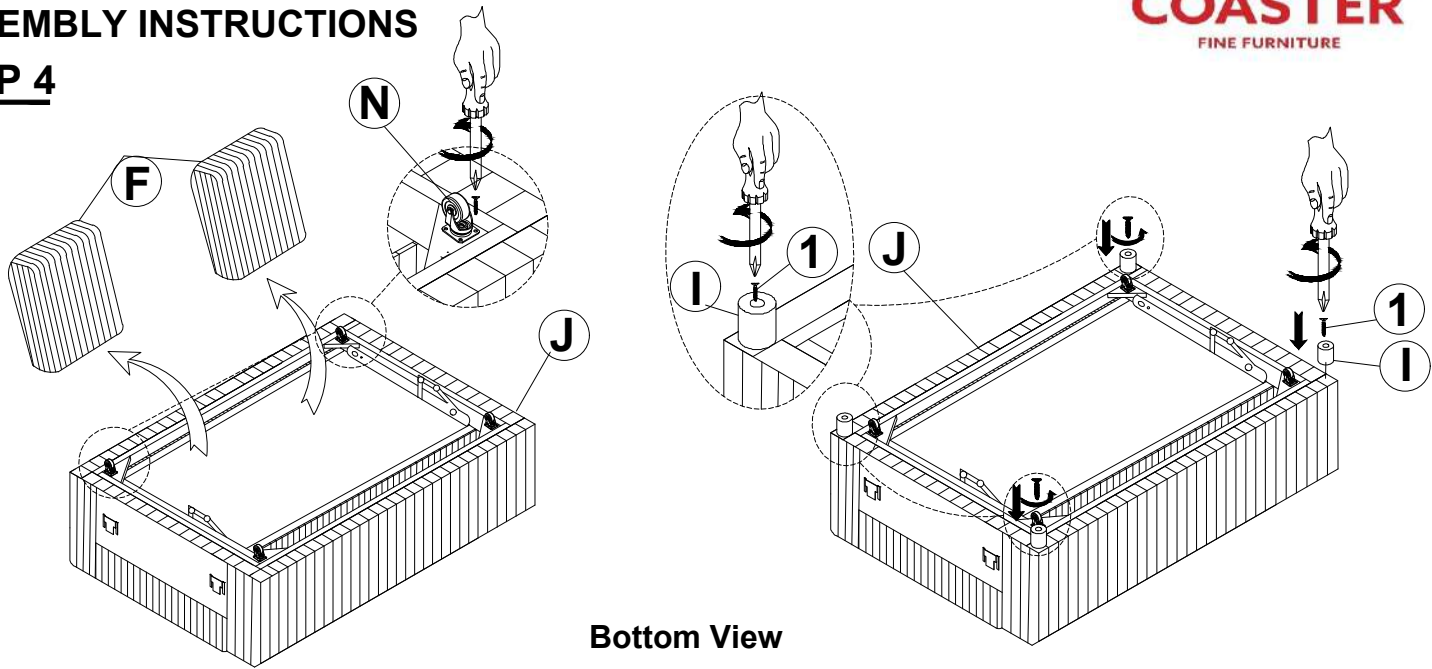


Bottom View

### STEP 5

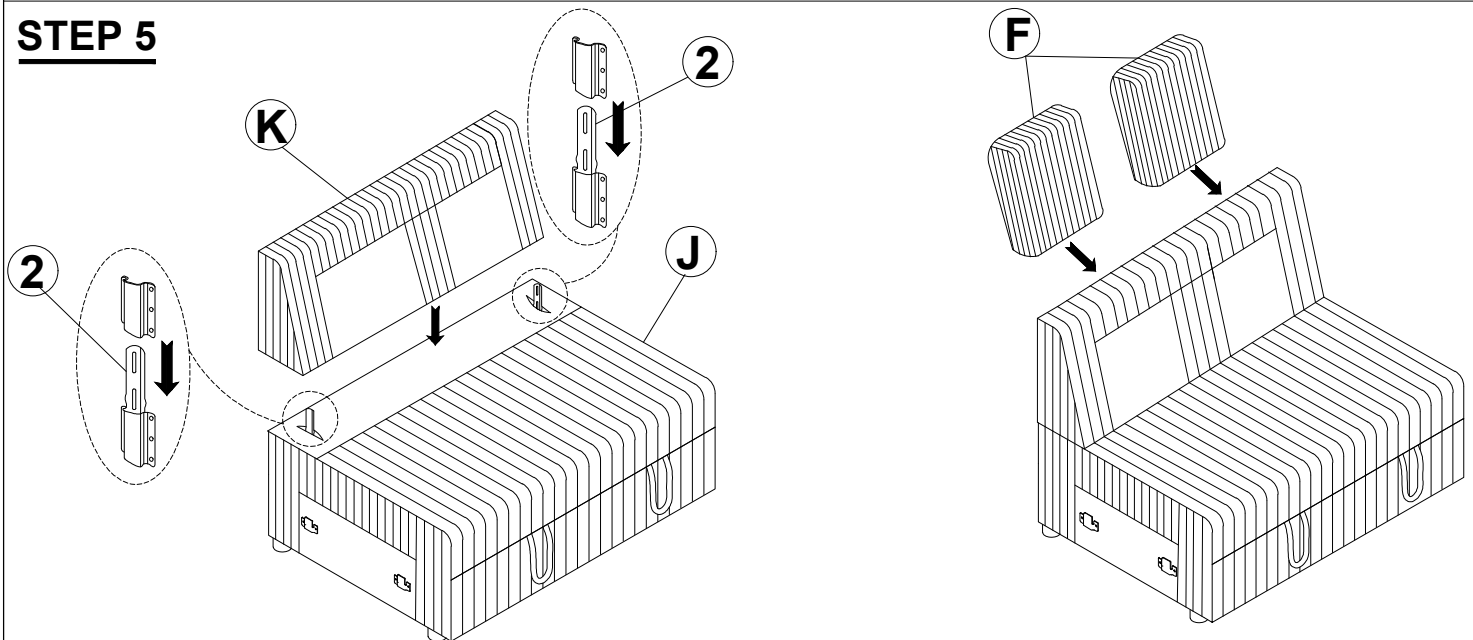


### STEP 6

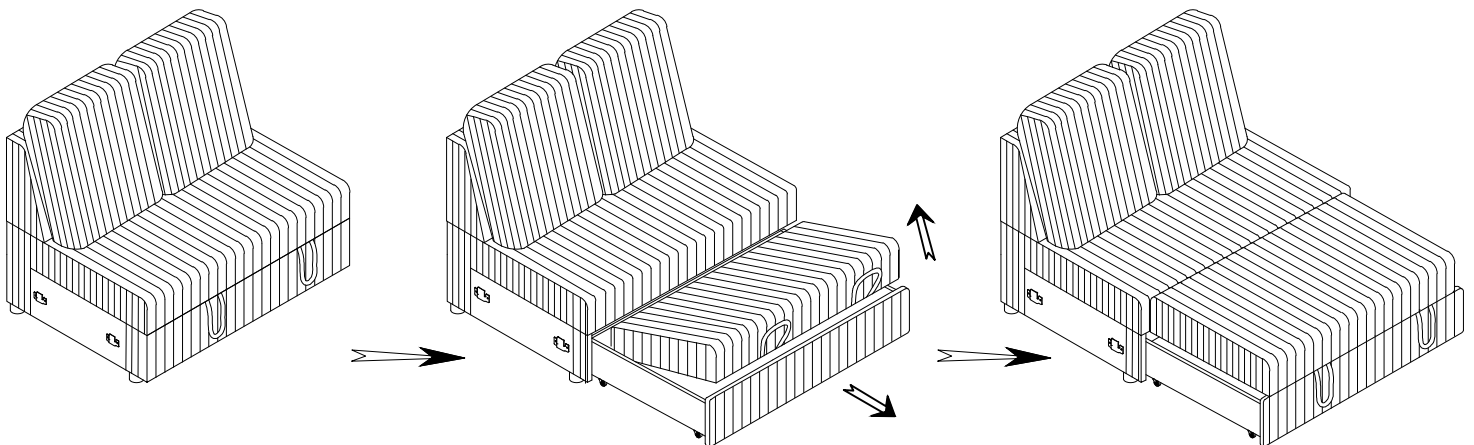


# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 7

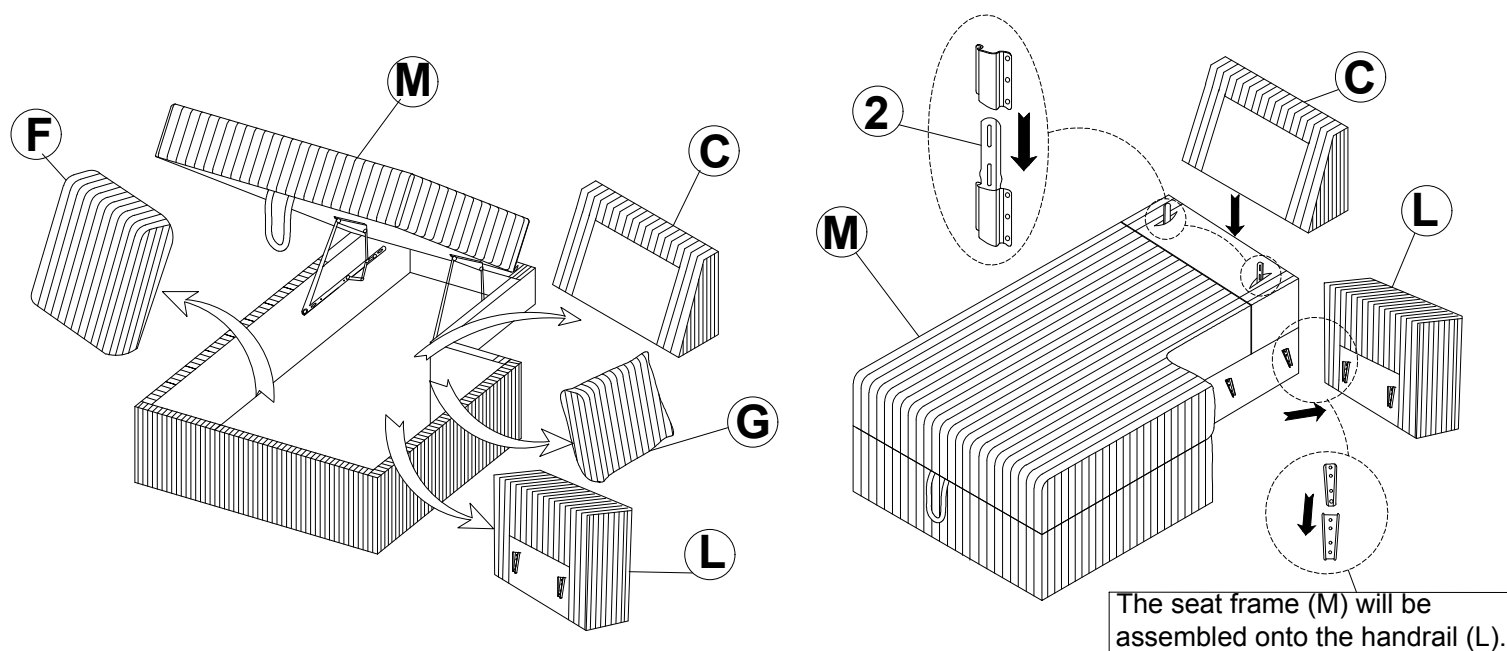


### STEP 8

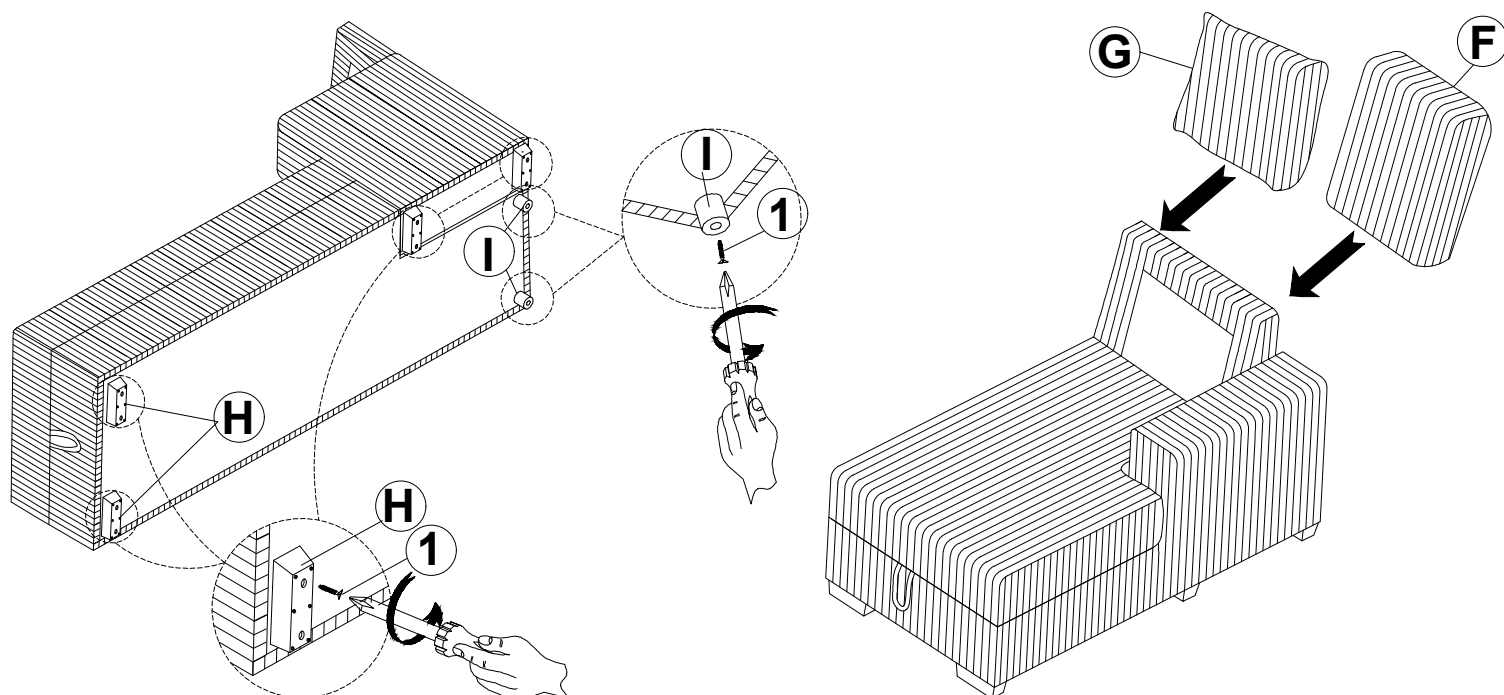


# ITEM: 501208(B1-B3)

## ASSEMBLY INSTRUCTIONS


### STEP 9

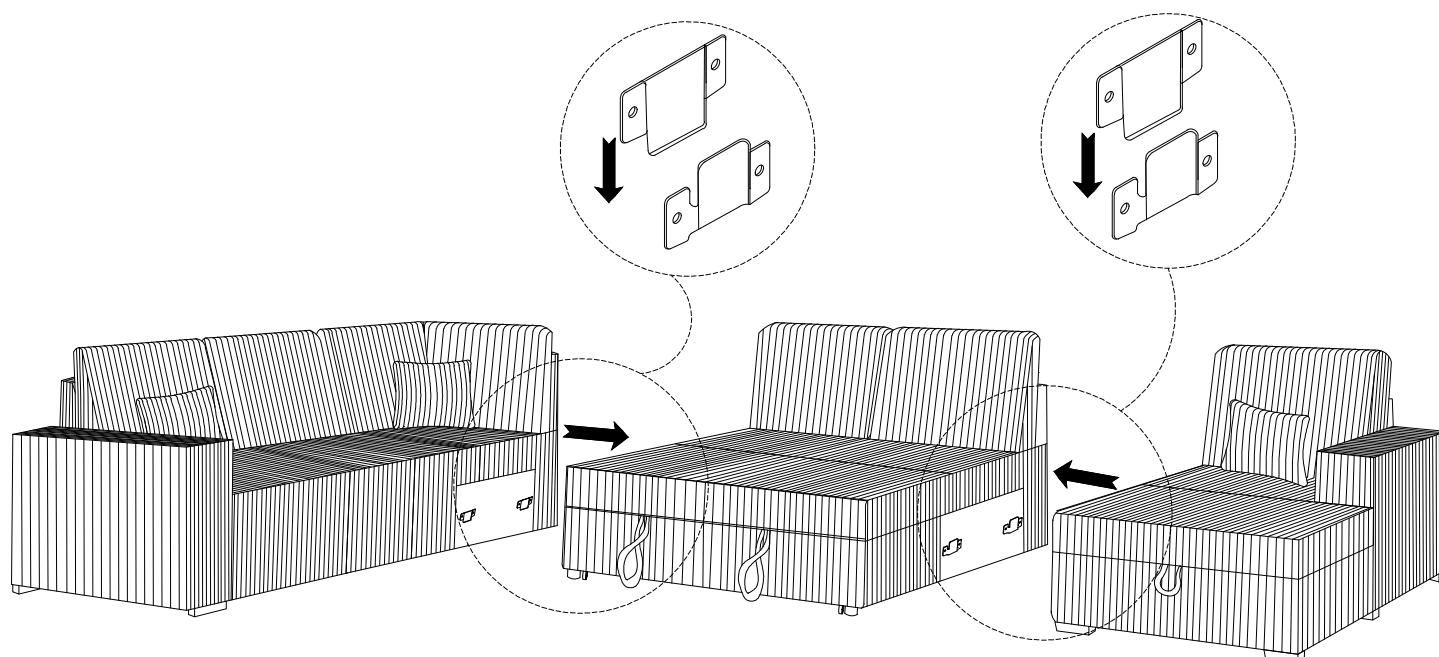

### STEP 10 COMPLETE

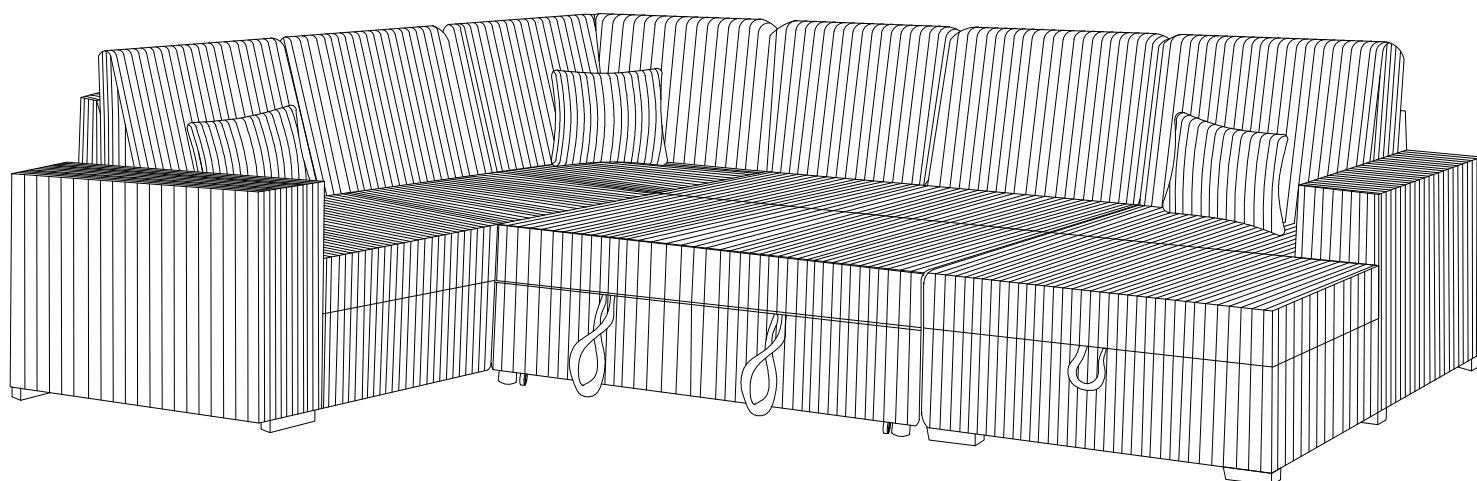

ITEM: 501208(B1-B3)

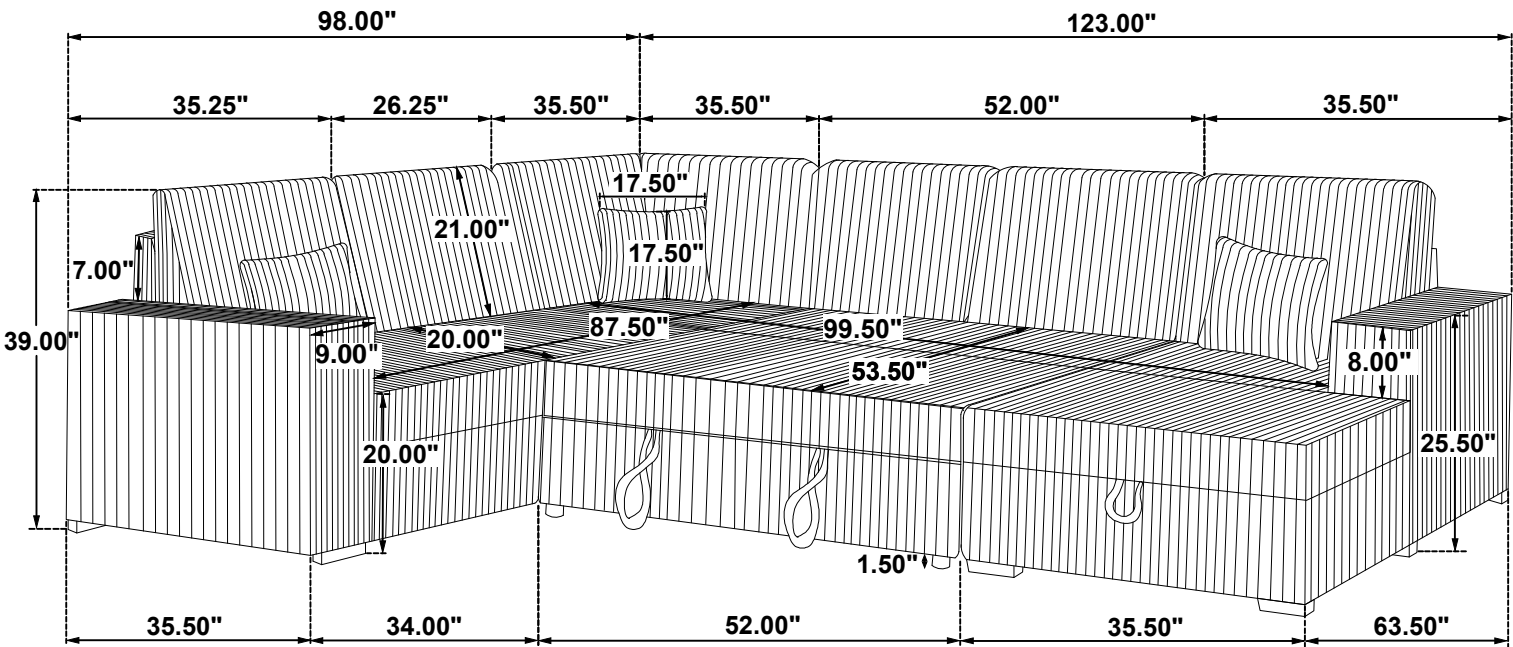

Note: Dimension tolerance  $\pm 5\%$