



T O V

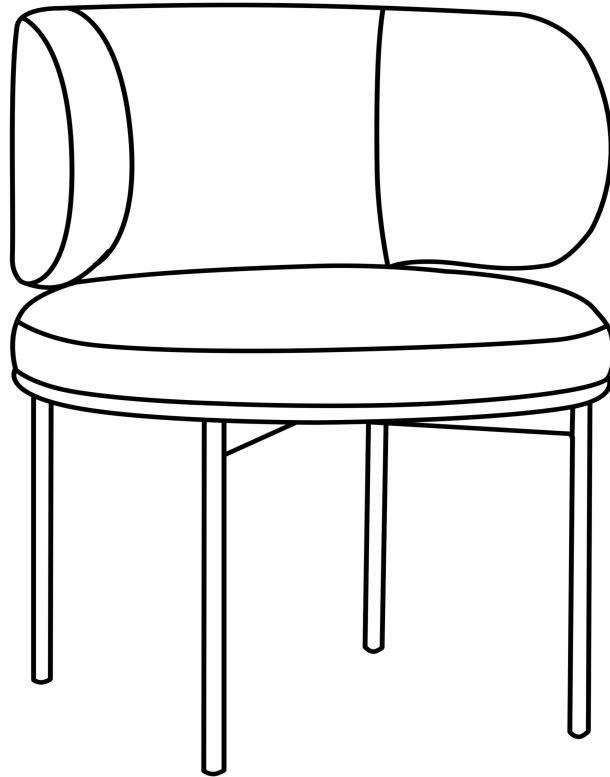

Maureen Dining Chair

DON'T BE BORING.


Hardware and Components

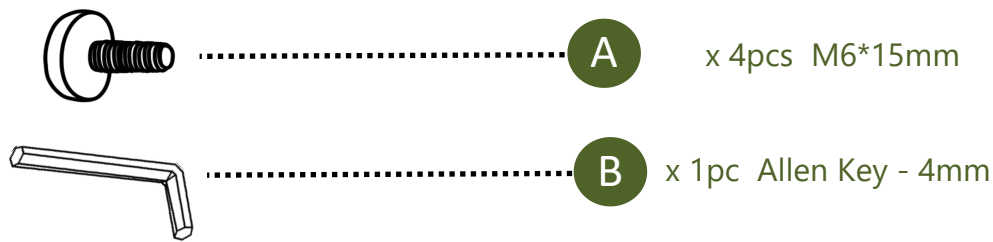

Step 1

A. Open the carton and find hardware.


B. The hardware bag will be in a small bag tied to a back leg of the chair

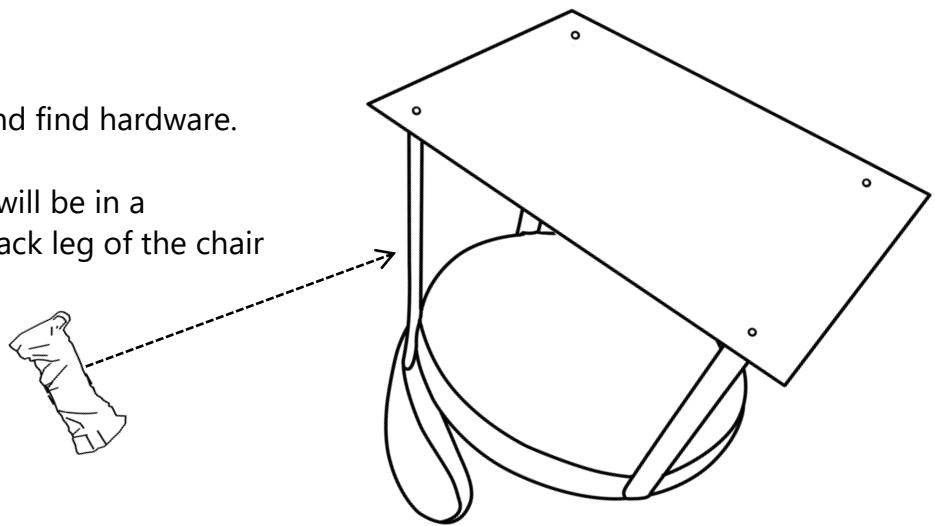

Step 2

A. Use the included allen key to remove the plywood by unscrewing the screws

B. Kindly note that the plywood plate is installed to protect the product from being crushed. Once the product is unboxed, the plywood plate is unnecessary

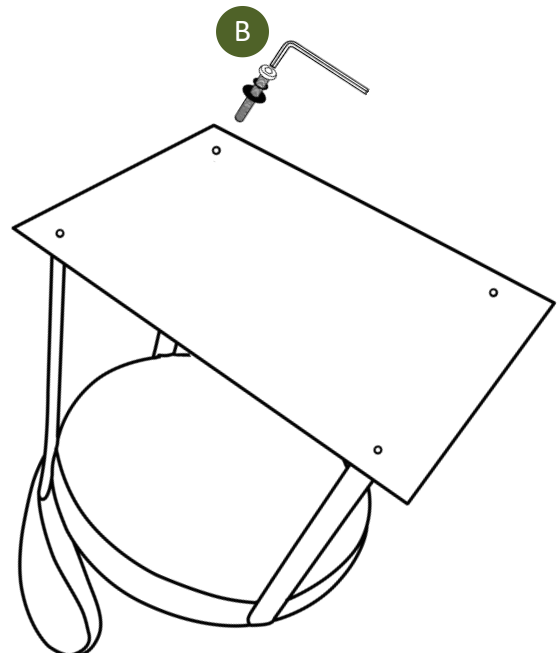


Step 3

A. Tip chair over

B. Install the levelers(B) as illustrated


C. Repeat 4x, for all 4 legs

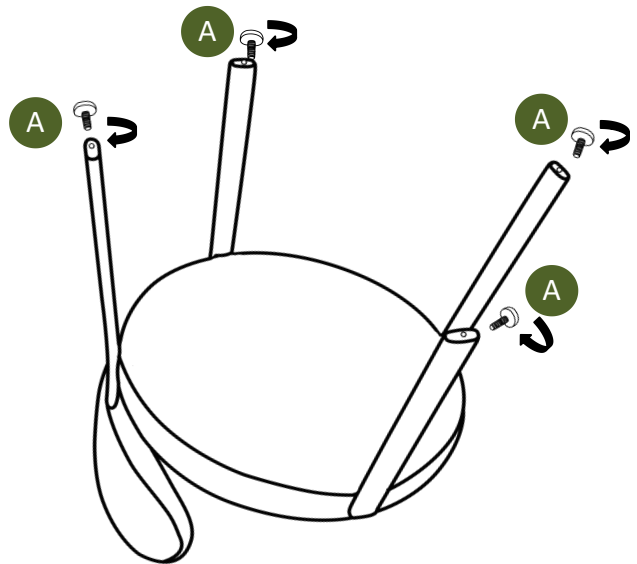

Step 4

A. Tip chair back to the upright position.

B. Complete!

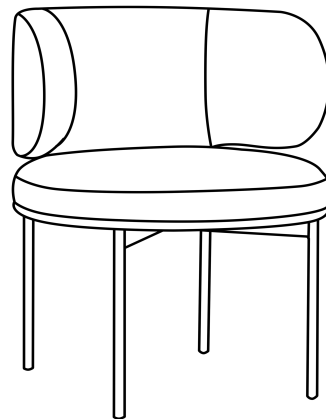

Stuck?

Contact our team @ 516-888-3355

Scan for product care!



TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture

 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.