



# ASSEMBLY INSTRUCTON FOR ACME FURNITURE

## MODEL# LV06220


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screws until fully assembled\*\*\*

Parts List			
NO.	DESCRIPTION	SKETCH	Q'TY
A	Backrest		2 PCS
B	Middle backrest		1 PC
C	Seat		1 PC

Parts List			
NO.	DESCRIPTION	SKETCH	Q'TY
D	Power plug		1 PC
E	Power adapter		1 PC


Note: Power adapter & power plug are packed in a red bag attached to the backside of the seat.

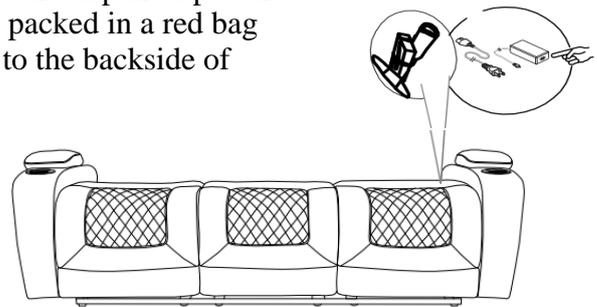

**Notes : DO NOT remove any black cable ties that hold wiring in place at the base of the piece**


### Step 1:

Attach Backrest (A)(B) to Seat(C) until hearing a clicking sound

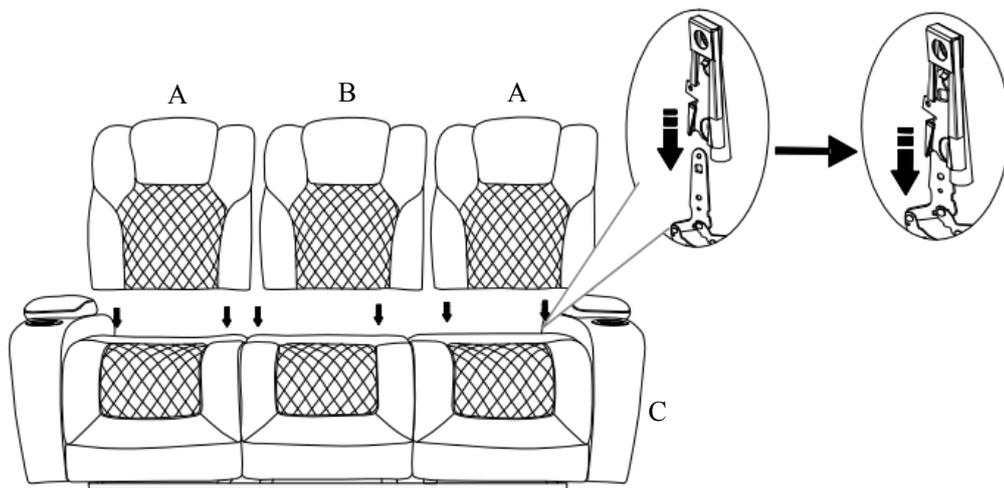

## Step 2:


Connect the Power adapter(E) to corresponding plug coming from the back of the sofa, then connect one end of the Power Plug(D) into the Power adapter(E)

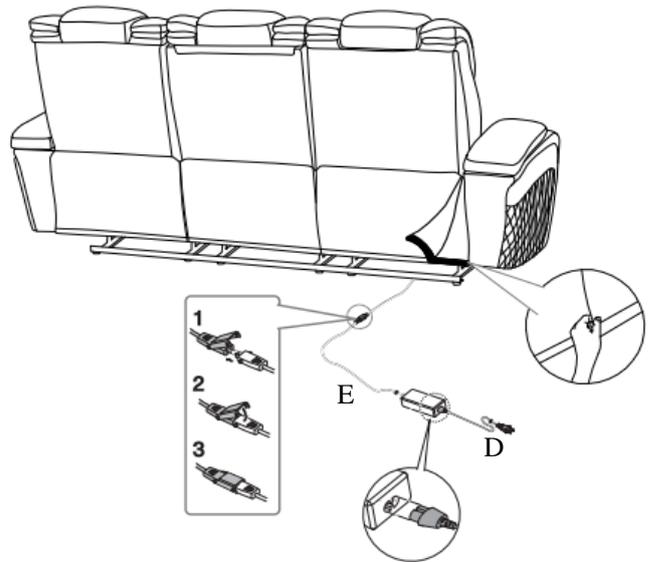

## Step 3:

Connect the other end of the Power plug (D) into an electrical outlet near where the sofa will be used.

Press control button to adjust the recliner to any position you want

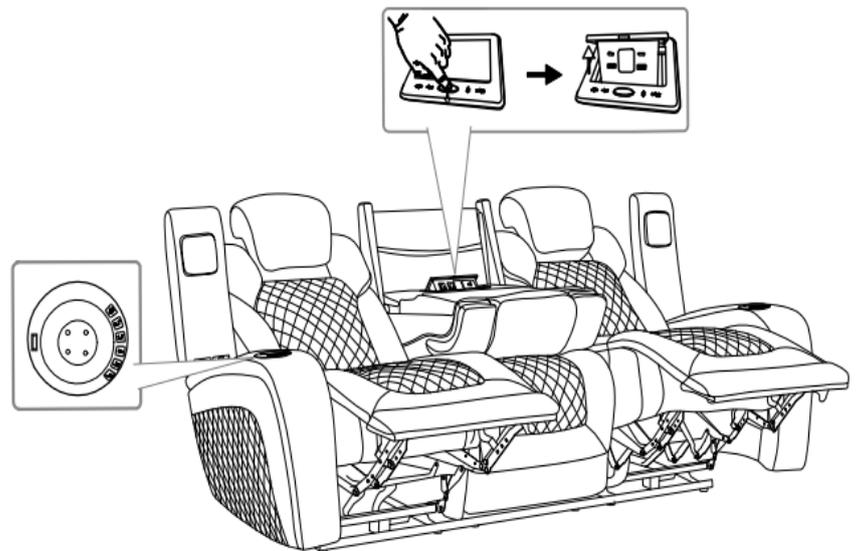

COMPLETED

