
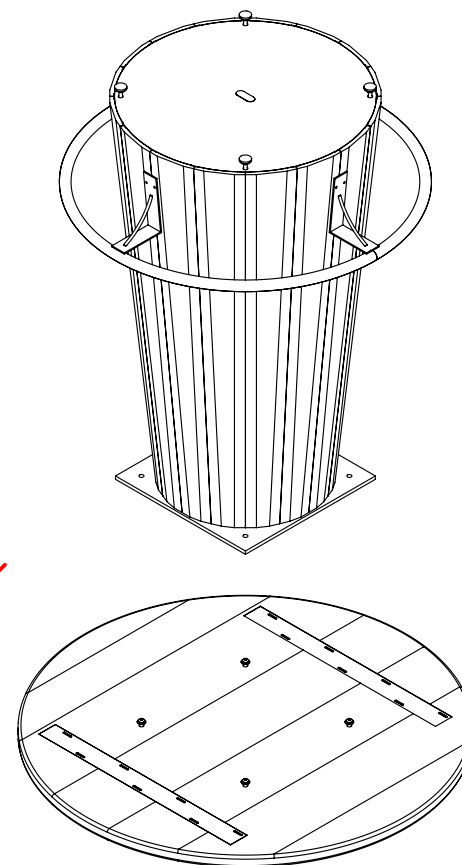
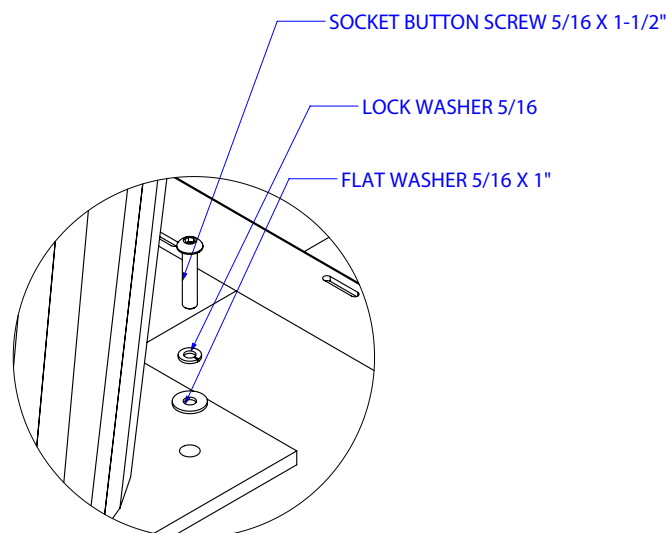


STEP 1

PLACE THE TOP ON A FLAT AND CLEAN SURFACE,
MATCH THE BASE TO THE TOP,
MATCHING THE HOLES

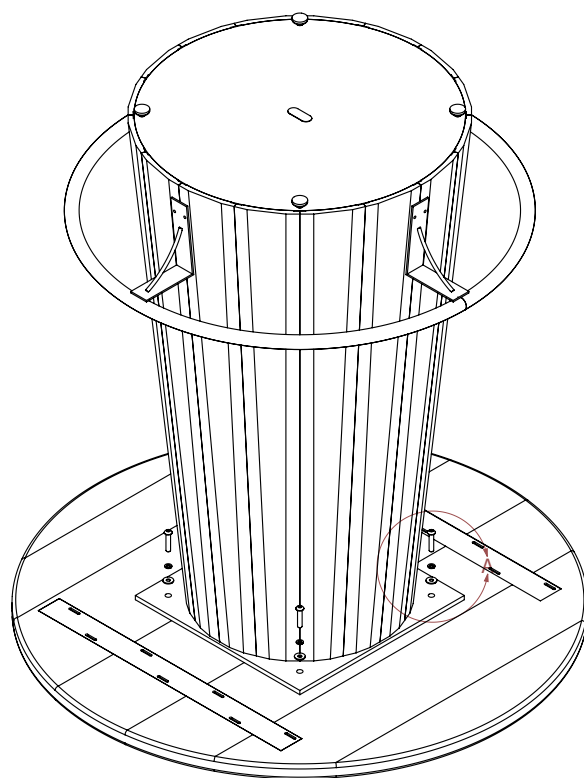

STEP 2

TIGHTEN THE SCREWS AS SHOWN IN FIGURE A, THEN
IN FIGURE A, THEN PLACE IN THE DESIRED LOCATION



ITEM:

ASSEMBLING INSTRUCTIONS

I-BIS-E002

DESCRIPTION	#
SOCKET BUTTON SCREW 5/16 X 1- 1/2"	4
LOCK WASHER 5/16	4
FLAT WASHER	4
ALLEN KEY 3/16	1