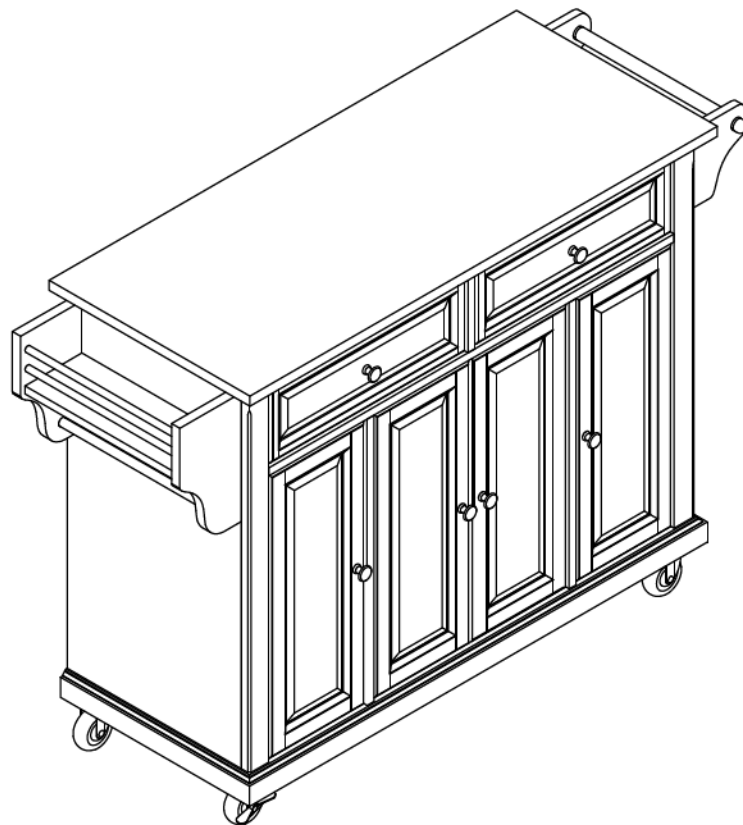

























CROSLEY

FURNITURE





Kitchen Cart / Island CF3020



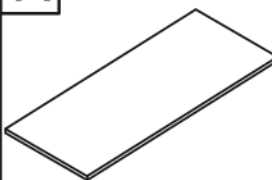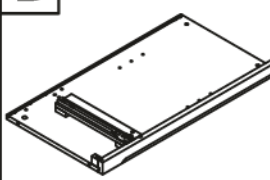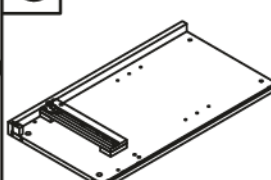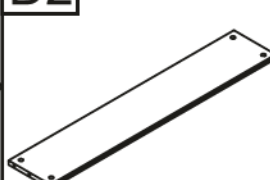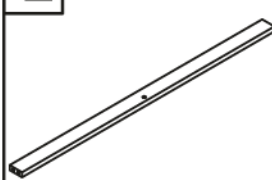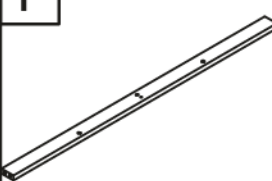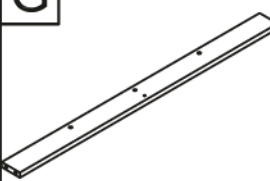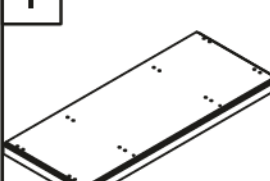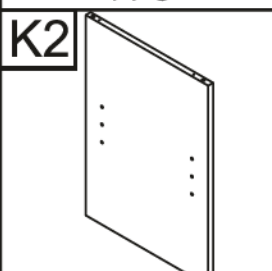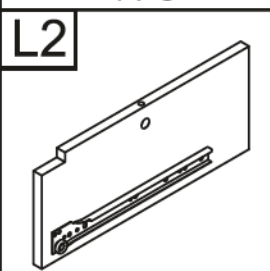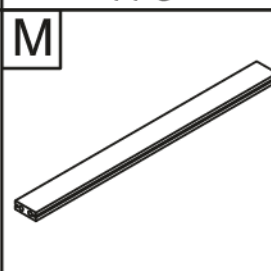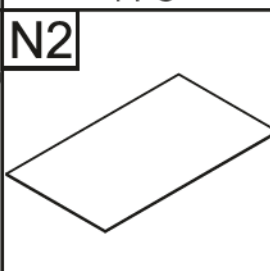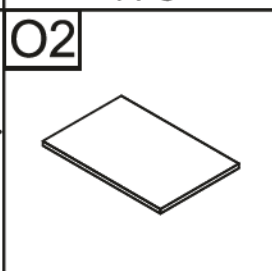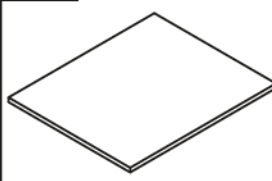
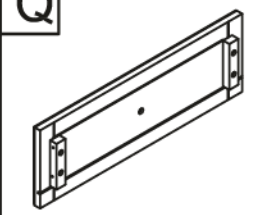
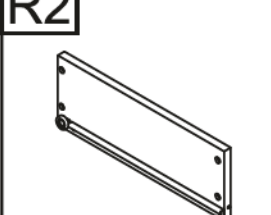
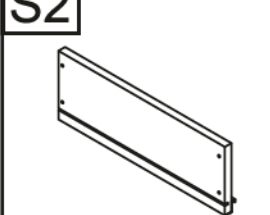
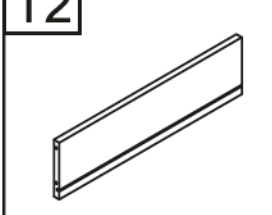
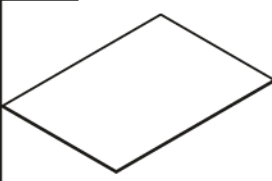
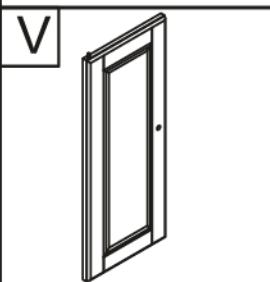
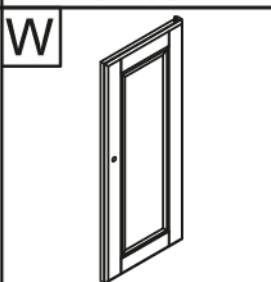
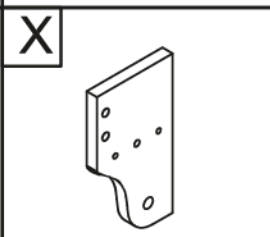
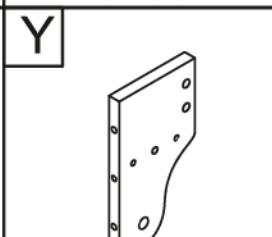
PART LIST

A  (Ships Separately) Top Panel 1 PC	B  Left Panel 1 PC	C  Right Panel 1 PC	D2  Back Top Panel 1 PC	E  Front Top Rail 1 PC
F  Back Top Rail 1 PC	G  Front Middle Rail 1 PC	H  Back Bottom Rail 1 PC	I  Bottom Panel 1 PC	J2  Left Partition Panel 1 PC
K2  Right Partition Panel 1 PC	L2  Top Vertical Panel 1 PC	M  Back Partition Panel 2 PCS	N2  Back Panel 3 PCS	O2  Adjustable Shelf 2 PCS
P2  Middle Adjustable Shelf 1 PC	Q  Drawer Front Panel 2 PCS	R2  Drawer Left Panel 2 PCS	S2  Drawer Right Panel 2 PCS	T2  Drawer Back Panel 2 PCS
U2  Drawer Bottom Panel 2 PCS	V  Left Door Panel 2 PCS	W  Right Door Panel 2 PCS	X  Towel Bar Left Panel 1 PC	Y  Towel Bar Right Panel 1 PC

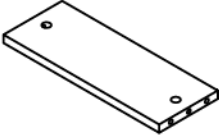PART LIST


Z 	ZA 	ZB 	ZC 	ZD 
Support Bar 2 PCS	Support Panel 1 PC	Towel Bar 1 PC	Small Towel Bar Panel 2 PCS	Small Towel Bar 1 PC
ZE 	ZF 	ZG 		
Locking Caster 2 PCS	Caster 2 PCS	Leg 4 PCS		

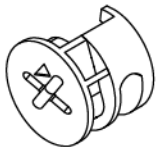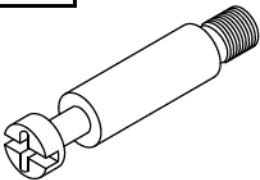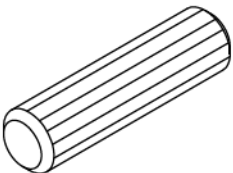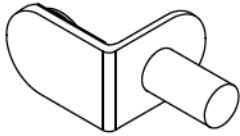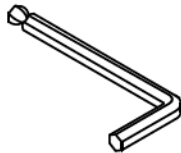HARDWARE LIST

#1 	#2 	#3 	#4  2"Ø1/4"D11mm	#5 
Cam Lock 19 PCS (Extra 2)	Cam Bolt 19 PCS	Wood Dowel 55 PCS (Extra 1)	Long Bolt 14 PCS	Screw 16 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
Barrel Nut 8 PCS	Shelf Holder 12 PCS	Knob 6 PCS	Round Head Bolt 6 PCS	Large Round Head Screw 16 PCS (Extra 1)
#11 	#12 	#13 	#14 	#15 
Double Magnet 1 PC	Magnet 2 PCS	Round Head Screw 6 PCS (Extra 1)	Allen Wrench 1 PC	Long Screw 7 PCS (Extra 1)
#16  1-1/2"Ø5/16"D13mm	#17 	#18 	#19 	 (Spare Part)
Short Bolt 4 PCS (Extra 1)	Flat Washer 4 PCS (Extra 1)	Spring Washer 4 PCS (Extra 1)	Adjustable Leveler 4 PCS	Pin Hinge (Extra 4)

ADDITIONAL TOOLS (Not Provided)

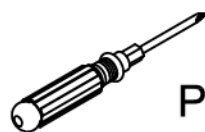Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #2) into top panel (part A), left panel (part B), right panel (part C), towel bar left panel (part X) and towel bar right panel (part Y) using phillips head screwdriver.

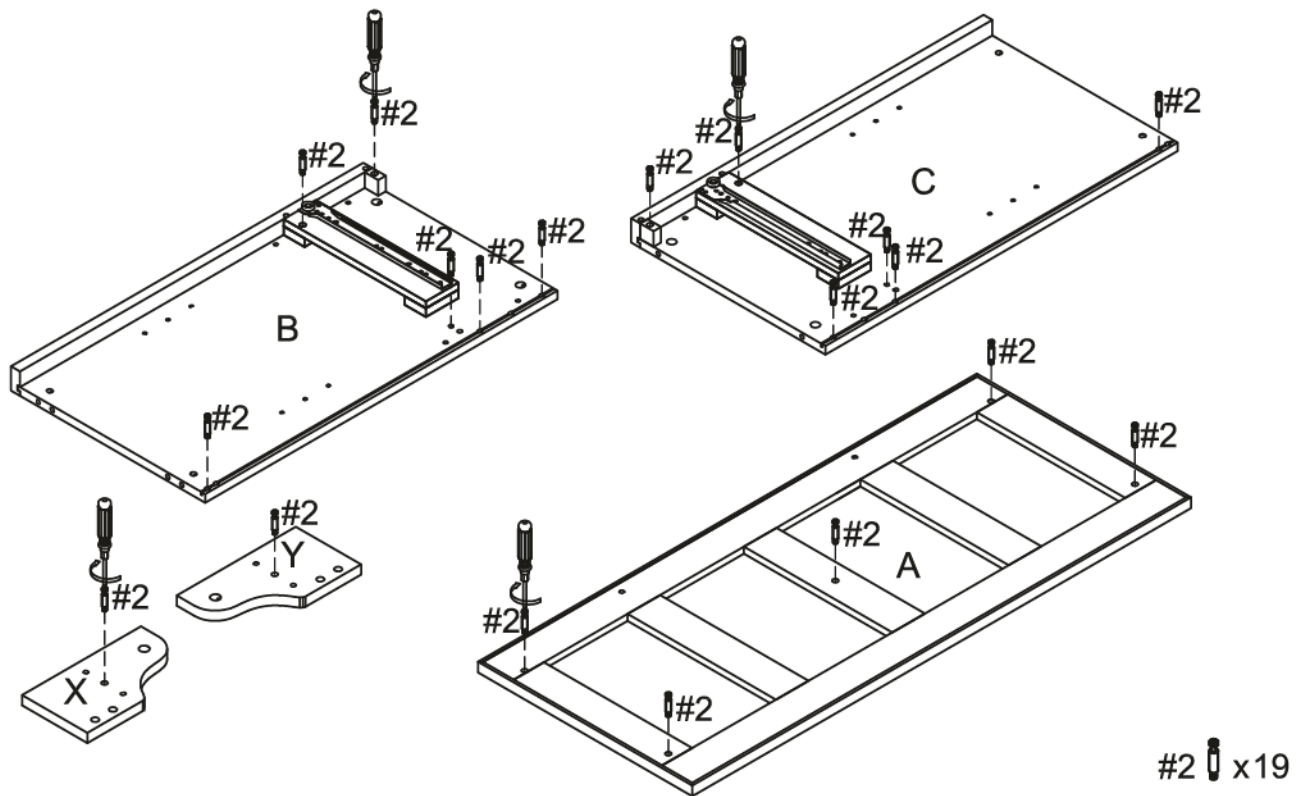NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




Step 2. Attach knobs (part #8) to drawer front panels (part Q), left door panels (part V) and right door panels (part W) using round head bolts (part #9) and phillips head screwdriver. Attach drawer left panel (part R2) and drawer right panel (part S2) to drawer front panel (part Q) using screws (part #5) and phillips head screwdriver. Slide drawer bottom panel (part U2) into grooves of assembled unit (parts Q, R2 & S2). Attach drawer back panel (part T2) to assembled unit (parts R2, S2 & U2) using screws (part #5) and phillips head screwdriver. Repeat for remaining drawer.

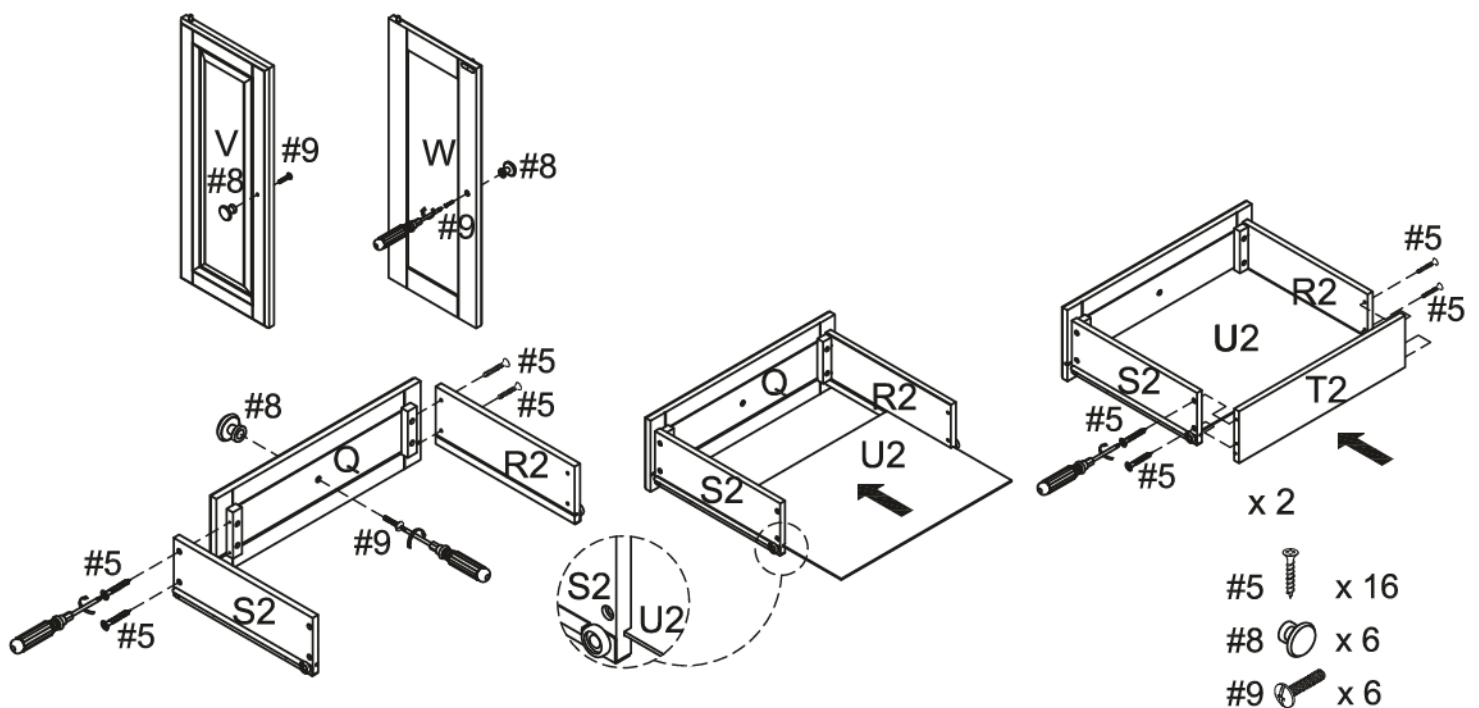NOTE: Be sure drawer glide wheels are facing back panel.



Step 3. Attach front top rail (part E) to top vertical panel (part L2) using wood dowel (part #3), long screw (part #15) and phillips head screwdriver. With front top rail (part E) flat on ground, attach front middle rail (part G) and back top rail (part F) to top vertical panel (part L2) using wood dowels (part #3), long screws (part #15) and phillips head screwdriver.


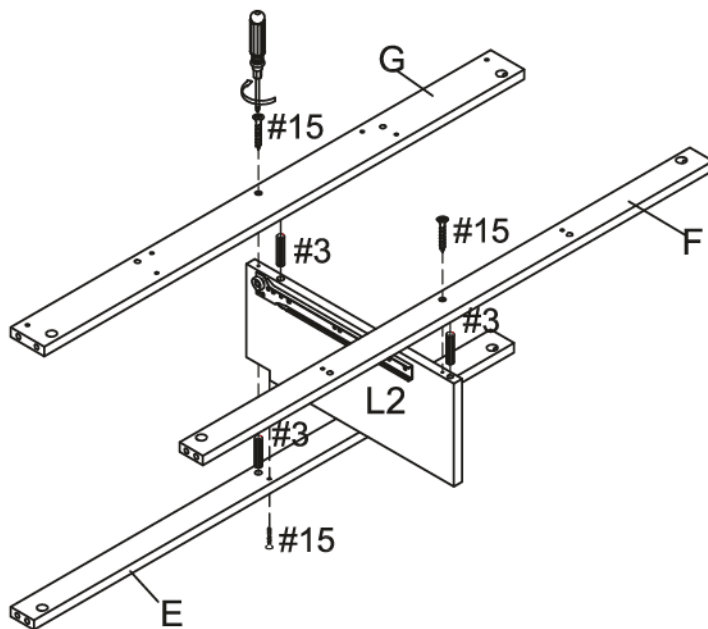
NOTE: Please ensure screws are aligned with the pre-drilled holes in top vertical panel (part L2) before tightening.



#3  x3
#15  x3


Step 4. Attach assembled unit (parts E, F, G & L2) to right panel (part C) using wood dowels (part #3) and cam locks (part #1). Attach back top panel (part D2) to right panel (part C) using wood dowel (part #3) and cam locks (part #1).

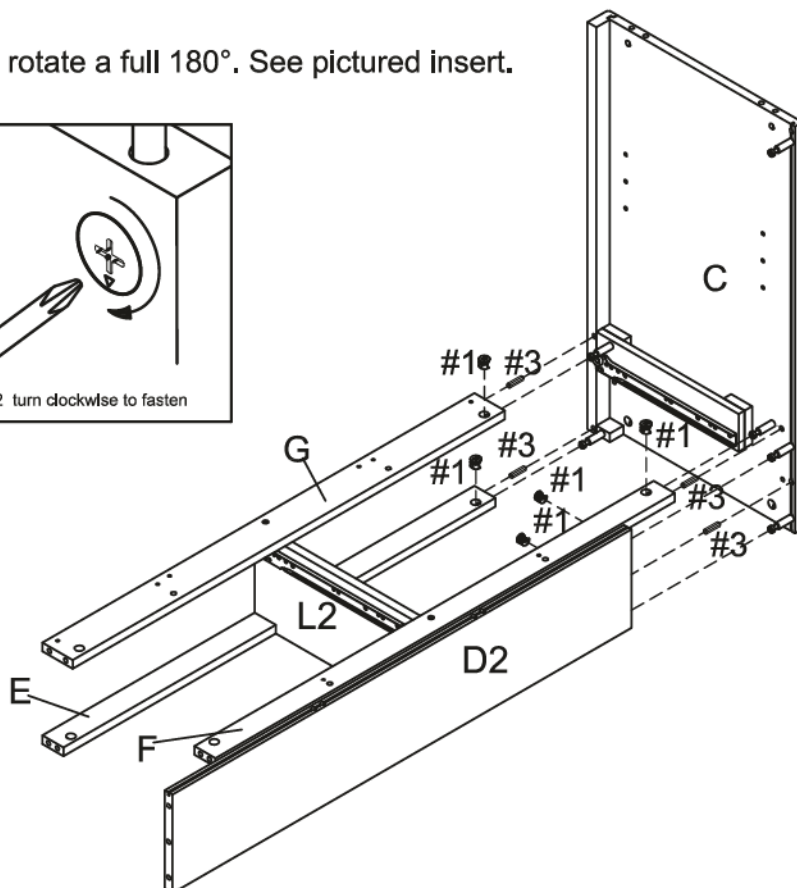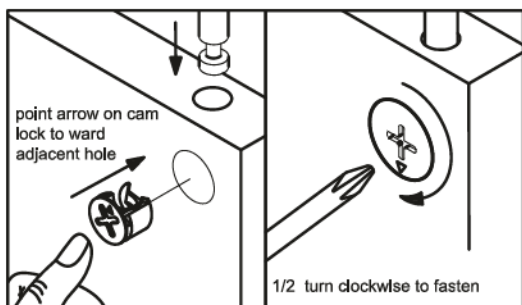NOTE: Cam locks must rotate a full 180°. See pictured insert.



#1  x5
#3  x4


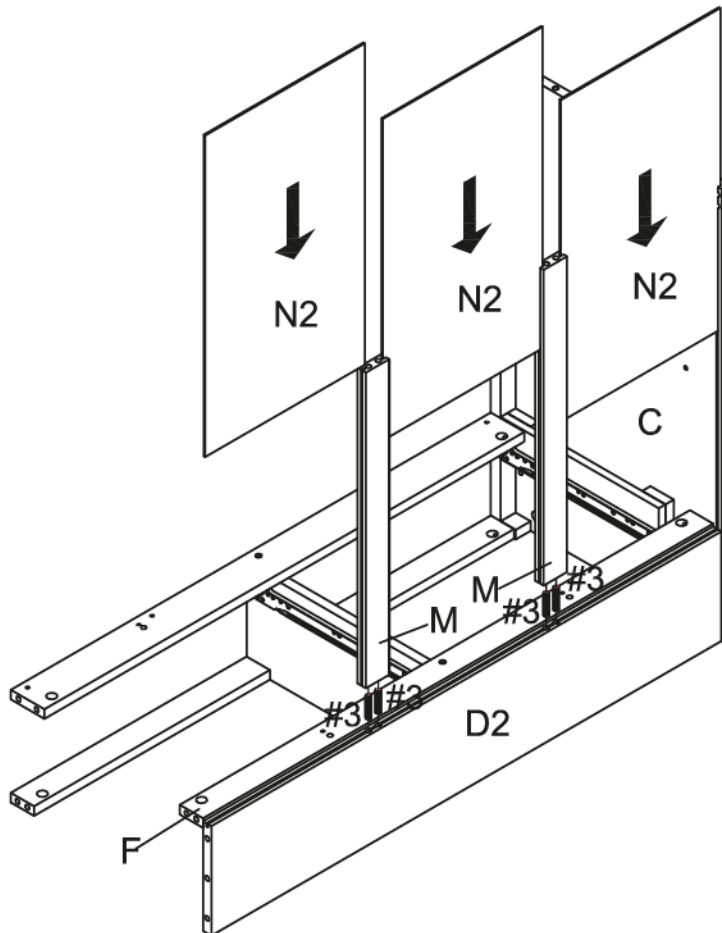
Step 5. Attach back partition panels (part M) to back top panel (part D2) using wood dowels (part #3). Slide back panels (part N2) into grooves of right panel (part C), back top panel (part D2) and back partition panels (part M).



#3  x 4

Step 6. Attach back bottom rail (part H) to back partition panels (part M), back panels (part N2) and right panel (part C) using wood dowels (part #3) and cam lock (part #1).

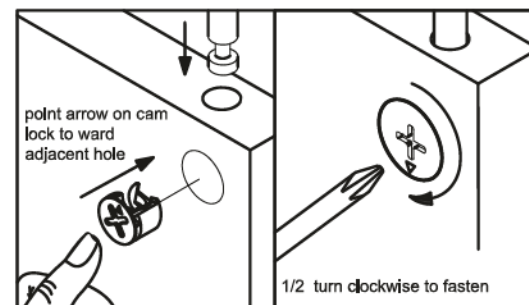
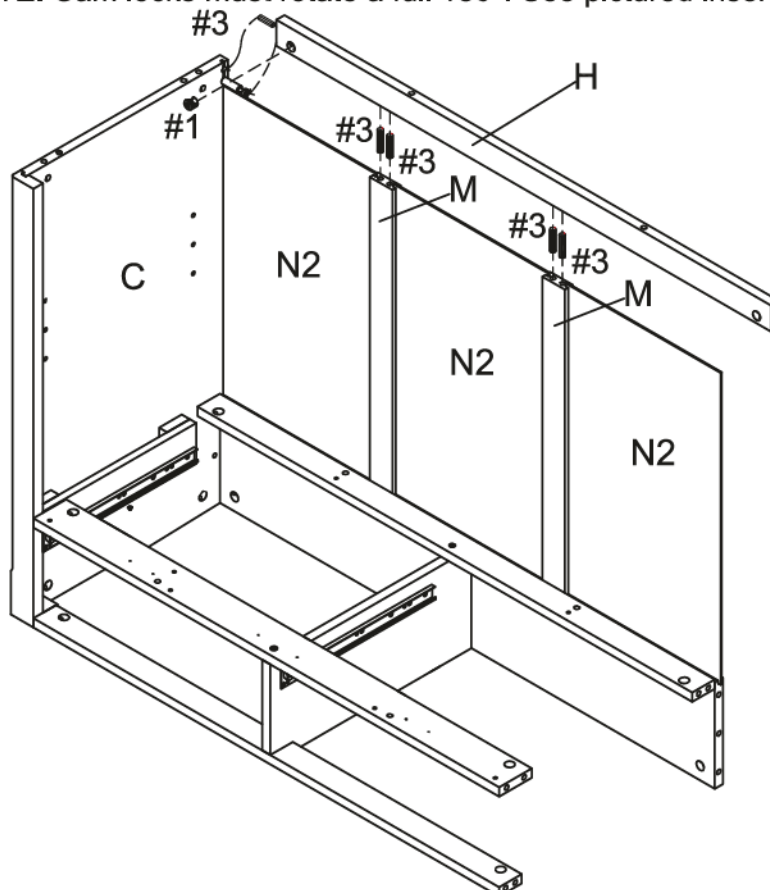
NOTE: Cam locks must rotate a full 180°. See pictured insert.



#1  x 1
#3  x 5


Step 7. Attach left panel (part B) to assembled unit (parts D2, E, F, G, H & N2) using wood dowels (part #3) and cam locks (part #1).

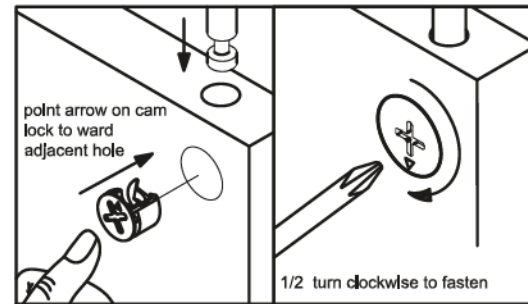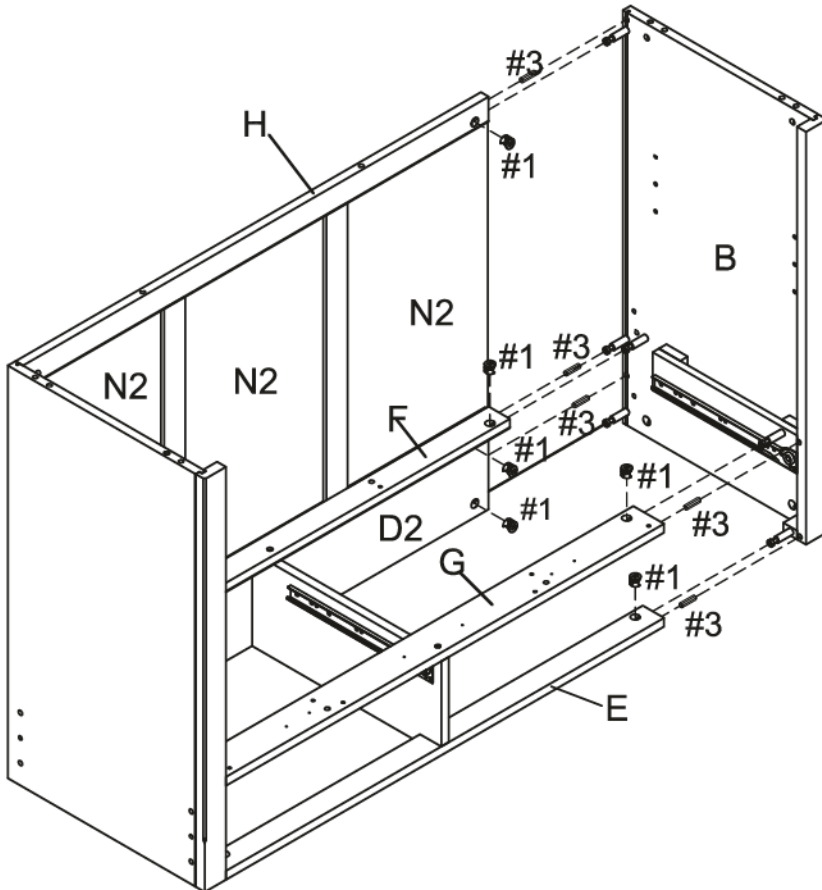NOTE: Cam locks must rotate a full 180°. See pictured insert.




#1  x 6
#3  x 5

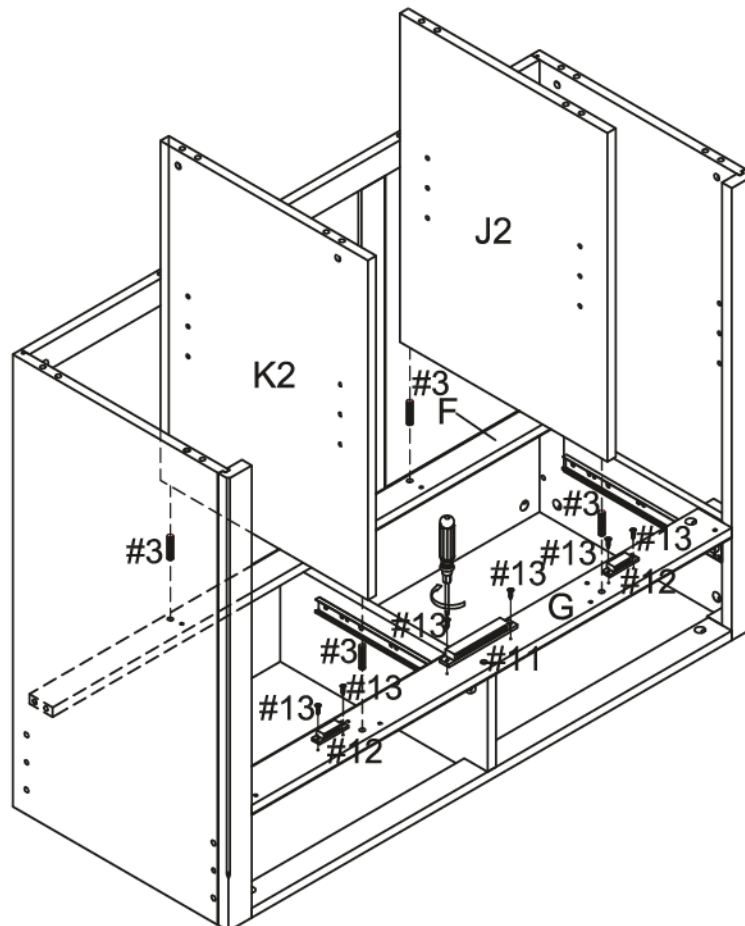Step 8. Attach double magnet (part #11) and magnets (part #12) to front middle rail (part G) using round head screws (part #13) and phillips head screwdriver. Attach left partition panel (part J2) and right partition panel (part K2) to back top rail (part F) and front middle rail (part G) using wood dowels (part #3).




#3  x 4
#11  x 1
#12  x 2
#13  x 6

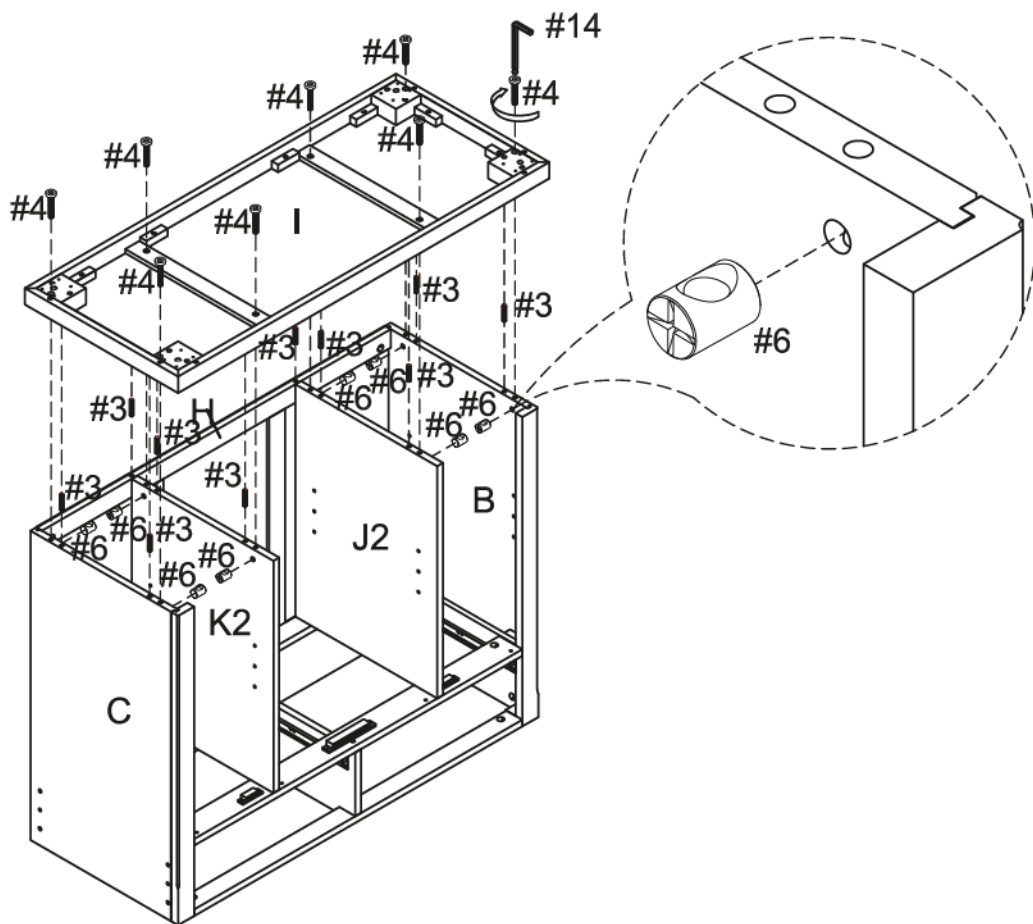Step 9. Attach bottom panel (part I) to assembled unit (parts B, C, H, J2 & K2) using wood dowels (part #3), long bolts (part #4), barrel nuts (part #6) and allen wrench (part #14).




Step 10. CASTER INSTALLATION

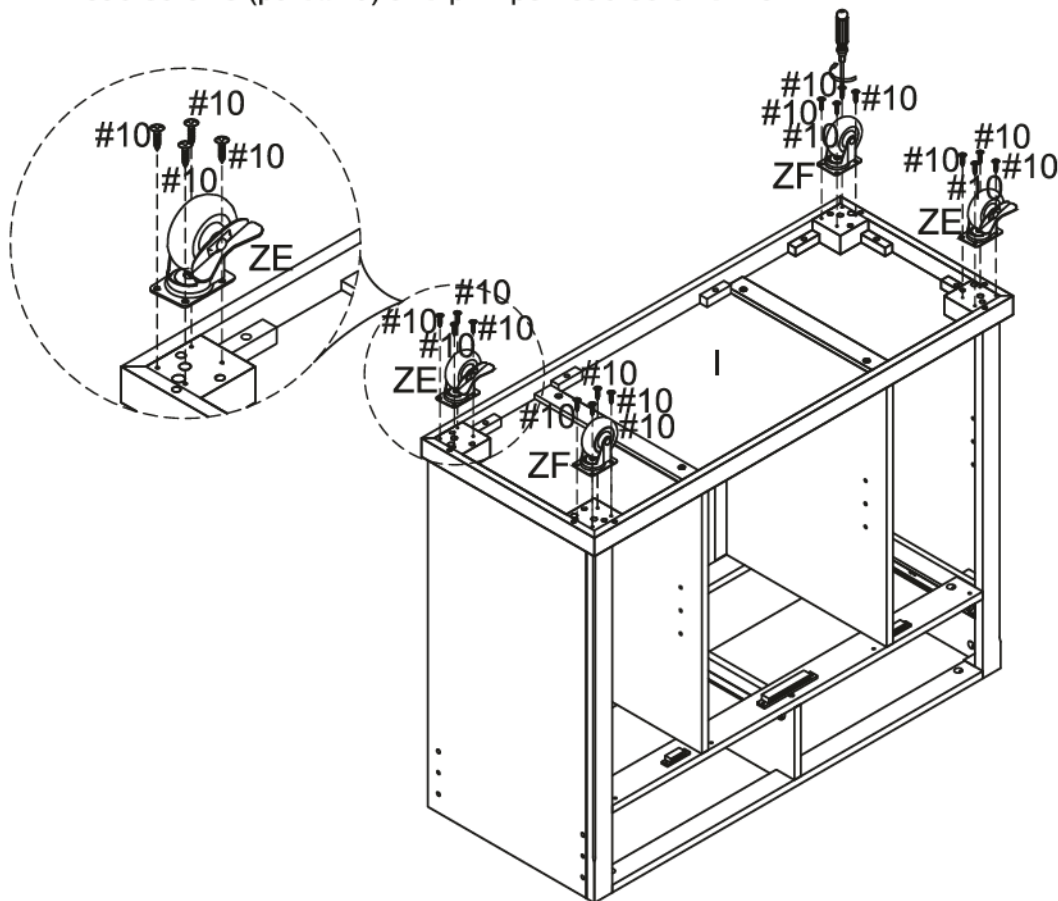Attach locking casters (part ZE) and casters (part ZF) to bottom panel (part I) using large round head screws (part #10) and phillips head screwdriver.




Step 11. LEG INSTALLATION

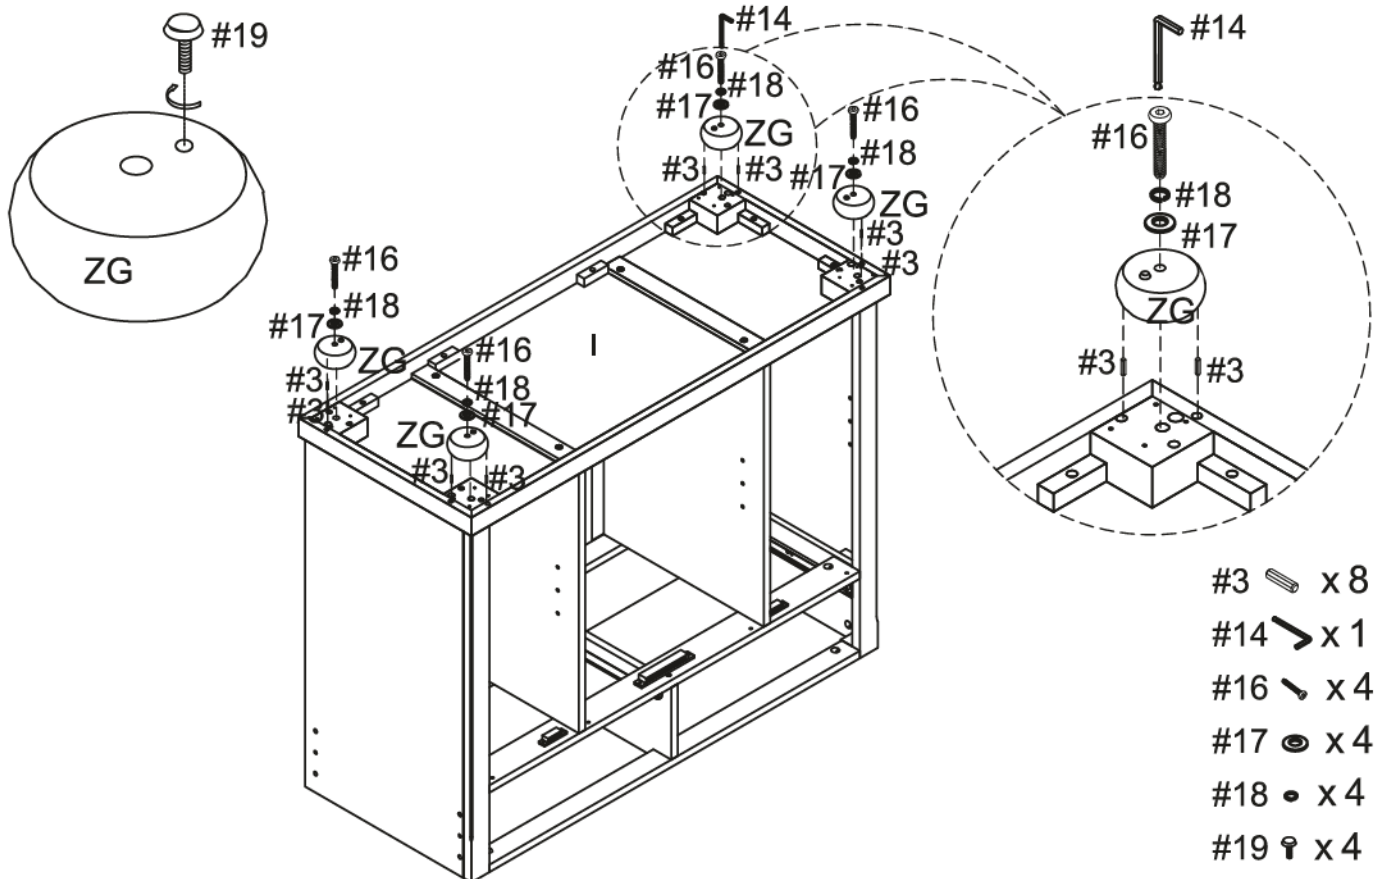Attach adjustable levelers (part #19) to legs (part ZG). Attach legs (part ZG) to bottom panel (part I) using wood dowels (part #3), flat washers (part #17), spring washers (part #18), short bolts (part #16) and allen wrench (part #14).




Step 12. Insert towel bar (part ZB) and support bars (part Z) into towel bar left panel (part X). Attach support panel (part ZA) to towel bar left panel (part X) using wood dowels (part #3) and cam lock (part #1). Attach towel bar right panel (part Y) to assembled unit (parts Z, ZA & ZB) using wood dowels (part #3) and cam lock (part #1).

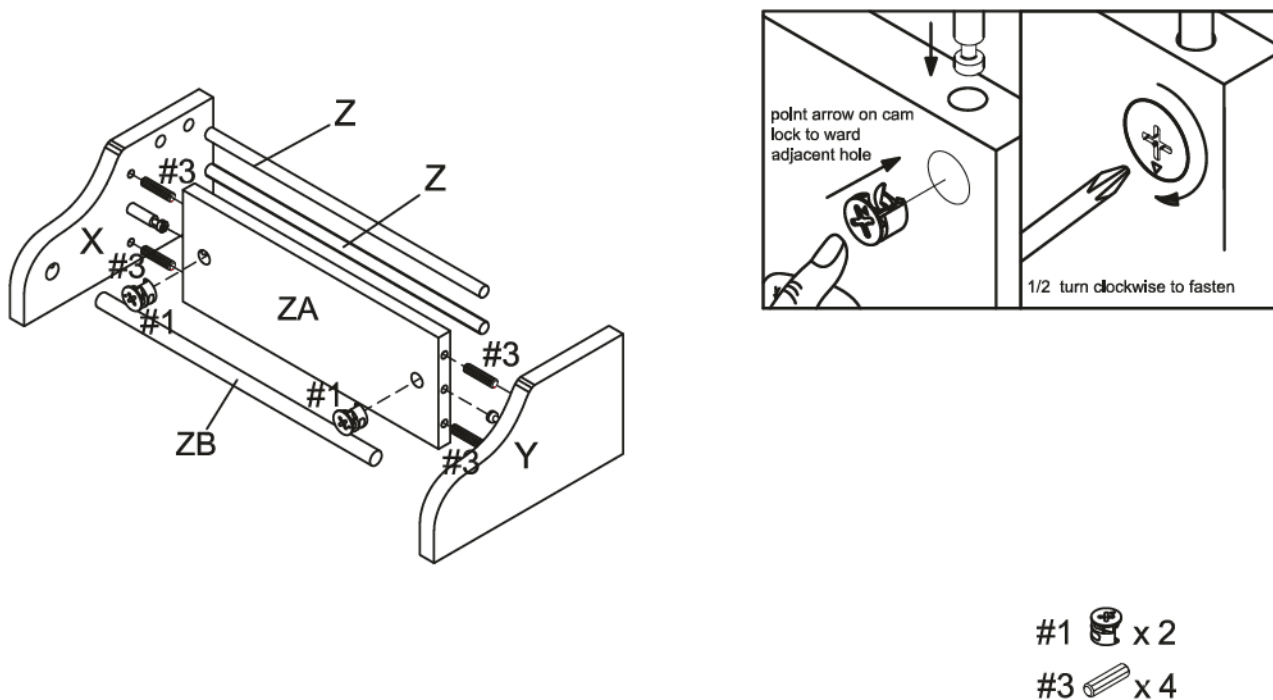NOTE: Cam locks must rotate a full 180°. See pictured insert.



Step 13. Carefully turn unit upright. Secure left partition panel (part J2) and right partition panel (part K2) to back top rail (part F) and front middle rail (part G) using long screws (part #15) and phillips head screwdriver. Attach assembled unit (parts X, Y, Z, ZA & ZB) to left panel (part B) using long bolts (part #4) and wood dowels (part #3). Attach small towel bar panels (part ZC) to right panel (part C) using long bolts (part #4) and wood dowels (part #3). Insert small towel bar (part ZD) through the holes of small towel bar panels (part ZC).


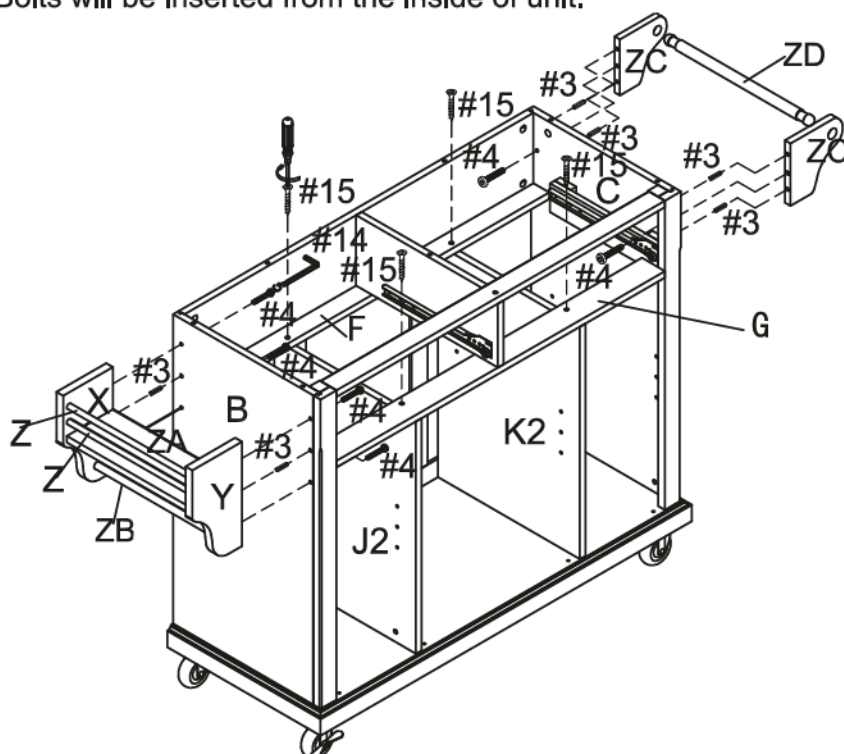
NOTE: Bolts will be inserted from the inside of unit.



#3  x 6
#4  x 6
#15  x 4

Step 14. Attach top panel (part A) to assembled unit (parts B, C, D2, E & L2) using wood dowels (part #3) and cam locks (part #1).

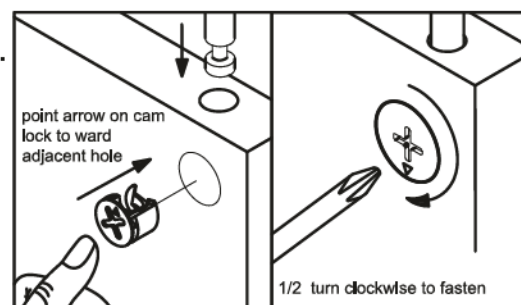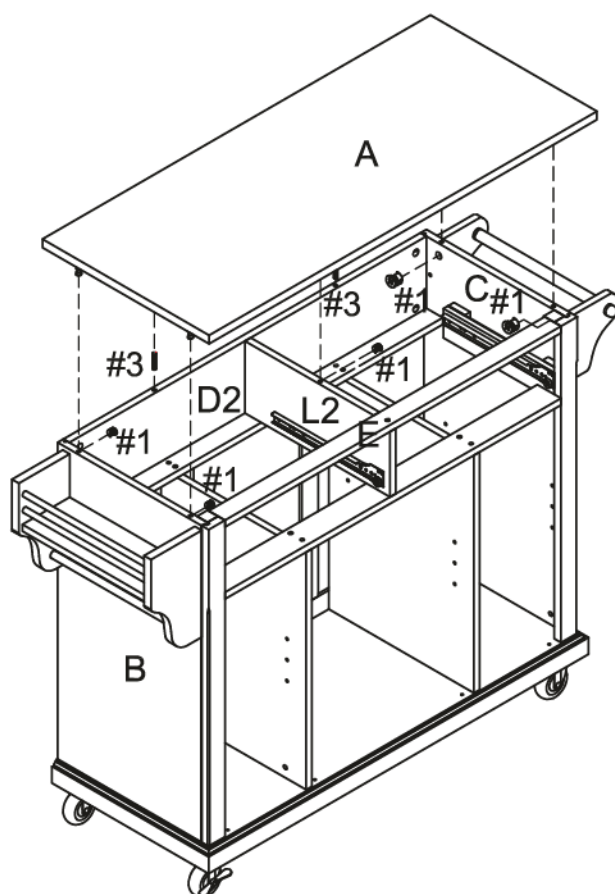
NOTE: Cam locks must rotate a full 180°. See pictured insert.



#1  x 5
#3  x 2

Step 15. Attach left door panels (part V) and right door panels (part W) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part I). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of front middle rail (part G). Place shelf holders (part #7) into desired position.

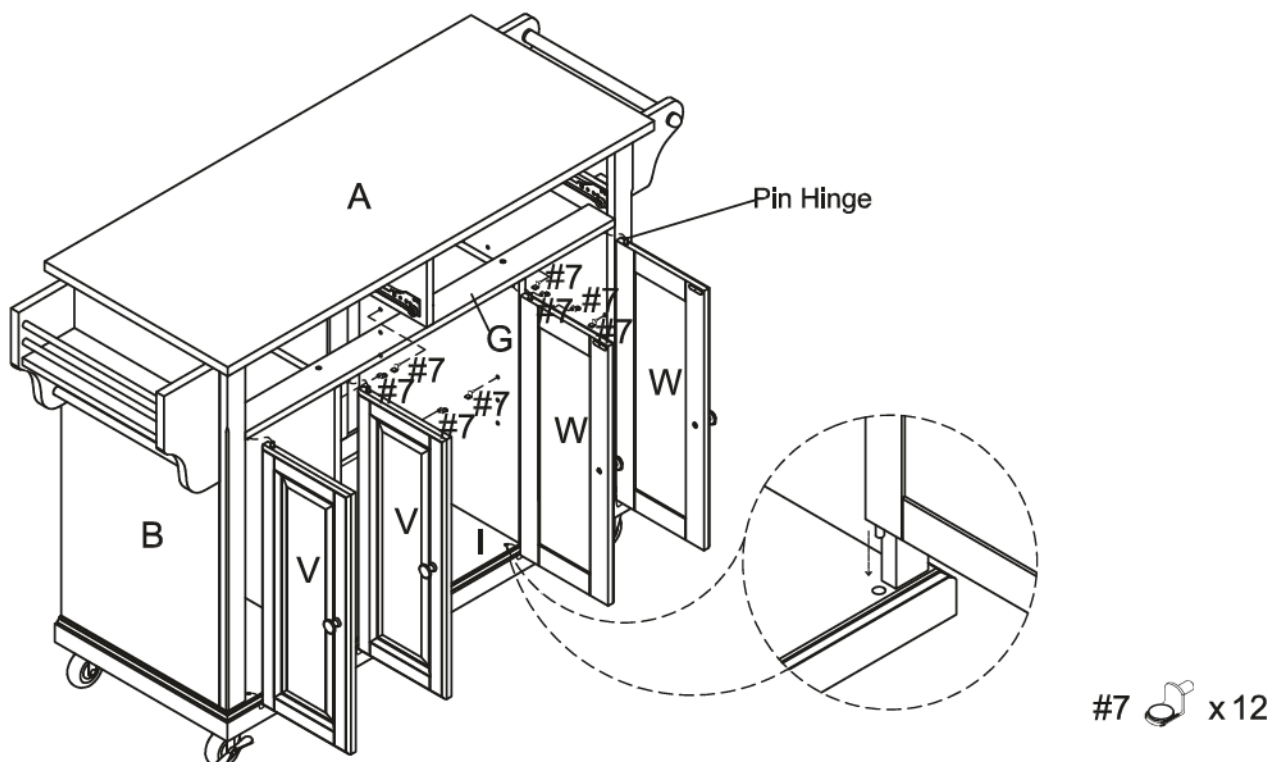NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.



Step 16. Slide assembled drawers into place. Slide adjustable shelves (part O2) and middle adjustable shelf (part P2) into place.

