

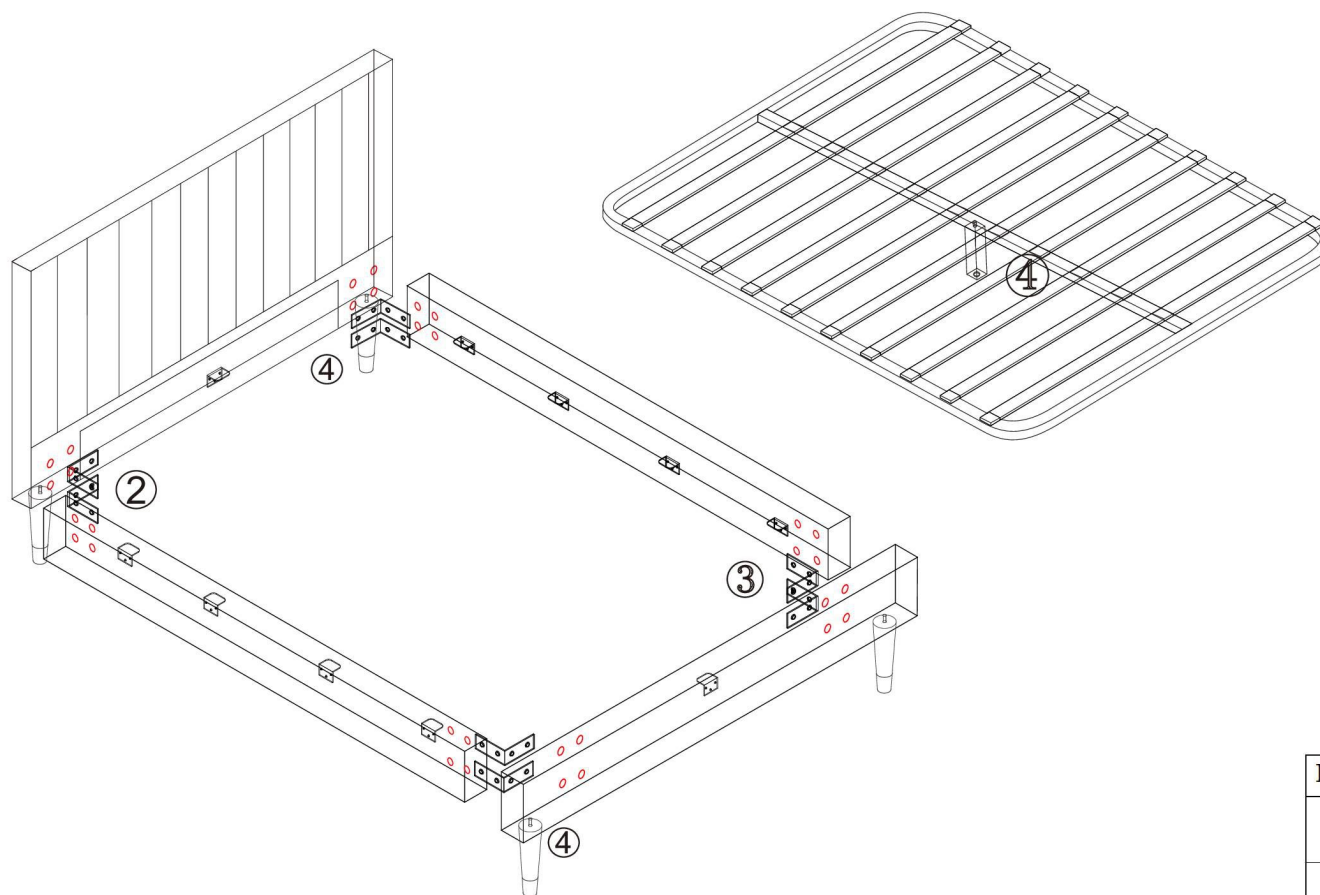


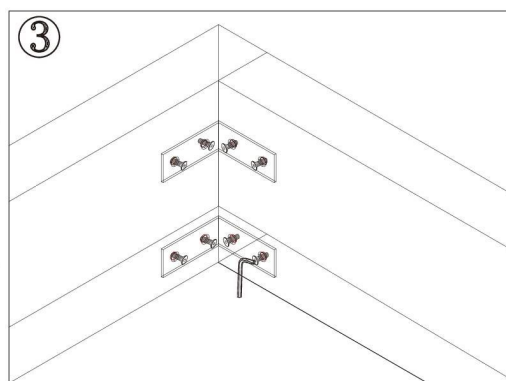

Code	QTY	Hardware
A	8	
B	10	
C	1	
D	36	 5*40mm
E	32	 8*25mm
F	4	 MJ-0160020S
G	10	
H	1	 高25cm

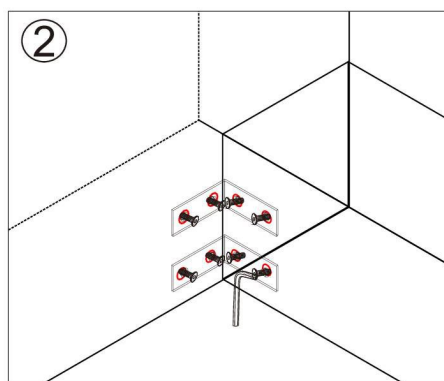

Procedures	Instructions
1	Use screw D to fix the part B and part G on the headboard, rails and footboard
2	Use screw E and part A to combine headboard and rails together
3	Use screw E and part A to combine footboard and rails together
4	Fix the Part H on the slat and install the slat on the bed