

TOWNSEND MIRROR ASSEMBLY INSTRUCTIONS


MFI MODUS
FURNITURE
INTERNATIONAL

PARTS AND FITTING PACKAGING DETAIL

BOX MIRROR

A. MIRROR

1 PC

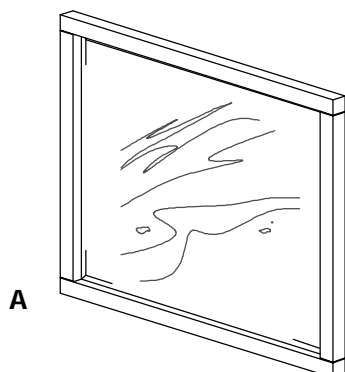


BOX DRESSER *

B. DRESSER

1 PC

C. MIRROR SUPPORT
HARDWARE POUCH**

2 PCS

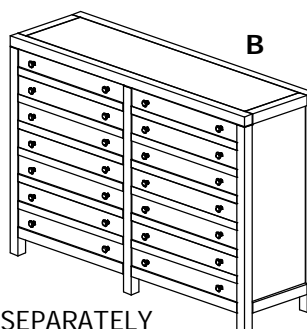


C

*SOLD SEPARATELY

OPTION 1

WALL MOUNTING



FIX MIRROR TO WALL
USING KEYHOLE
BRACKETS AT REAR

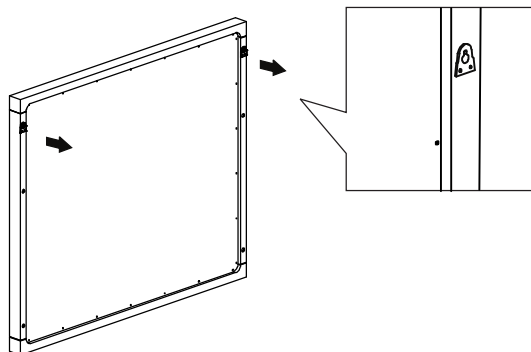

! WARNING

FOR YOUR SAFETY AND CONVENIENCE
ASSEMBLY BY TWO PEOPLE IS RECOMMENDED

HARDWARE** POUCH PACKED IN BOX DRESSER


1	ALLEN BOLTS 40MM	8 PCS	2	WASHER	8 PCS
					

TOOL REQUIRED:

3	ALLEN KEY	1 PC


OPTION 2

DRESSER MOUNTING

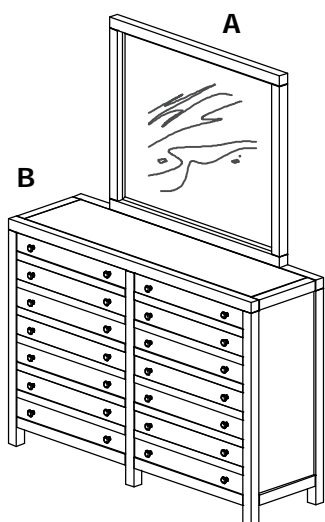

STEP 1 :

FIX MIRROR SUPPORTS (C) TO DRESSER (B)
USING ALLEN BOLTS (1) AND WASHERS (2).
TIGHTEN BOLTS WITH ALLEN KEY (3).
DO NOT TIGHTEN BOLTS COMPLETELY
UNTIL YOU HAVE COMPLETED STEP 2.

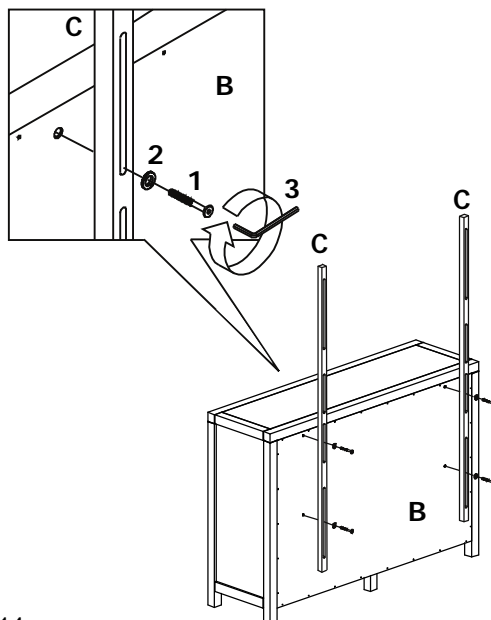

STEP 2 :

FIX MIRROR (A) TO MIRROR SUPPORTS (C)
WITH ALLEN BOLTS (1) AND WASHERS (2).
TIGHTEN ALL BOLTS WITH ALLEN KEY (3).

