


STEP 1

WITH THE HELP OF SOMEONE, PLACE THE CHIMNEY, ALIGNING IT WITH THE HOLE IN THE FURNITURE



STEP 2

FROM THE BACK OF THE FIREPLACE, LOOK FOR THE LAST SCREWS THAT COME INSTALLED IN IT.

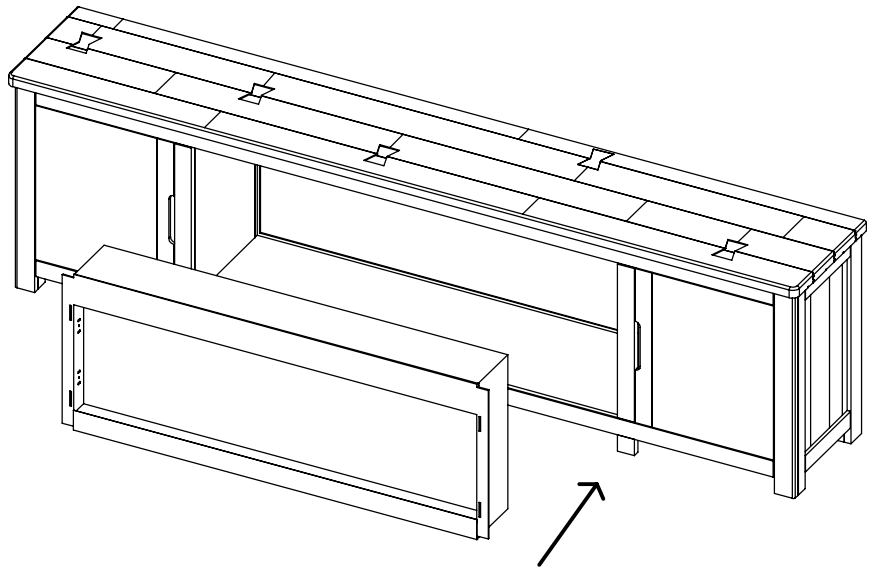

STEP 3

REMOVE THE SCREWS, AS SHOWN IN DETAIL A1.

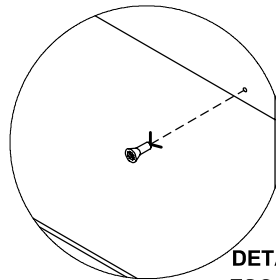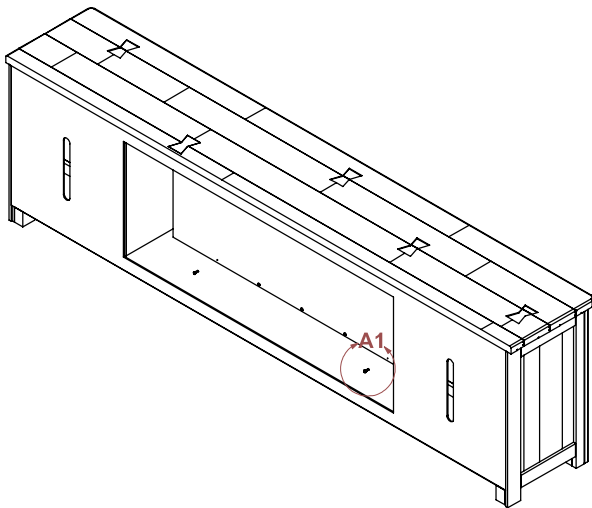


DETALLE A1
ESCALA 1 : 5

NOTE: REMEMBER THAT
BETWEEN STEP 4 AND 5,
YOU NEED TO ADJUST THE FIREPLACE
FROM THE FRONT BEFORE SCREWING.

STEP 4


FIRST, PLACE THE SQUARE, AND THEN INSERT THE SCREW THAT YOU HAD PREVIOUSLY REMOVED, AS SHOWN IN DETAIL B1

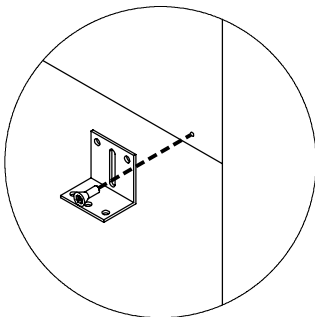

DETALLE B1
ESCALA 1 : 5

STEP 5

SCREW IN THE SCREW AND REPEAT THE SAME ACTION ON THE OTHER END.

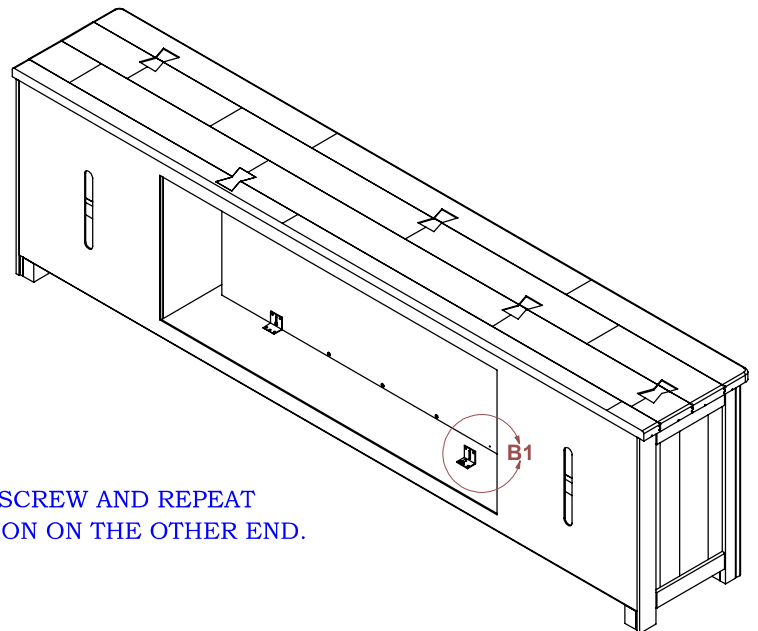


ASSEMBLING
INSTRUCTIONS

I-EFP-A03


STEP 6

THEN SCREW IT TO THE FURNITURE TO SECURE IT,
AS SHOWN IN DETAIL C1.

REMEMBER TO HAVE CENTERED YOUR FIREPLACE

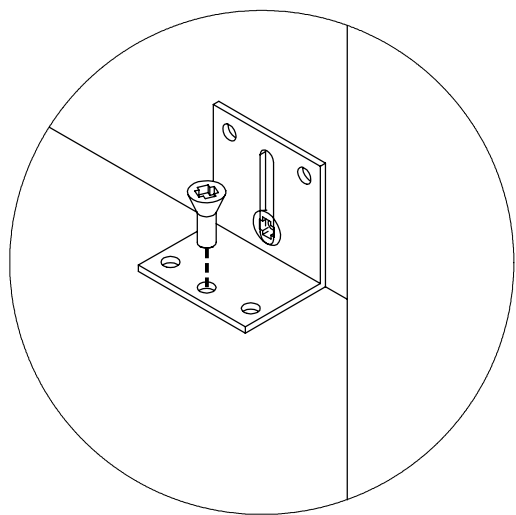


DETALLE C1
ESCALA 1 : 2

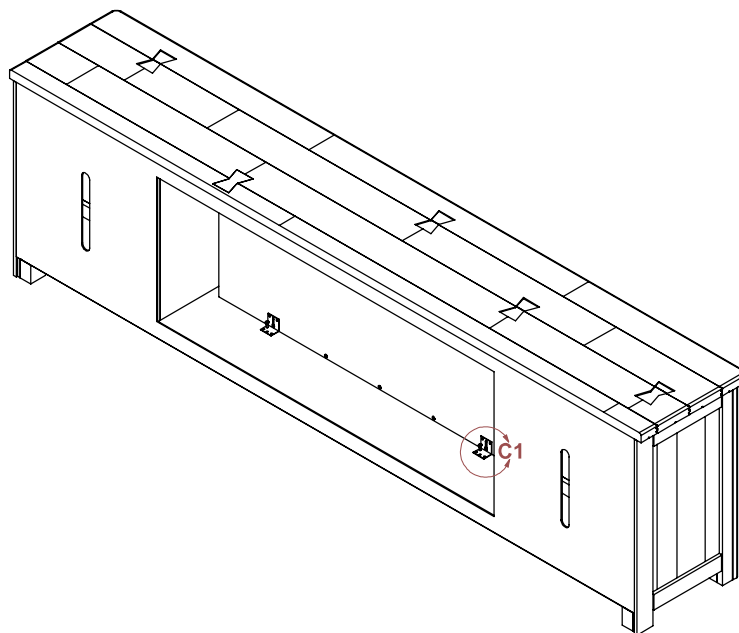

STEP 7

FINALLY, PLACE THE GLASS OF THE FIREPLACE,
ALIGNING IT WITH THE SLOTS.

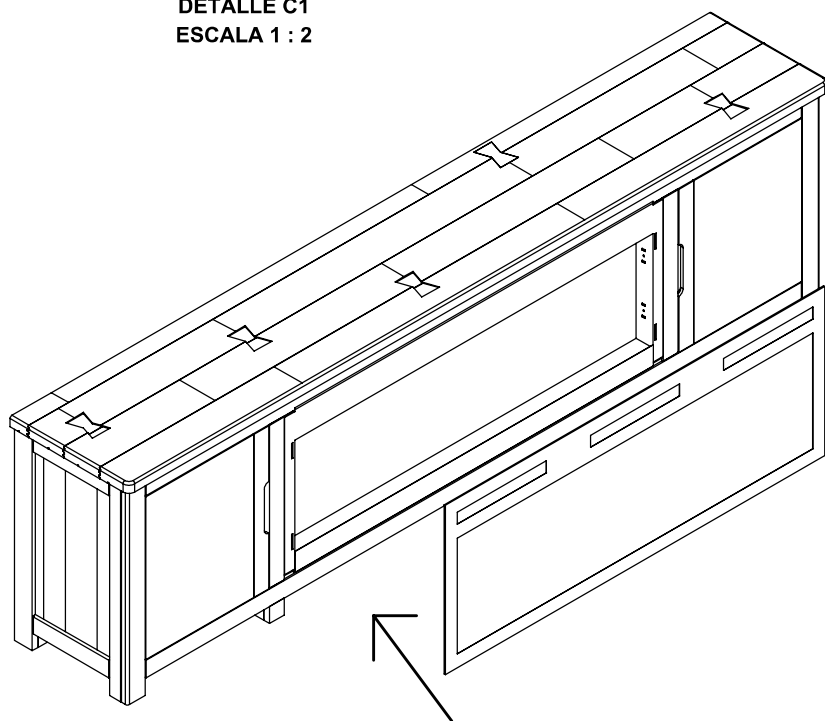

STEP 8

READY, PLACE THE FURNITURE
IN THE DESIRED LOCATION.



ASSEMBLING
INSTRUCTIONS

I-EFP-A03