




# ASSEMBLY INSTRUCTION

MODEL NO: B3400 / B3500 / B3600 / B3800 / B3900 - 1 & - 11  
DRESSER & MIRROR



## (BOX OF MIRROR)

| ITEM | DRAWING   | DESCRIPTION         | QTY |
|------|---|---------------------|-----|
| A    |  | MIRROR              | 1   |
| B    |  | MIRROR BACK SUPPORT | 2   |

## (BOX OF DRESSER)


| ITEM | DRAWING  | DESCRIPTION | QTY |
|------|--|-------------|-----|
| C    |  | DRESSER     | 1   |

## (BOX OF MIRROR) HARDWARE LIST


|   |   |                         |   |
|---|---|-------------------------|---|
| 1 |  | CB SCREW<br>(M4 x 32mm) | 8 |
| 2 |  | SCREW<br>DRIVER (*)     | 1 |

(\*) The manufacturer does not provide item 2

## COMPLETED DRESSER & MIRROR ASSEMBLY

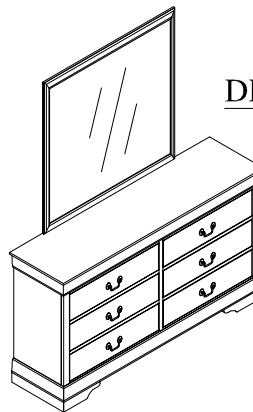

## Step 1

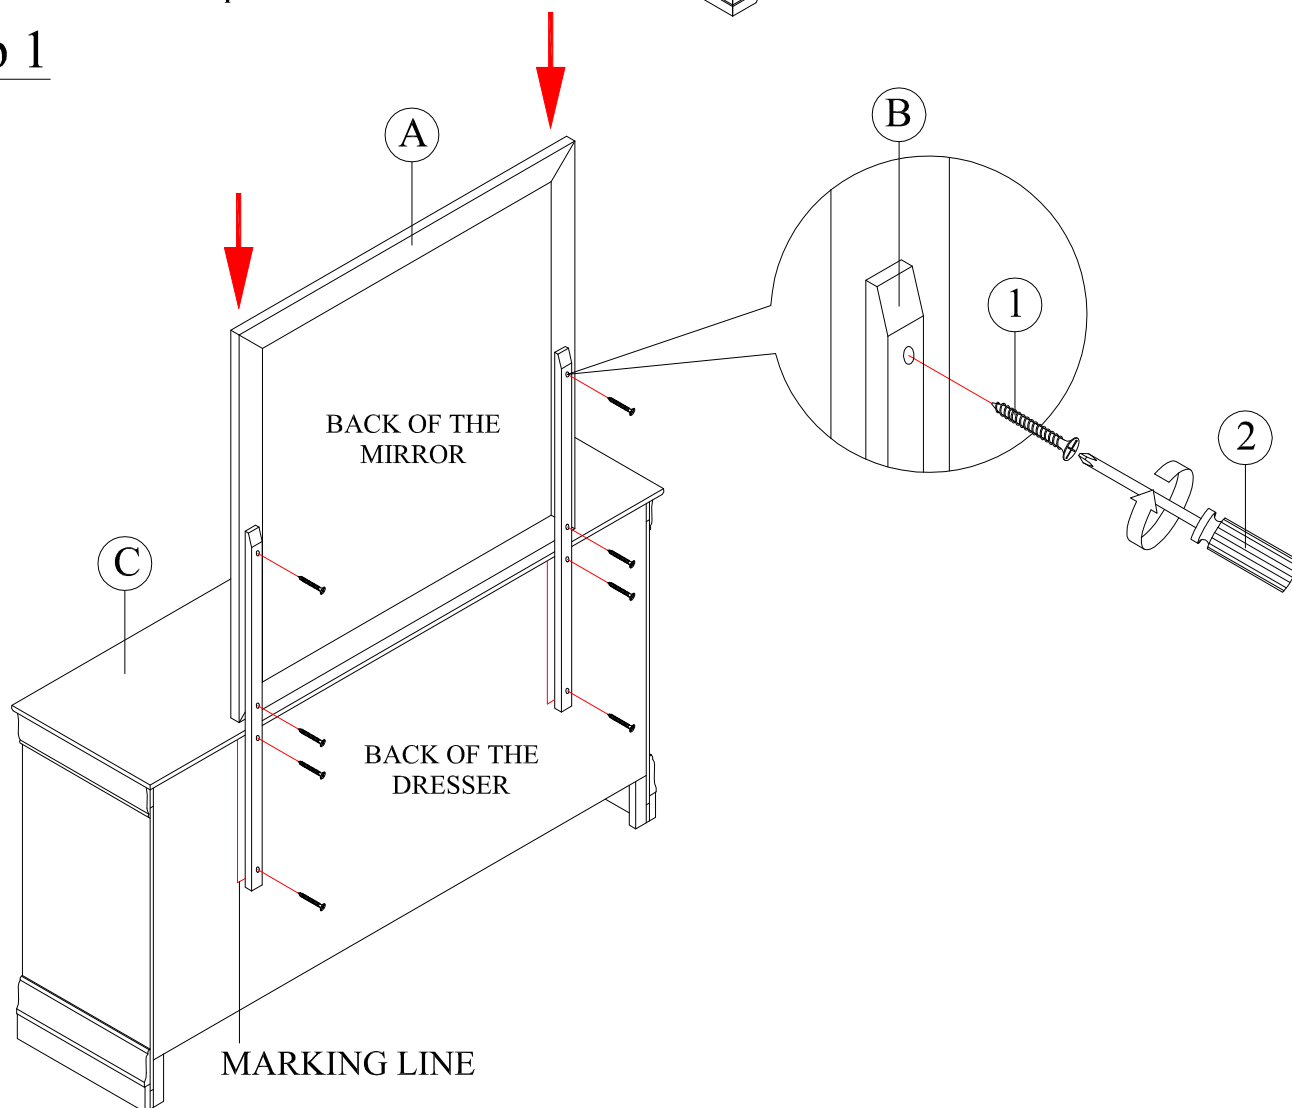

**THE ANTI TIPPING HARDWARE IS LOCATED IN THE RIGHT SIDE FRONT DRAWER OF DRESSER**

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREWS MAY BECOME LOOSE.  
CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

## CLEANING INSTRUCTION

After assembled, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish

MADE IN MALAYSIA

1201 / 1202 / 1631 / 1632 DRESSER & MIRROR