# ADLER DRESSER MIRROR ASSEMBLY INSTRUCTIONS



#### PARTS AND FITTING PACKAGING DETAIL


### **BOX DRESSER MIRROR**


A. DRESSER MIRROR 1 PC

### **BOX DRESSER \***

B. DRESSERC. DRESSER MIRROR SUPPORTHARDWARE POUCH\*\*


1 PC 2 PCS

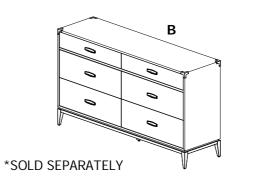



# OPTION 1 WALL MOUNTING


FIX DRESSER MIRROR TO WALL USING KEYHOLE

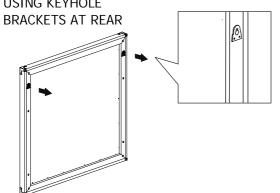


### **AWARNING**

FOR YOUR SAFETY AND CONVENIENCE ASSEMBLY BY TWO PEOPLE IS RECOMMENDED

### HARDWARE\*\* POUCH PACKED IN BOX DRESSER

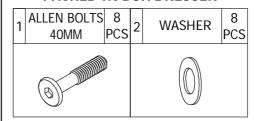


#### **TOOL REQUIRED:**



# OPTION 2 DRESSER MOUNTING


### **STEP 1:**


FIX DRESSER MIRROR SUPPORTS (**C**) TO DRESSER (**B**) USING ALLEN BOLTS (**1**) AND WASHERS (**2**). TIGHTEN BOLTS WITH ALLEN KEY (**3**). DO NOT TIGHTEN BOLTS COMPLETELY UNTIL YOU HAVE COMPLETED STEP 2.

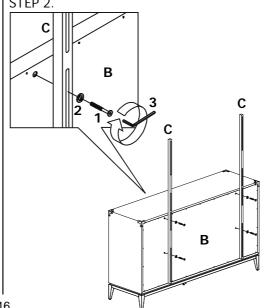

### STEP 2:

FIX DRESSER MIRROR (A) TO DRESSER MIRROR SUPPORTS (C) WITH ALLEN BOLTS (1) AND WASHERS (2). TIGHTEN ALL BOLTS WITH ALLEN KEY (3).

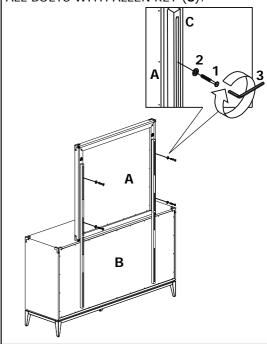

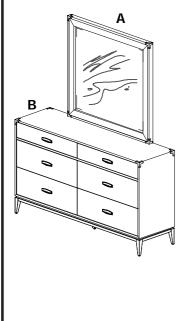

UPDATED : JANUARY 14TH, 2016