

GEOHOME®

ART WITH AN ATTITUDE

ASSEMBLY INSTRUCTIONS

Item No : B118-25 / B118-32

Description : 3/3 COMPLETE TWIN BED /
4/6 COMPLETE FULL BED










MODEL : B118-25 / B118-32

REVISION : C

Component List

No	Descriptions	Qty
A	Headboard Panel	1
B	Headboard Leg Right (R)	1
C	Headboard Leg Left (L)	1
D	Footboard	1
E	Bed Slat	4
F	Slat Support	4
G	Side Rail (Left)	2
H	Side Rail (Right)	2
I	Side Rail Support	2

Hardware List


No	Descriptions	Qty
1	I Bracket 	2
2	CSK M4 x 16mm 	4
3	CSK M4 x 32mm 	8
4	JCBC Screw M6 x 30mm 	14
5	Spring Washer Ø1/4" 	14
6	Flat Washer Ø1/4" x 13mm 	6
7	Flat Washer Ø1/4" x 20mm 	8
8	L Key M4 x 65mm 	1
9	L Key M5 	1

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.


NOTES :

1. Mattress Twin 38 x 75 thickness 8 inches / Foundation 38 x 74 thickness 8 inches.
2. Mattress Twin 38 x 75 thickness 10 inches / Foundation 38 x 74 thickness 6 inches.
3. Mattress Full 54 x 75 thickness 8 inches / Foundation 54 x 75 thickness 8 inches.
4. Mattress Full 54 x 75 thickness 10 inches / Foundation 54 x 75 thickness 6 inches.

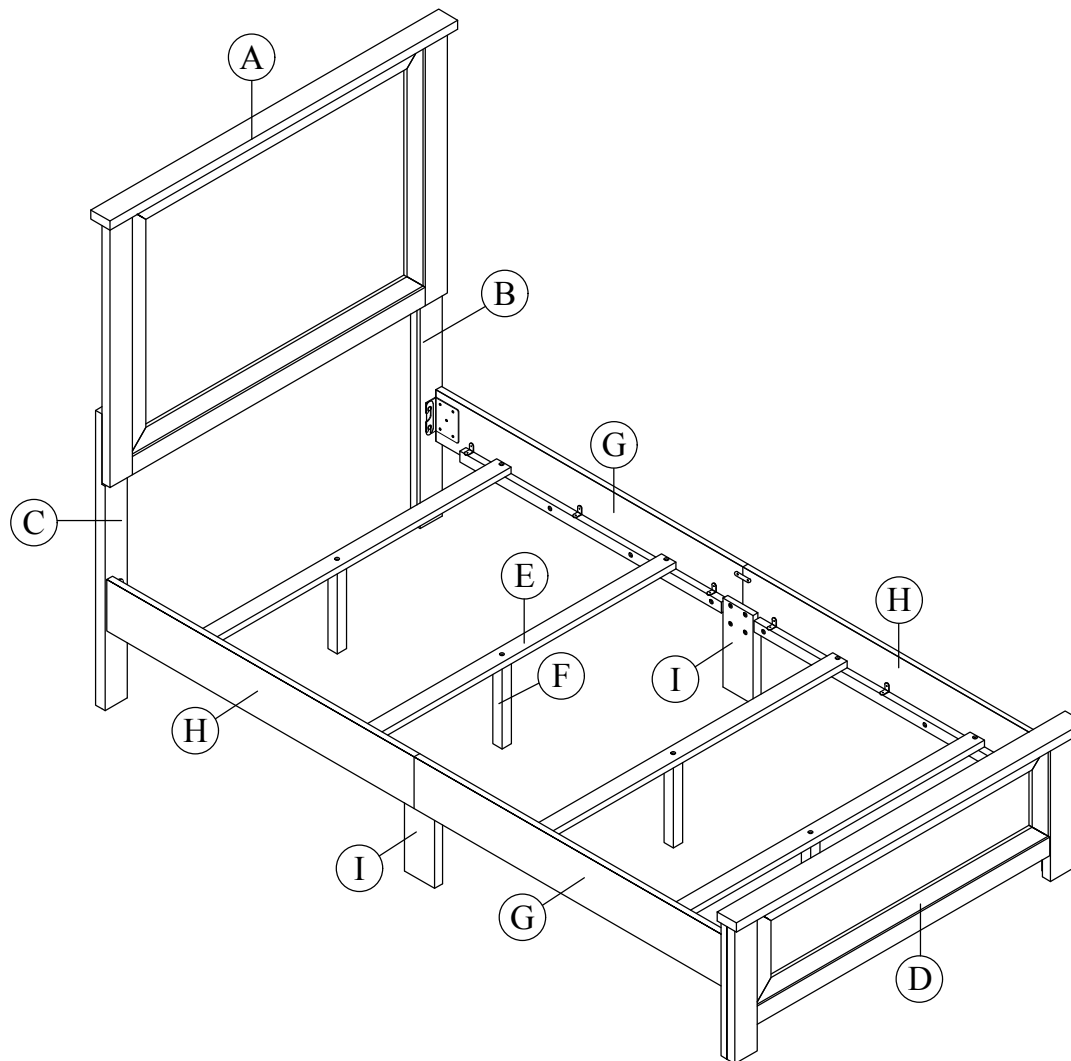

IMPORTANT NOTE :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children !
- Tighten screws periodically ! With the use of this product bolts and screws may become loose over time !
- Don't attempt to modify parts !

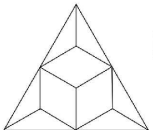


ASSEMBLY INSTRUCTIONS


Item No : B118-25 / B118-32

Description : 3/3 COMPLETE TWIN BED /
4/6 COMPLETE FULL BED

STEP 1.1: Place I Bracket (1) between Side Rail (G) & (H) as shown and screw it with CSK M4 x 16mm (2) using L key M4 x 65mm (8).

STEP 1.2: Attach Side Rail Support (I) between Side Rail (G) & (H) as shown. Affix Side Rail Support (I) and Side Rail (G) & (H) using JCBC M6 x 30mm (4), Spring washer $\frac{1}{4}$ " (5), Flat washer $\frac{1}{4}$ " x 20mm (7) using L key M4 x 65mm (8).

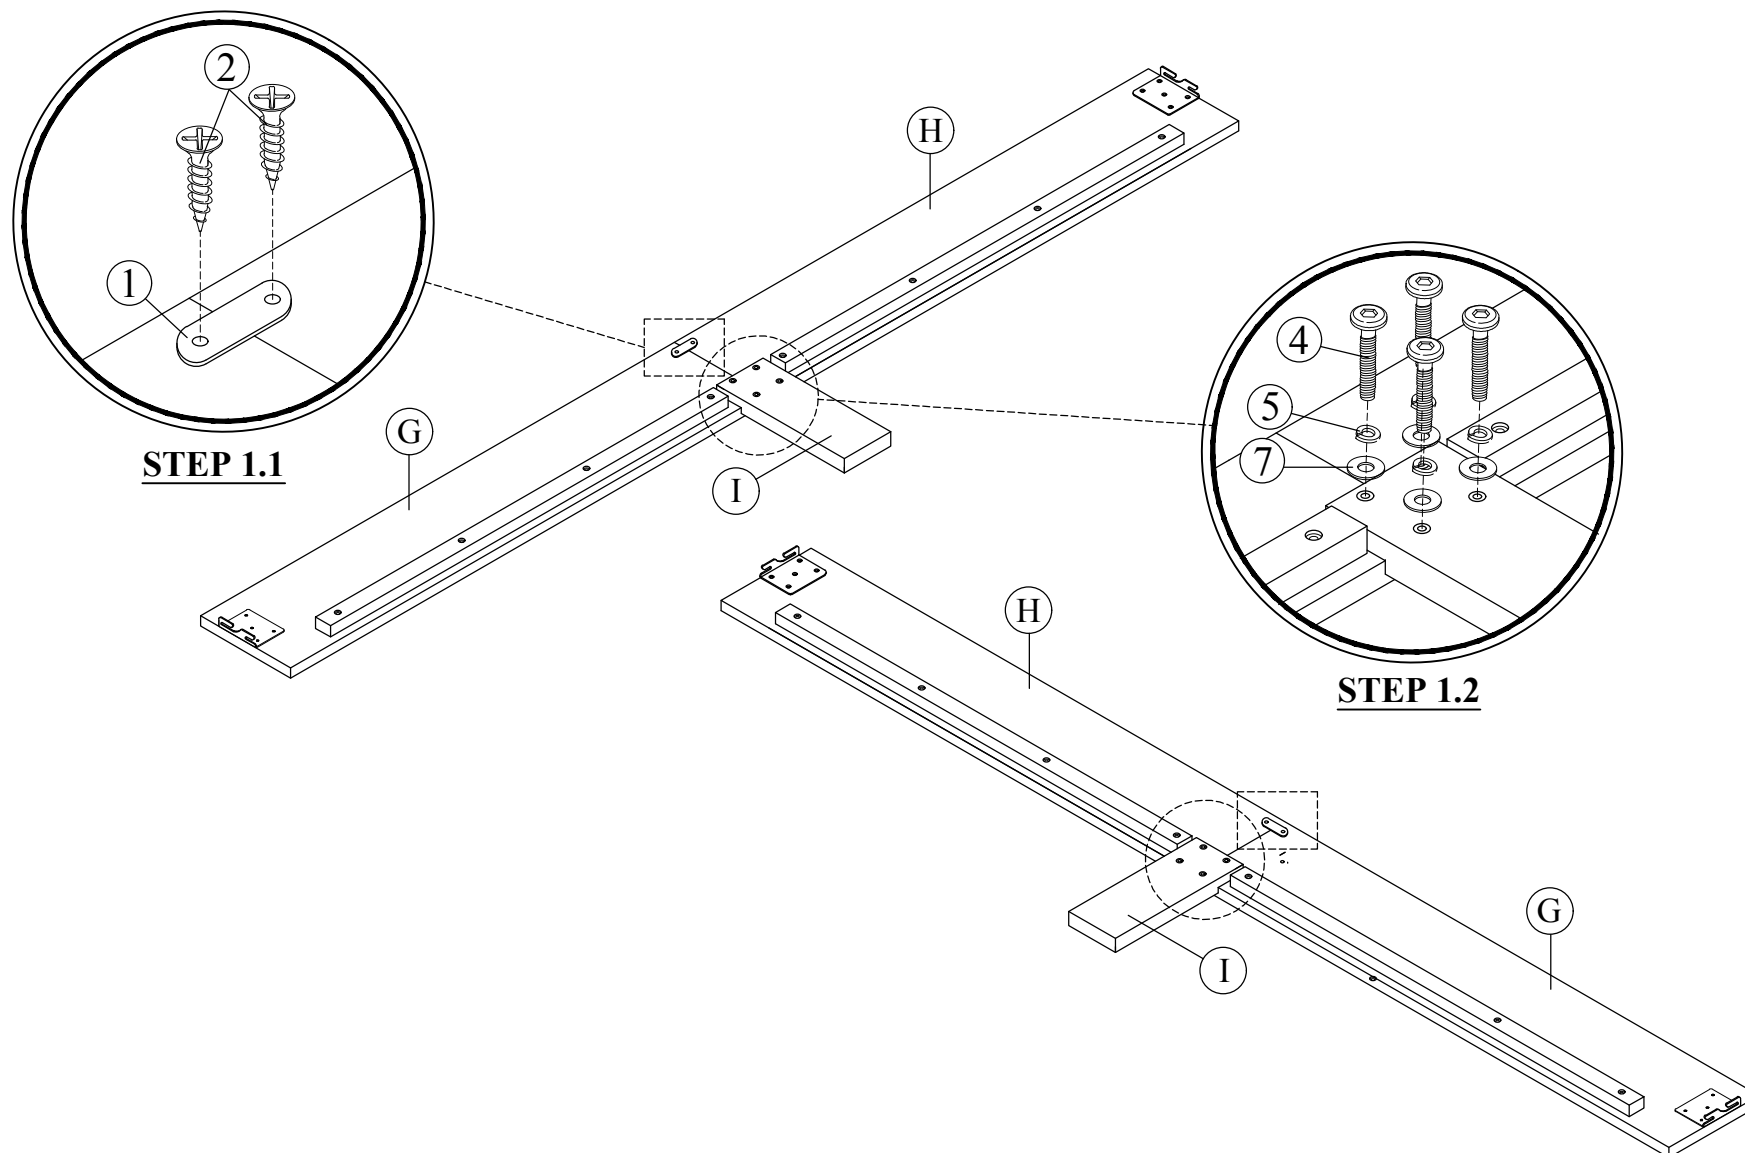


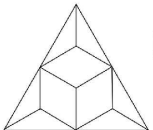


ASSEMBLY INSTRUCTIONS


Item No : B118-25 / B118-32
Description : 3/3 COMPLETE TWIN BED /
4/6 COMPLETE FULL BED

STEP 2: Attach & tighten the Headboard Leg (B) & (C) to the Headboard Panel (A). Affix Headboard Panel (A) & Headboard Leg (B) & (C) using JCBC M6 x 30mm (4), Spring washer $\varnothing\frac{1}{4}$ " (5), Flat washer $\varnothing\frac{1}{4}$ " x 13mm (6) using L key M4 x 65mm (8).

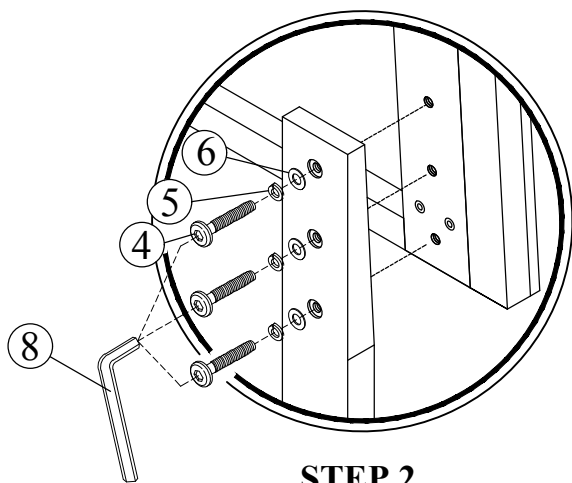

STEP 2

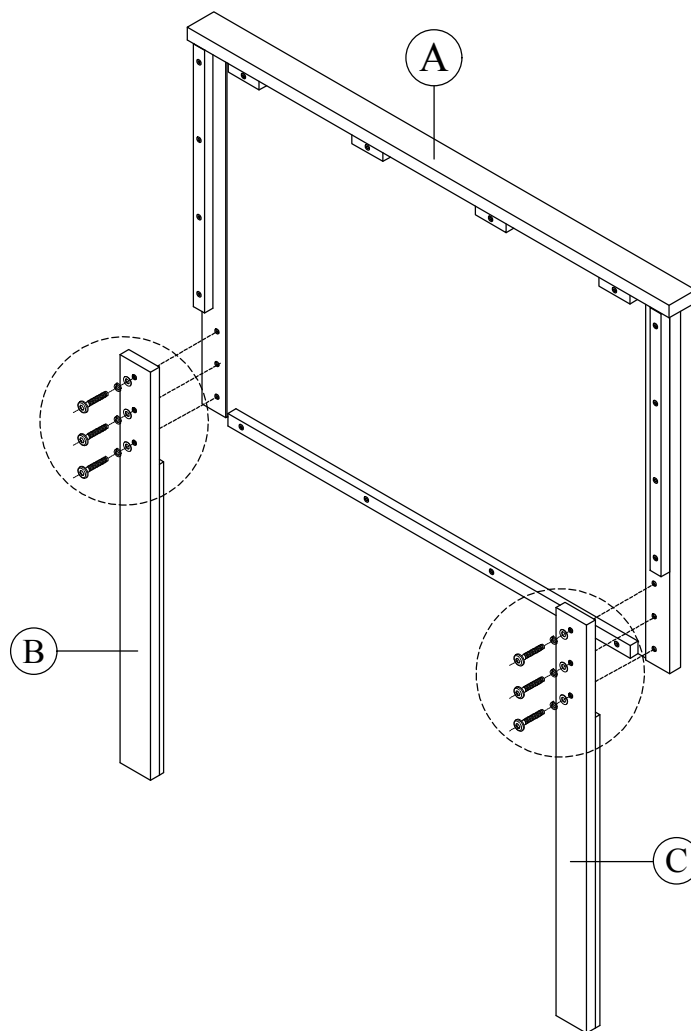

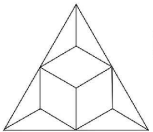



ASSEMBLY INSTRUCTIONS

Item No : B118-25 / B118-32
Description : 3/3 COMPLETE TWIN BED /
4/6 COMPLETE FULL BED

STEP 3.1: Attach the Side Rail to Headboard Leg (B) and (C)

STEP 3.2: Tighten screw on Headboard Leg (B) and (C) by using L key M5 (9) & repeat the same step on Footboard (D).

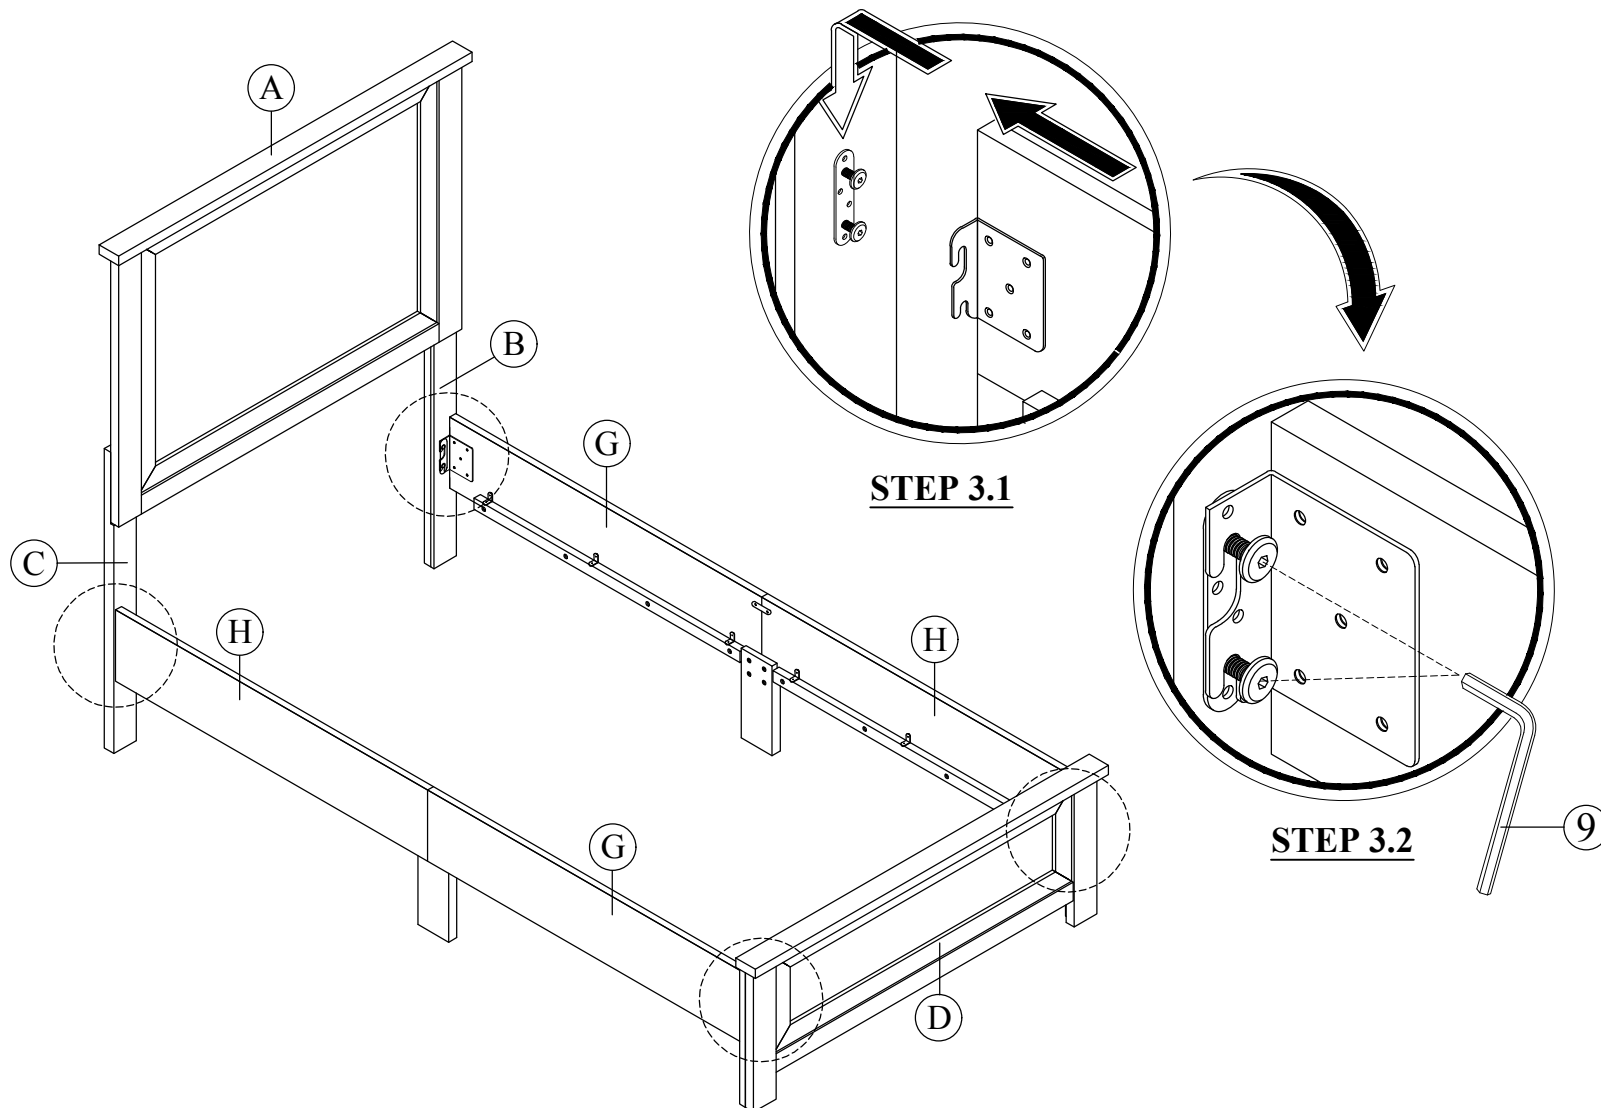

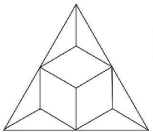


ASSEMBLY INSTRUCTIONS

Item No : B118-25 / B118-32
Description : 3/3 COMPLETE TWIN BED /
4/6 COMPLETE FULL BED


STEP 4.1: Attach the Bed Slat (E) to Bed Slat Support (F). Adjust the adjuster until stable.

STEP 4.2: Adjust the Bed Slat Support (F) according to the ground level.



STEP 4.3: Attach Bed Slat (E) and tighten to Side Rail with CSK M4 x 32mm (3).

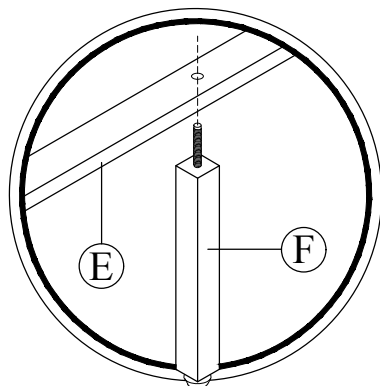

STEP 4.1

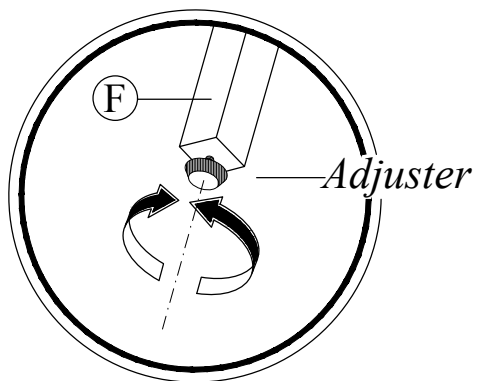

STEP 4.2

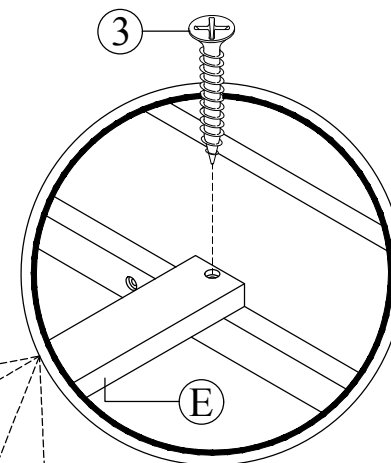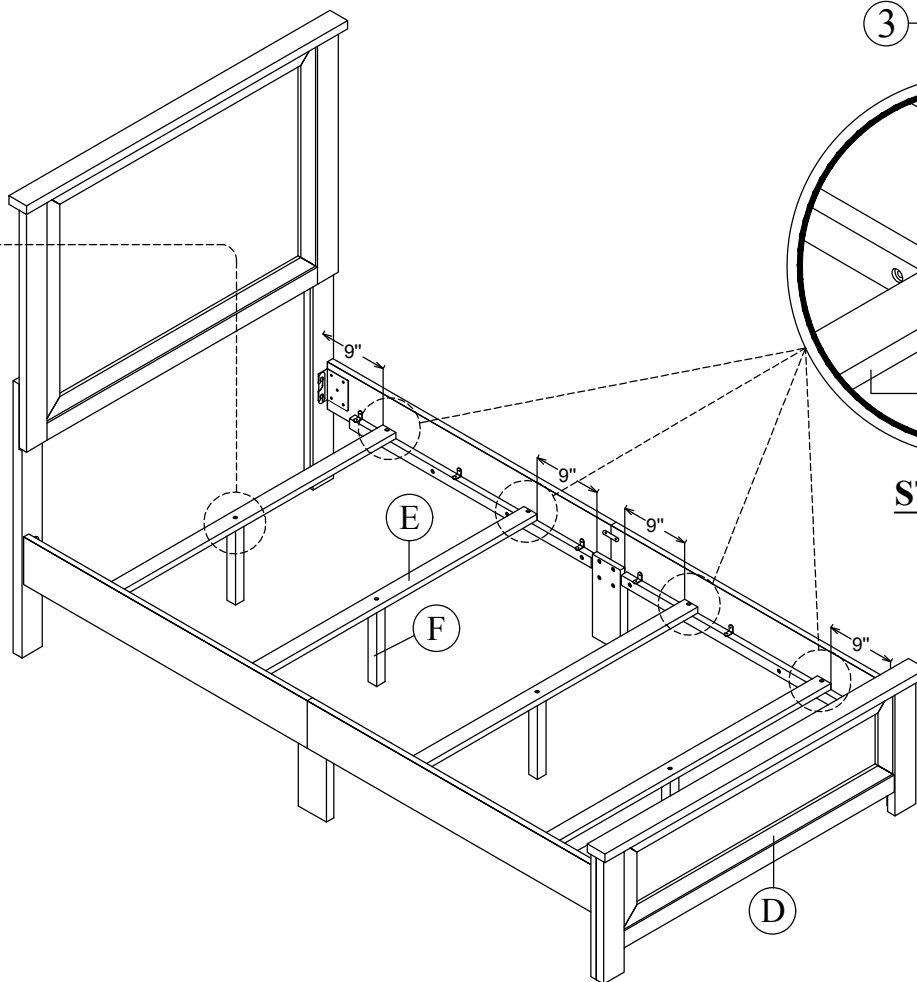

STEP 4.3