


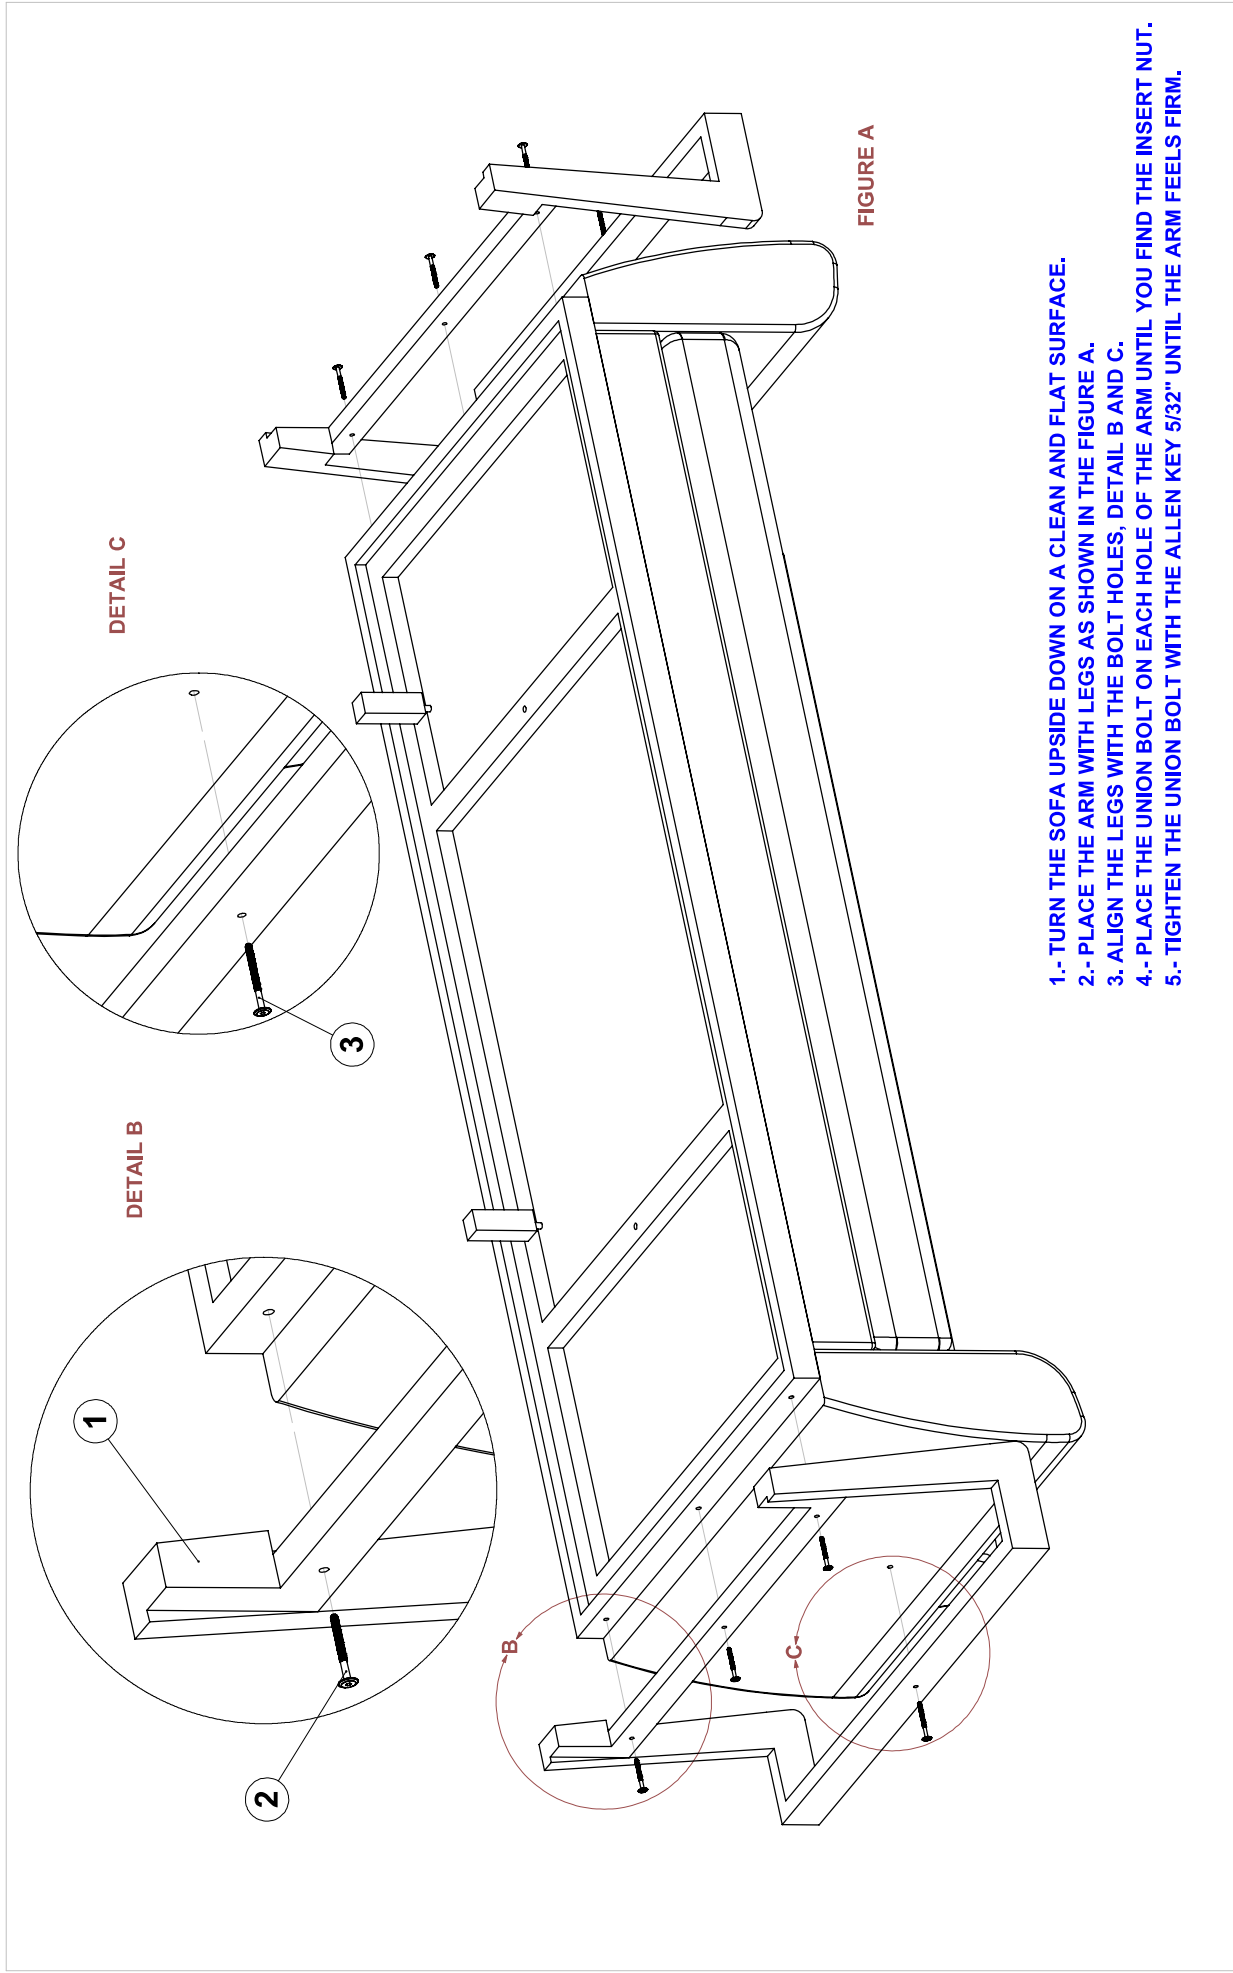

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE THE ARM WITH LEGS AS SHOWN IN THE FIGURE A.
- 3.- ALIGN THE LEGS WITH THE BOLT HOLES, DETAIL B AND C.
- 4.- PLACE THE UNION BOLT ON EACH HOLE OF THE ARM UNTIL YOU FIND THE INSERT NUT.
- 5.- TIGHTEN THE UNION BOLT WITH THE ALLEN KEY 5/32" UNTIL THE ARM FEELS FIRM.



ASSEMBLING INSTRUCTIONS

I-IUP-644

ITEM #	DESCRIPTION	#
1	ARM WITH LEGS	2
2	UNION BOLT 6 cm	6
3	UNION BOLT 7 cm	2
4	ALLEN KEY 5/32"	1

IUP644-ACH


ITEM	DESCRIPTION	#
1TOR091	TORNILLO PERNO UNION 1/4 x 60 mm BRONCE	6
1TOR059	TORNILLO PERNO UNION 1/4 x 70 mm BRONCE	2
1HER250	ALLEN KEY 5/32"	1

IUP644-LOV

ITEM	DESCRIPTION	#
1TOR091	TORNILLO PERNO UNION 1/4 x 60 mm BRONCE	6
1TOR059	TORNILLO PERNO UNION 1/4 x 70 mm BRONCE	2
1HER250	ALLEN KEY 5/32"	1

IUP644-SOF

ITEM	DESCRIPTION	#
1TOR091	TORNILLO PERNO UNION 1/4 x 60 mm BRONCE	6
1TOR059	TORNILLO PERNO UNION 1/4 x 70 mm BRONCE	2
1HER250	ALLEN KEY 5/32"	1

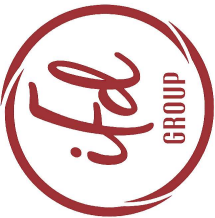

ASSEMBLING INSTRUCTIONS

I-IUP-644