


## CB83006

## **ASSEMBLY INSTRUCTION**


Pg: 1/1 Ver: 01

## **INSTRUCTIONS:**

- 1. Remove all the hexagonal nuts & washers out of the steel threadeds on headboard (P1) and footboard (P2).
- 2. Assemble the side rail (P3) to the headboard and footboard. Insert hexagonal nuts & washers, use steel open wrench to turn clockwise direction securely. Refer *detail 'A'*.
- 3. Insert the support center rail (P4) to middle of headboard and footboard. Refer *detail 'B'*.
- 4. Adjust all the glider for levelling if necessary. Refer *detail 'C'*.
- 5. Item is ready to use.

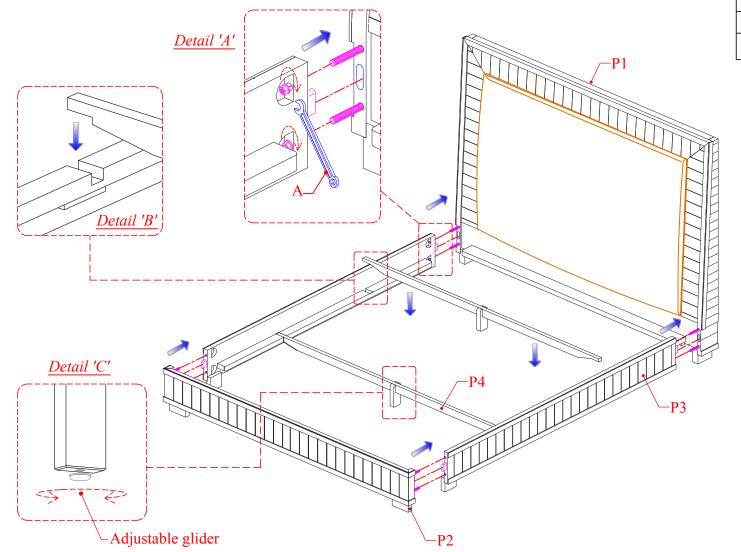

PACKING LIST			
No.!	Name of Item	Q'ty	U/M
1	P1. Headboard	01	pc
2	P2. Footboard	01	pc
3	P3. Side rail	02	pcs
4	P4. Support center rail	01	pc
HARDWARE			
1	A- Steel open wrench	01	pc

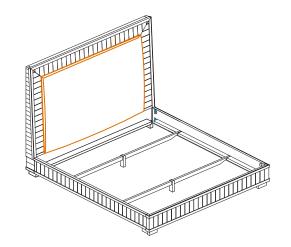

Draw: D.Thanh

Date: Mar 29, 19