
MOE'S

Assembly Instructions


Martine Queen Storage Bed Heritage Green

RN-1170-16-0

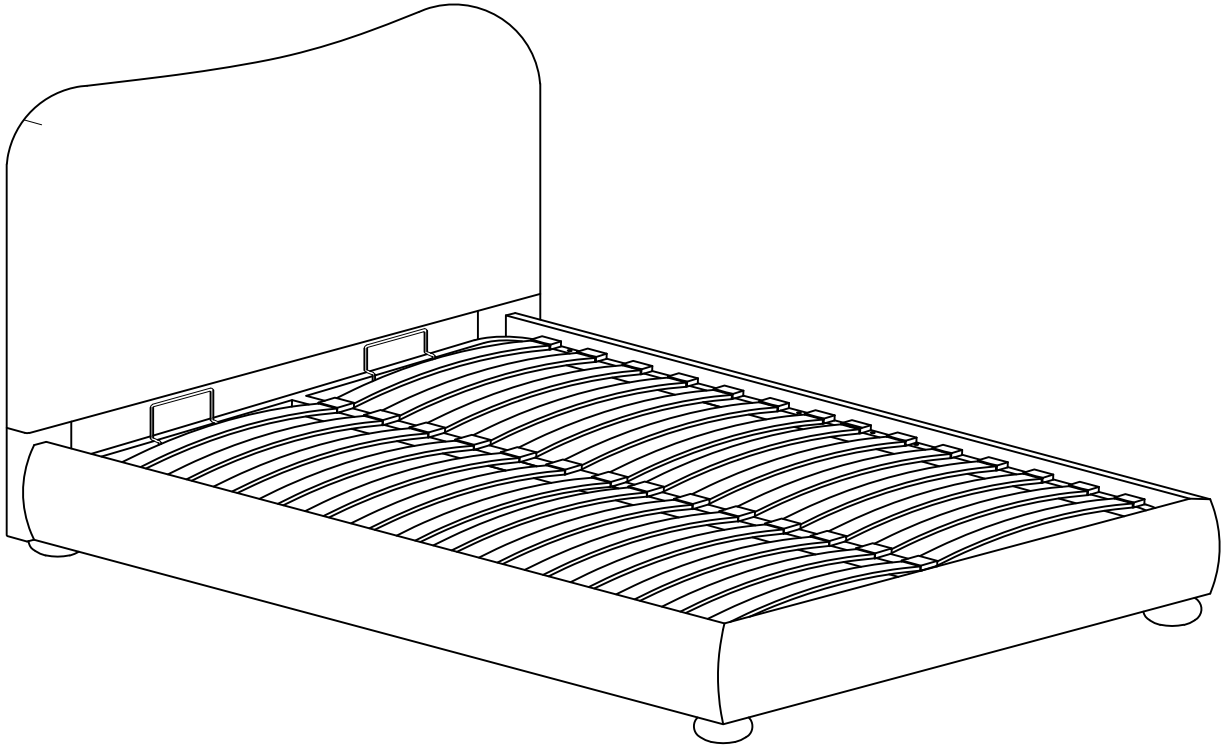

THANK YOU FOR YOUR PURCHASE!


Parts and Hardware

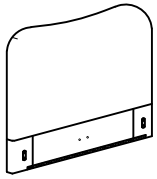

① Headboard=1pc



⑤ Feet=4pcs




⑥ Bracket=2pcs

Notes


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.


CAUTION: The item is heavy, assembly should be performed by two people.

Step 1




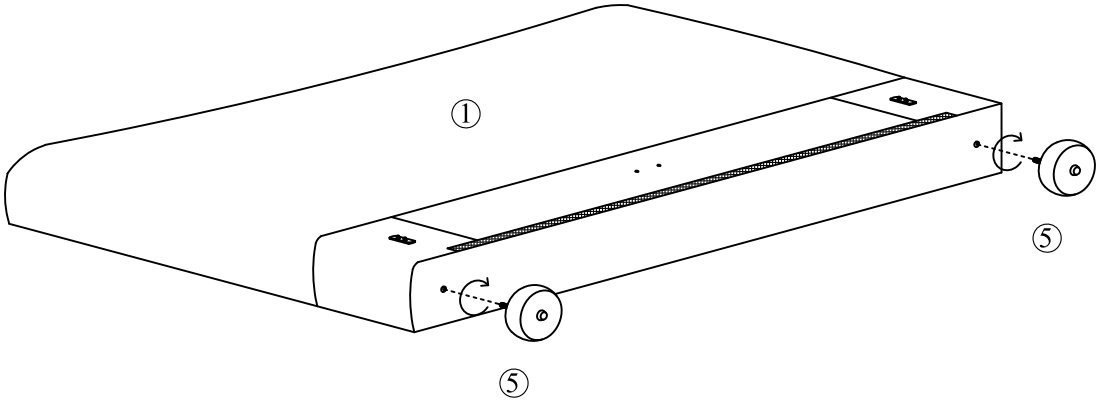


Step 2

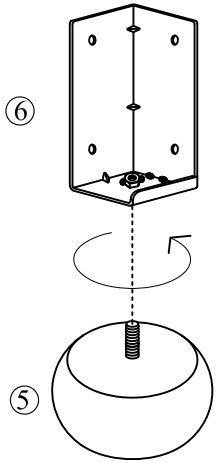

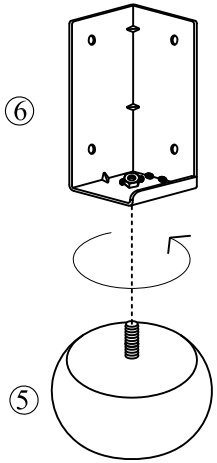

Parts and Hardware


 ③ Right Side Rail =1pc	 ④ Left Side Rail =1pc
 ⑦ Gold Bolts(M8*18mm) =4pcs	 (M5) ⑧ Allen Key=1pc
 ⑨ Bolts(M8*25mm) =4pcs	 ⑩ Washers (M8)=4pcs

Notes


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.





Step 3

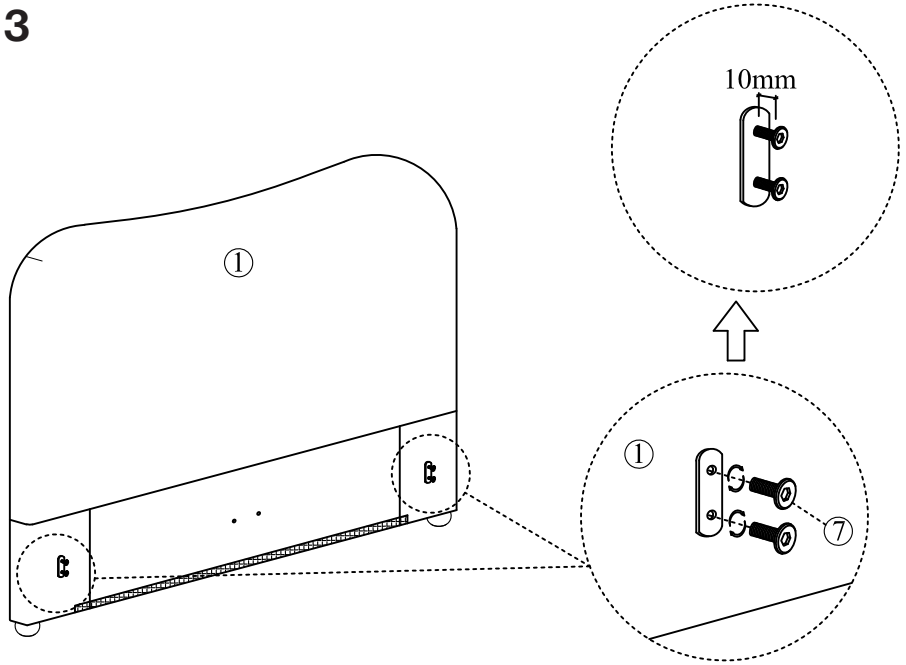

Step 4

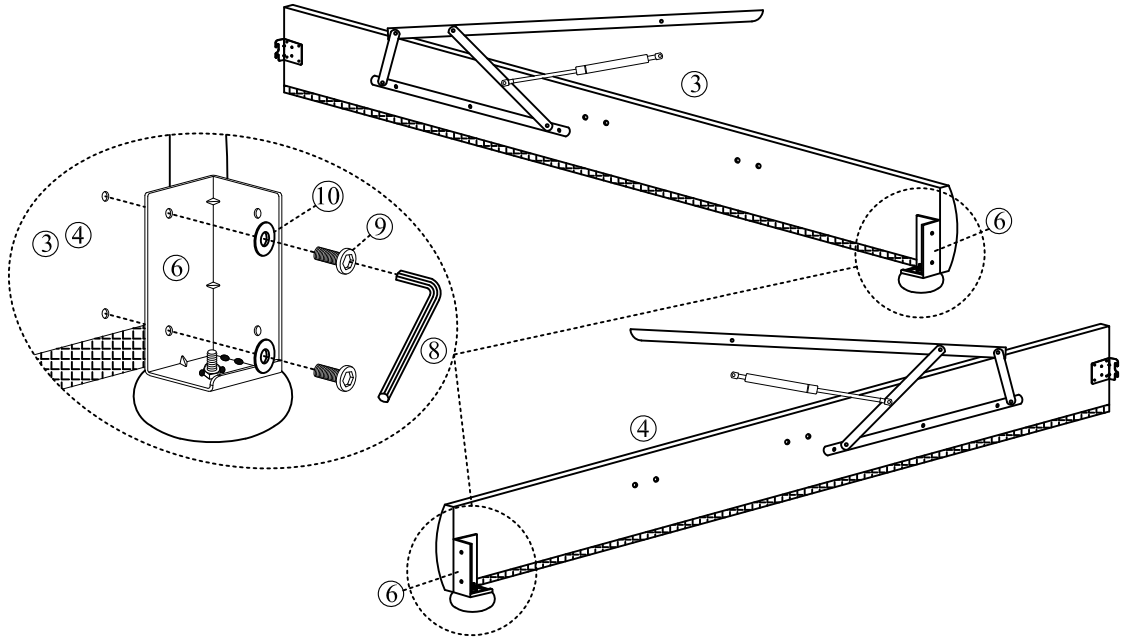

Parts and Hardware


 ② Footboard=1pc	 (M5) ⑧ Allen Key=1pc
 ⑨ Bolts(M8*25mm) =4pcs	 ⑩ Washers (M8)=4pcs

Notes





Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 5

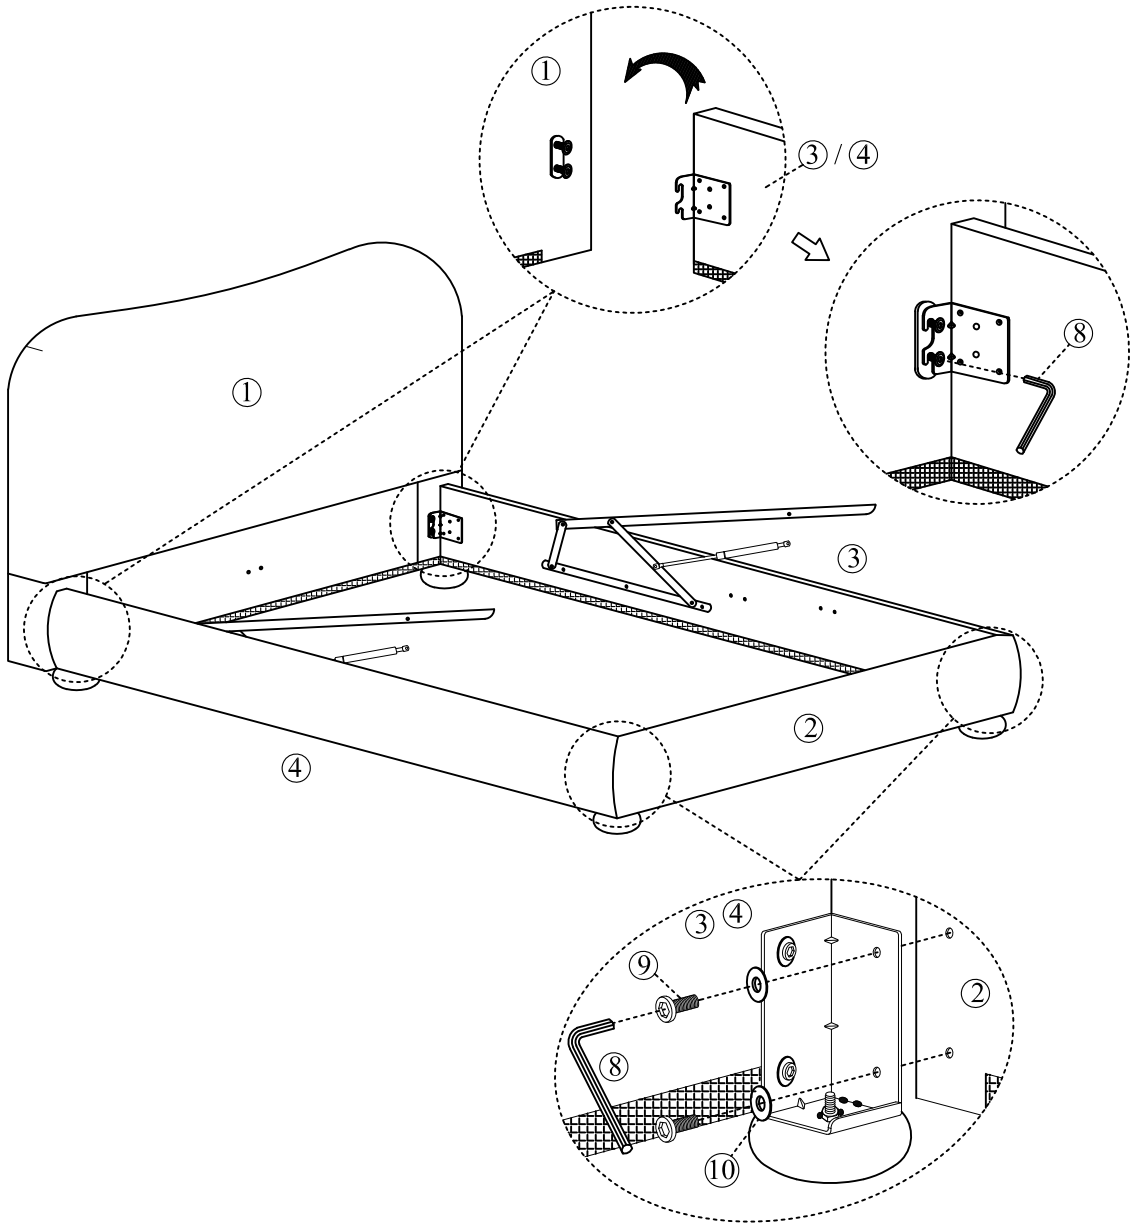

Parts and Hardware


 (M5) ⑧ Allen Key=1pc	 ⑨ Bolts(M8*25mm) =12pcs
 ⑪ Bracket=6pcs	 ⑫ Stick Felts=6pcs
 ⑬ Baseboards=1pc	

Notes


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 6

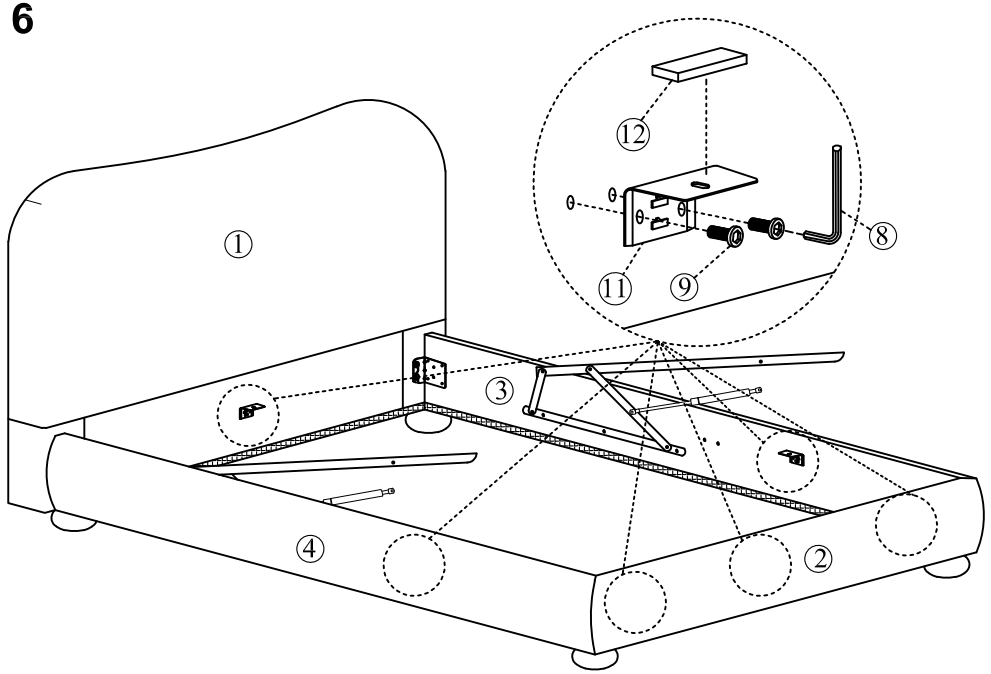

Step 7

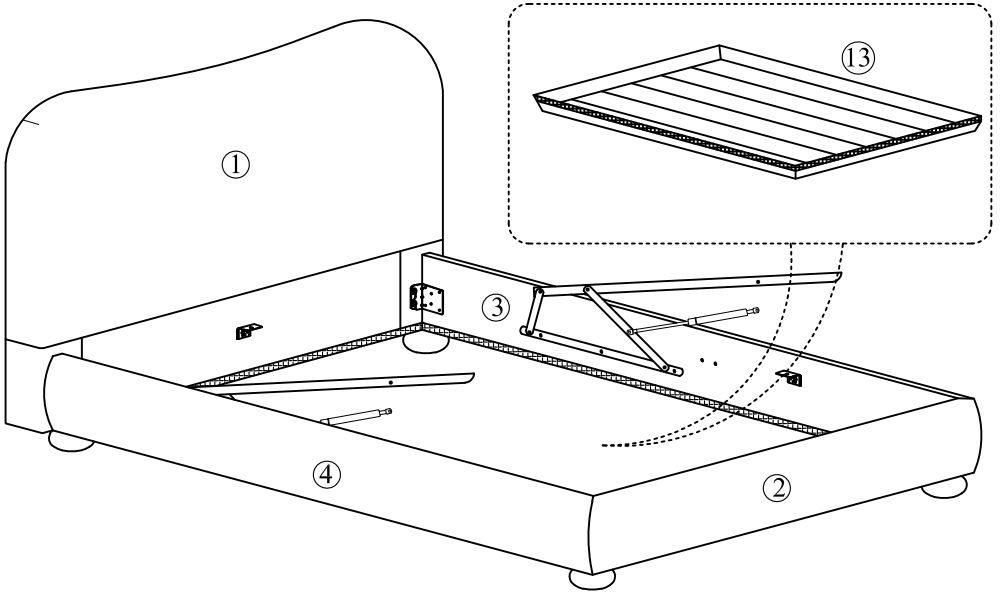

Parts and Hardware


 ⑫ Stick Felts=2pcs	 ⑭ Metal cross rail =1pc
 ⑮ Screws(M5*40mm) =4pcs	

Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 8

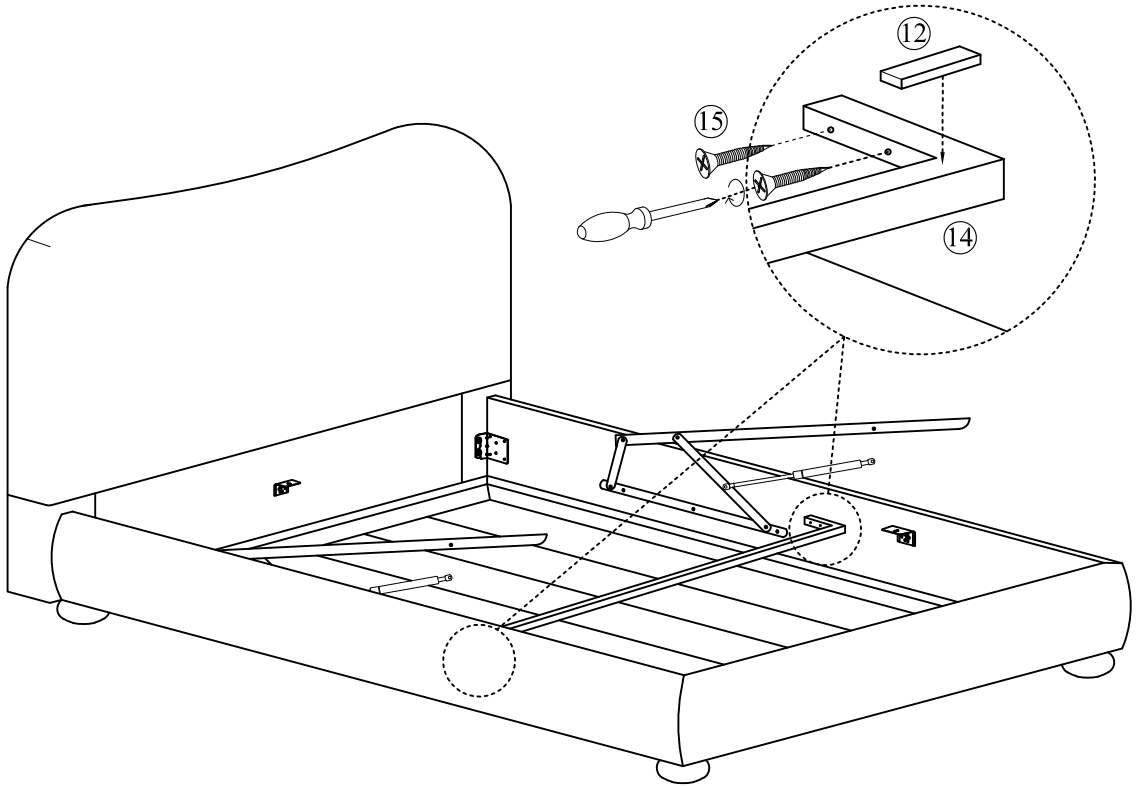

Parts and Hardware


 ⑯ Tube slat frame=2pcs	 ⑰ Tube slat frame=2pcs
 ⑱ Connect for slat frame =4pcs	

Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 9

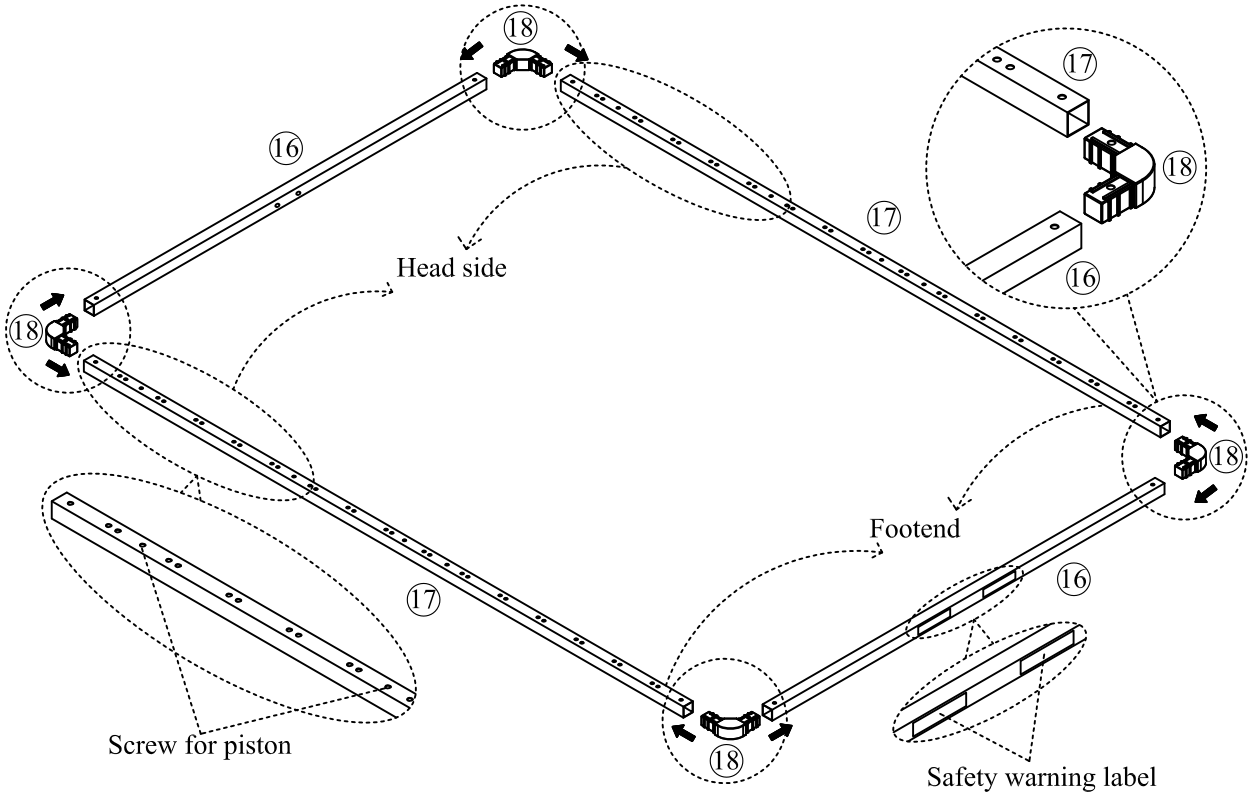

Note: The tube ⑯ with safety warning label should be assembled footend.

Parts and Hardware


 (M4) ⑲ Allen Key=1pc	 ⑳ Bolts(M6*10mm) =8pcs

Notes



Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 10

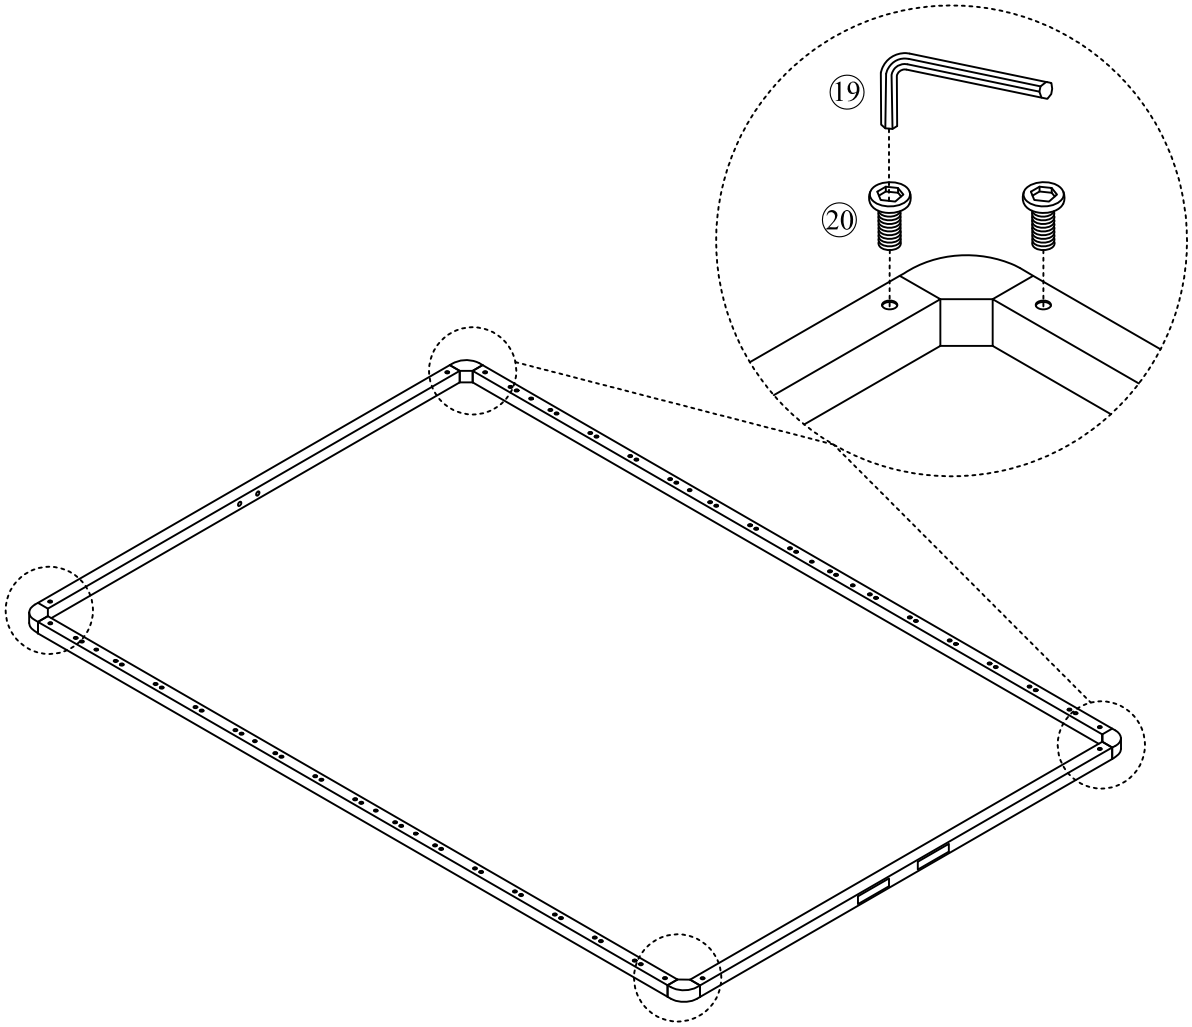

Parts and Hardware


 (M5) ⑧ Allen Key=1pc	 ⑨ Bolts(M8*25mm) =4pcs
 ⑩ Washers (M8)=4pcs	 ㉑ Tube slat frame=1pc

Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 11

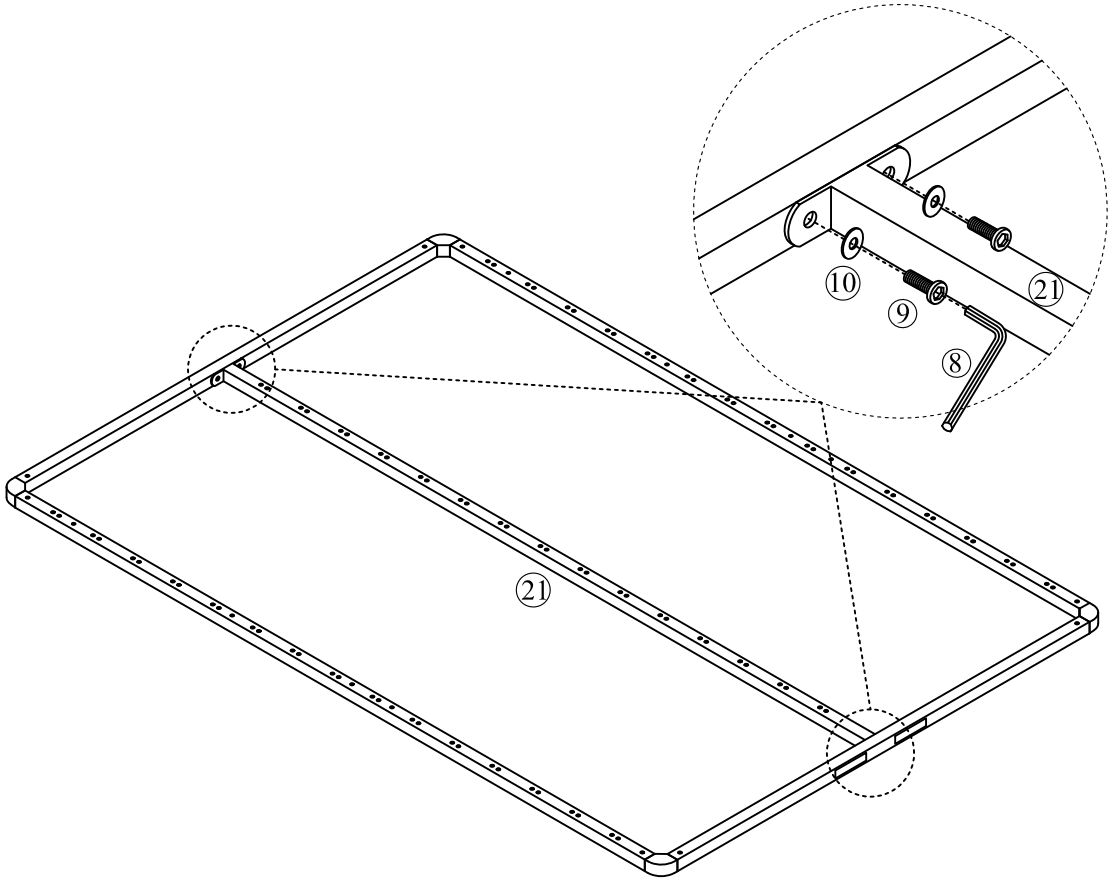

Parts and Hardware


 ㉒ Wid plastic cap (Big) =14pcs	 ㉓ End plastic cap (Small) =28pcs
 ㉔ Slats=28pcs	

Notes



Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 12

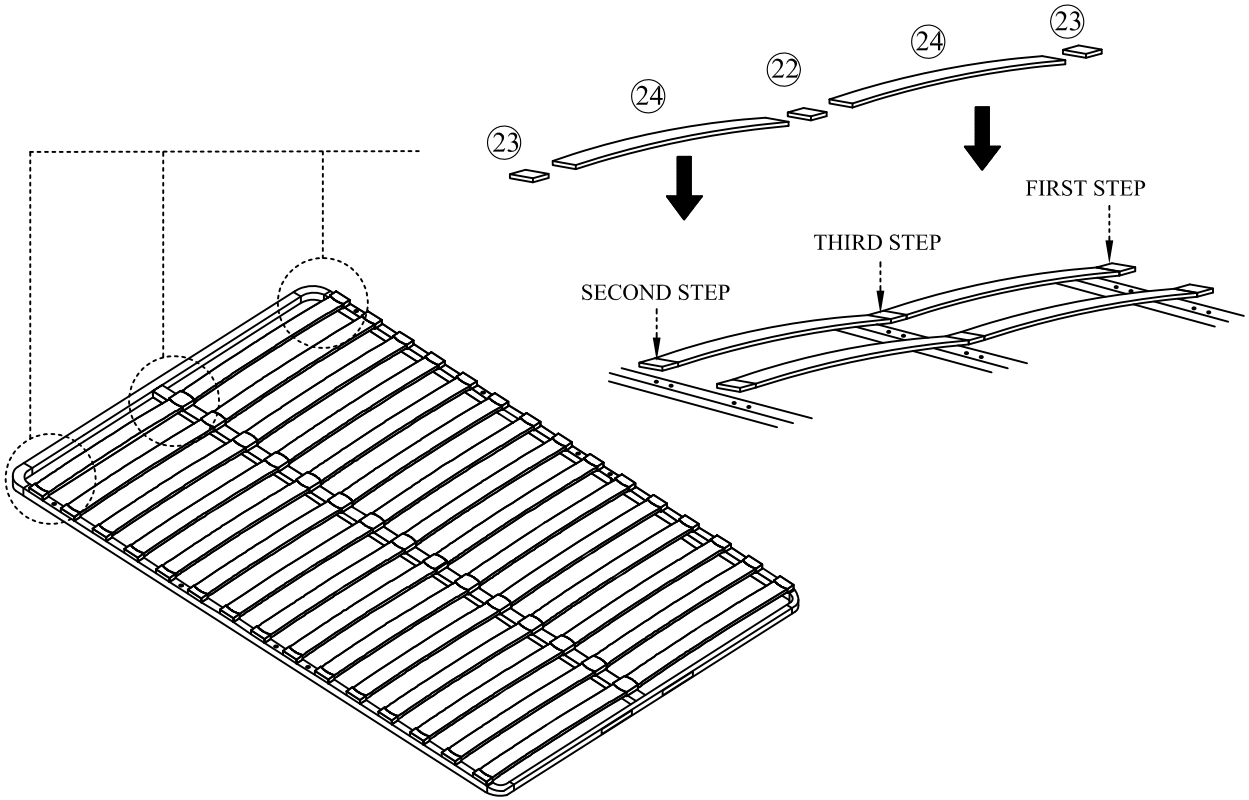

Parts and Hardware


 (M5) ⑧ Allen Key=1pc	 ⑨ Bolts(M8*25mm) =4pcs
 ⑩ Washers (M8)=4pcs	 ㉕ Metal Support legs =2pcs

Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.



CAUTION: The item is heavy, assembly should be performed by two people.

Step 13

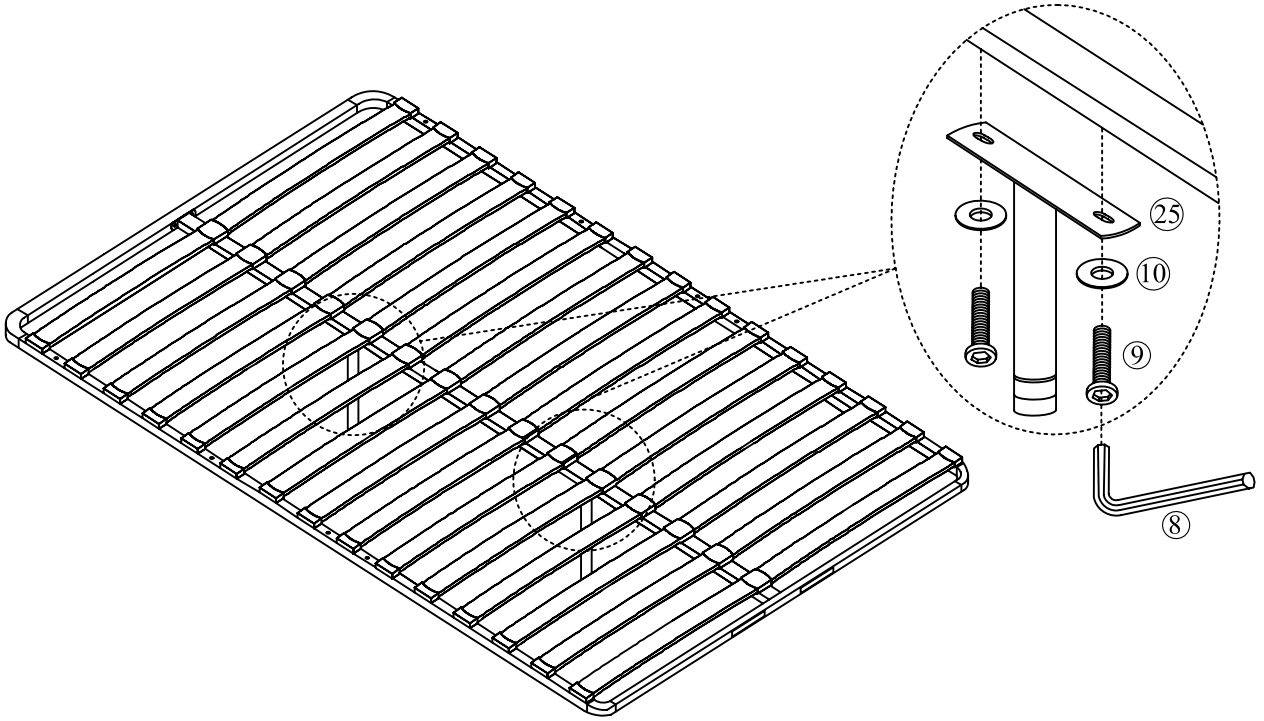

The centre support legs should be 5-10mm off the ground.

Parts and Hardware


 (M5) ⑧ Allen Key=1pc	 ⑩ Washers (M8)=16pcs
 ㉖ Bolts(M8*45mm) =8pcs	 ㉗ Nuts (M8)=8pcs
 ㉘ Spanner=1pc	


Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.


Step 14

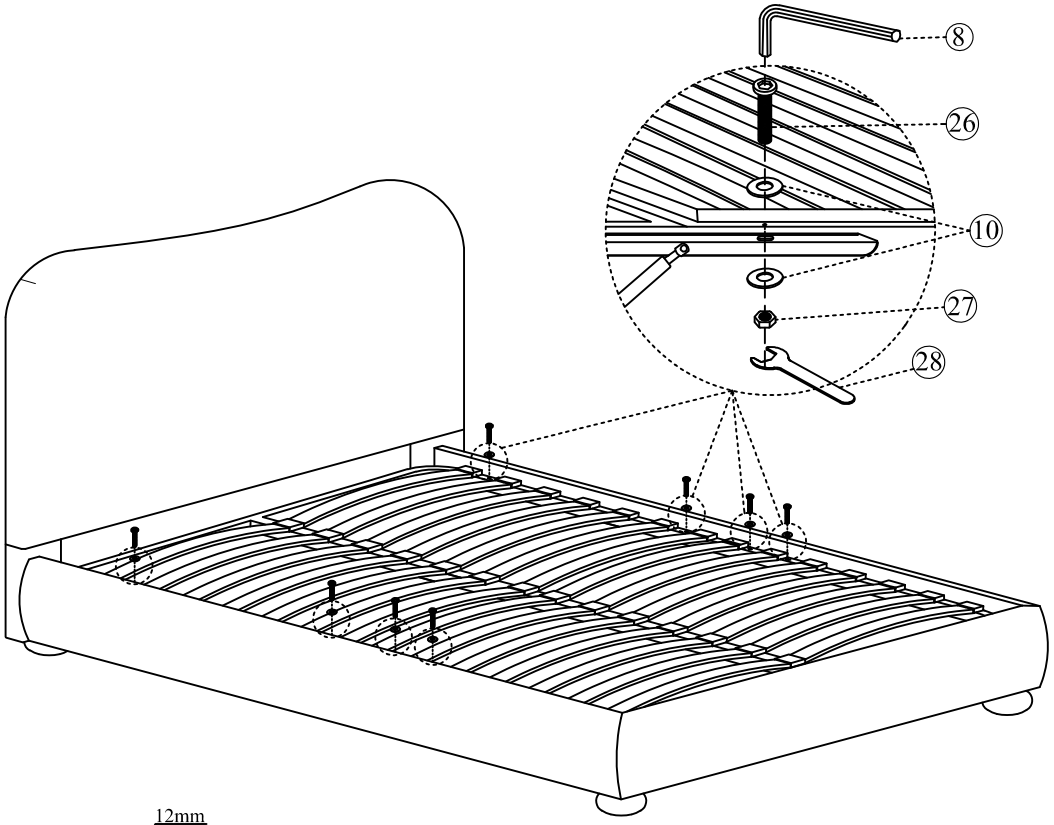

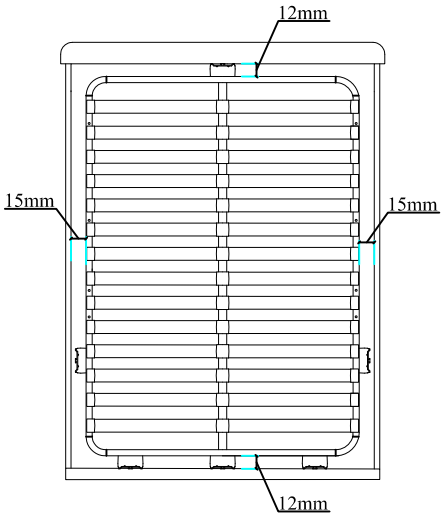

We suggest to assemble the slat frame in the middle position of the bed and try to keep 15mm distance on both side rails and keep 12mm distance on headboard and footboard, need to be equidistant.

Parts and Hardware



㉙ Belt=1pc


Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.


CAUTION: The item is heavy, assembly should be performed by two people.

Step 15

NOTES: It is recommended that the BELT be placed in the middle position, as shown in the below image.

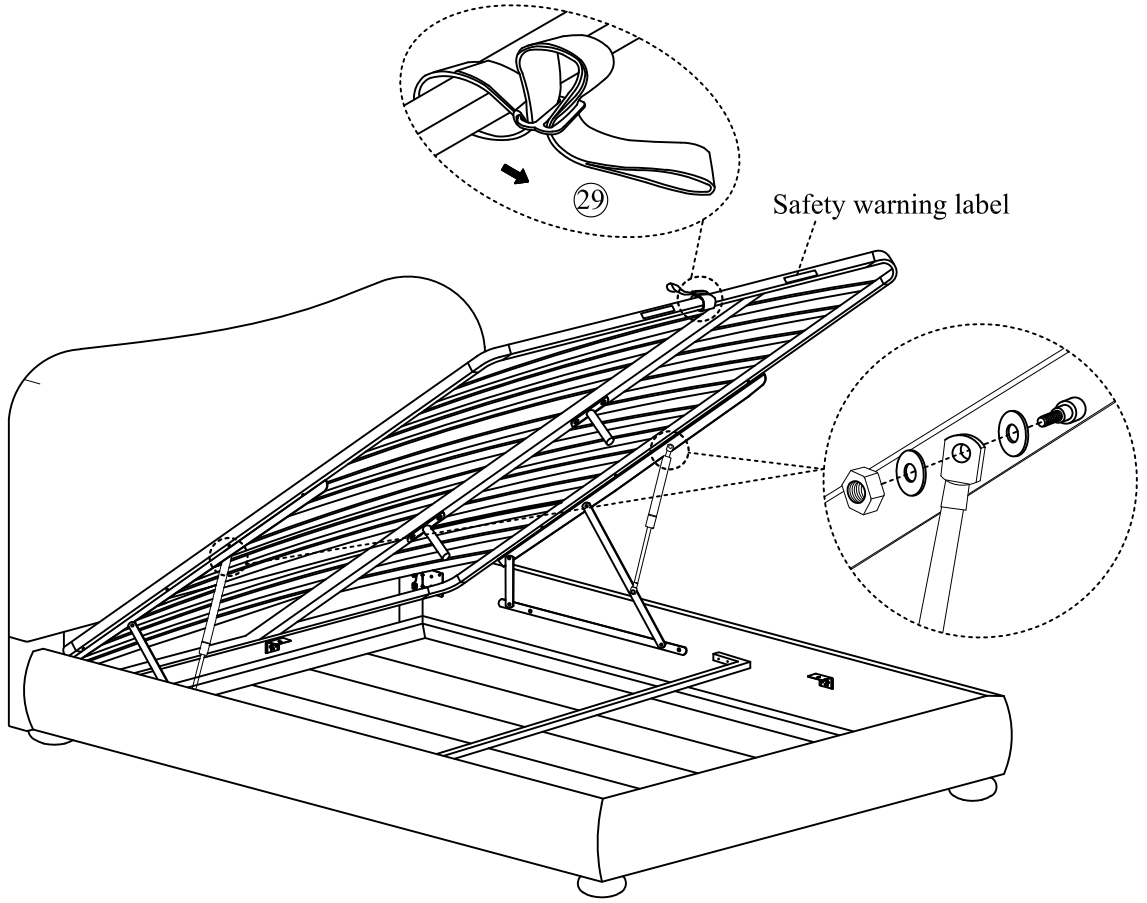

Parts and Hardware




㉚ Mattress holder=2pcs

Notes

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

Step 16

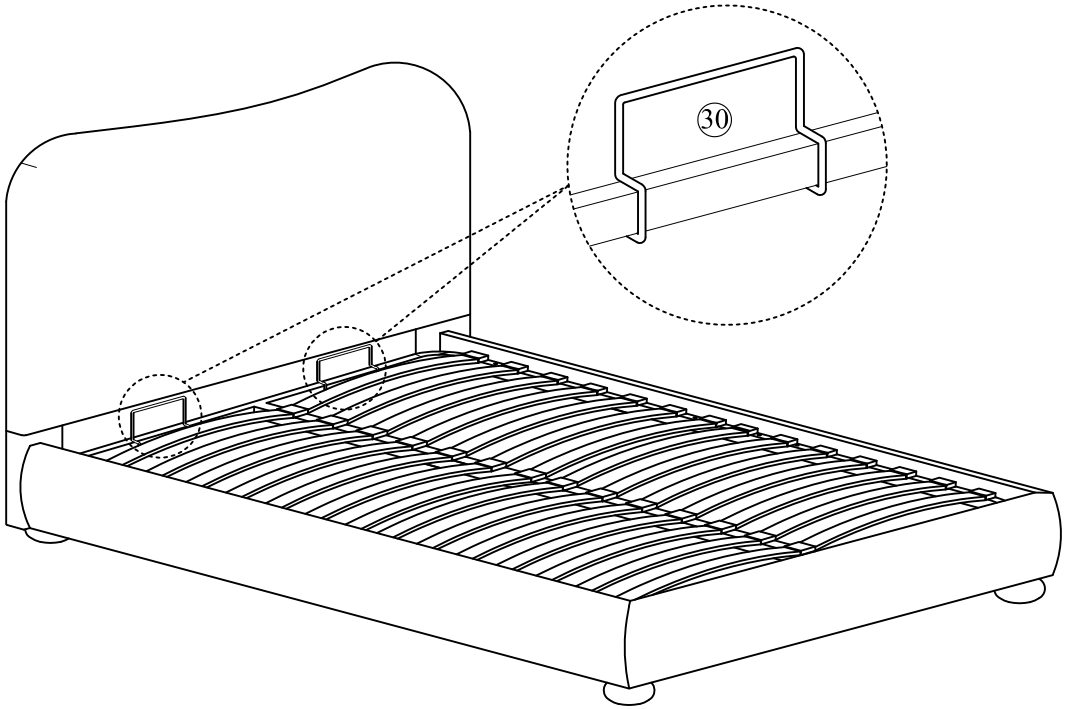

Warning: **When you need to move the bed please lift it, do not drag it.**