

CLA-023-041 REMIX RECTANGLE MIRROR

CARACOLE CLASSIC

1 of 2

ASSEMBLY INSTRUCTIONS BY WALL TYPE

- CONCRETE: Drill pilot hole on each marking, and then insert plastic anchor. use a screwdriver to attach the bracket to the wall with screws. See FIGURE 1A
- DRYWALL WITH STUDS: Use screws to affix to studs. See FIGURE 1B.
- DRYWALL WITHOUT STUDS: Use hollow wall anchors to affix to drywall. See FIGURE 1C.

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

- Preset the mirror on your desired location, and mark the location with a light pencil mark. Use tape or pencil to transcribe the location of the back mirror's pre-installed bracket to the wall. Below this marking is where you will install the included metal wall-mount bracket. See FIGURE 2.
- Hold the bracket against the wall and mark with pencil the locations of the bracket screw holes, ensuring levelness. See FIGURE 2
- Drill a hole on each mark, and then tap anchor into hole until flush with surface. See "ASSEMBLY INSTRUCTION BY WALL TYPE" for mounting instructions based on yours wall type: concrete, drywall, or drywall and studs.
- Tighten the screws into the anchors while maintaining constans pressure on the anchor to set. Remove screws. Hold metal bracket over the inserted anchors, and reinstall screws through the wall bracket holes, and tighten until snug against wall. See FIGURE 1
- Install the mirror on the wall bracket as illustrated in FIGURE 3.

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your **furniture**, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

Part Description	CLA-023-041	
	Part No.	QTY
Metal Cleat	CLA-023-041-0001	1
RTA Hardware	CLA-023-041-0002	1

RTA Hardware		
	Hardware List	Q'ty
A	 Hanger Bracket	1
B	 Hollow Wall Anchor	5
C	 Plastic Wall Anchor	5
D	 Screw	5

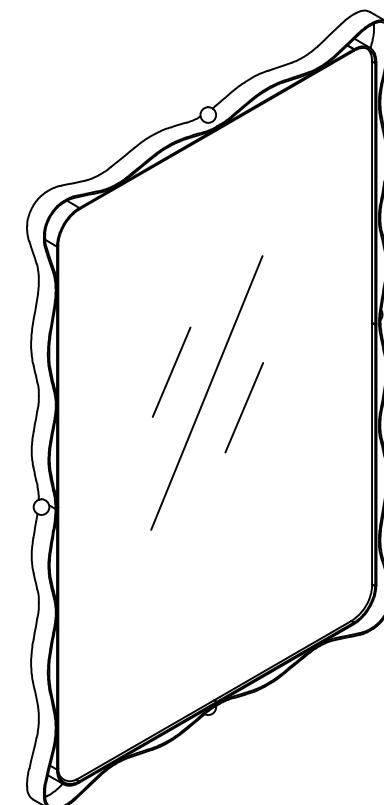


FIGURE 1A

CONCRETE

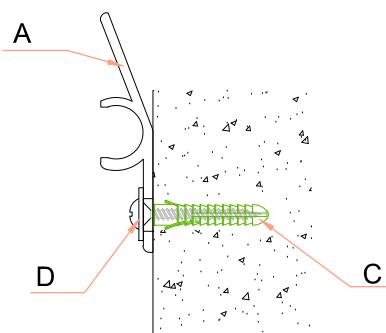


FIGURE 2

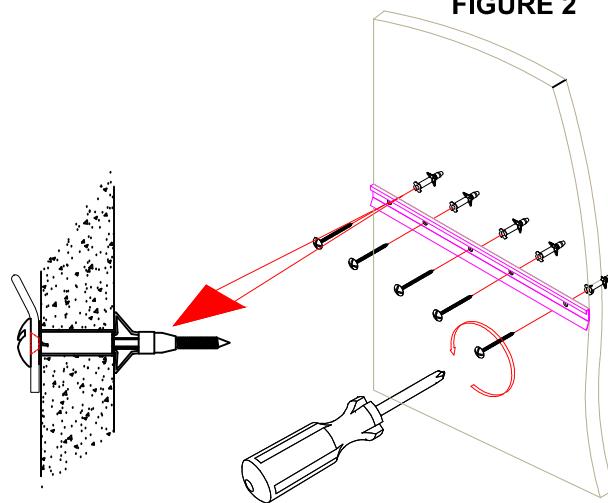


FIGURE 1B

DRY WALL W/ STUDS

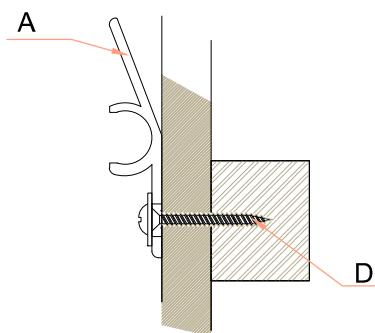


FIGURE 1C

DRY WALL W/O STUDS


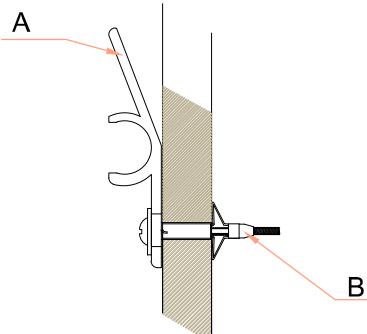


FIGURE 3

2 of 2



COMPLETE

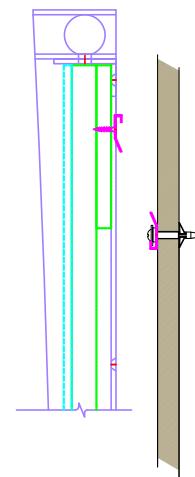