


# NEVIS PANEL LOW PROFILE TWIN/FULL/QUEEN BED

## ASSEMBLY INSTRUCTIONS




### BOX #1

- A. HEADBOARD 1 PC
- B. FOOTBOARD 1 PC

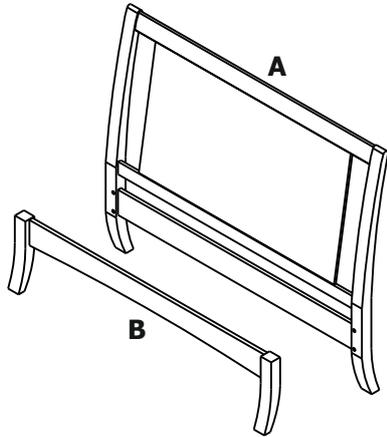


### BOX #2

- C. SIDE RAIL 2 PCS
  - D. BED SLAT 3 PCS
  - E. SUPPORT LEG 3 PCS
- BED HARDWARE BOX\*

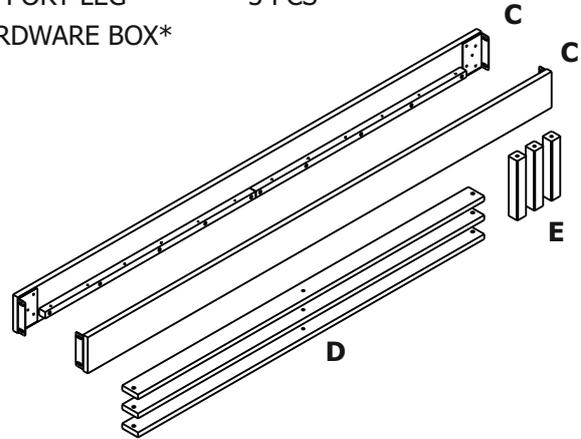

### NEVIS PANEL LOW PROFILE ASSEMBLED

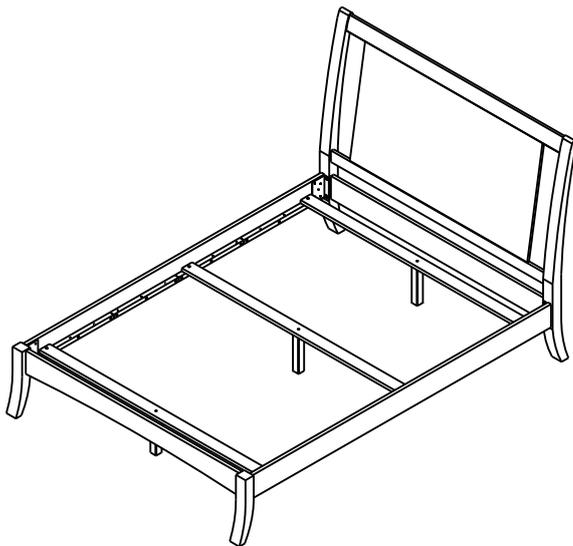


### BED HARDWARE PACKED IN BOX #2


1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	WOOD SCREW (8x30mm)	7 PCS	3	ALLEN KEY	1 PC
4	ALLEN BOLT (6x40mm)	4 PCS	5	SPRING WASHER (M8)	8 PCS	6	FLAT WASHER (M8)	8 PCS



TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)

**YOUR BOX MAY CONTAIN EXTRA HARDWARE**


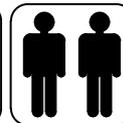


### STEP 1 :

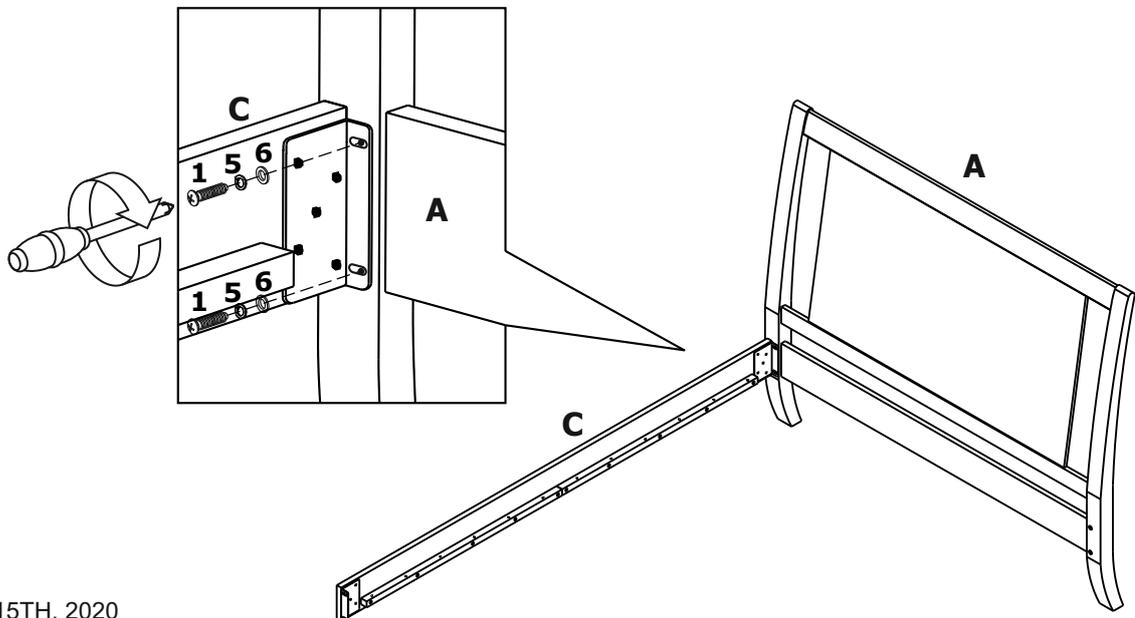

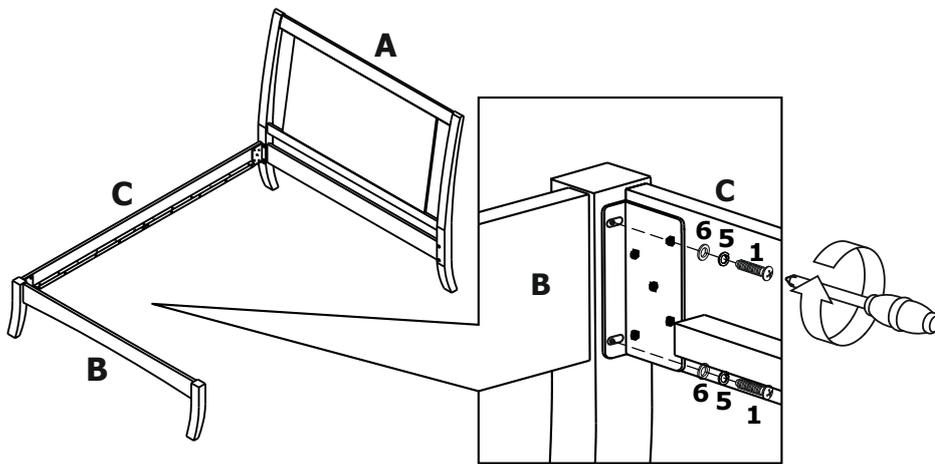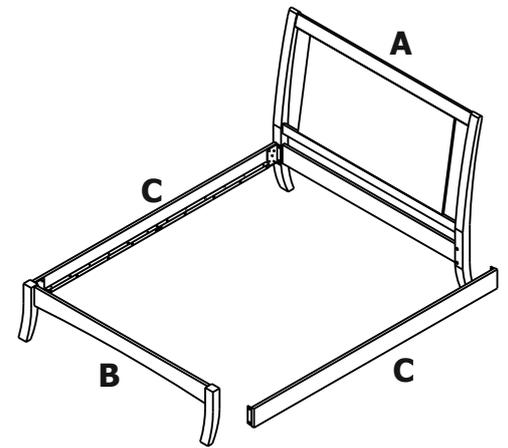**STEP 2 :****STEP 3 :****STOP**


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

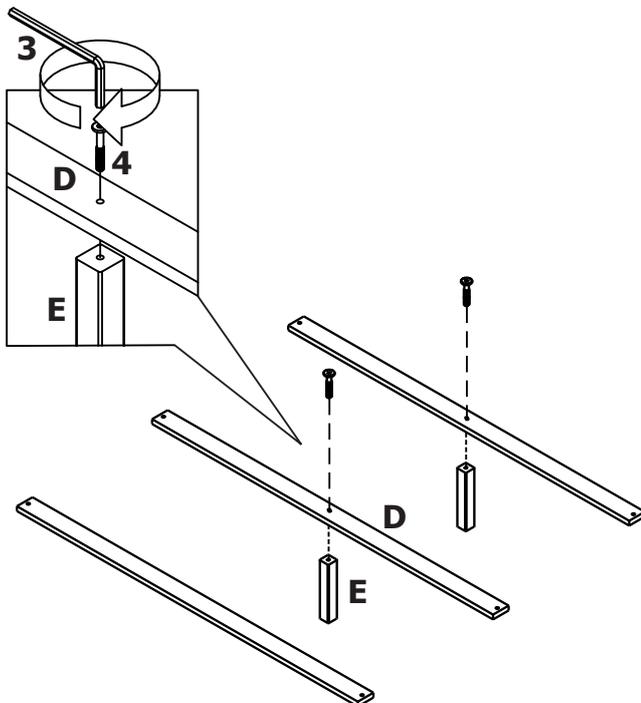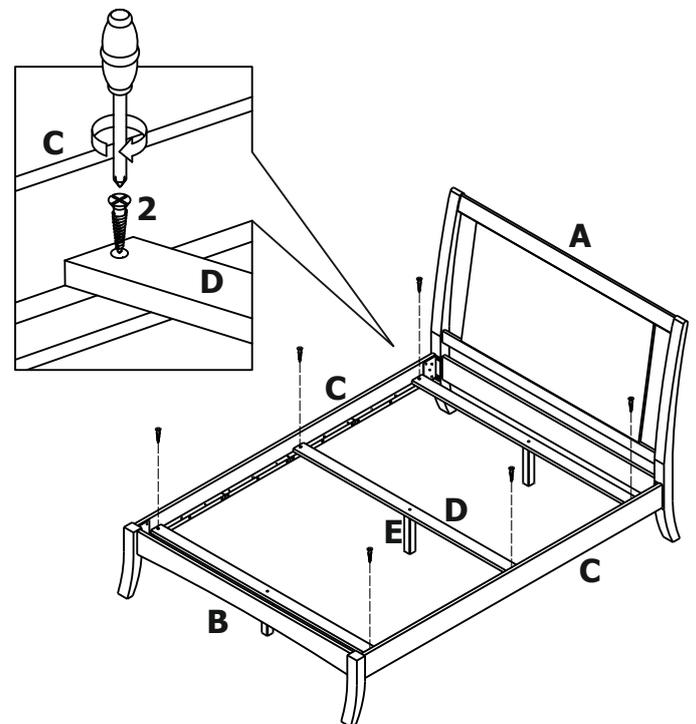**STEP 4 :****STEP 5 :****INSTRUCTIONS FOR ADJUSTING LEVELERS :**

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG (E).

TURN LEVELERS COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH SUPPORT LEG IS APPLYING EQUAL UPWARD PRESSURE ON THE BED SUPPORT SLAT.

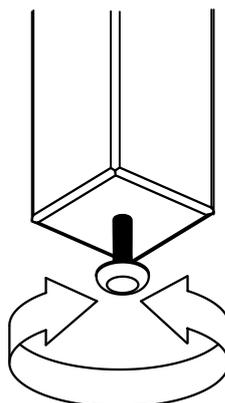**MAINTENANCE INSTRUCTIONS :**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE SUPPORT LEG.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# NEVIS PANEL LOW PROFILE TWIN/FULL/QUEEN BED

## APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT	3 PCS	2. WOOD SCREW (8x30mm)	7 PCS
E. SUPPORT LEG	3 PCS	4. ALLEN BOLT (6x40mm)	4 PCS

### STEP 1 :

USE ALLEN KEY **(3)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

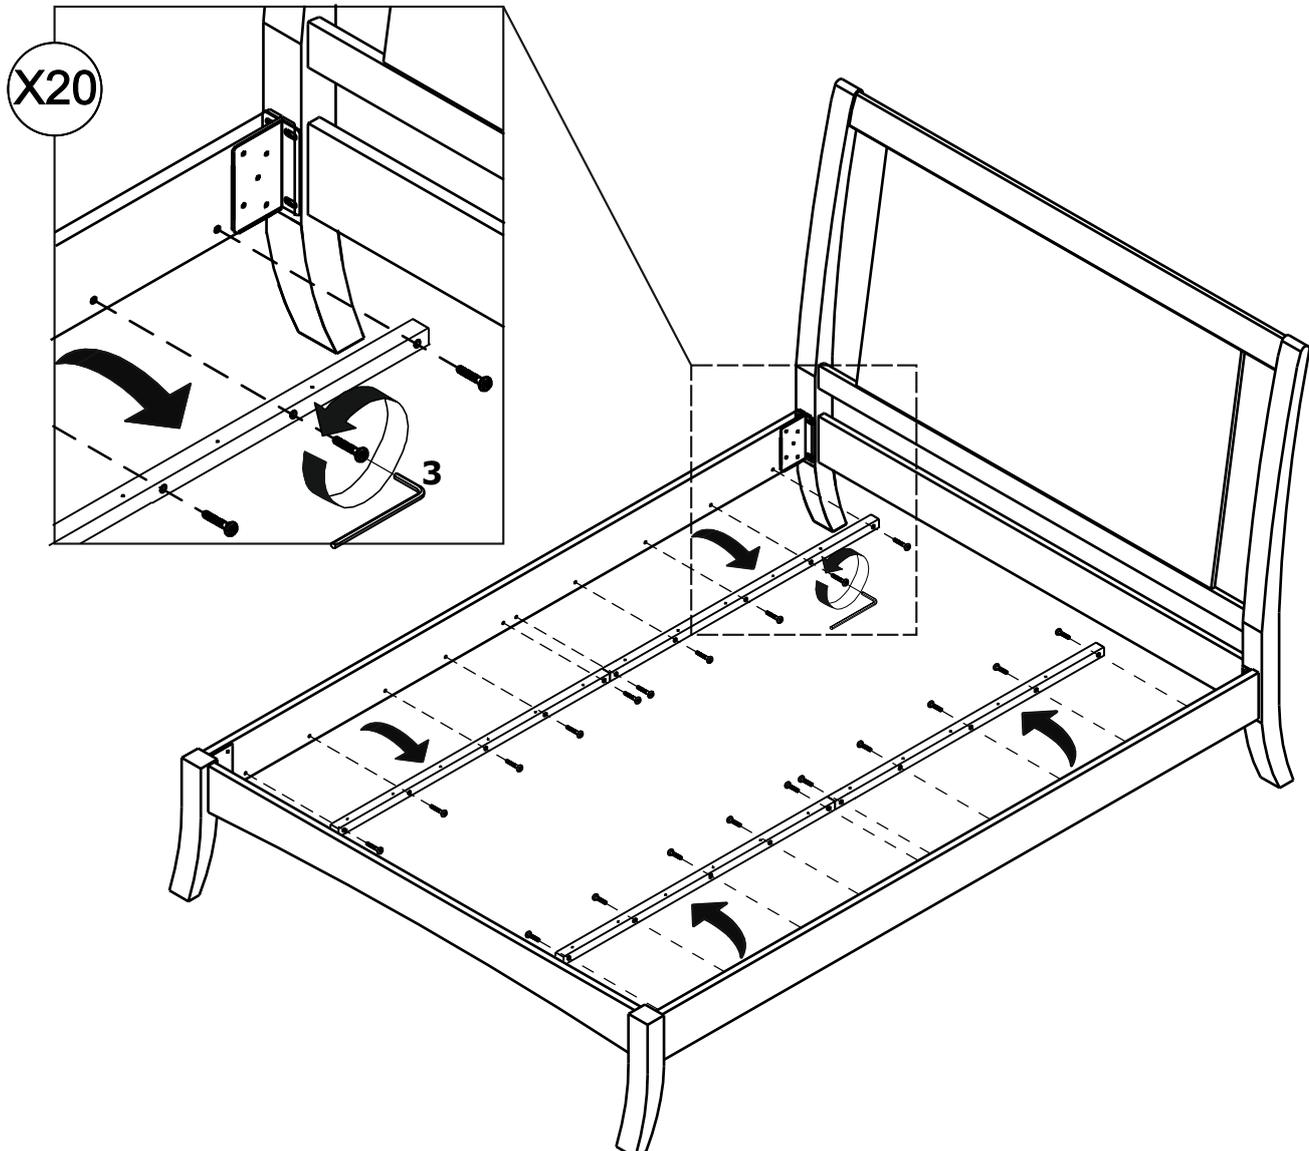

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.


# NEVIS PANEL LOW PROFILE KING BED

## ASSEMBLY INSTRUCTIONS




### BOX #1

- A. HEADBOARD 1 PC
- B. FOOTBOARD 1 PC

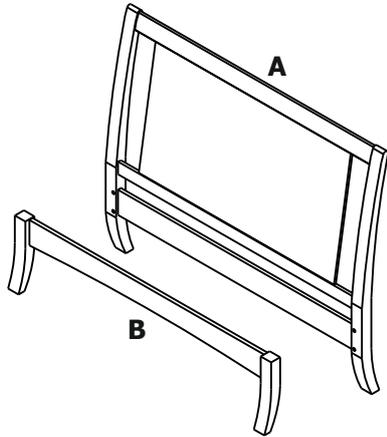


### BOX #2

- C. SIDE RAIL 2 PCS
- D. BED SLAT 3 PCS
- E. SUPPORT LEG 6 PCS
- BED HARDWARE BOX\*

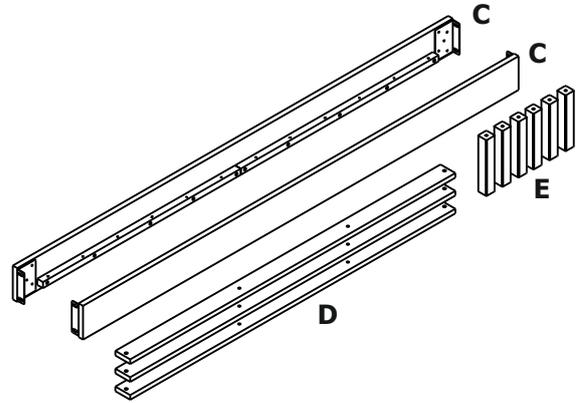

### NEVIS PANEL LOW PROFILE ASSEMBLED

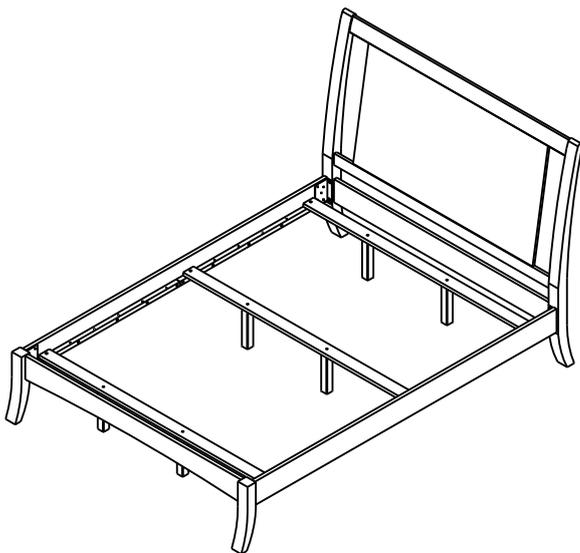


### BED HARDWARE PACKED IN BOX #2


1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	WOOD SCREW (8x30mm)	7 PCS	3	ALLEN KEY	1 PC
4	ALLEN BOLT (6x40mm)	7 PCS	5	SPRING WASHER (M8)	8 PCS	6	FLAT WASHER (M8)	8 PCS

TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)


**YOUR BOX MAY CONTAIN EXTRA HARDWARE**

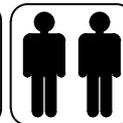


### STEP 1 :

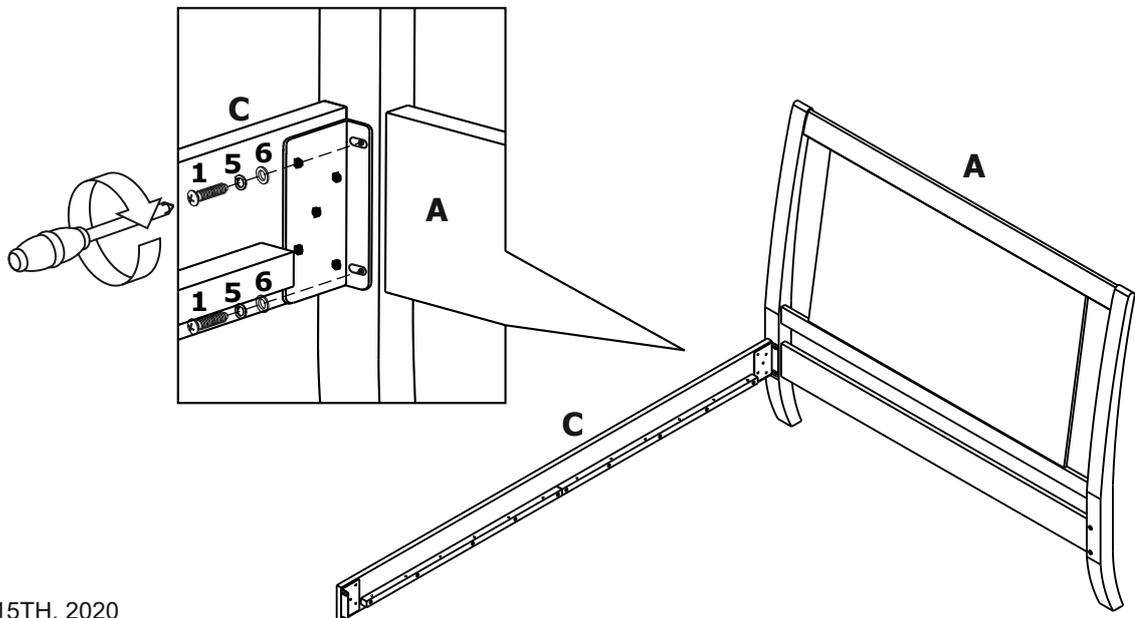

## STEP 2 :

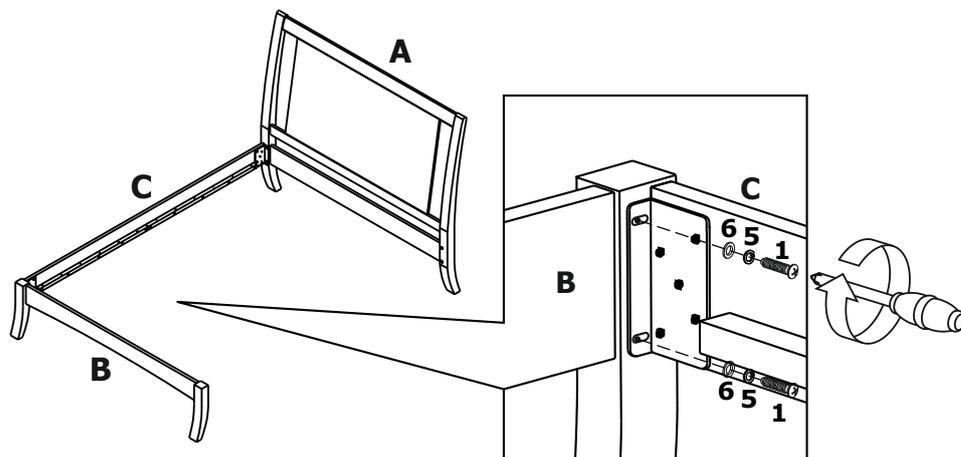


## STEP 3 :

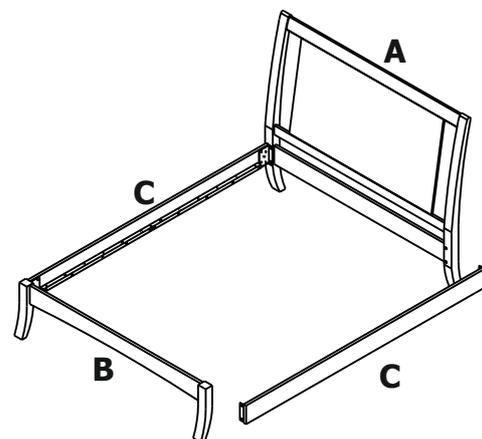


### STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

## STEP 4 :

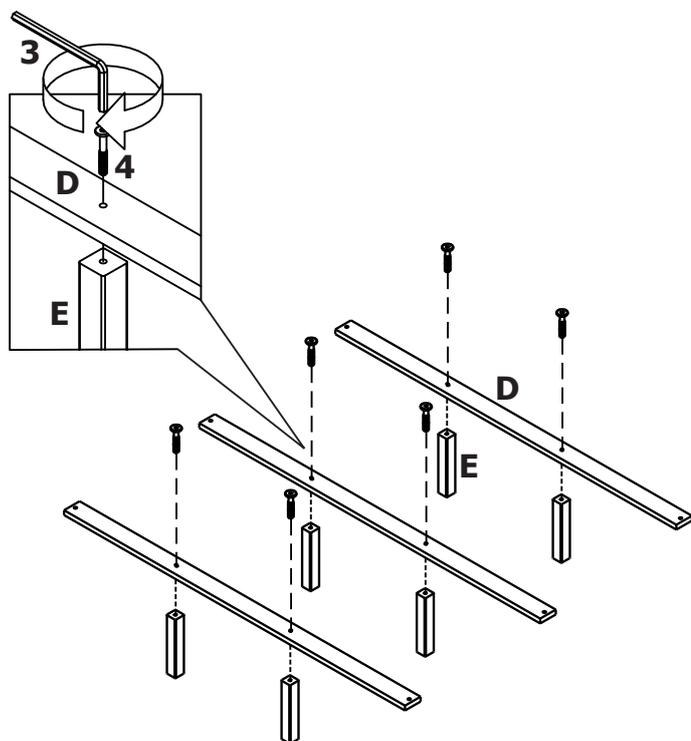

## STEP 5 :

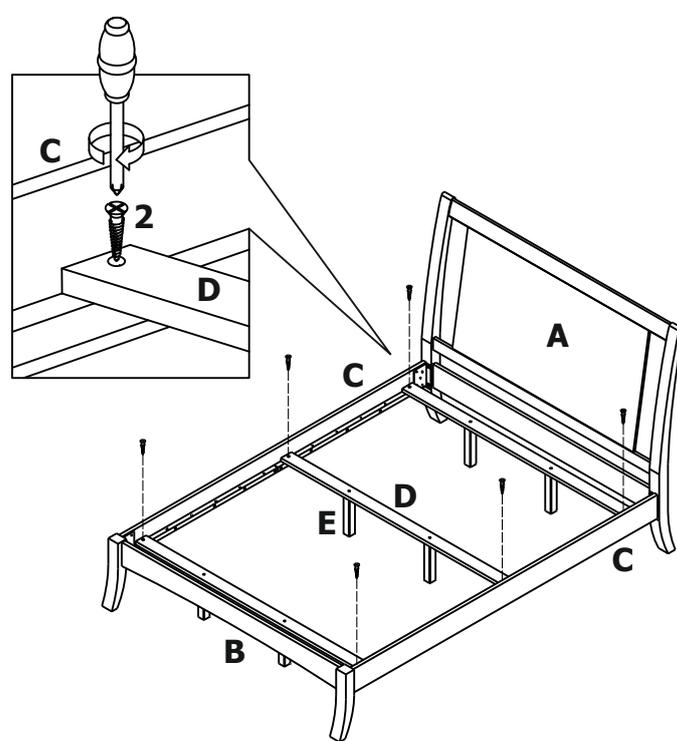


### INSTRUCTIONS FOR ADJUSTING LEVELERS :

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG (E).

TURN LEVELERS COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH SUPPORT LEG IS APPLYING EQUAL UPWARD PRESSURE ON THE BED SUPPORT SLAT.

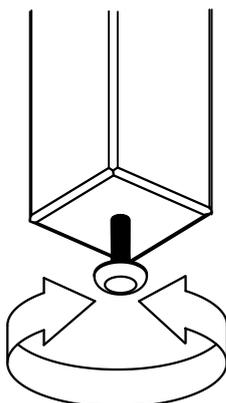

### MAINTENANCE INSTRUCTIONS :

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE SUPPORT LEG.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# NEVIS PANEL LOW PROFILE KING BED



## APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT	3 PCS	2. WOOD SCREW (8x30mm)	7 PCS
E. SUPPORT LEG	6 PCS	4. ALLEN BOLT (6x40mm)	7 PCS

### STEP 1 :

USE ALLEN KEY **(3)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

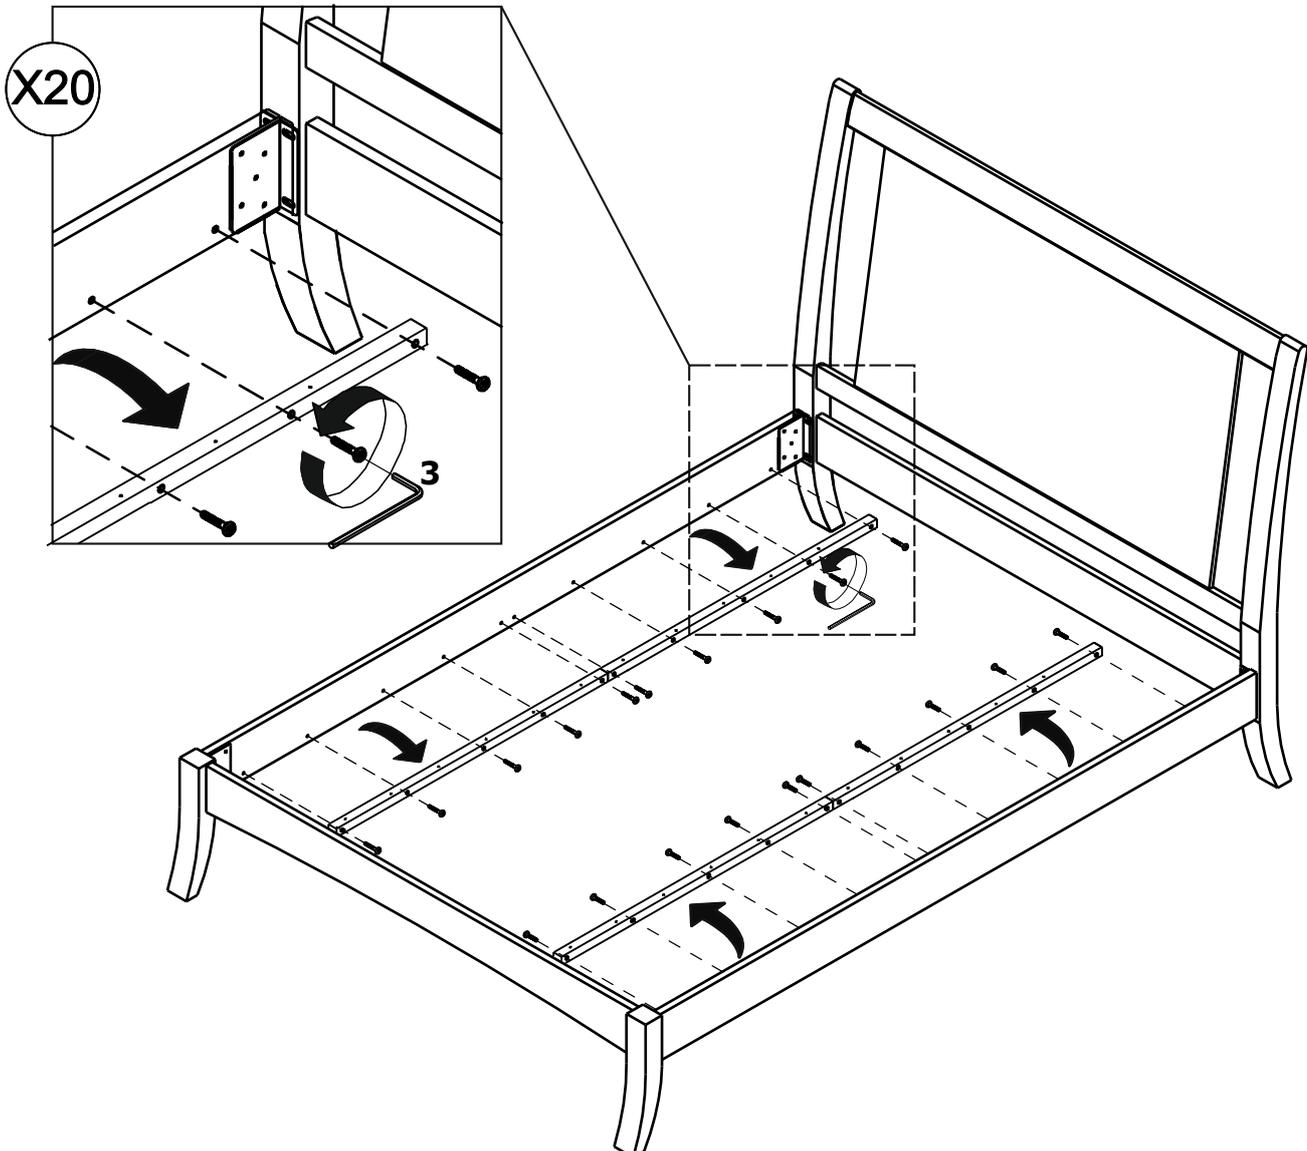

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED : JUNE 15TH, 2020