CLA-022-041 PIECES OF ME CARACOLE CLASSIC

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

(1) Attache the French cleat to the wallboard with screws provided (A) .


2) Hang the mirror on the wall with French cleat as shown in diagram (A).

*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

| | CLA-022-041 | | |
|------------------|-------------------|-----|--|
| | PIECES OF ME | | |
| Part Description | Part No. | QTY | |
| French cleat | CLA-022-041-30451 | 2 | |
| RTA Hardware | CLA-022-041-5001 | 1 | |

| RTA Hardware | | | | |
|---------------|-------|-----------------|---|--|
| Hardware List | | Q'ty | | |
| Α |)mms- | Screw(4.2X64MM) | 5 | |
| В | 0 | Felt Pad | 4 | |

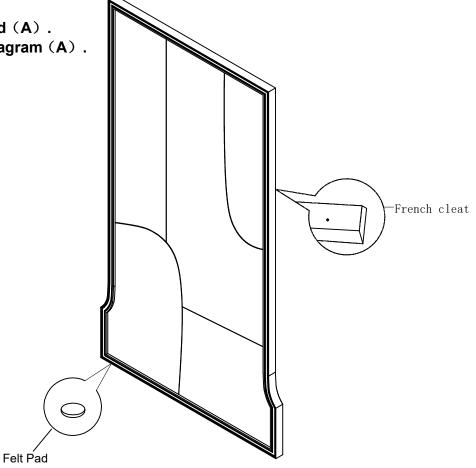

Created on: 2023-3-24

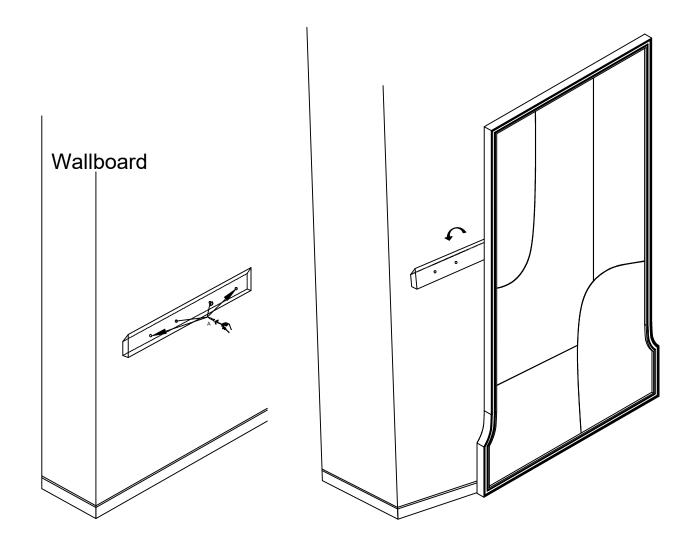


Diagram A