

HOME FURNITURE COLLECTIONS

ASSEMBLY INSTRUCTIONS


AUSTIN BAR&COUNTER HEIGHT STOOL

LOOSELY ATTACH EACH SCREW UNTIL FRAME IS ASSEMBLED THEN TIGHTEN WHEN COMPLETE

1

STEP1

1)Attach the Legs(2) with Allen Bolts(A) through Lock Washer(B) and Flat Washer(C) by Allen Wrench(E) to Seat Frame(1).
See figuer below.

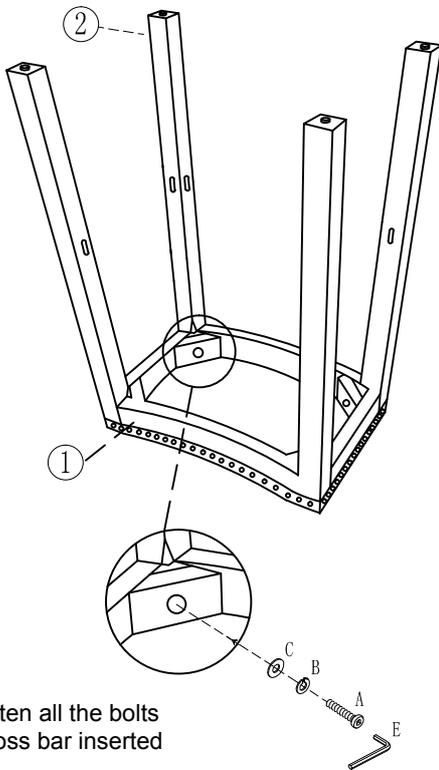


Don't tighten all the bolts before cross bar inserted

2

STEP2


1)Attach the Long cross bar(3) and short cross bar(4) with PH Screw(D) by PH Screwdriver to Legs (2).
See figuer below.

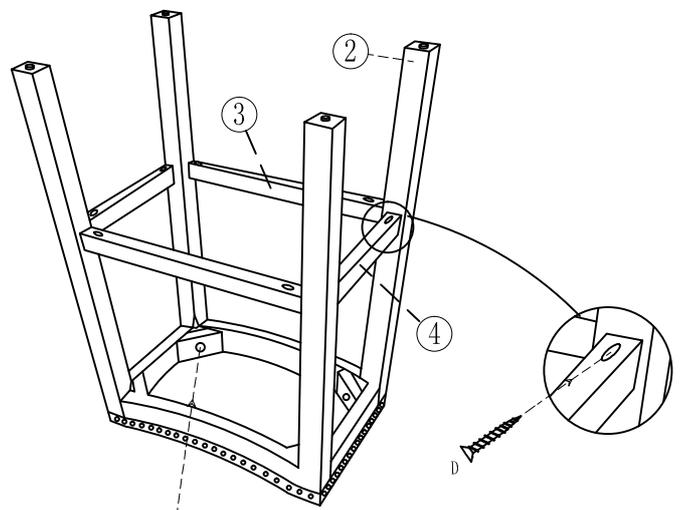

Tighten all the bolts now

* Check that the following parts are in carton

A	Bolt	φ1/4"×2-1/4"		4PCS
B	Lock Washer	φ1/4"		4PCS
C	Flat Washer	φ1/4"×19mm		4PCS
D	PH Screw	φ8"×1-3/4"		8PCS
E	Allen Wrench	φ1/4"		1PC

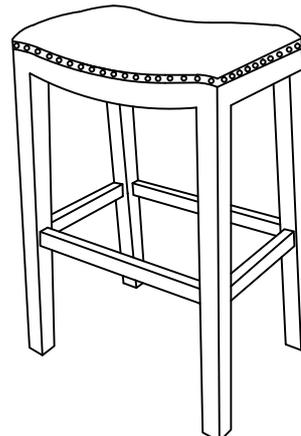

MADE IN CHINA