

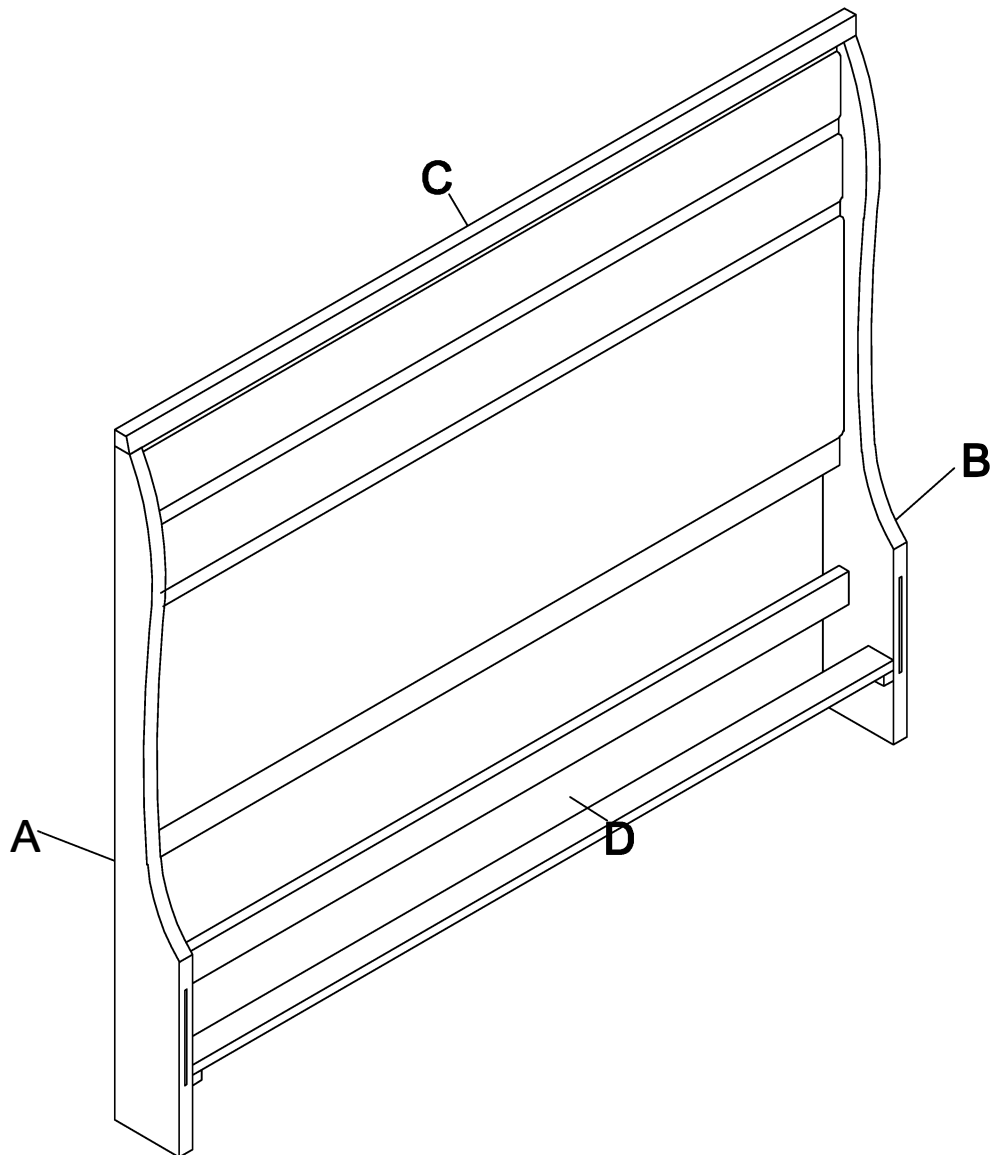




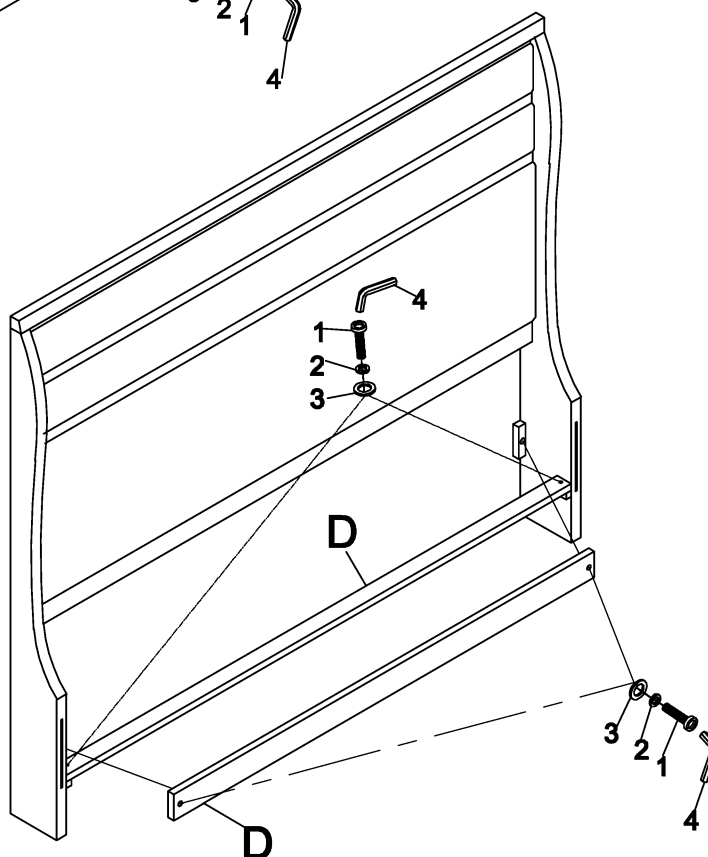

PART#	DESCRIPTION	Q'TY
1	 Ø5/16"x38mm Bolt	10pcs
2	 Ø5/16" Spring Washer	10pcs
3	 Ø5/16"x19 Flat Washer	10pcs
4	 4mm Allen Wrench	1pc

NO.	PARTS LIST	Q'TY
A	Headboard left post 	1pc
B	Headboard right post 	1pc
C	Headboard panel 	1pc
D	Stretcher 	2pcs

STEP: 1

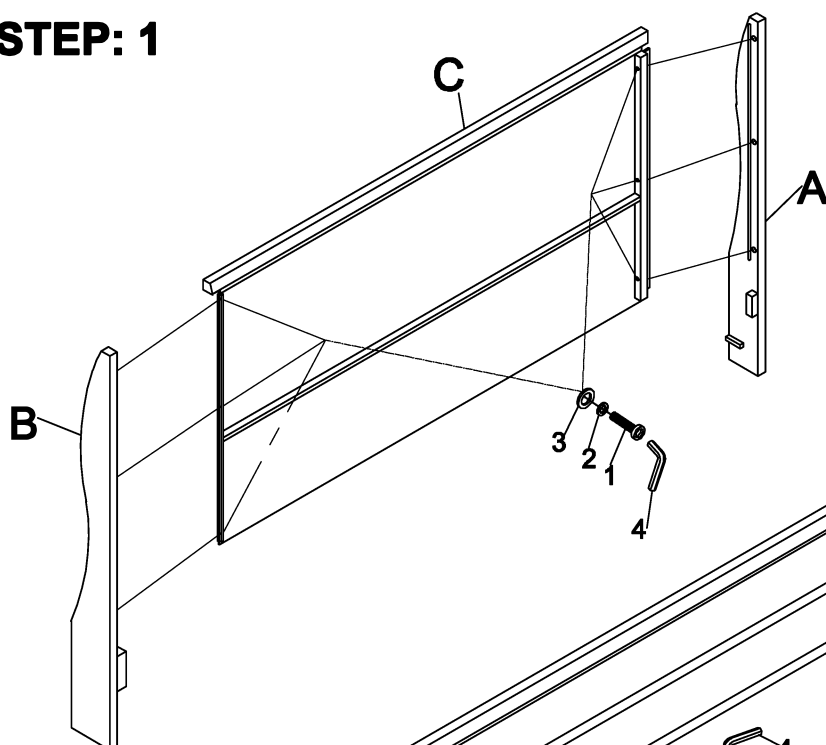

STEP: 2

1. Find all the parts and hardware inside the box first and check with the parts list.
2. Attach the Left post and Right post (A,B) and headboard panel (C). (See Step 1) using bolt (1), spring washer (2), flat washer (3), Tighten them up with an allen wrench (4)
3. Attach the Stretcher (D) to headboard panels (See Step 2) using bolt (1), spring washer (2), flat washer (3), Tighten them up with an allen wrench (4).


Thanks for choosing Legends furniture!



Assembly Instructions

*ZARC-7101: Arcadia UHP Queen Headboard

*ZARC-7102: Arcadia UHP Queen Footboard

*ZARC-7103: Arcadia UHP Bed rails

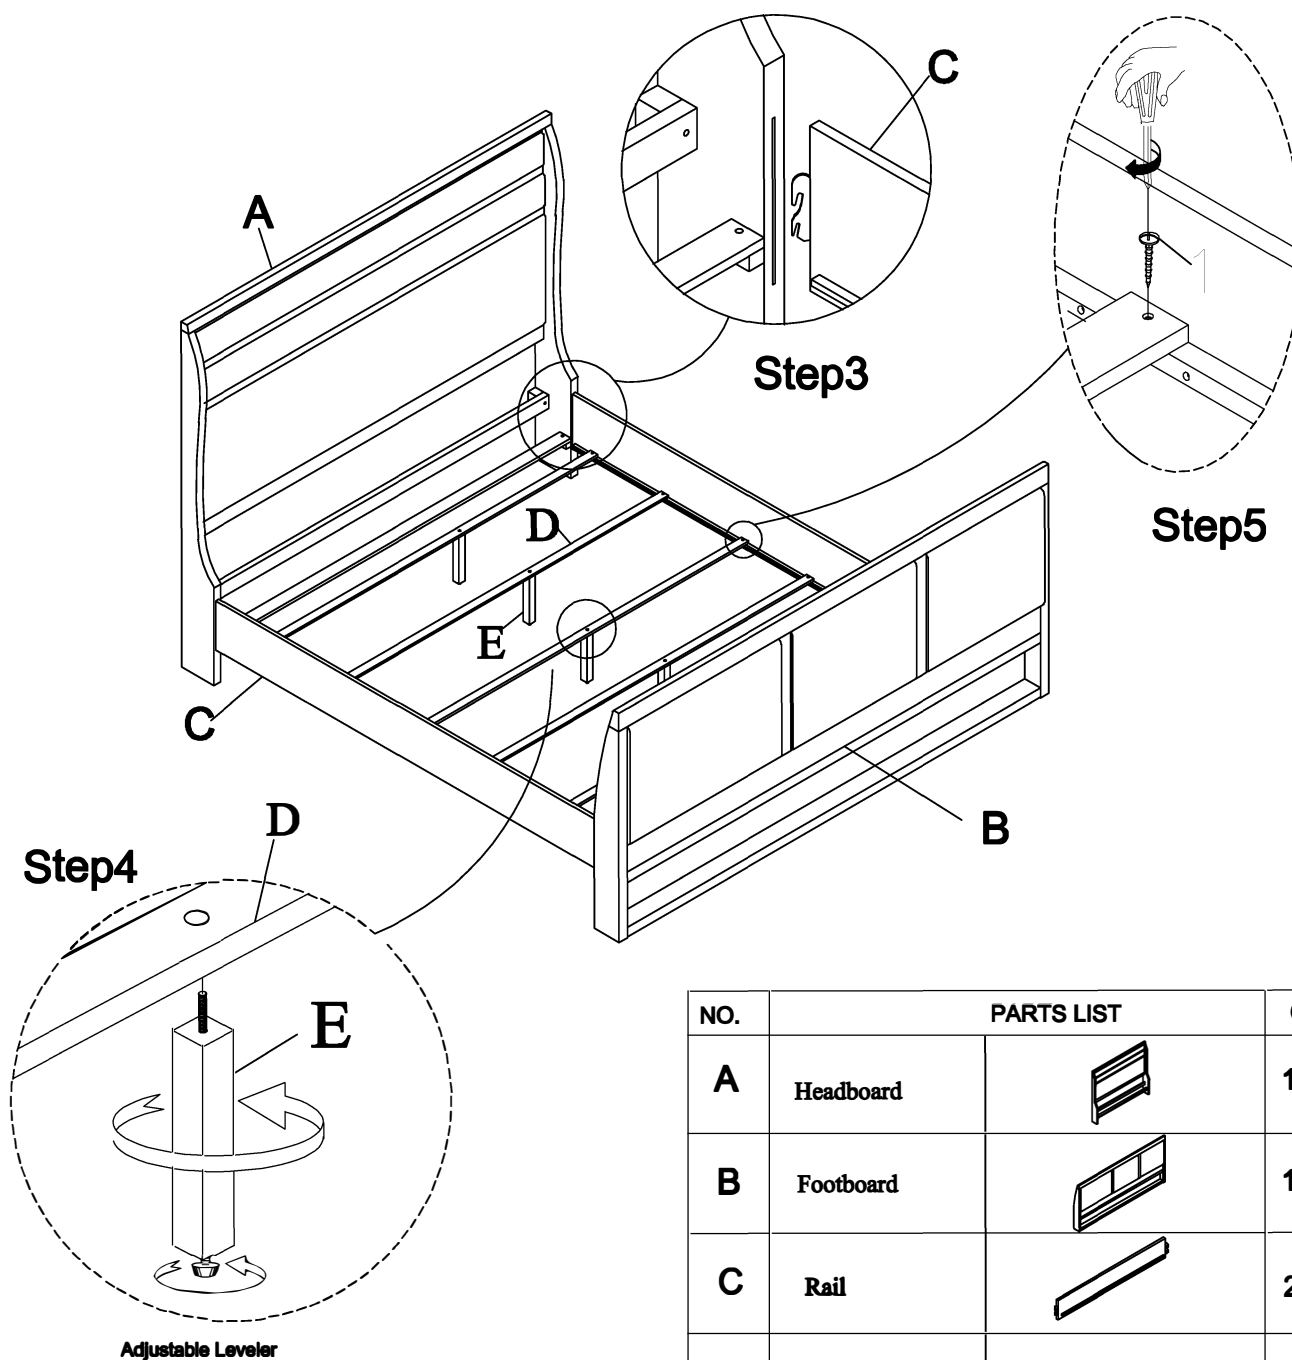

NO.	PARTS LIST		Q'TY
A	Headboard		1pc
B	Footboard		1pc
C	Rail		2pcs
D	Slat		5pcs
E	Slat support leg		5pcs

PART#	DESCRIPTION	Q'TY
1	 Wood screw #8 x 32mm	10pcs

- 1.Find all the parts and hardware inside the box first and check with the parts list.
- 2.Attach the headboard and footboard (A,B)and rail panel(C) .(See Step 3) .
- 3.Attach the slat (D) to slat support leg(E) (See Step 4).(See Step 5) using woodscrew(1)

Thanks for choosing Legends furniture!