



ASSEMBLY INSTRUCTION

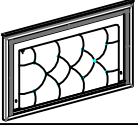




MODEL : B7100 - Q - HB
DESCRIPTION : QUEEN LED HEADBOARD


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

(BOX 1)
BOX OF HEADBOARD & EXTENSION POST

NO	DRAWING	DESCRIPTION	QTY
A		Headboard	1pc
B		Extension post - (L/R)	2pcs


(BOX 1)
HARDWARE LIST

NO	DRAWING	DESCRIPTION	QTY
1		Allen key	1pc
2		JCBC 35mm	6pcs
3		M6 Spring washer	6pcs
4		M6 Flat washer	6pcs
5		AC/DC Adapter	1pcs

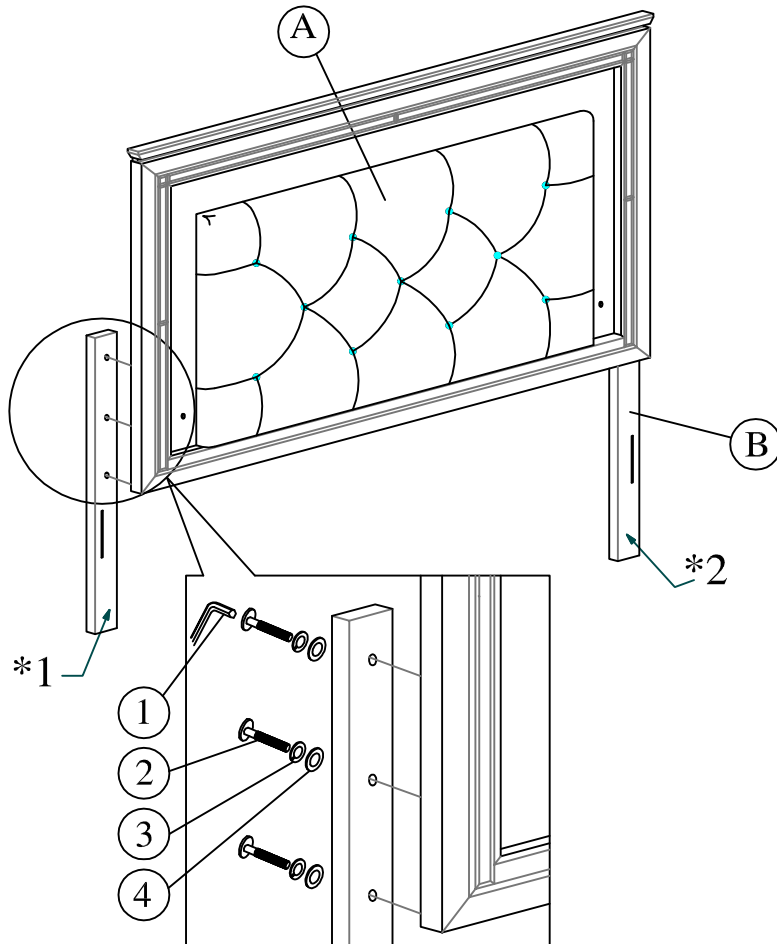

Step 1: Attach the (B) extension post as shown in the drawing and tighten with (2) JCBC 35mm, (3) M6 spring washer & (4) M6 flat washer.

Ensure adapter socket connect to behind headboard socket

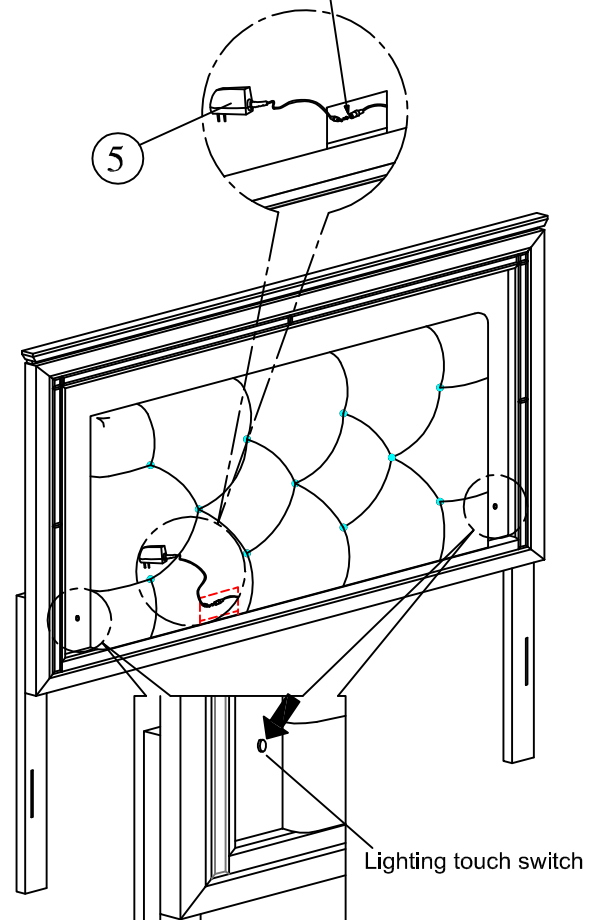

THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE : MUST TIGHTEN SCREW PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

CLEANING INSTRUCTION

After assembly , clean & polish the completed parts if necessary with softcloth and industrial recognized furniture polish

ASSEMBLY INSTRUCTION


Page: 1 of 1

MODEL : B7100 - Q - HB / B7100 - Q - FB / B7100 - KQ - RAIL
DESCRIPTION : QUEEN BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.




(BOX 1)

BOX OF HEADBOARD & EXTENSION POST

NO	DRAWING	DESCRIPTION	QTY
A		Headboard	1pc






(BOX 2)

BOX OF FOOTBOARD

NO	DRAWING	DESCRIPTION	QTY
B		Footboard	1pc
C		Slat	3pcs
D		Slat support leg	3pcs


(BOX 2)


HARDWARE LIST

NO	DRAWING	DESCRIPTION	QTY
1		Allen key	1pc
2		JCBC 35mm	3pcs
3		M6 Spring washer	3pcs
4		Screw 32mm	6pcs
5		Adjustable Leveller	3pcs


(BOX 3)

BOX OF SIDE RAIL


NO	DRAWING	DESCRIPTION	QTY
E		Side rail	2pcs

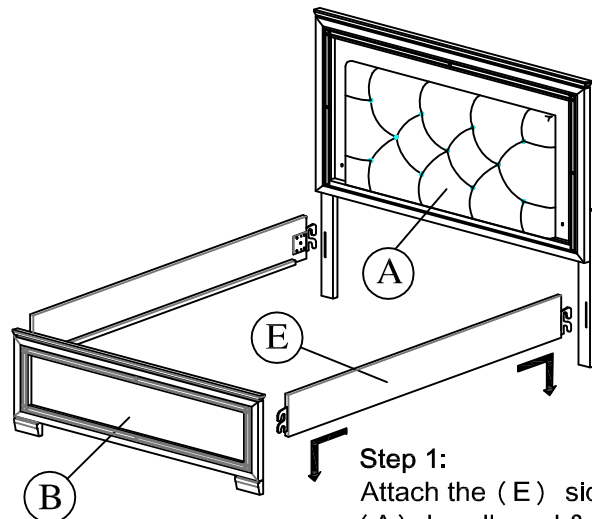


Step 1:
Attach the (E) side rail to the
(A) headboard & (B) footboard.

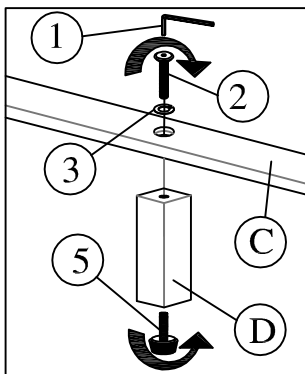

Step 2:
Attach (D) slat support leg to the bottom of slat
using (2) JCBC 35mm and (3) M6 spring washer.
Attach The (5) Adjustable leveller
and adjust it to level the bed with the floor.

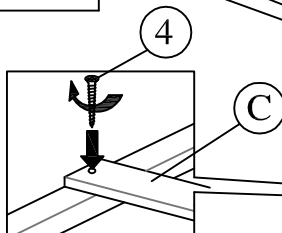

Step 3:
Secure the (C) slat using the
(4) screw 32mm provided.

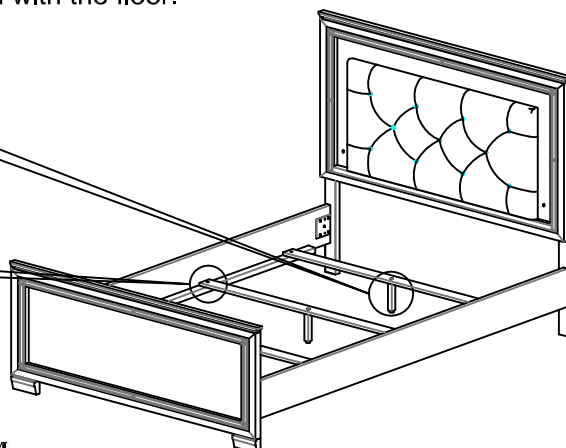

THE HARDWARE IS LOCATED IN THE PACKING ITEM

NOTE : MUST TIGHTEN SCREW PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE.
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

CLEANING INSTRUCTION

After assembly , clean & polish the completed parts if necessary with softcloth and industrial recognized furniture polish