




we create sustainable outdoor living


C05

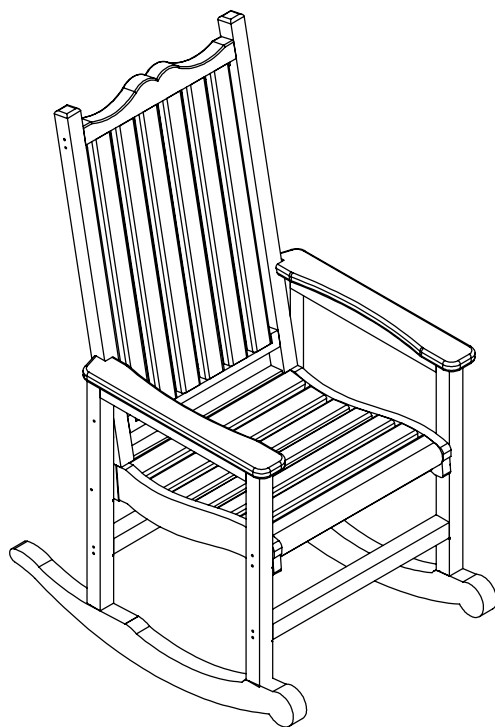


C05



we create sustainable outdoor living

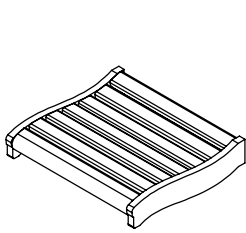


(A) x1

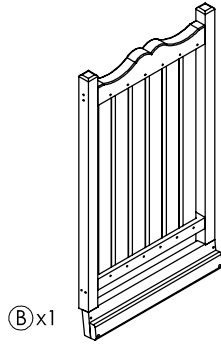


(B) x1

(D) x2

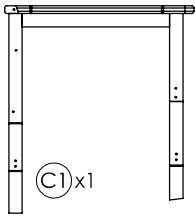

(C1) x1

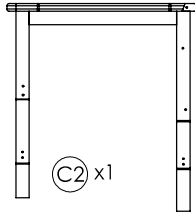

(C2) x1

(E) x2



PLASE DO NOT OVER TIGHTEN SCREWS



(□) #2

2" / 50mm



(F) x2

(+) #2

2 1/2" / 64 mm



(G) X20



(□) #2

3 1/2" / 89mm



(H) X4

(+) #3



800.490.1283




crpproducts.com


FAX

519.271.8544

- 1
- (A) x1
 - (B) x1
 - (G) x4

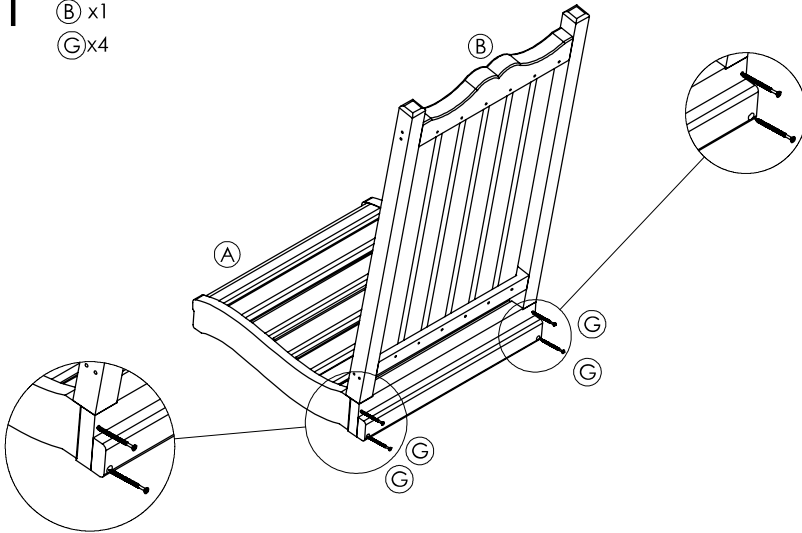

- 2
- (C1) x1
 - (C2) x1
 - (E) x2
 - (H) x4

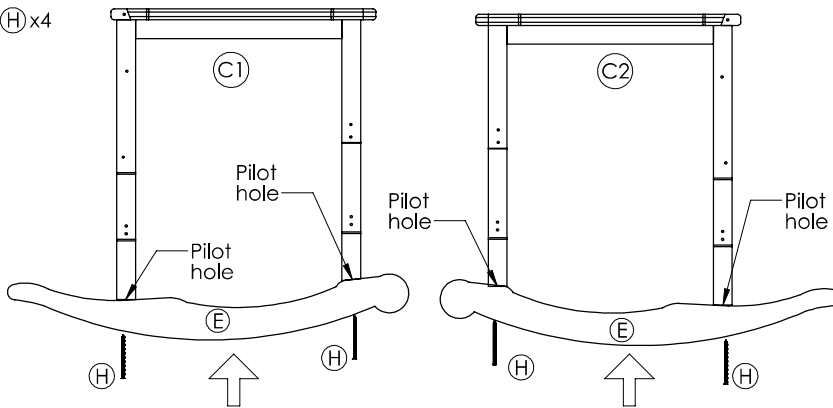




Tip: Drill & re-drill back screw to avoid screw stripping






#2
#3




3 \textcircled{D} x1
 \textcircled{G} x4

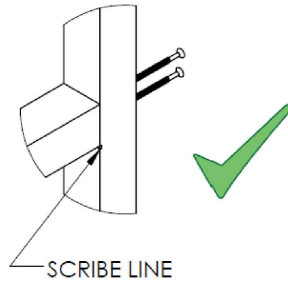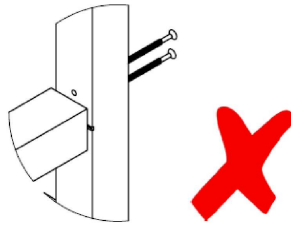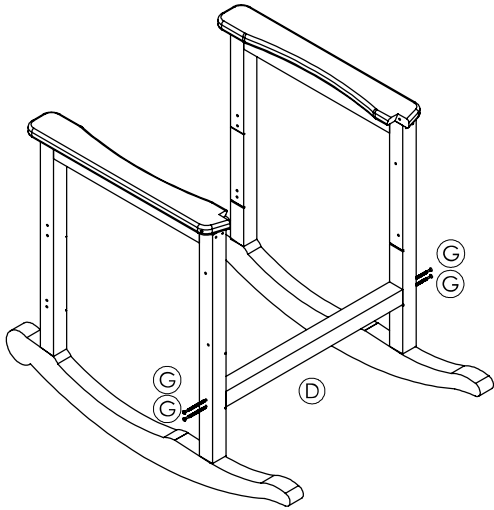


4 \textcircled{D} x1
 \textcircled{G} x4

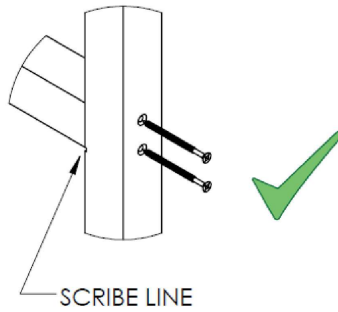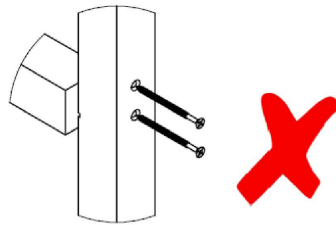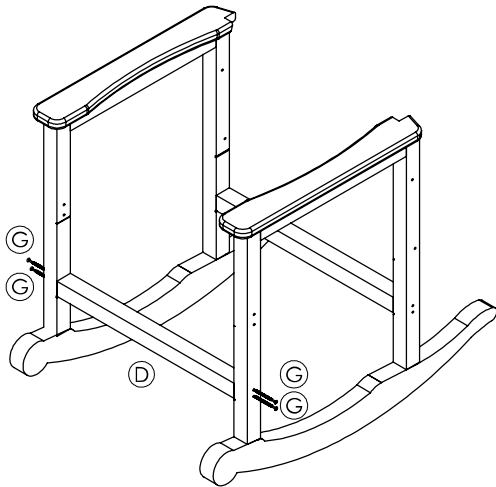


5 (F) x2

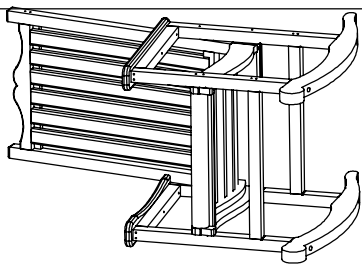



⚠ SECURE SCREWS WHILE CHAIR IS ON ITS SIDE DURING STEPS 5 AND 6.

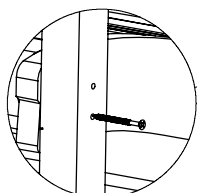


SCRIBE LINE

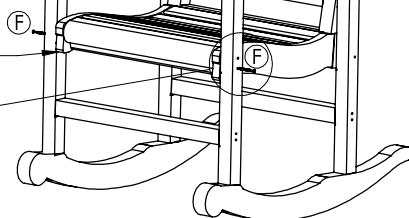


6 (G) x8

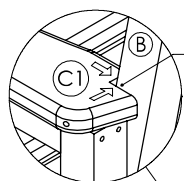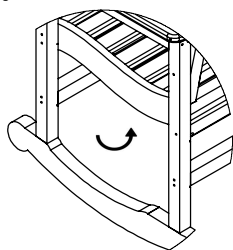

FLUSH

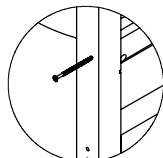

SCRIBE LINE

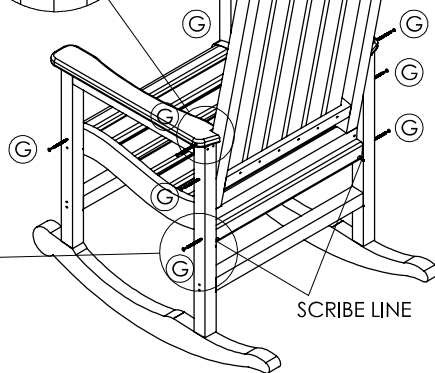

⚠ ALIGN SEAT WITH SCRIBE LINE AND INSTALL THESE SCREWS FIRST.

C05

