

ASSEMBLY INSTRUCTION FOR

FULL BED

WN100FHF/WN100FR/WN100FS











Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST

NO	PART DESC	CODE	QTY
1	Full Headboard	WN100FH	1
2	Full Headboard Left Side Leg	WN100HBLRLEG	1
3	Full Headboard Right Side Leg		1
4	Full Headboard Fitting Wood		2
5	Full Foot Board Frame	WN100FF	1
6	Full Foot Board Foot Board Drawer Runner Support Rail (Long)	WN100FFDSR	1
7	Full Foot Board Drawer Runner Support Rail (Short)		2
8	Full Foot Board Drawer Runner Support Wood With Leveler		1
9	Full Foot Board Drawer Box	WN100FFBDR	2
10	Full Foot Board Support Leg With Adjustable Leveler (Short)	WN100FBSPL2	1
11	Full Left Side Rail	WN100FBLSR	1
12	Full Right Side Rail	WN100FBRSR	1
13	Full Head Board Support Leg With Adjustable Leveler (Long)	WN100FWBSPL1	3
14	Full Headboard Slat	WN100FBSLT1	8
15	Full Foot board Slat	WN100FBSLT2	4
16	Full Side Rail Drawer Runner Support Wood		1


HARDWARE LIST

NO		HARDWARE DESC	CODE	QTY
A		CBS. SCREW M3.5 x 12mm	WN100FBHW	12
B		CBS. SCREW M4 x 30mm		37
C		JCBC BOLT M6 x 40mm		26
D		FLAT WASHER M6 x 13mm		14
E		FLAT WASHER M6 x 19mm		12
F		SPRING WASHER M6 x 19mm		26
G		WOOD DOWEL 10 x 30mm		8
H		ALLEN KEY M4 x 58mm		1
G		DRAWER HANDLE 30 x 32 x 135mm		2
H		THM. SCREW M4 x 35mm		4


ASSEMBLY INSTRUCTION FOR

FULL BED

WN100FHF/WN100FR/WN100FS

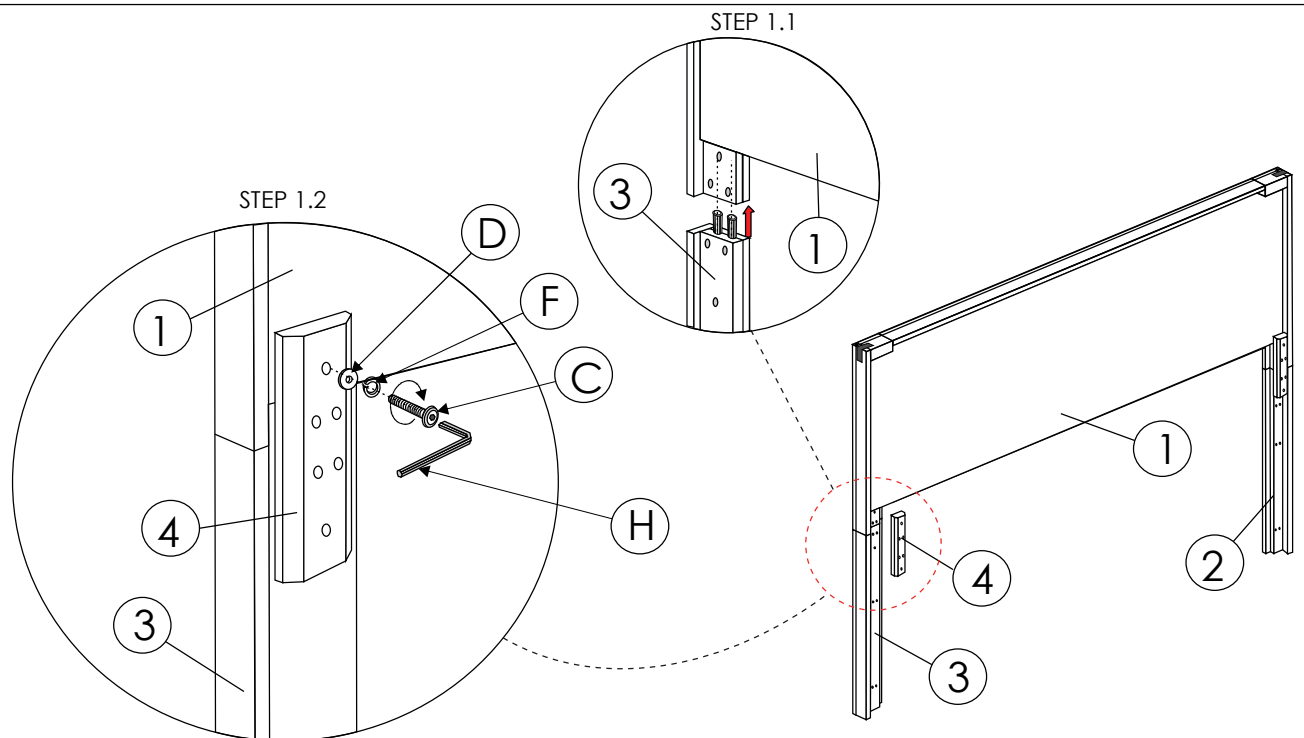

STEP 2 :

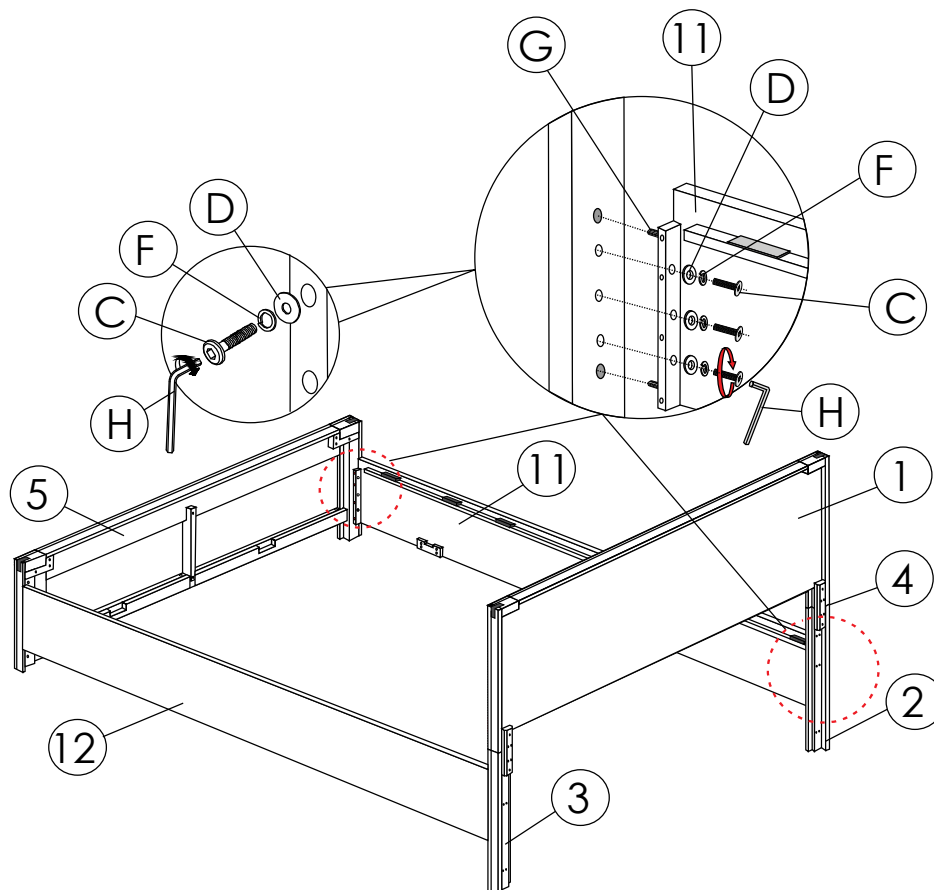


ASSEMBLY INSTRUCTION FOR


FULL BED

WN100FHF/WN100FR/WN100FS

STEP 3 :

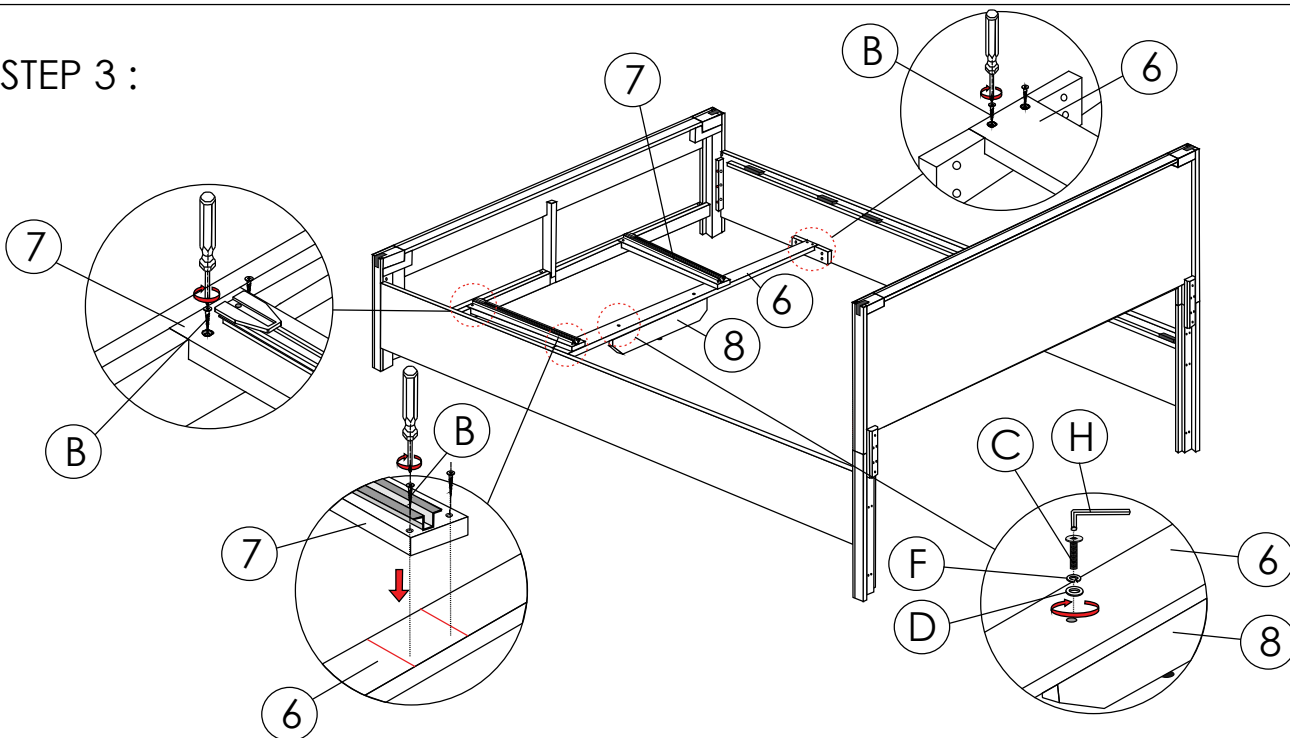


STEP 4 :

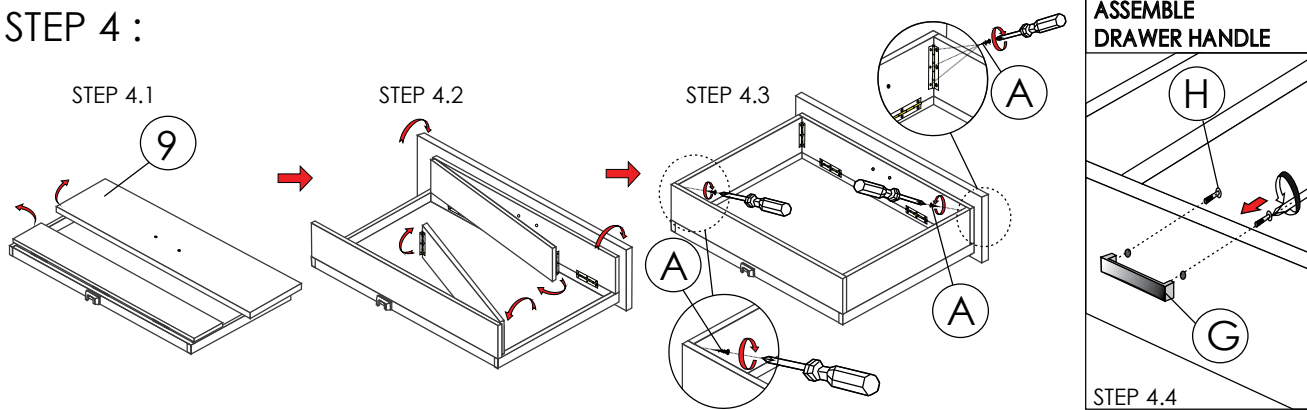

STEP 5 :


TO ALIGN THE DRAWER FRONT
PLEASE ADJUST THE
SUPPORT LEG LEVELER.

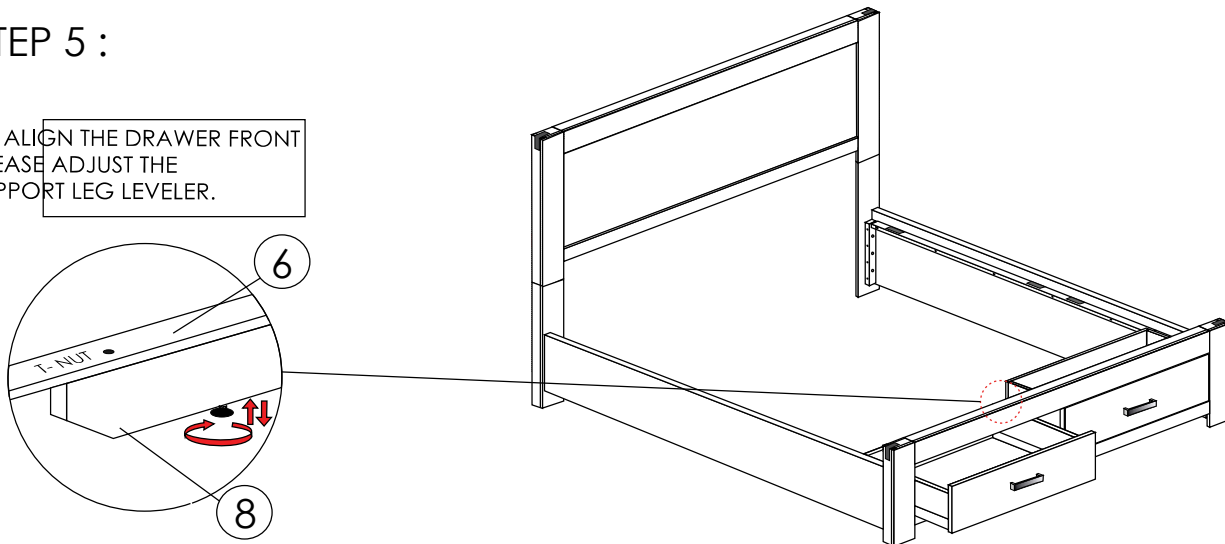


ASSEMBLY INSTRUCTION FOR

FULL BED


WN100FHF/WN100FR/WN100FS

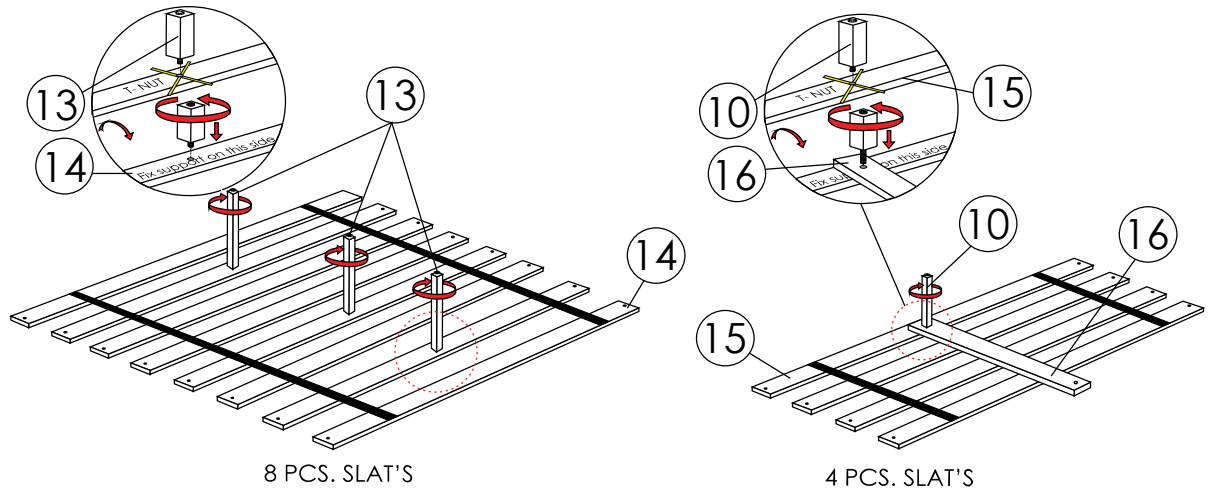

STEP 7 :

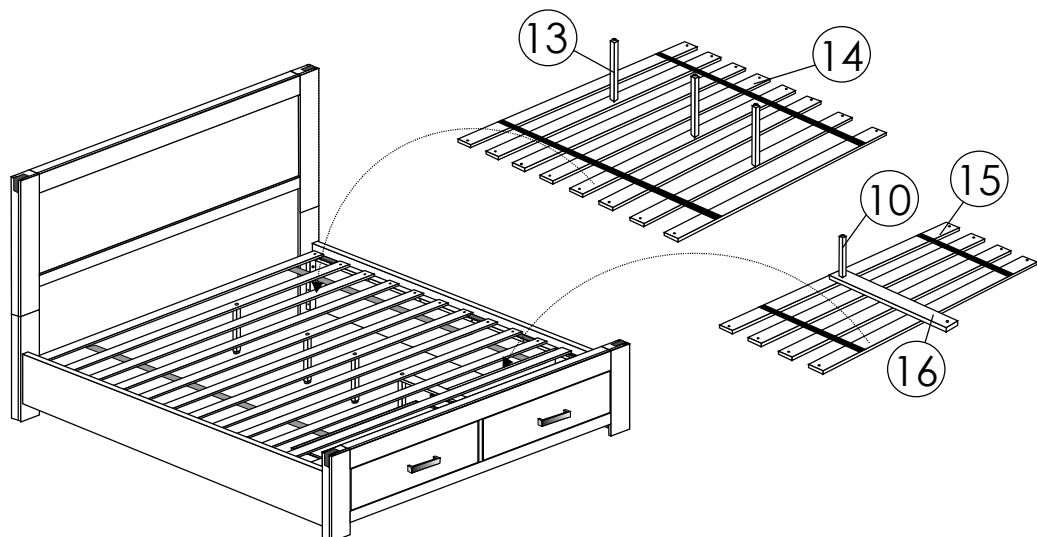

STEP 8 :

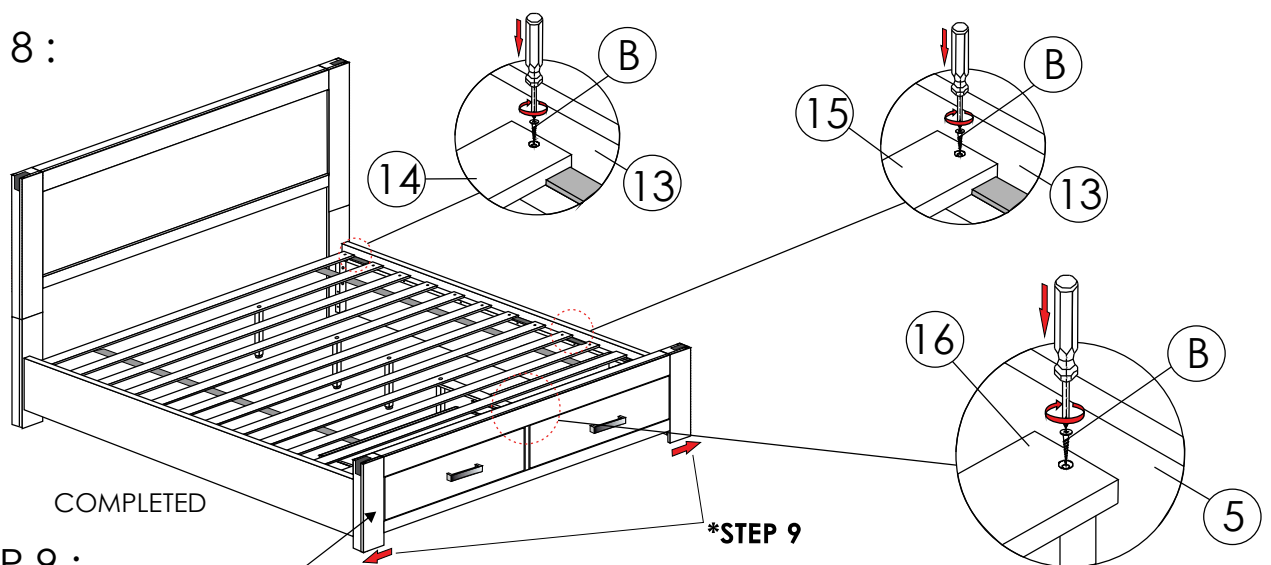

*STEP 9 :

Adjust the footboard frame (left or right)
to align the drawer front.