


ASSEMBLY INSTRUCTIONS

ITEM NO: I222-465F Floor Mirror

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

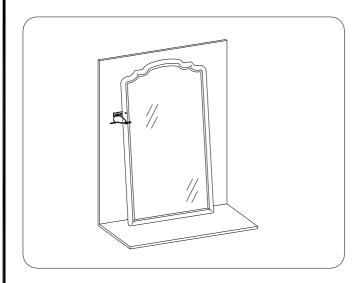

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER


HARDWARE LIST:				
No.	Description	Sketch	Quantity	
Α	Wood Screw M3.5 x 2"	Ommun-	6 PCS	
В	Zip Tie	\Box	2 PCS	

COMPONENTS LIST:				
No.	Description	Sketch	Quantity	
1	Mirror	\odot	1 PC	
2	Wall Cleat	B	1 PC	

WARNING

This mirror is not designed to hang on the wall and is too heavy to be used in this way. The mirror is designed to sit on the floor and must be secured by the "Furniture Tipping Restraint" safety device included in the hardware kit attached to the mirror. Follow directions for securing to the wall.

aspenhome aspenhome

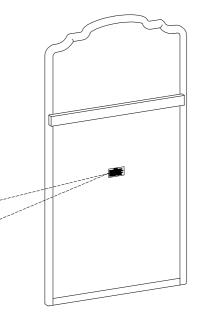

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY



ASSEMBLY INSTRUCTIONS

ITEM NO: I222-465F Floor Mirror

STEP 1: Attach the wall cleat with wood screws to wall at a height 45". Lace the zip ties through the hole in cleats. Confirm that the zip ties are securely laced and locked.

