


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

### Assembly Instruction

# 25292

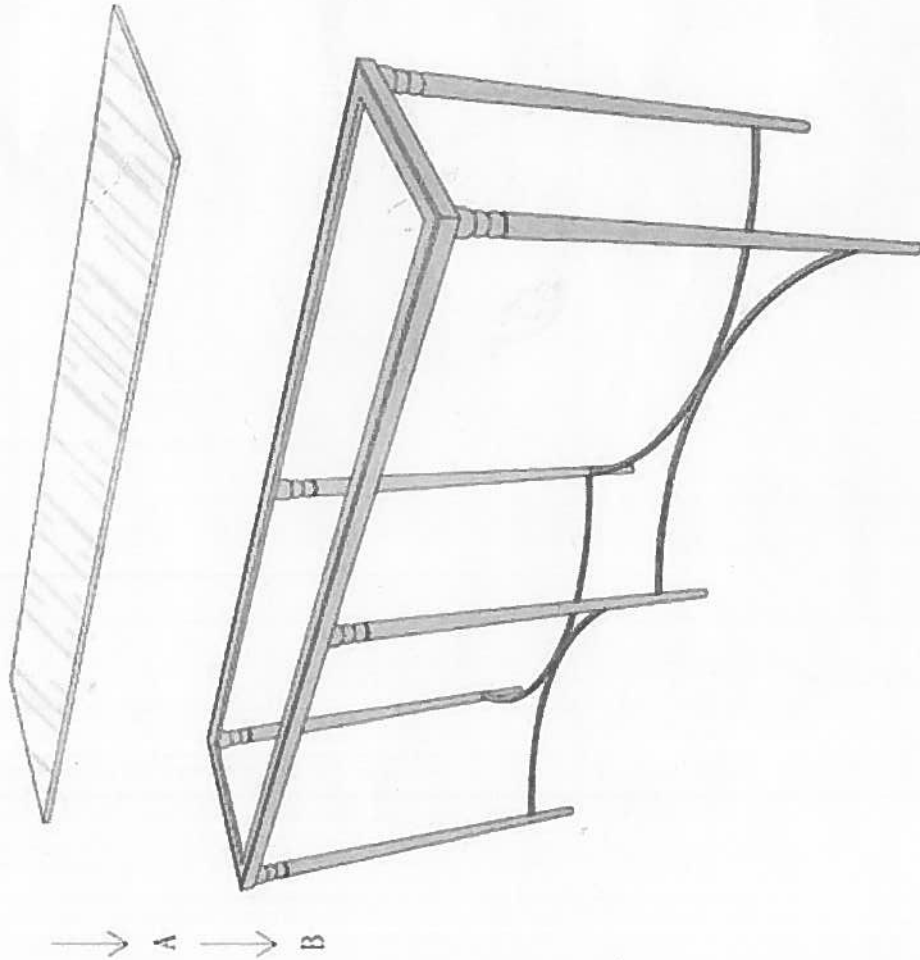

1. Take the base B carefully out of the carton, and place it on a flat surface, make sure that the base B will not be damaged.

2. Take the TOP ( A ) out of the wooden crate, and put in on the base(B) .

To clean, wipe with soft dry cloth .