ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#LV01920 SOFA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing of damaged, please contact your local fumiture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS					
DESCRIPTION	DRAWING	PART NAME	Q'TY(PCS)		
#1		SEAT	1		
#2		SEAT CUSHION	1		
#3		PILLOW	2		
#4		LEG	4		

HARDWARES REQUIRED


#A BOLT M6X20mm—16PCS
#B ALLEN KEY—1PC

Attention:


*** Mattreses not included.

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to odering replacements.


Please follow the drawings below to assemble the model. Step.1

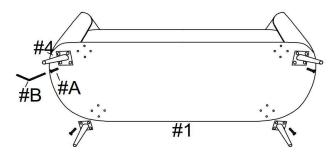

Step.2

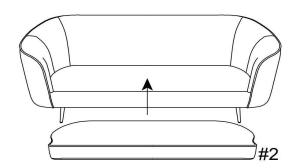

Step.3



ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#LV01921 LOVESEAT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing of damaged, please contact your local fumiture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS					
DESCRIPTION	DRAWING	PART NAME	Q'TY(PCS)		
#1		SEAT	1		
#2		SEAT CUSHION	1		
#3		PILLOW	2		
#4		LEG	4		

HARDWARES REQUIRED


#A BOLT M6X20mm—16PCS
#B ALLEN KEY—1PC

Attention:


*** Mattreses not included.

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to odering replacements.


Please follow the drawings below to assemble the model. Step.1

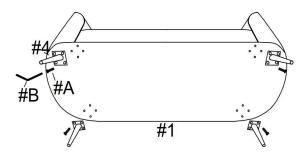

Step.2

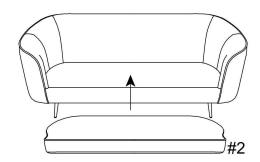

Step.3



ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#LV01922 CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing of damaged, please contact your local fumiture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS					
DESCRIPTION	DRAWING	PART NAME	Q'TY(PCS)		
#1		SEAT	1		
#2		SEAT CUSHION	1		
#3		PILLOW	1		
#4		LEG	4		

HARDWARES REQUIRED

ALLEN KEY----1PC

#A BOLT M6X20mm——16PCS


Attention:

#B


*** Mattreses not included.

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to odering replacements.

Please follow the drawings below to assemble the model. Step.1

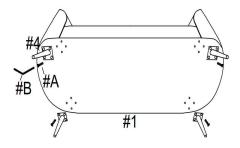

Step.2

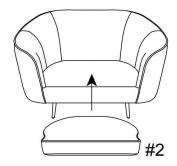

Step.3

