




ASSEMBLY INSTRUCTIONS

CVFNRD112


List of Hardware

No	Description	Picture	Qty
A	Allen Bolt 8*25mm		08
B	CSK Bolt with leg 8*25mm		04
C	Washer 8mm		08
D	Spring Washer 8mm		08
E	Allen Key 5mm		01


List of Parts

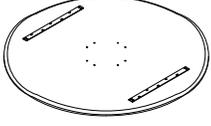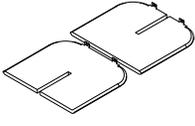No	Description	Picture	Qty
F	Top		01
G	Legs		02
H	IRON METAL STRIP		04


Steps 1
(Please Put The Product On The Soft Surface)

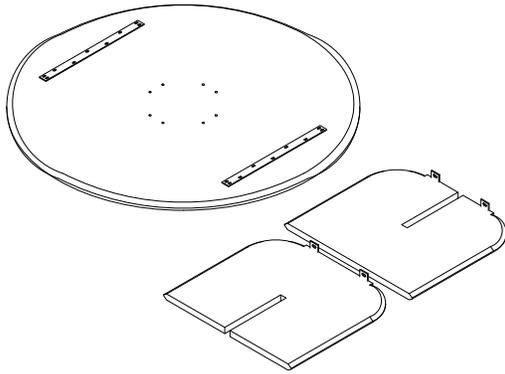


Steps 2. Please Loose the csk bolt and rotate the metal strip(H) & make it align to match the hole to use allen bolts.

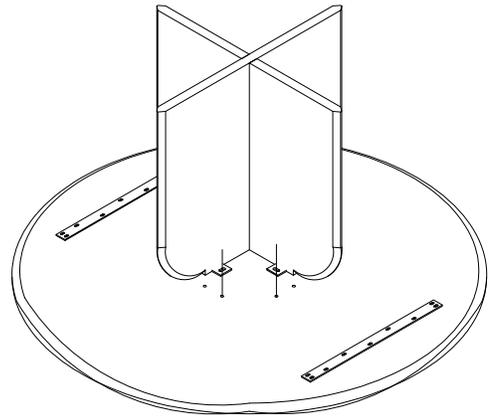

Steps 3.
Join both legs and join the leg hole to the top hole

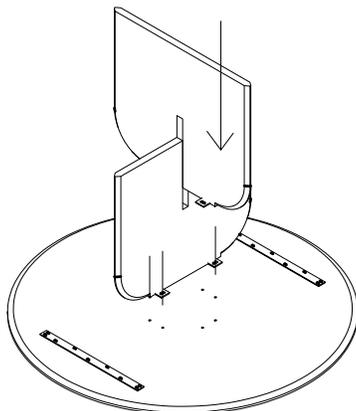

Steps 4.
(Use the adjust leveller.)

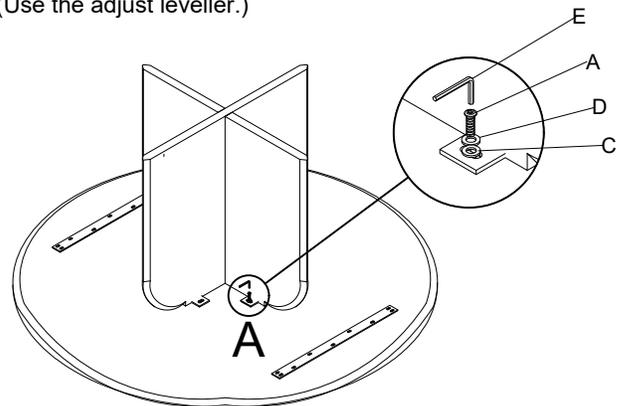

MADE IN INDIA