



ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

223391KE (B1-B3)
Eastern King Bed

REVISION 0 : 05/30/2022
REVISION 1 : 09/21/2023

ITEM: 223391KE(B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.


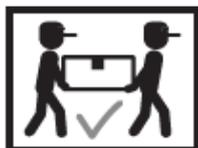


ASSEMBLY TIME


30 MINUTES

PARTS IDENTIFICATION





B1 (BOX 1)

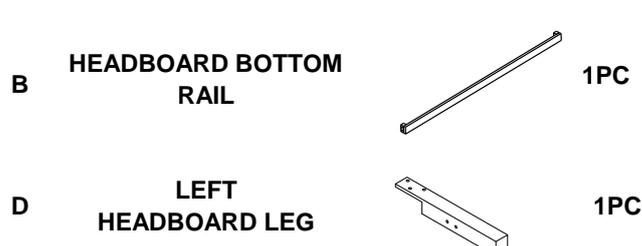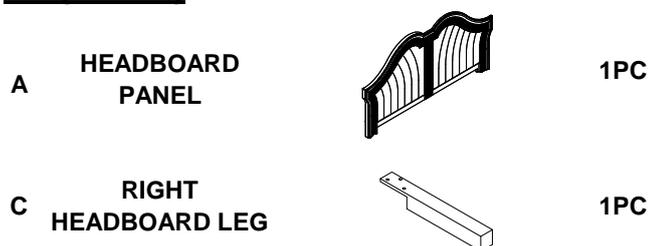

B2 (BOX 2)

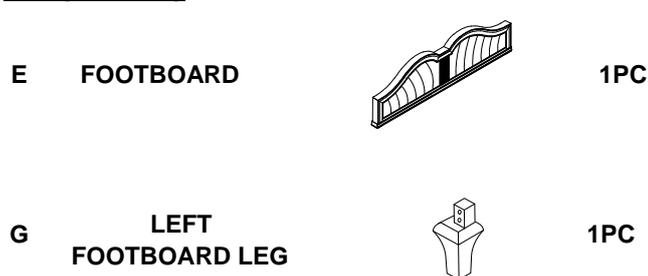

B3 (BOX 3)

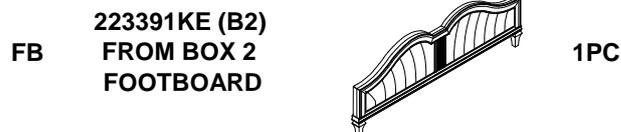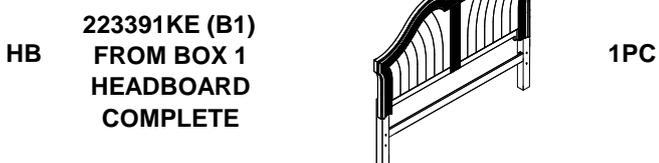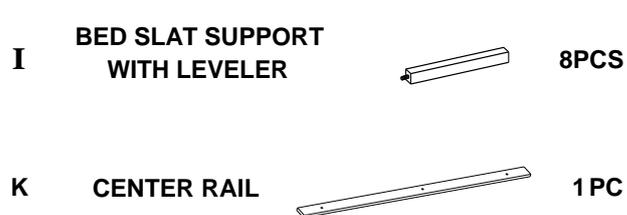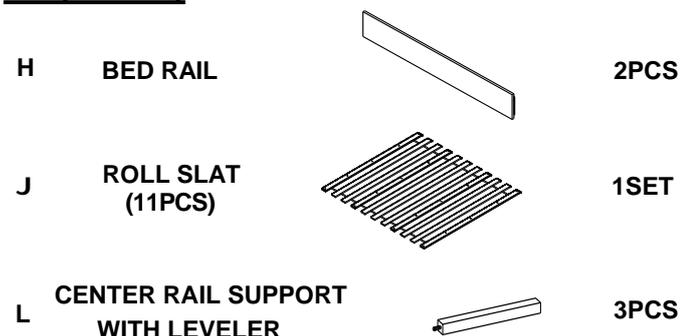

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 223391KE(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223391KE (B1)

1	BOLT (\varnothing 5/16" x 45MM - RBW)		10PCS	2	LOCK WASHER (\varnothing 5/16" - RBW)		10PCS
3	FLAT WASHER (\varnothing 5/16" - RBW)		10PCS	4	ALLEN WRENCH (4MM - RBW)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 223391KE (B2)

5	BOLT (\varnothing 5/16" x 55MM - RBW)		4PCS	6	LOCK WASHER (\varnothing 5/16" - RBW)		4PCS
7	FLAT WASHER (\varnothing 5/16" - RBW)		4PCS	8	ALLEN WRENCH (4MM - RBW)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223391KE (B3)

9	THREADED BOLT (\varnothing 5/16" x 90MM - RBW)		8PCS	10	HALF ROUND NUT (\varnothing 5/16" - RBW)		8PCS
11	HEX NUT (\varnothing 5/16" x 14MM - RBW)		8PCS	12	WRENCH (14MM - RBW)		1PC
13	FLAT HEAD SCREW (\varnothing 4 x 30MM - RBW)		12PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **223391KE(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 1

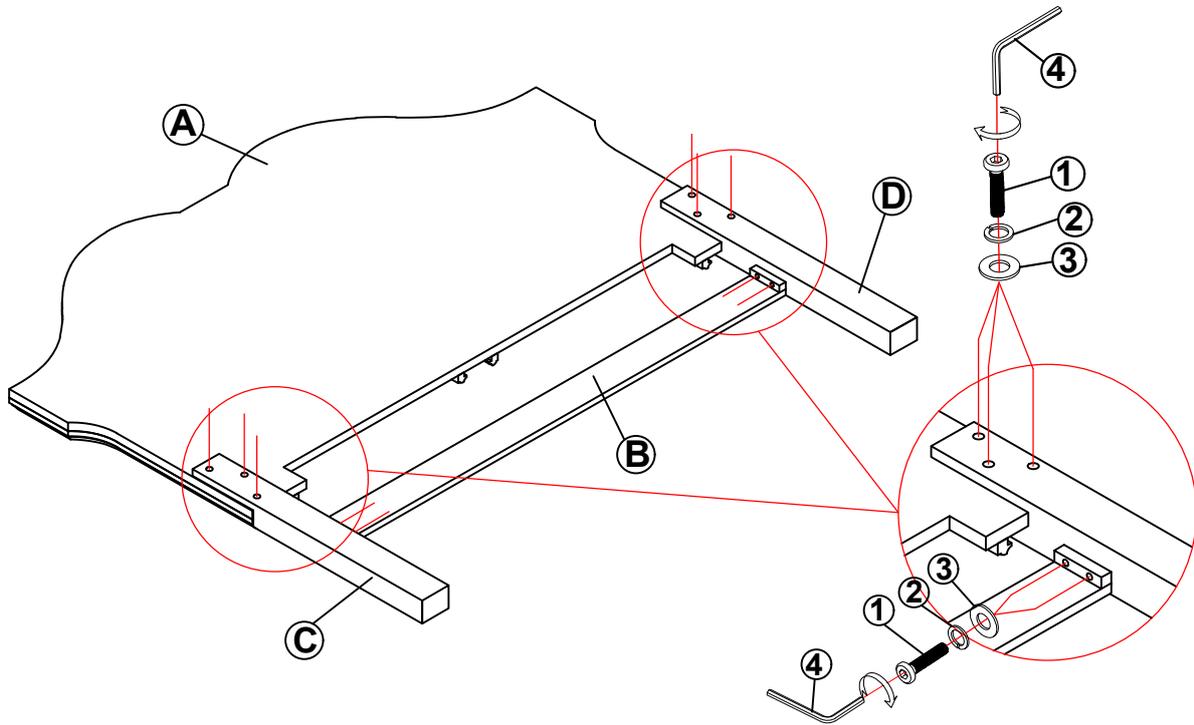


STEP 2

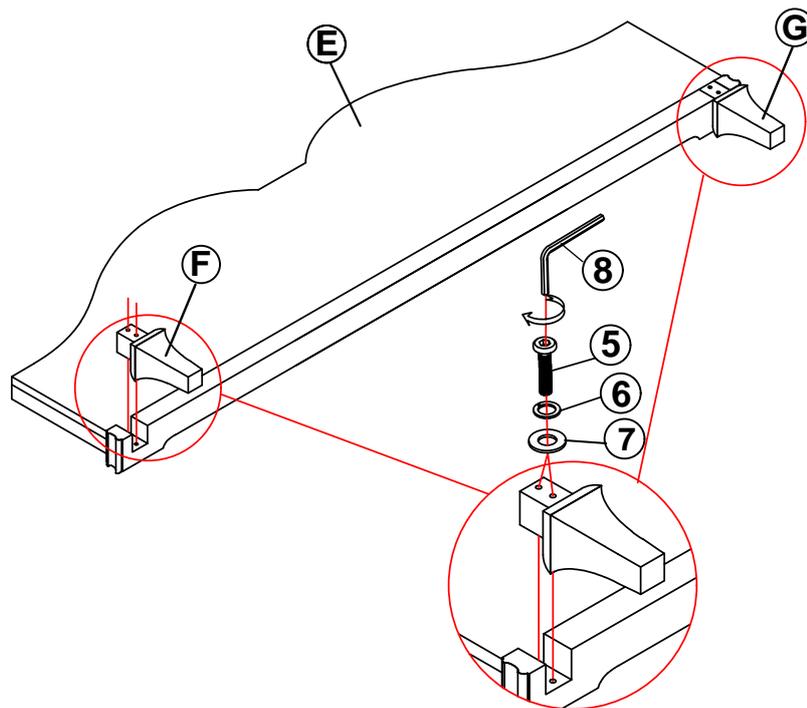


ITEM: 223391KE(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 3

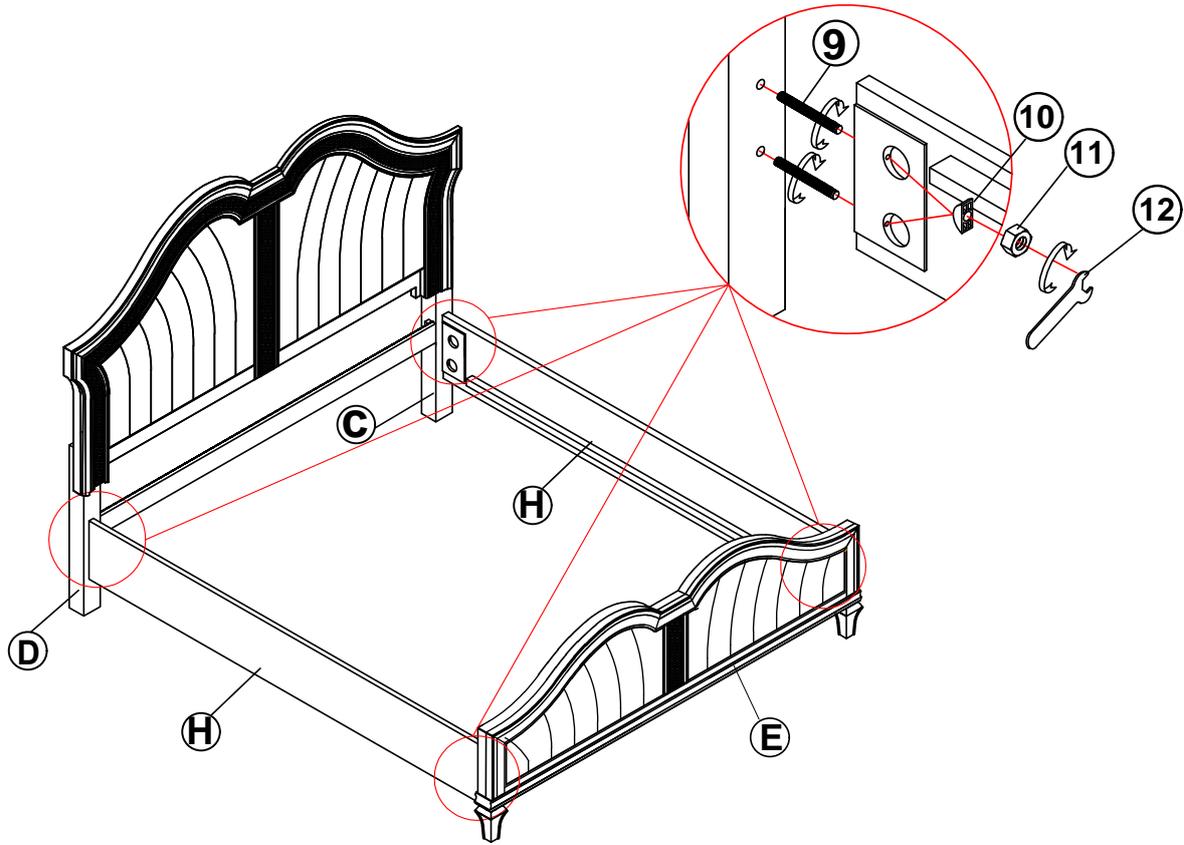


STEP 4

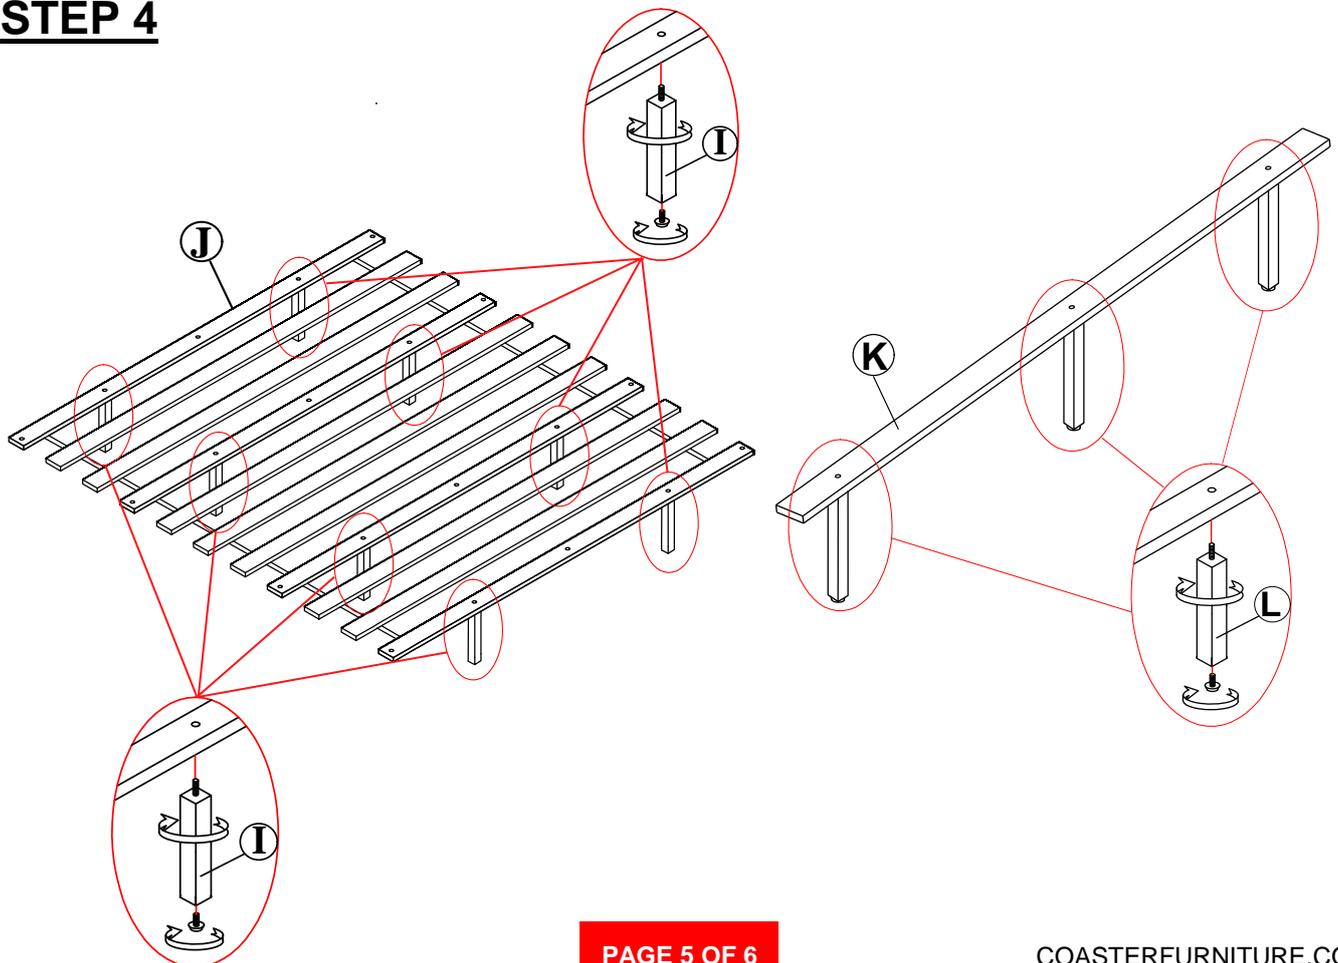


ITEM: **223391KE(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 5

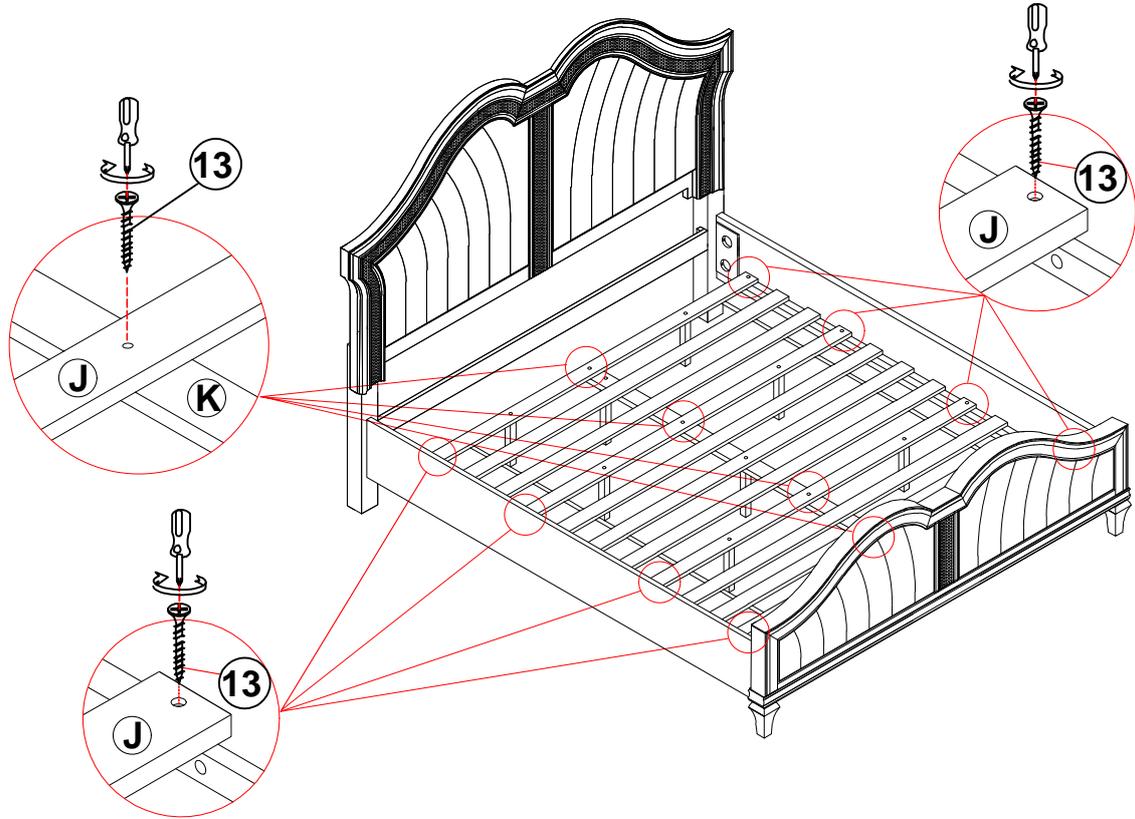


STEP 6
COMPLETE

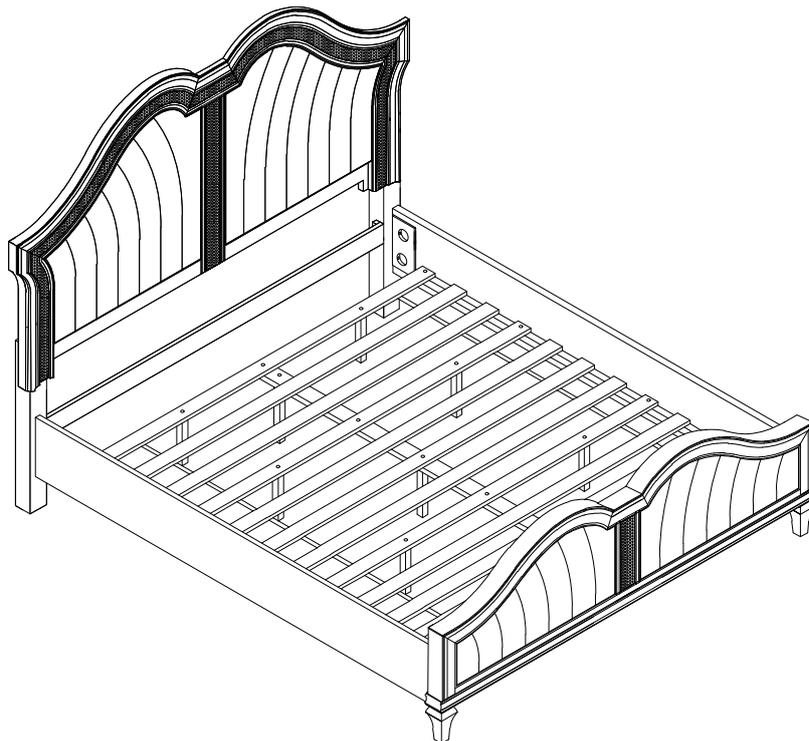

ITEM: **223391KE(B1-B3)**



Inner Size : 81.50"W X 77.00"D

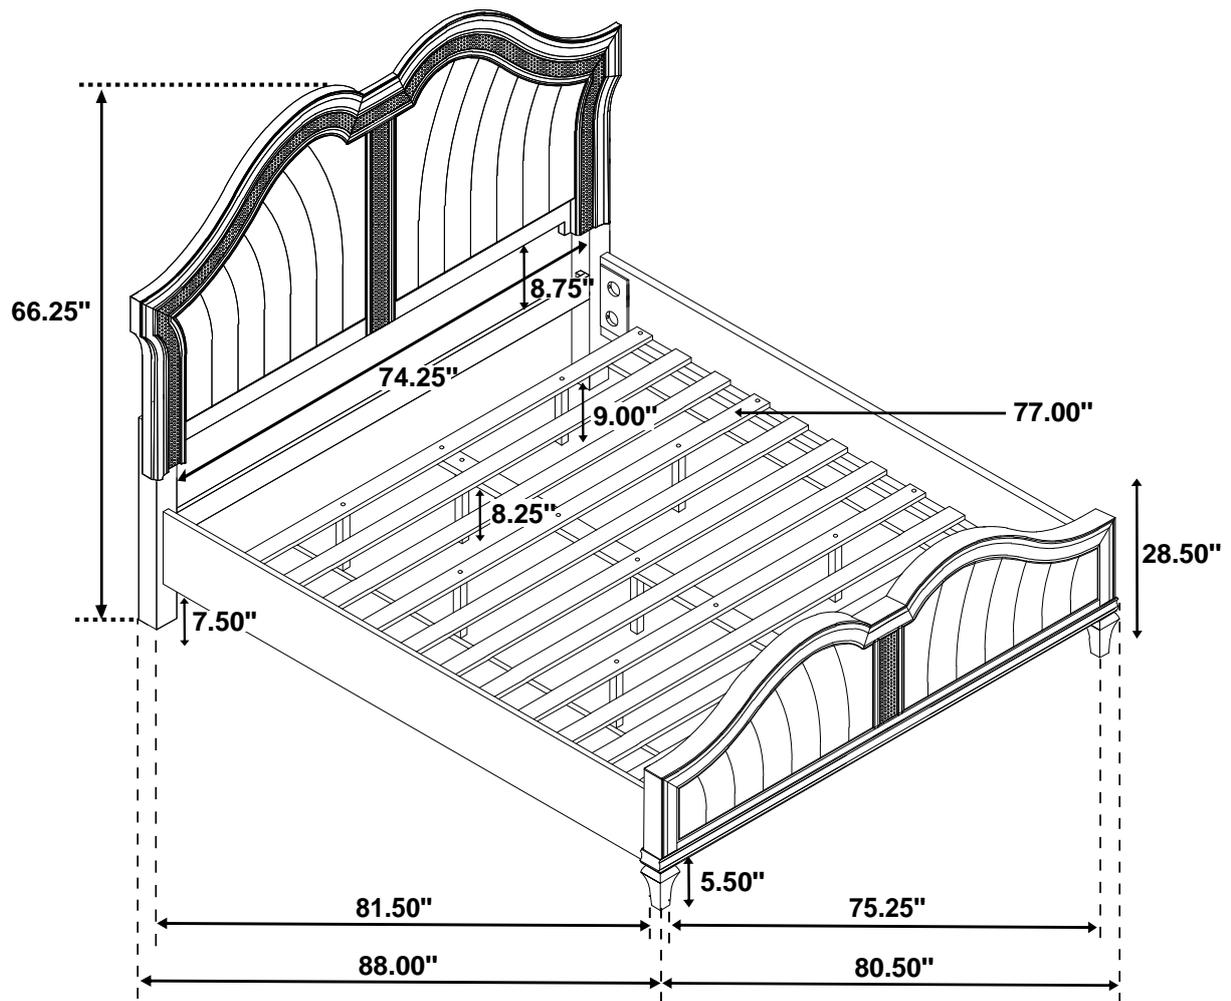

Note: Dimension tolerance $\pm 5\%$