

ASSEMBLY INSTRUCTIONS

**MODEL : 0035A
DRESSER & MIRROR**

STEP 1 : Cut of the Raffia String from the back of DRESSER (B).

STEP 2 : Turn the MIRROR SUPPORT RAIL (C) upward at the back of DRESSER (B), then Tighten with CSK SCREW (D). Place the MIRROR FRAME (A) on the top of DRESSER (B). Tighten with Flat Head Chipboard Screw (1).

(BOX 1)

BOX OF MIRROR

| NO | ITEM | QTY |
|----|--------|------|
| A | MIRROR | 1 PC |

(BOX 2)



BOX OF DRESSER

| NO | ITEM | QTY |
|----|----------------|-------|
| B | DRESSER | 1 PC |
| C | MIRROR SUPPORT | 2 PCS |



(BOX 1)

BOX OF MIRROR

| NO | ITEM | QTY |
|----|---|--------|
| 1 | FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW | 10 PCS |

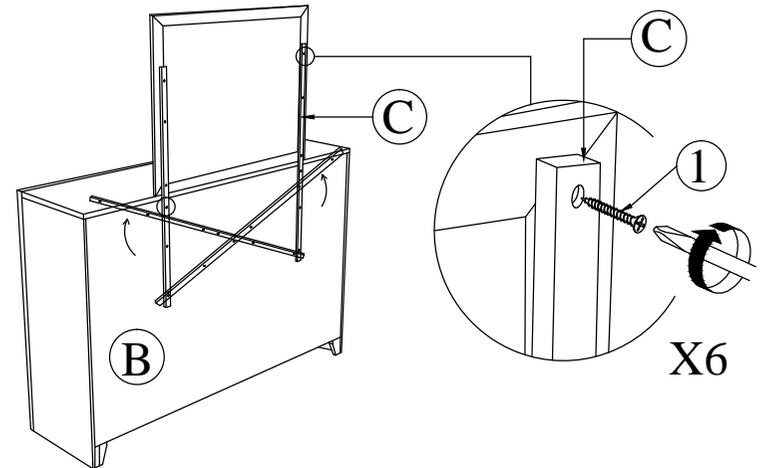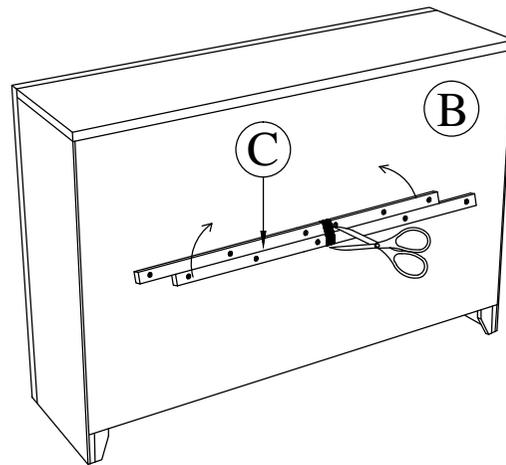

STEP 3 : Tighten the Flat Head Chipboard Screw (1) as shown.

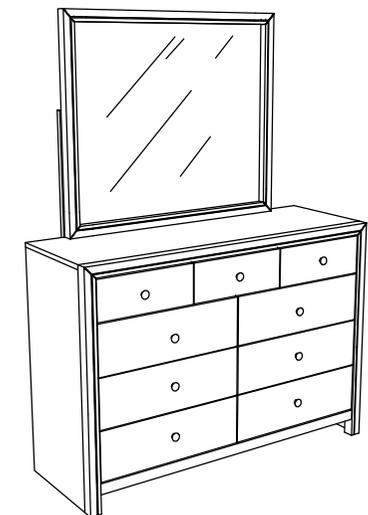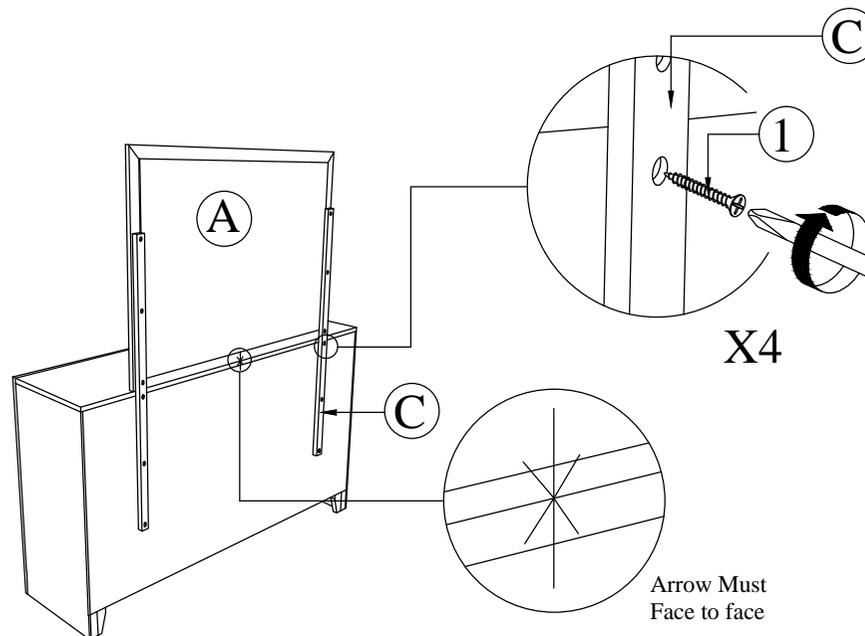

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.