



- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



**UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.**


All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER


I3002-412

Option 1

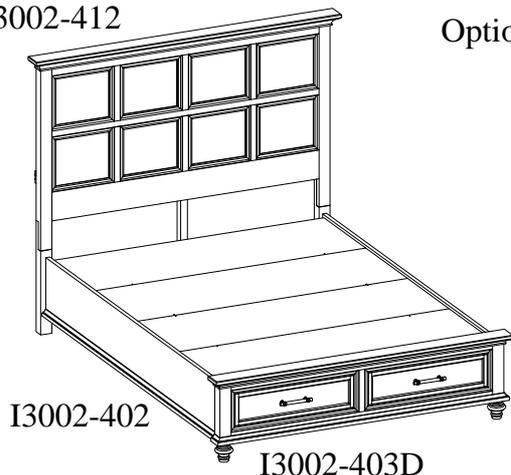


I3002-422

Option 2

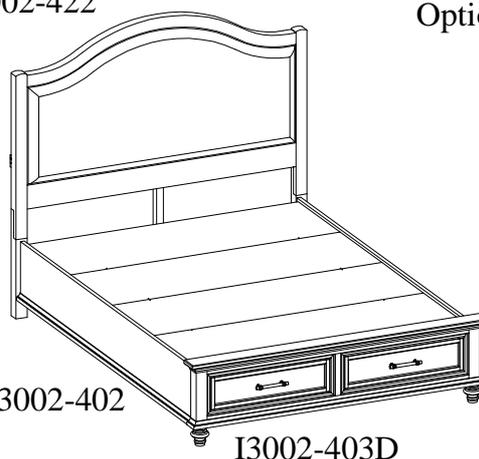


I3002-412

Option 3

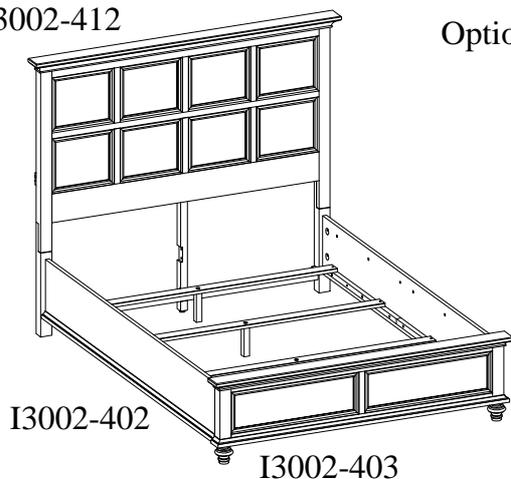

I3002-422

Option 4

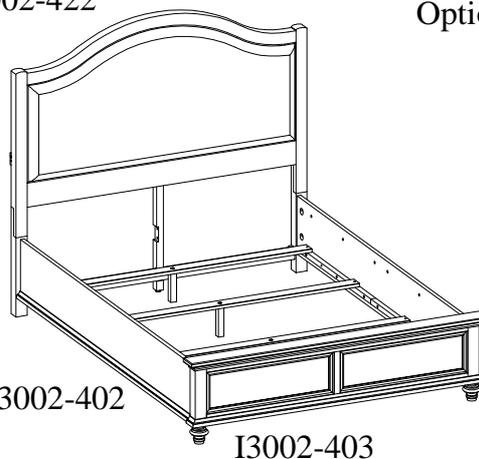

**BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.**  
Save these instructions for future reference.

FOR INDOOR USE ONLY



- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D      Queen Storage FB

HARDWARE LIST: I3002-412/422			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"		11 PCS
B	Lock Washer Ø5/16"		11 PCS
C	Flat Washer Ø5/16" x 3/4"		11 PCS
D	Allen Wrench 4mm		1 PC

HARDWARE LIST: I3002-402			
No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 12mm		1 PC
I	Wood Screw #8 x 1-1/4"		8 PCS

HARDWARE LIST: I3002-403D			
No.	Description	Sketch	Quantity
J	Bolt Ø1/4" x 1-1/4"		8 PCS
K	Lock Washer Ø1/4"		8 PCS
L	Flat Washer Ø1/4" x 3/4"		8 PCS
M	Allen Wrench 4mm		1 PC
N	Wood Screw #8 x 3/4"		8 PCS

COMPONENTS LIST: I3002-412			
No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I3002-422			
No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I3002-402			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I3002-403			
No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Bun Foot		2 PCS
3	Support Leg (for slat)		4 PCS

COMPONENTS LIST: I3002-403D			
No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Bun Foot		2 PCS
3	Support Leg (for footboard)		3 PCS
4	Support Leg (for center rail)		2 PCS
5	Decking		4 PCS
6	Center Rail		1 PC


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.  
Save these instructions for future reference.

FOR INDOOR USE ONLY




- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB


**STEP 1:** Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts (A), lock washers (B) and flat washers (C). Do not completely tighten bolts.

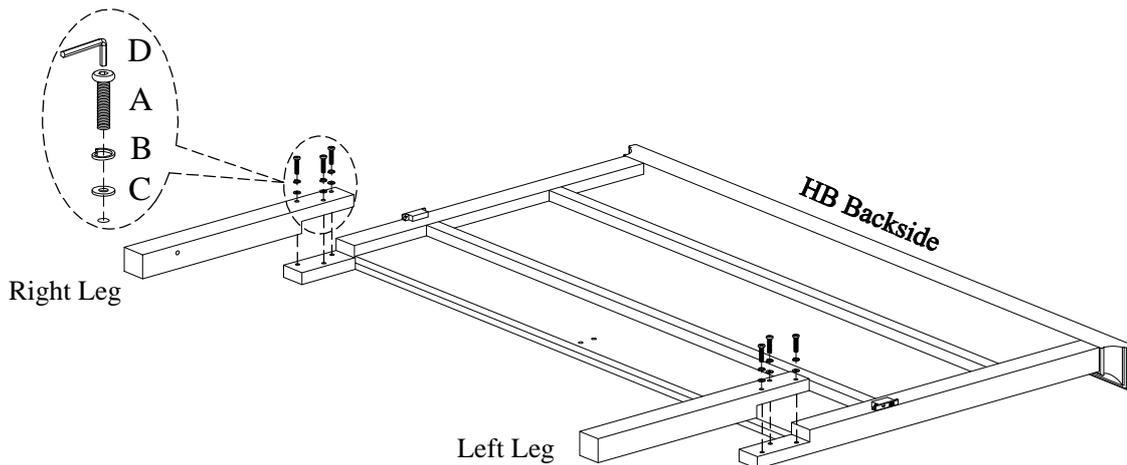

**STEP 2:** Attach the wood stretcher to the legs by using 2 bolts (A), lock washers (B) and flat washers (C).

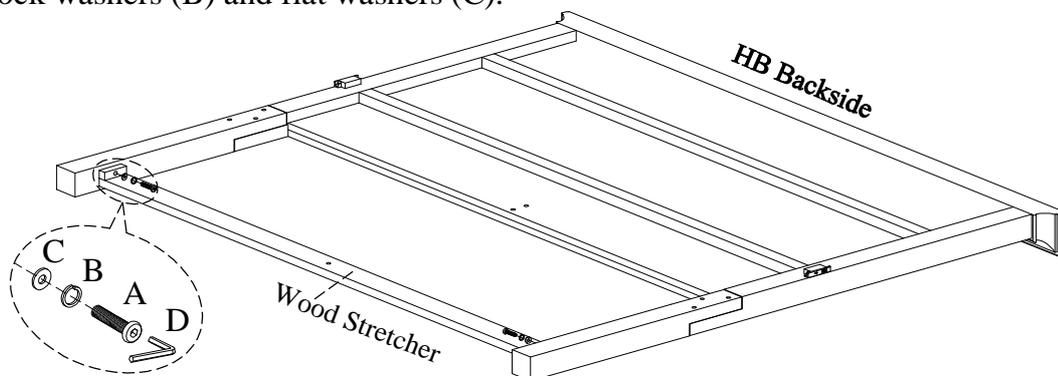

**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 3 bolts (A), lock washers (B) and flat washers (C). Completely tighten all bolts.

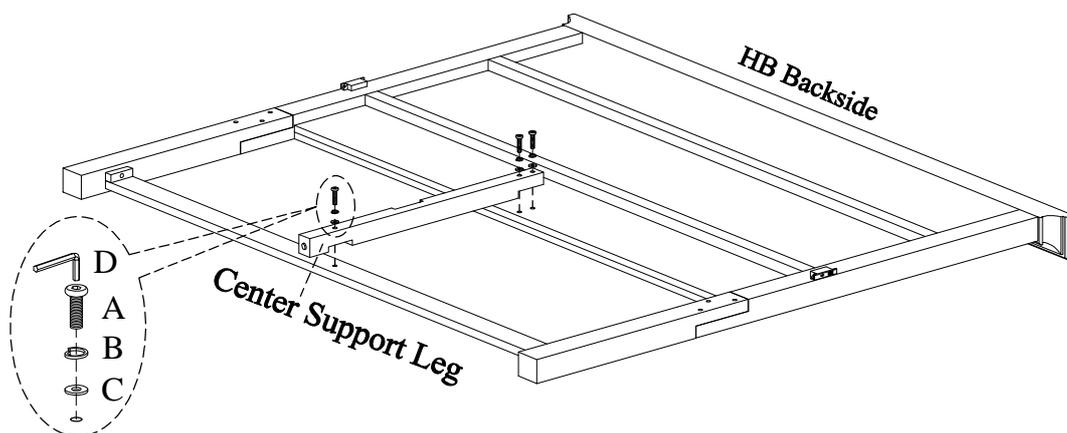





- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB

### For Option 1 & 2:


**STEP 4:** Put the footboard upside down on a soft surface. Attach the bun feet and support legs (for footboard) to footboard as shown.

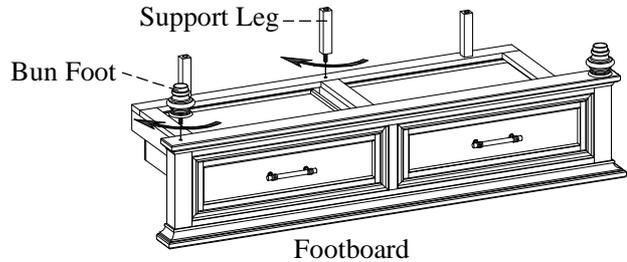

**STEP 5:** Screw the bolts (E) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (F) and nuts (G). Then use a hex wrench (H) to tighten all the nuts.

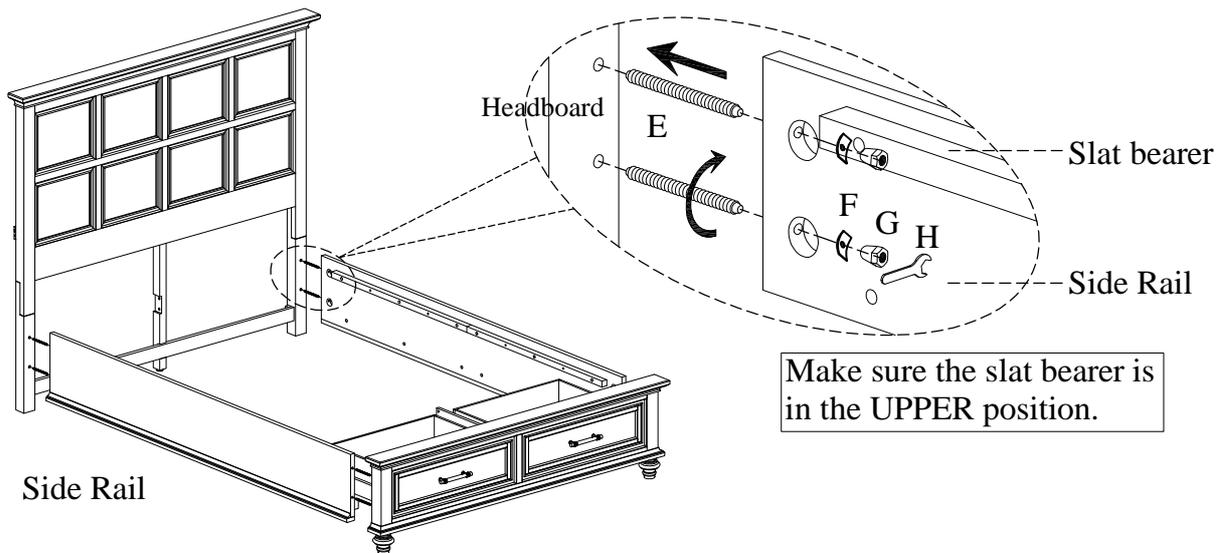


**STEP 6:** Attach the center rail to the footboard and center support leg of headboard using 4 bolts (J), lock washers (K) and flat washers (L).

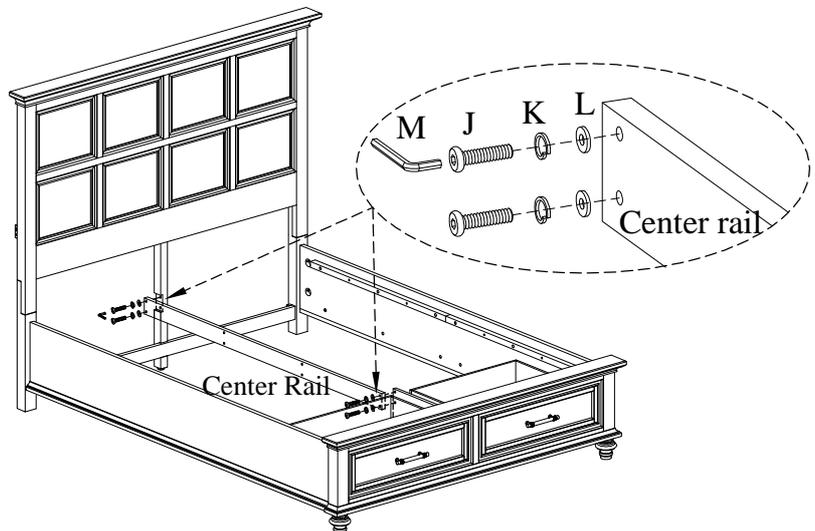




- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB


**STEP 7:** Attach 2 support legs (for center rail) to the center rail using 4 bolts (J), lock washers (K) and flat washers (L). Use the Allen Wrench (M) to tighten all of the bolts.

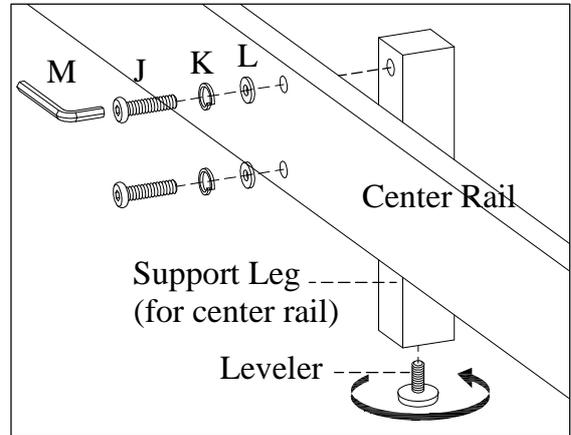

**STEP 8:** Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 9 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (I).

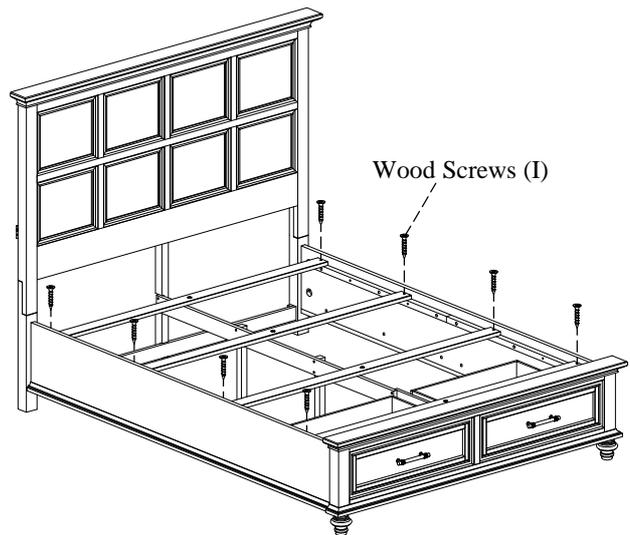

**STEP 9:** Put the decking over the slats, secure decking to the slats with wood screws (N) through the pre-drilled holes in the decking as shown below.

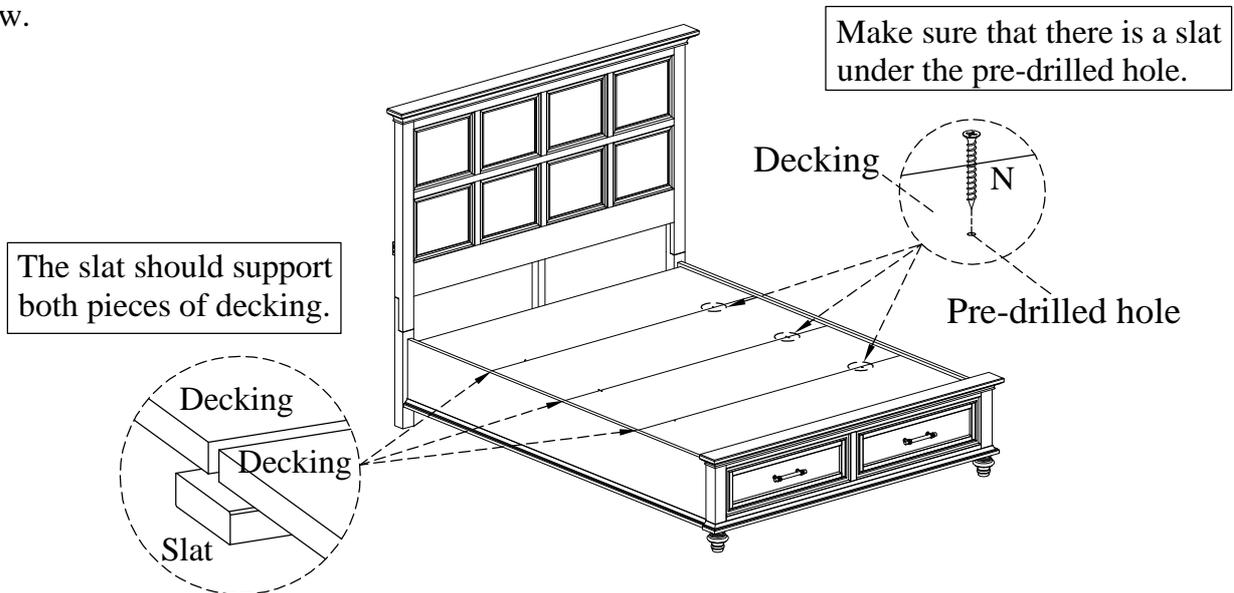





- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB

### FUNCTIONALITY INSTRUCTION

#### Option 1

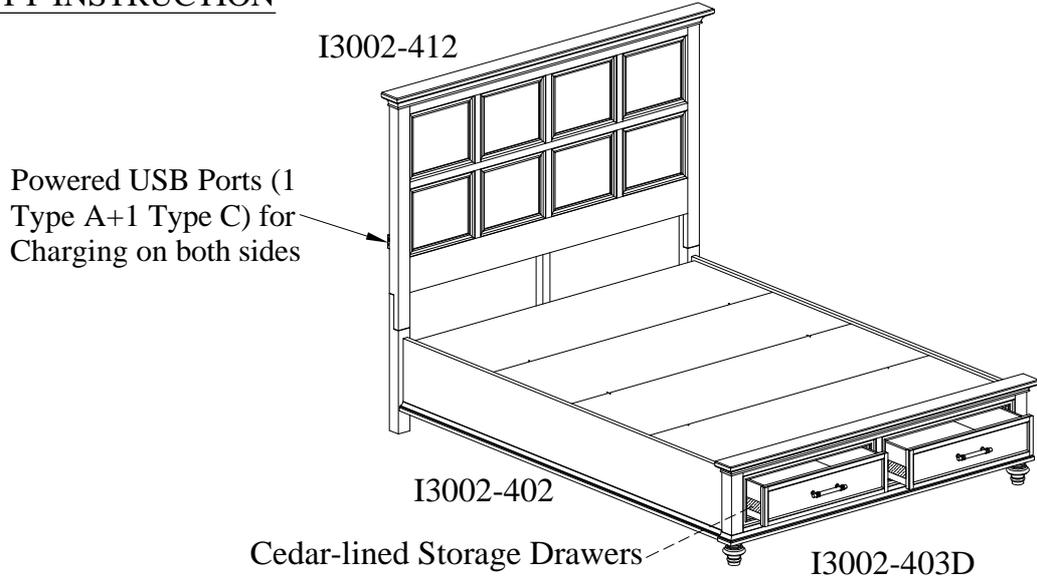


#### Option 2

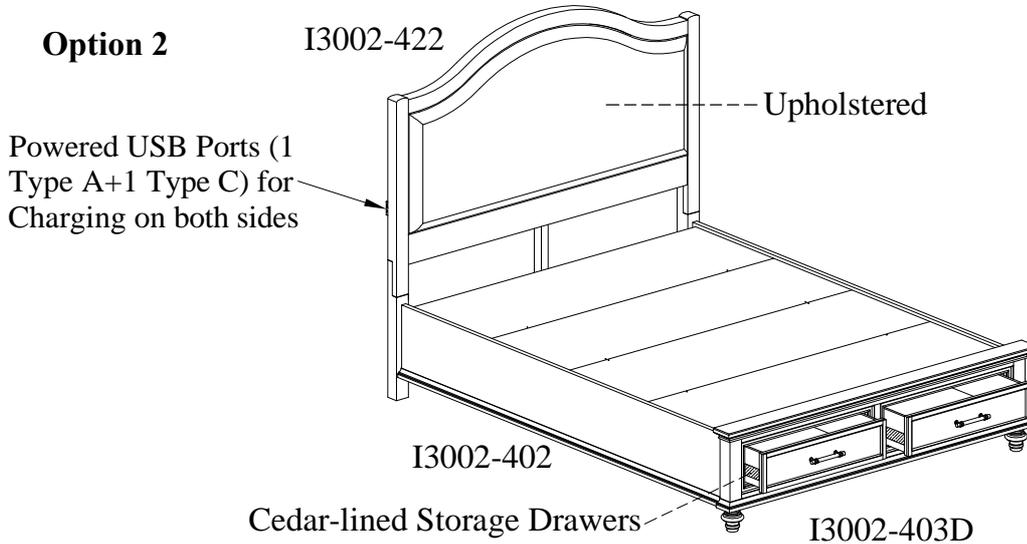

#### For Option 3 & 4:


**STEP 4:** Put the footboard upside down on a soft surface. Attach the bun feet to footboard as shown.

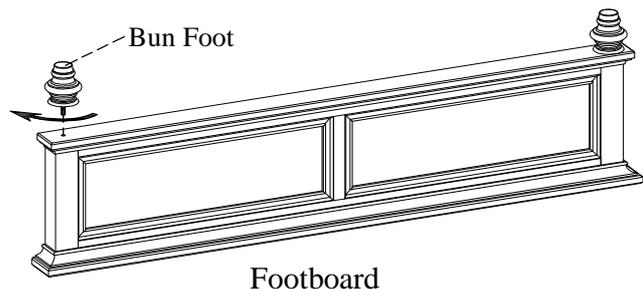




- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB


**STEP 5:** The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position (a) with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

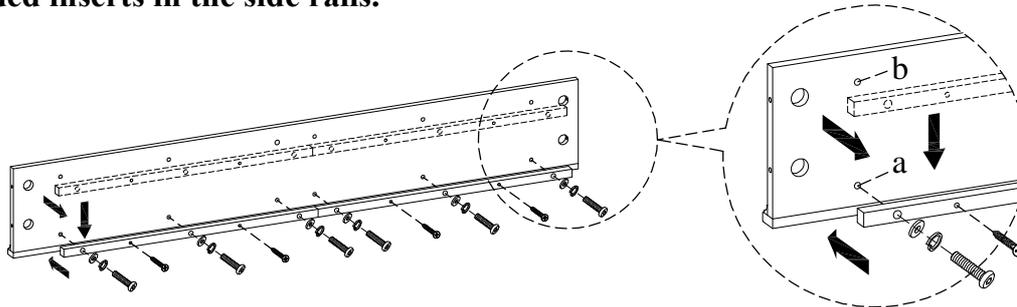

**STEP 6:** Screw the bolts (E) into HB & FB. Make sure the slat bearer is in the LOWER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (F) and nuts (G). Then use a hex wrench (H) to tighten all the nuts.

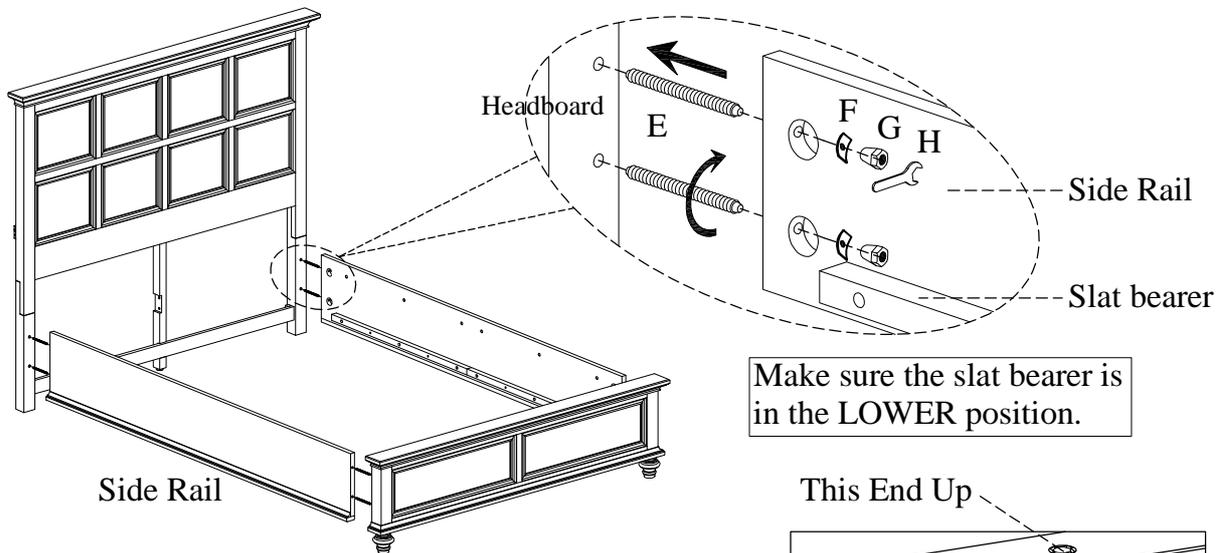


**STEP 7:** Attach the support legs (for slat) to the slats as shown.

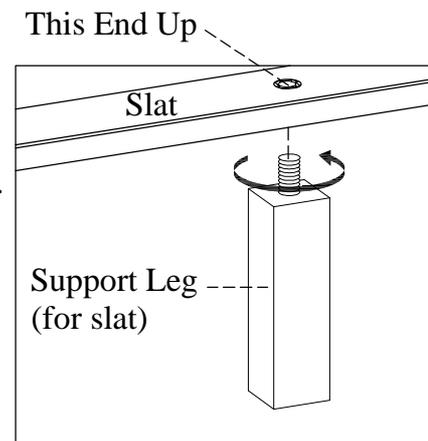



- ITEM NO: I3002-412      Queen Panel HB
- I3002-422      Queen Upholstered HB
- I3002-402      Queen Rails
- I3002-403      Queen Low Profile FB
- I3002-403D     Queen Storage FB


**STEP 8:** Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (I).

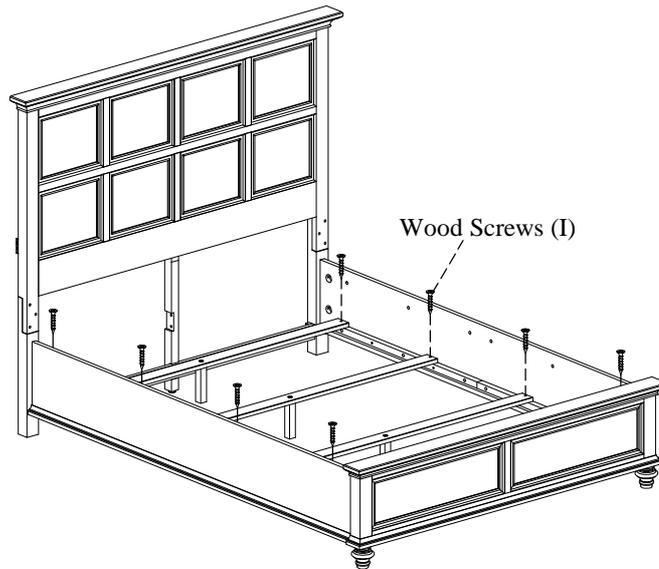

### FUNCTIONALITY INSTRUCTION

#### Option 3

I3002-412

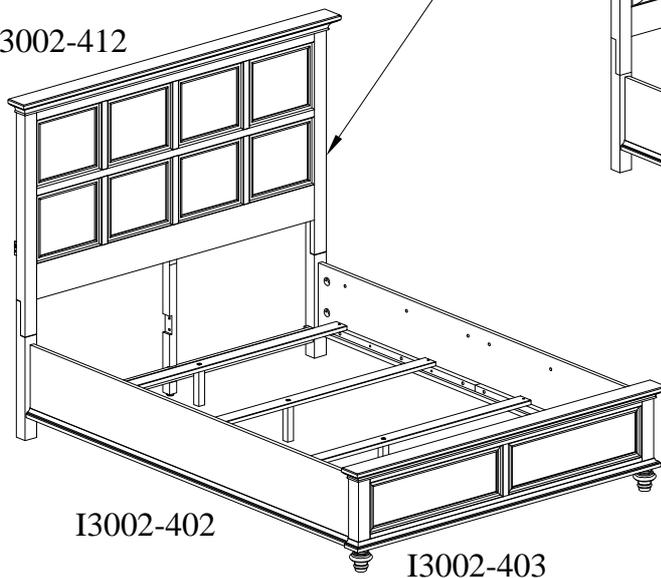


#### Option 4

I3002-422

Powered USB Ports (1 Type A+1 Type C) for Charging on both sides

Upholstered

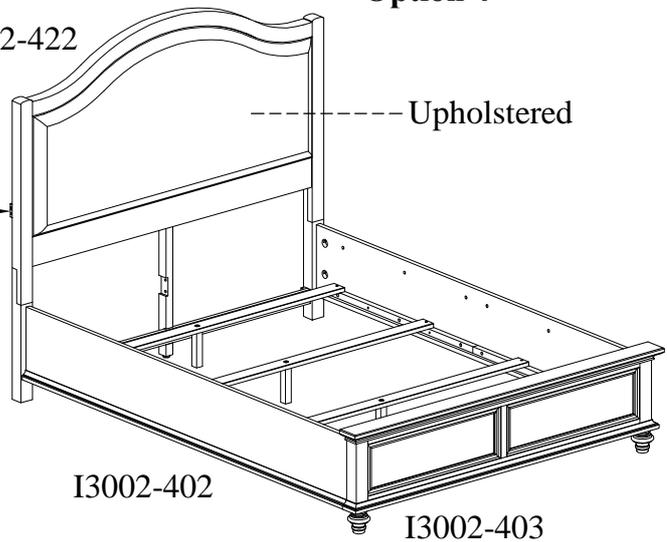

I3002-402

I3002-403



- ITEM NO: I3002-415      King Panel HB
- I3002-425      King Upholstered HB
- I3002-406      King Rails
- I3002-410      Cal King Rails
- I3002-407      King Low Profile FB
- I3002-407D     King Storage FB





Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



**UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.**

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

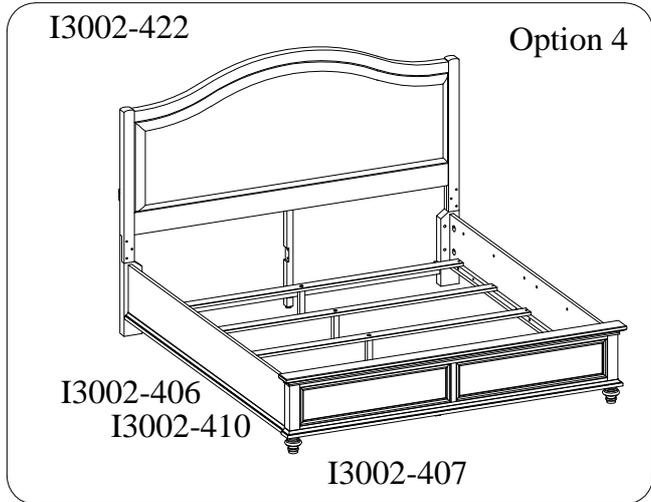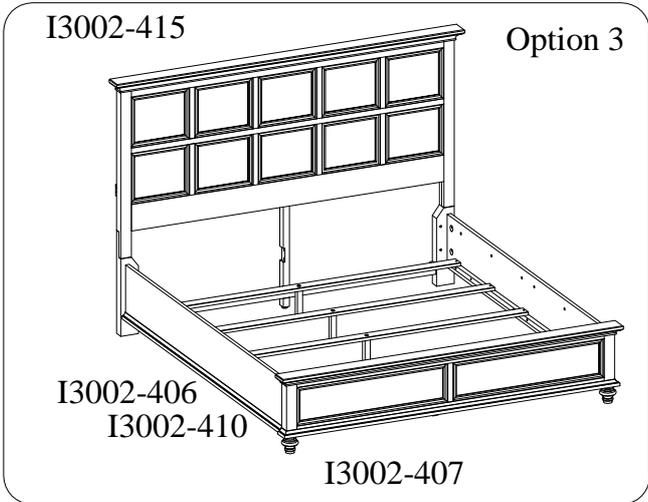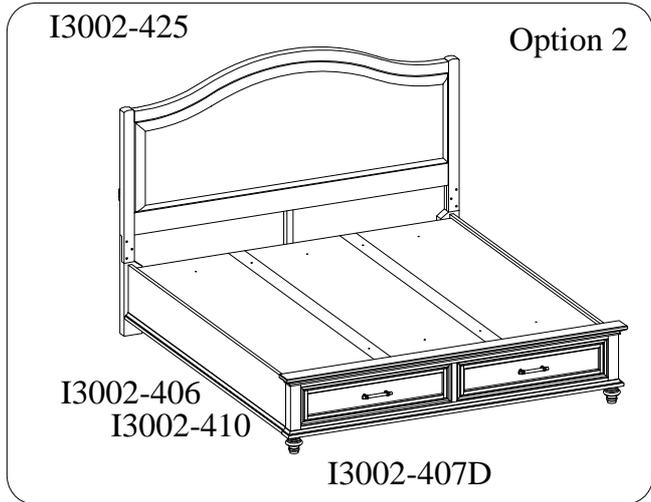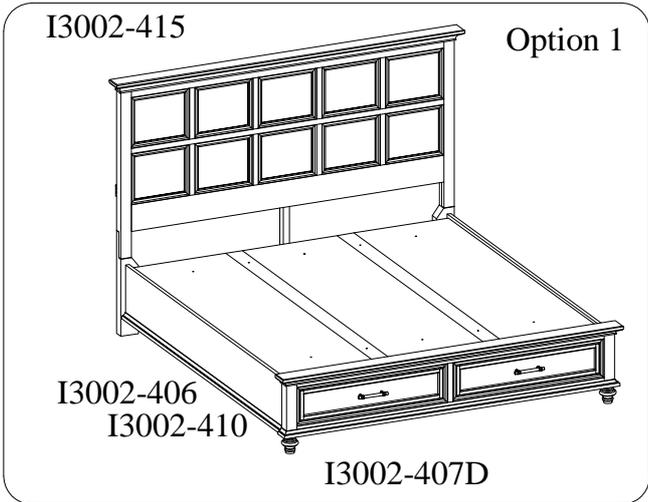

**BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.**  
Save these instructions for future reference.

FOR INDOOR USE ONLY



- ITEM NO: I3002-415 King Panel HB  
 I3002-425 King Upholstered HB  
 I3002-406 King Rails  
 I3002-410 Cal King Rails  
 I3002-407 King Low Profile FB  
 I3002-407D King Storage FB

HARDWARE LIST: I3002-415/425			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"		11 PCS
B	Lock Washer Ø5/16"		11 PCS
C	Flat Washer Ø5/16" x 3/4"		11 PCS
D	Allen Wrench 4mm		1 PC

HARDWARE LIST: I3002-406/410			
No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 12mm		1 PC
I	Wood Screw #8 x 1-1/4"		10 PCS
J	Wood Cap (only for 410)		8 PCS

HARDWARE LIST: I3002-407D			
No.	Description	Sketch	Quantity
K	Bolt Ø1/4" x 1-1/4"		8 PCS
L	Lock Washer Ø1/4"		8 PCS
M	Flat Washer Ø1/4" x 3/4"		8 PCS
N	Allen Wrench 4mm		1 PC
O	Wood Screw #8 x 3/4"		10 PCS

COMPONENTS LIST: I3002-415			
No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I3002-425			
No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I3002-406			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I3002-410			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center Rail (Long)		1 PC

COMPONENTS LIST: I3002-407			
No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Bun Foot		2 PCS
3	Support Leg (for slat)		4 PCS

COMPONENTS LIST: I3002-407D			
No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Bun Foot		2 PCS
3	Support Leg (for footboard)		3 PCS
4	Support Leg (for center rail)		2 PCS
5	Decking		3 PCS
6	Filler		2 PCS
7	Center Rail (Short)		1 PC


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.  
 Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I3002-415	King Panel HB
I3002-425	King Upholstered HB
I3002-406	King Rails
I3002-410	Cal King Rails
I3002-407	King Low Profile FB
I3002-407D	King Storage FB


**STEP 1:** Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts (A), lock washers (B) and flat washers (C). Do not completely tighten bolts.

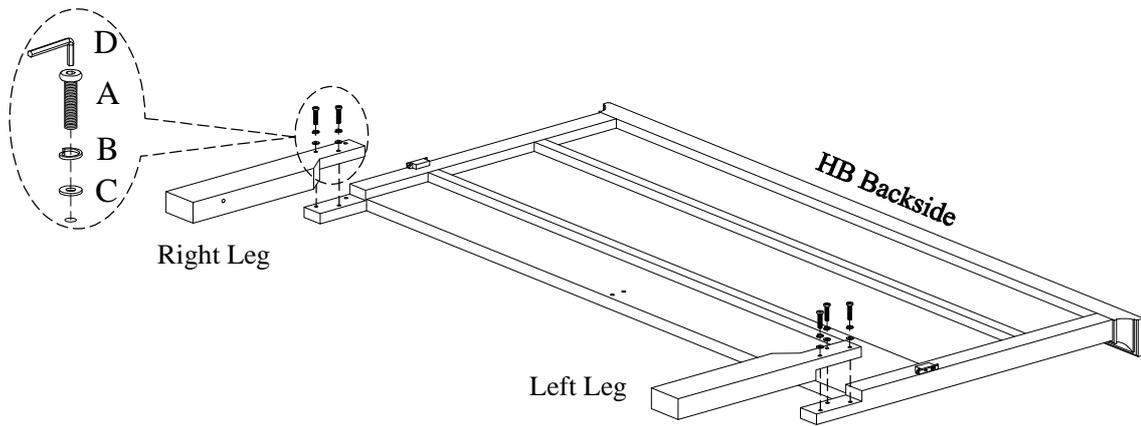

**STEP 2:** Attach the wood stretcher to the legs by using 2 bolts (A), lock washers (B) and flat washers (C).

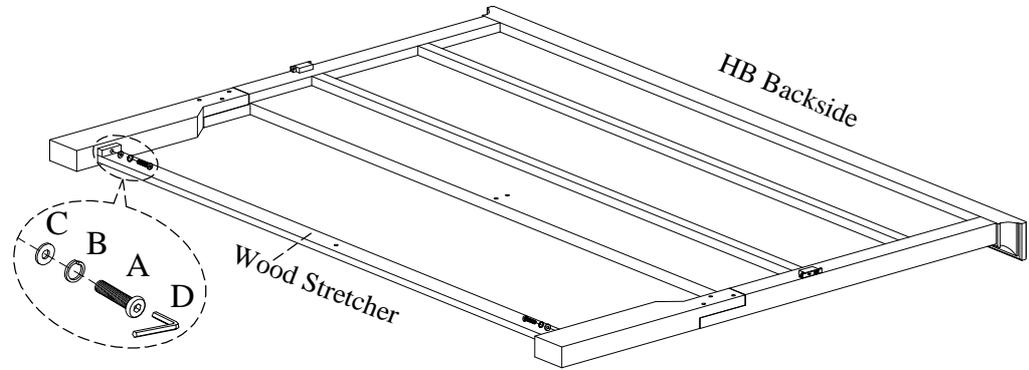

**STEP 3:** Attach the center support leg to headboard and wood stretcher by using 3 bolts (A), lock washers (B) and flat washers (C). Completely tighten all bolts.

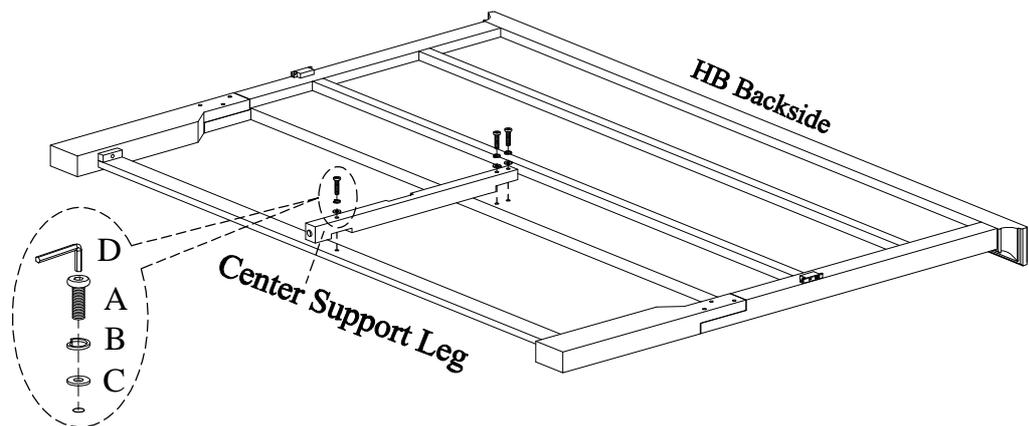




ITEM NO: I3002-415	King Panel HB
I3002-425	King Upholstered HB
I3002-406	King Rails
I3002-410	Cal King Rails
I3002-407	King Low Profile FB
I3002-407D	King Storage FB


### For Option 1 & 2:

**STEP 4:** Put the footboard upside down on a soft surface. Attach the bun feet and support legs (for footboard) to footboard as shown.

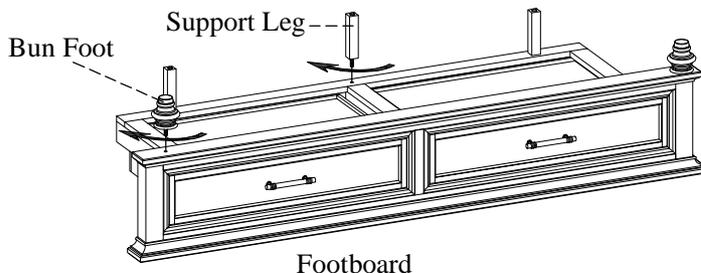


**STEP 5:** Screw the bolts (E) into HB & FB. Make sure the slat bearer is in the UPPER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (F) and nuts (G). Then use a hex wrench (H) to tighten all the nuts.

The outside holes match to 6/6 standard king rails, the inside holes match to 6/0 Cal king bed rails.

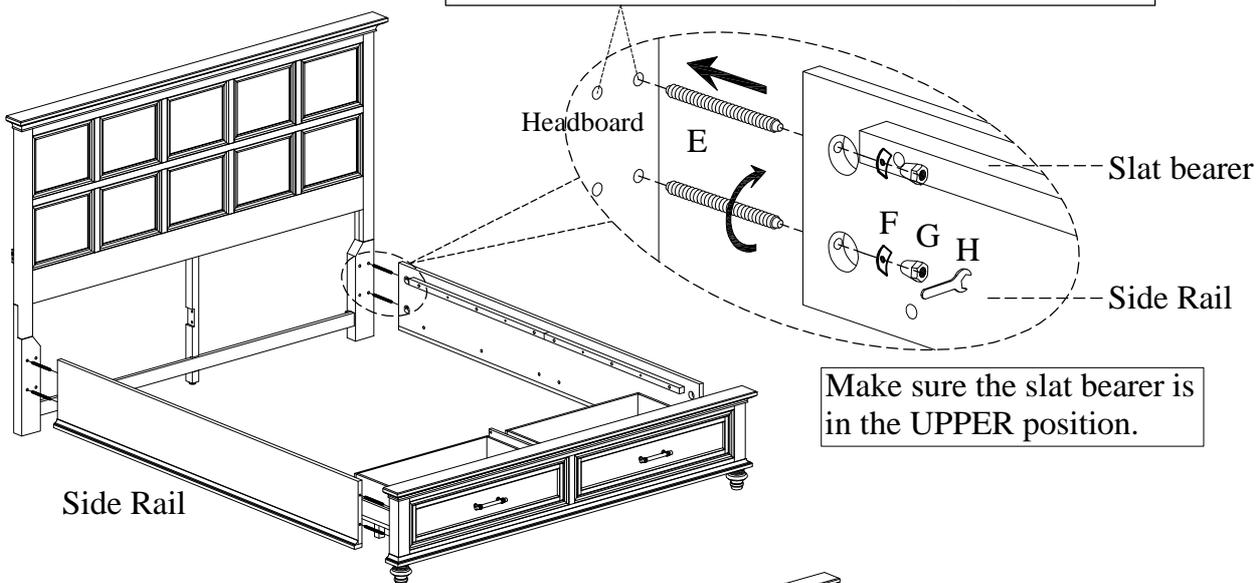

Make sure the slat bearer is in the UPPER position.


**STEP 6:** Attach the center rail to the footboard and center support leg of headboard using 4 bolts (K), lock washers (L) and flat washers (M).

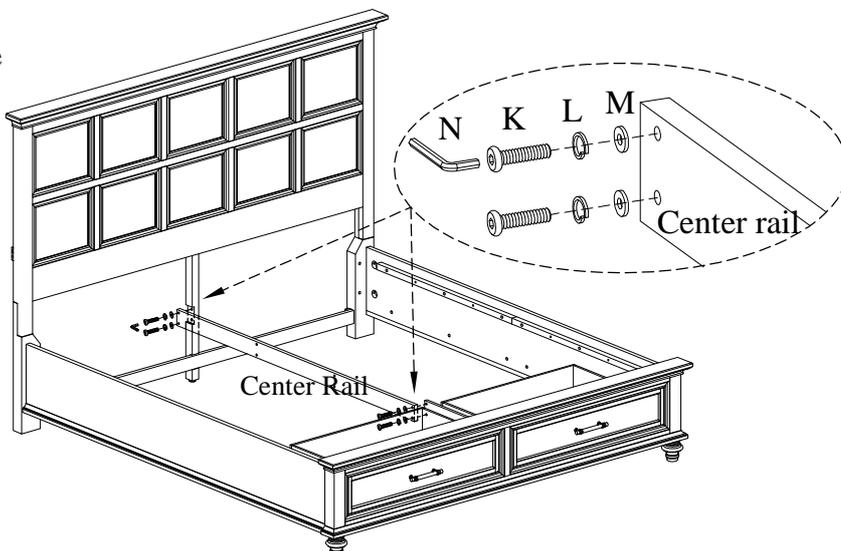




ITEM NO: I3002-415	King Panel HB
I3002-425	King Upholstered HB
I3002-406	King Rails
I3002-410	Cal King Rails
I3002-407	King Low Profile FB
I3002-407D	King Storage FB


**STEP 7:** Attach 2 support legs (for center rail) to the center rail using 4 bolts (K), lock washers (L) and flat washers (M). Use the Allen Wrench (N) to tighten all of the bolts.

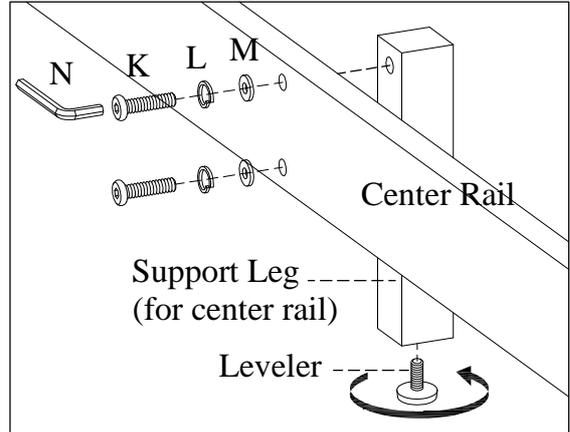

**STEP 8:** Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 10 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (I).

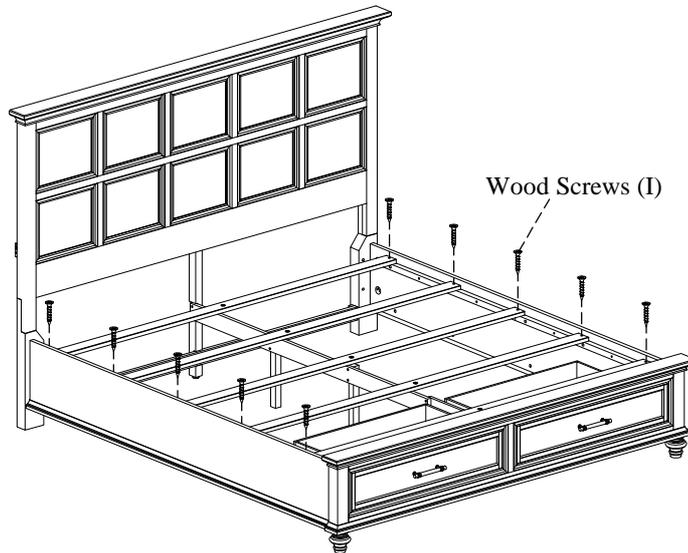



**STEP 9:** For the Cal King bed, both filler boards are notched. Using a utility knife only cut off the small piece at the notch on one of the filler boards. This cut off filler board will be placed at the foot of the bed going from left to right as shown on the right side below in STEP 10. For the standard King bed, skip this step and arrange the decking boards as shown right.

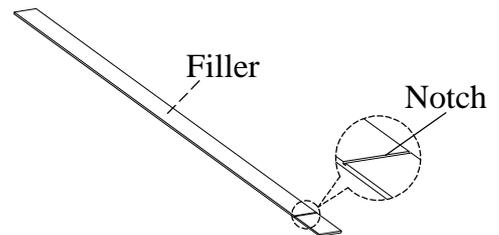




- ITEM NO: I3002-415      King Panel HB
- I3002-425      King Upholstered HB
- I3002-406      King Rails
- I3002-410      Cal King Rails
- I3002-407      King Low Profile FB
- I3002-407D     King Storage FB

**STEP 10:** Put the deckings and fillers over the slats, secure deckings to the slats with wood screws (O) through the pre-drilled holes in the deckings as shown below.

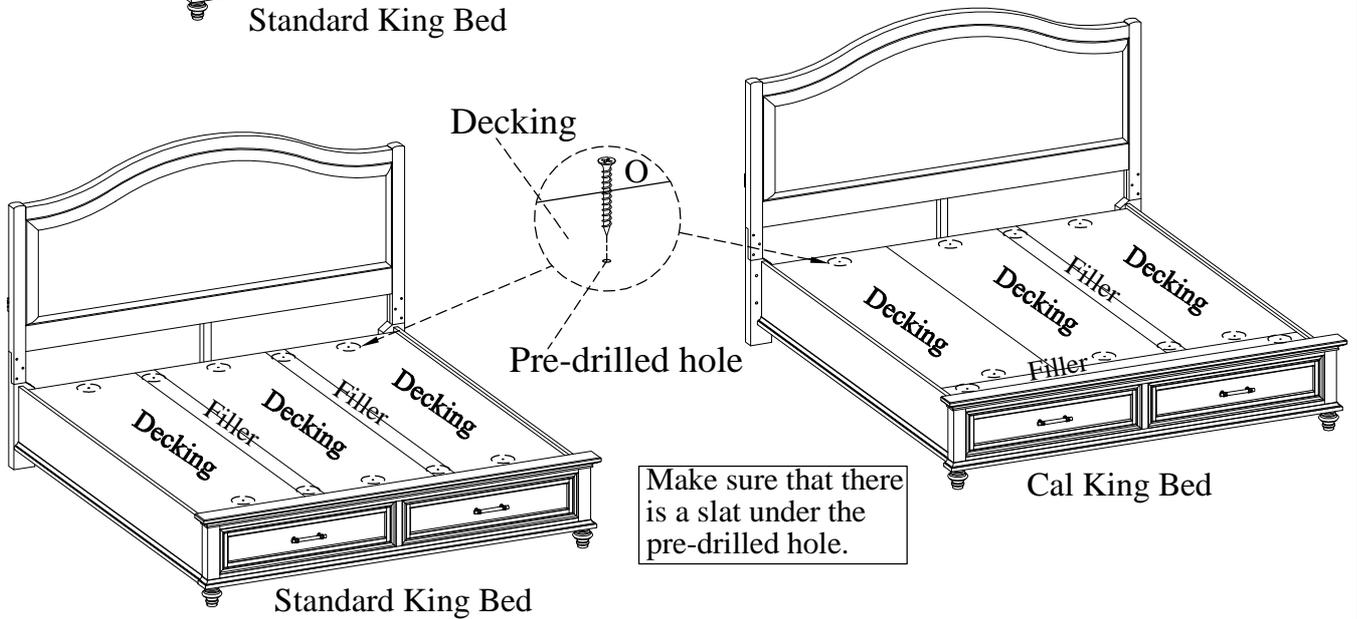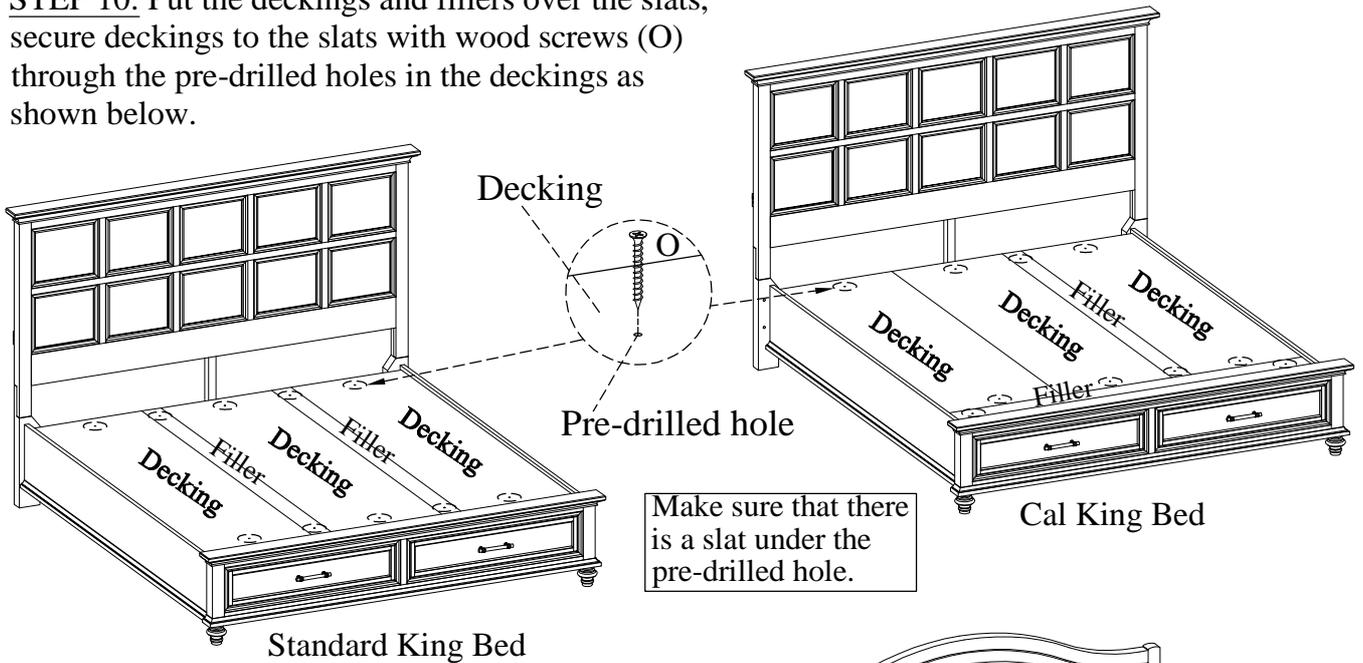


**STEP 11:** For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

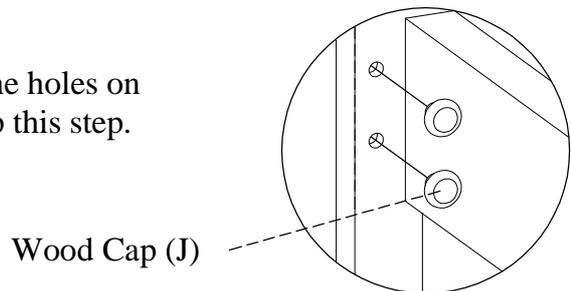



- ITEM NO: I3002-415     King Panel HB
- I3002-425     King Upholstered HB
- I3002-406     King Rails
- I3002-410     Cal King Rails
- I3002-407     King Low Profile FB
- I3002-407D    King Storage FB

### FUNCTIONALITY INSTRUCTION

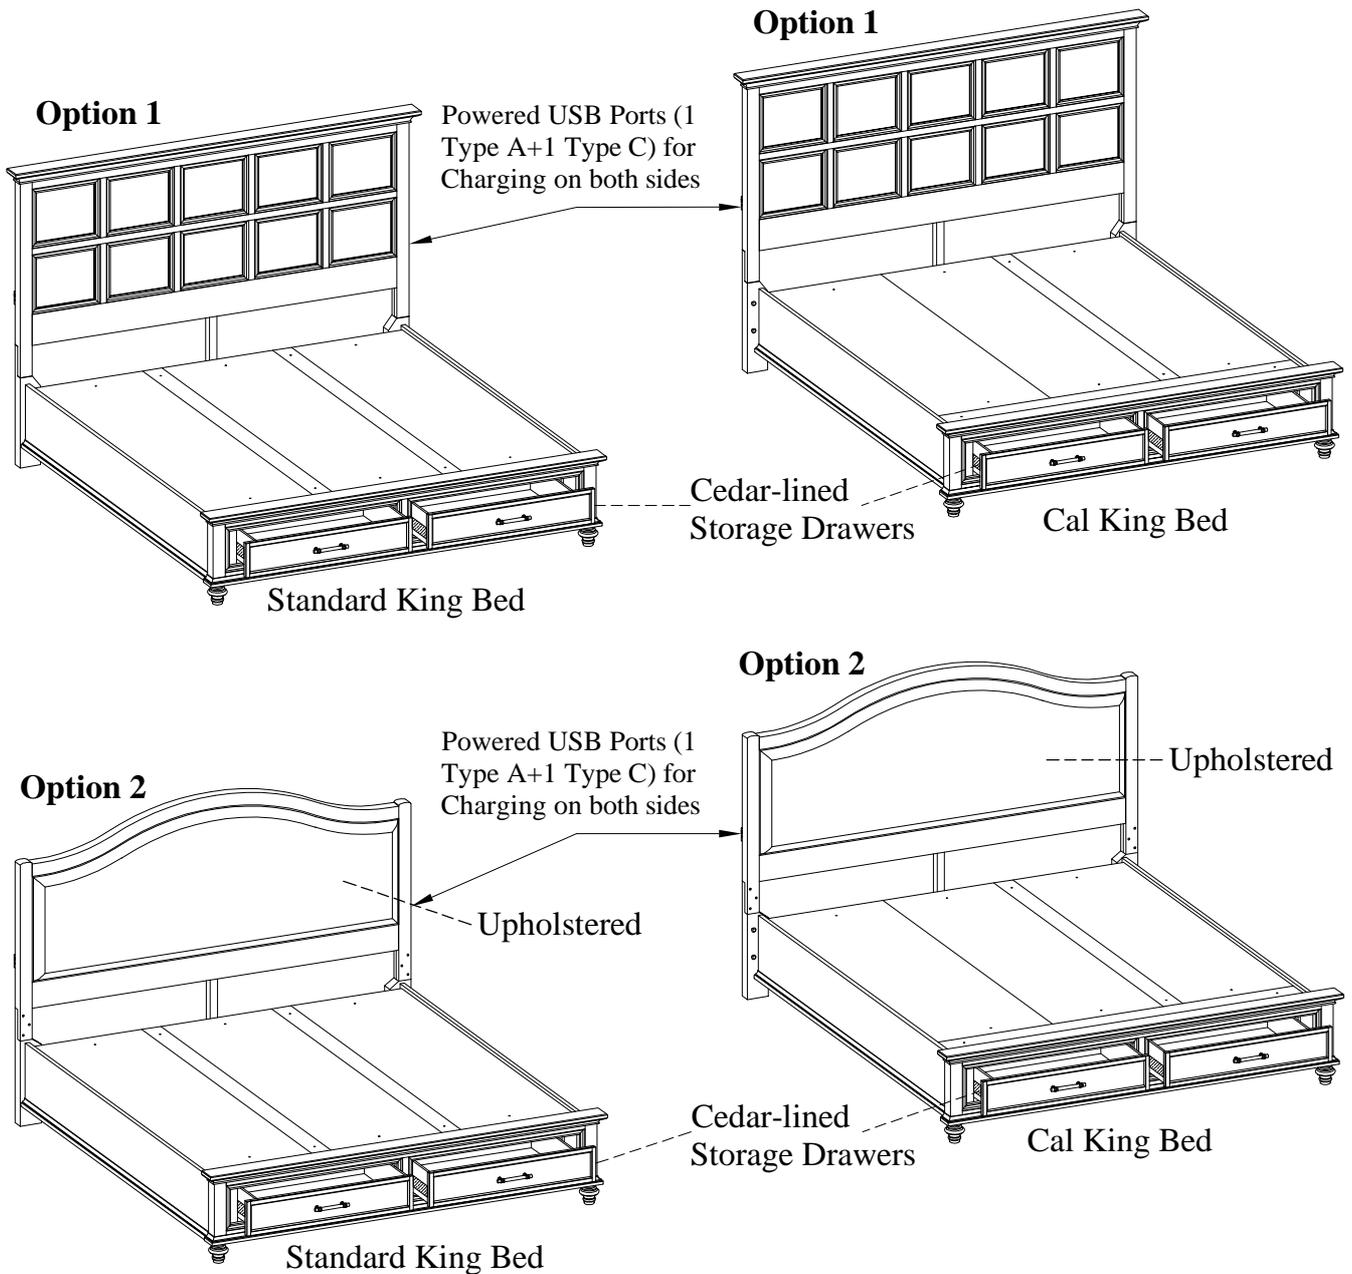





- ITEM NO: I3002-415      King Panel HB
- I3002-425      King Upholstered HB
- I3002-406      King Rails
- I3002-410      Cal King Rails
- I3002-407      King Low Profile FB
- I3002-407D     King Storage FB

### For Option 3 & 4:

**STEP 4:** Put the footboard upside down on a soft surface. Attach the bun feet to footboard as shown.

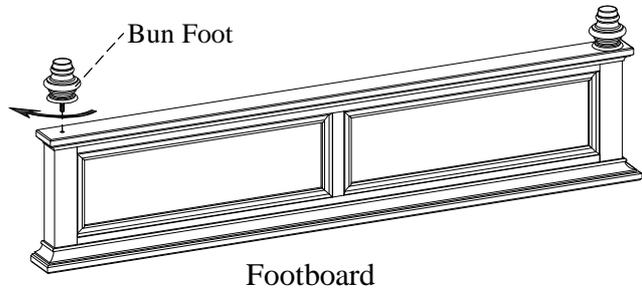


**STEP 5:** The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position (a) with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

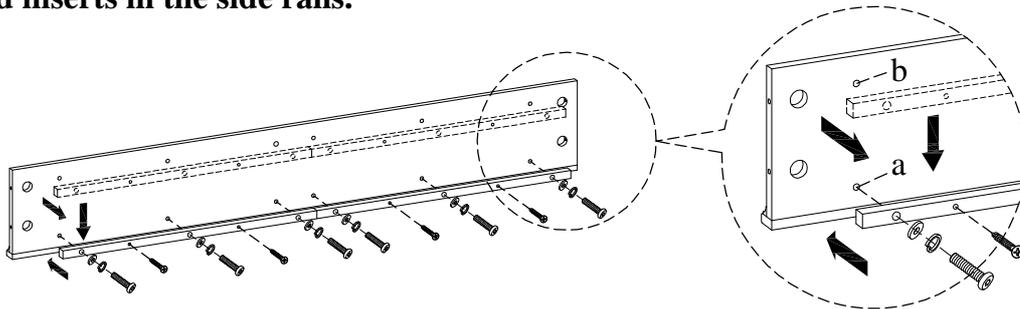

**STEP 6:** Screw the bolts (E) into HB & FB. Make sure the slat bearer is in the LOWER position. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (F) and nuts (G). Then use a hex wrench (H) to tighten all the nuts.

The outside holes match to 6/6 standard king rails, the inside holes match to 6/0 Cal king bed rails.

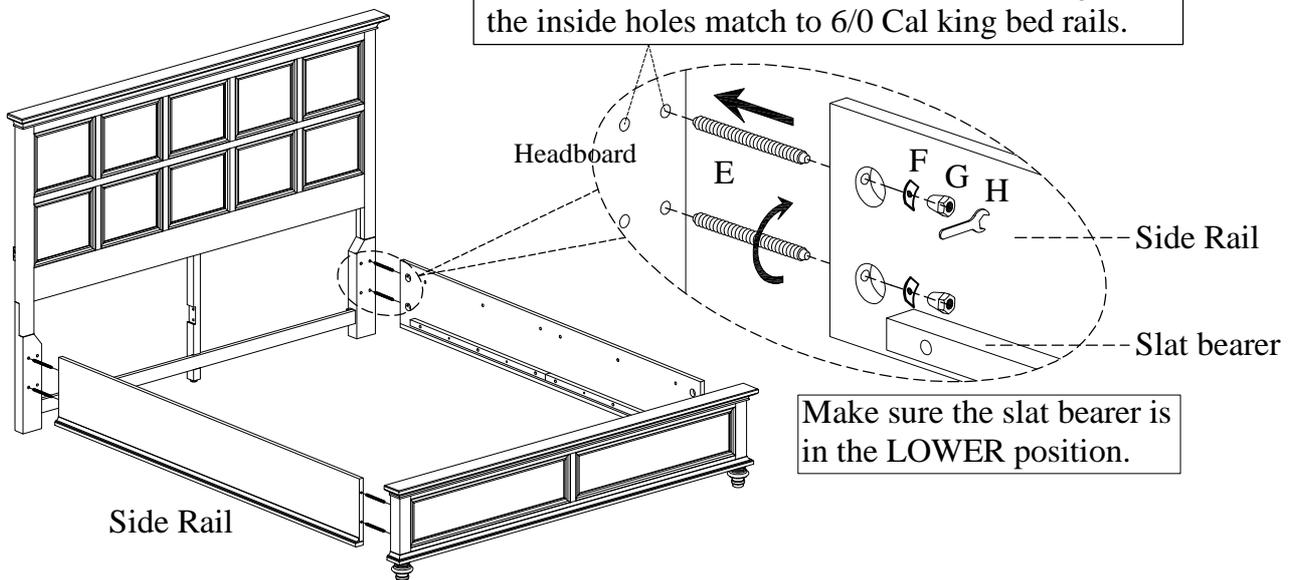


Make sure the slat bearer is in the LOWER position.




- ITEM NO: I3002-415      King Panel HB
- I3002-425      King Upholstered HB
- I3002-406      King Rails
- I3002-410      Cal King Rails
- I3002-407      King Low Profile FB
- I3002-407D     King Storage FB


**STEP 7:** Attach the support legs (for slat) to the slats as shown.

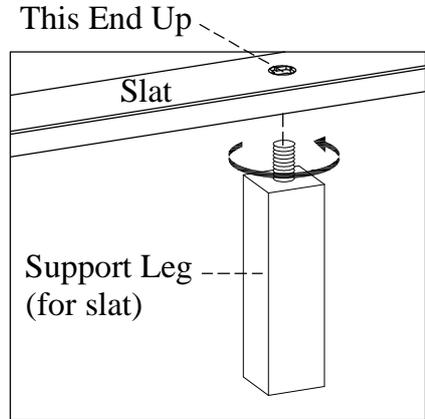

**STEP 8:** Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (I).

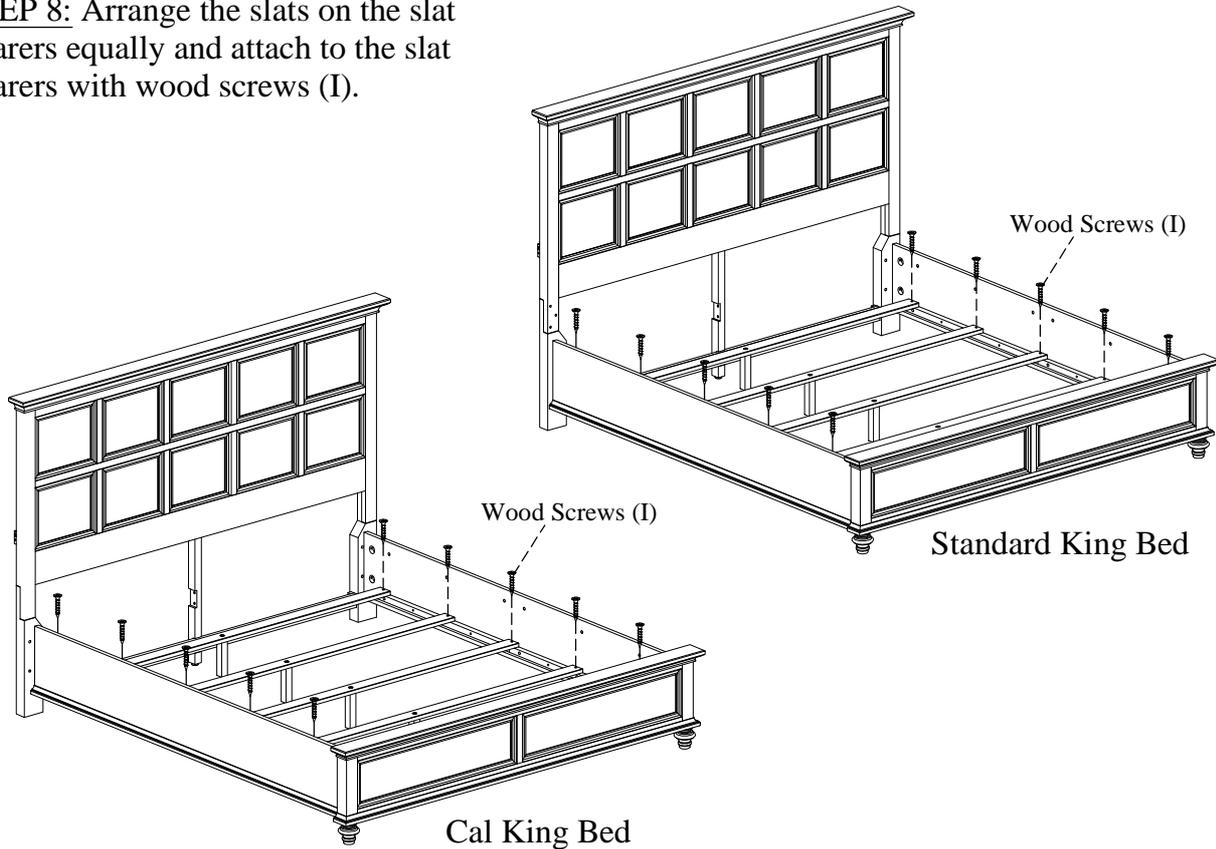

**STEP 9:** For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

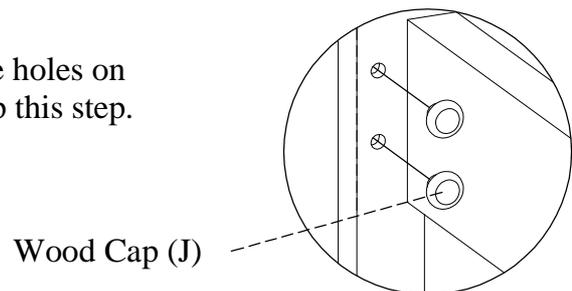



- ITEM NO: I3002-415      King Panel HB
- I3002-425      King Upholstered HB
- I3002-406      King Rails
- I3002-410      Cal King Rails
- I3002-407      King Low Profile FB
- I3002-407D     King Storage FB

### FUNCTIONALITY INSTRUCTION

