
Riverside FURNITURE
email: info@riverside-furniture.com

Bayview Home Office Assembly Instructions

Made In Vietnam

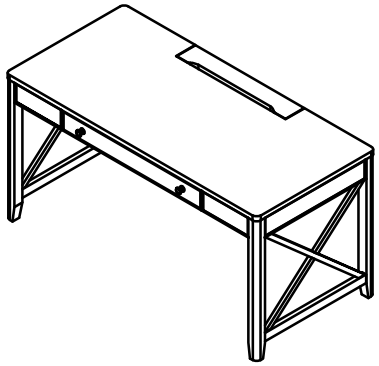


62831
Writing Desk

Warning :
- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.

Important Use Information: We recommend using coasters, placemats and trivets when placing hot or cold containers on this item. It is also recommended to quickly cleanup any spills to minimize exposure to moisture. Doing so will prolong the life and look of the item for many years.

Components and Hardware List

Desk Assembly	Leg Assembly	Allen Head Bolt Ø5/16"-18 x 1-11/16"	Spring Washer Ø5/16"	Flat Washer Ø5/16" x 5/8"	Allen Key 4mm	Tipping Restraint Kit
						
A 1 pc.	B 2 pcs.	C 8 pcs.	D 8 pcs.	E 8 pcs.	F 1 pc.	G 1 set.

Phillips Screw driver (Not provided)



Step 1:

Riverside FURNITURE


email: info@riverside-furniture.com

Bayview Home Office Assembly Instructions


Made In Vietnam

62831 - Writing Desk

Step 2:

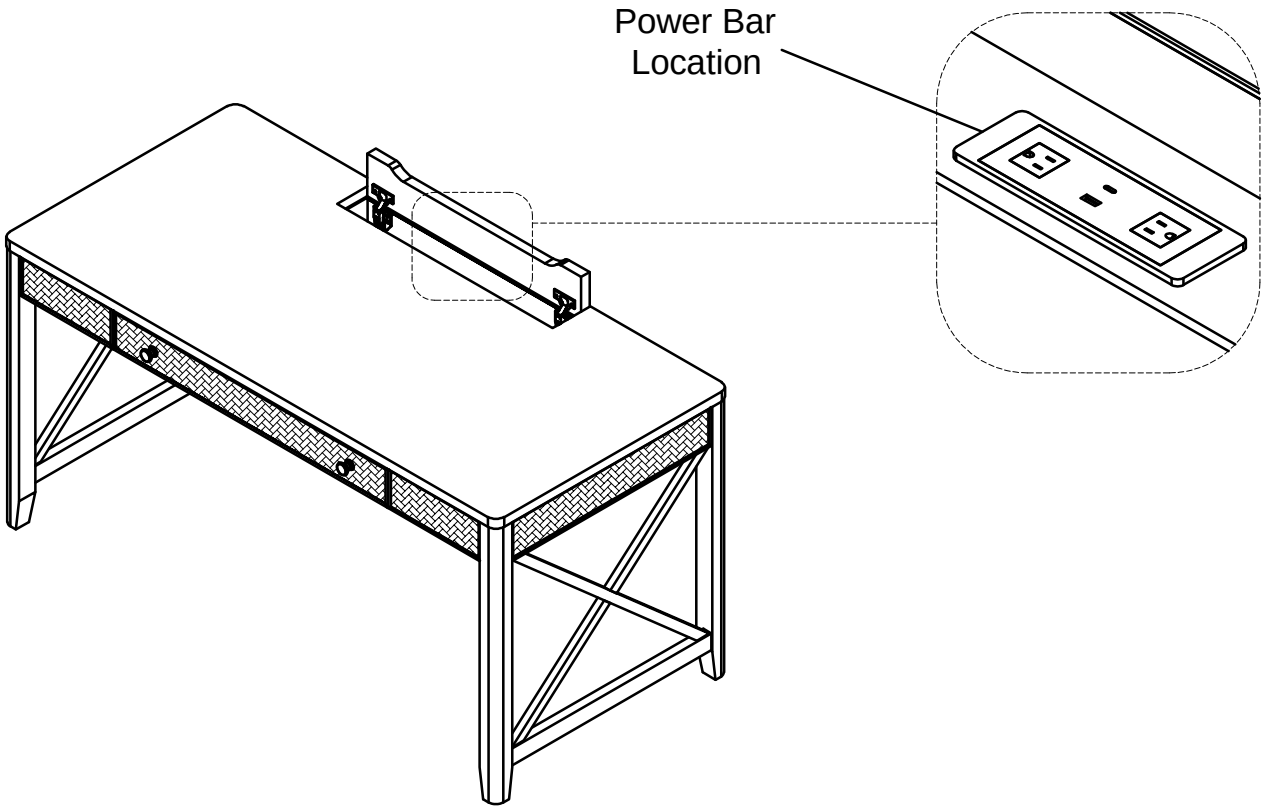

Step 3:

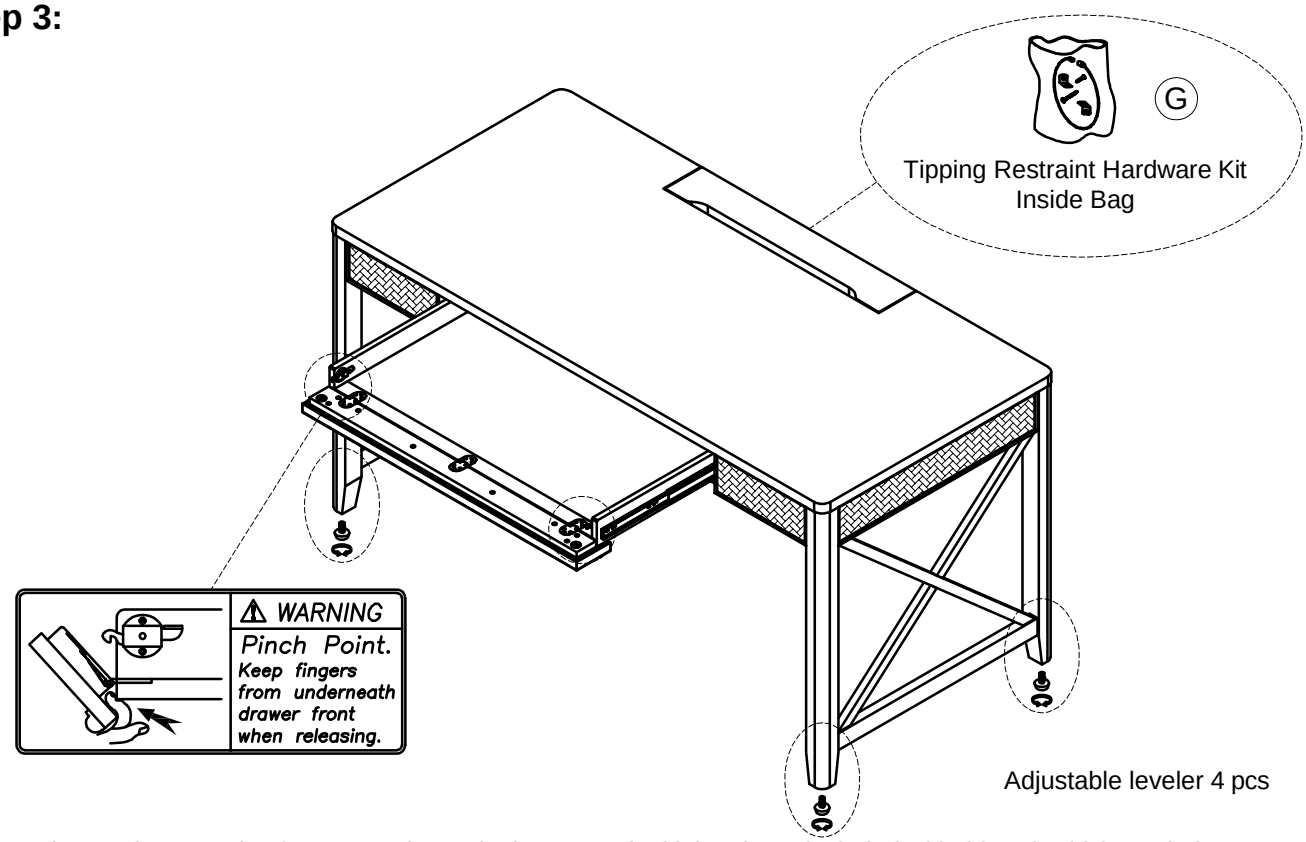

For product and personal safety, a Furniture Tipping Restraint kit has been included with this unit which can help to minimize the risk of the unit accidentally tipping forward, if used and properly installed per the manufacturer's instructions.