


ASSEMBLY INSTRUCTIONS

SKU: ND446-01

SIDE CHAIR

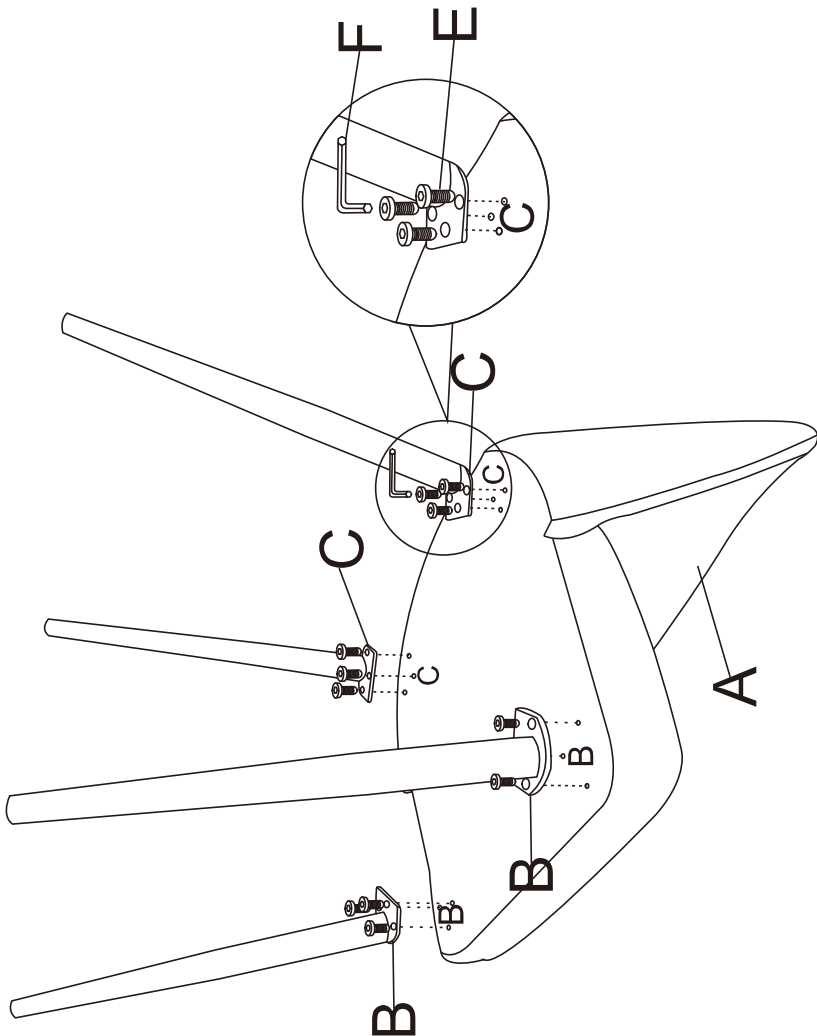



NOTE: Please do not tighten all bolts or discard cartons and packaging material until assembly is completed, thank you!

E	x12		Ø 6X16MM	F	x1		M5
---	-----	---	----------	---	----	---	----



Please Contact us if you are Missing Parts or have any Questions
877-364-8464
info@sunsettrading.com

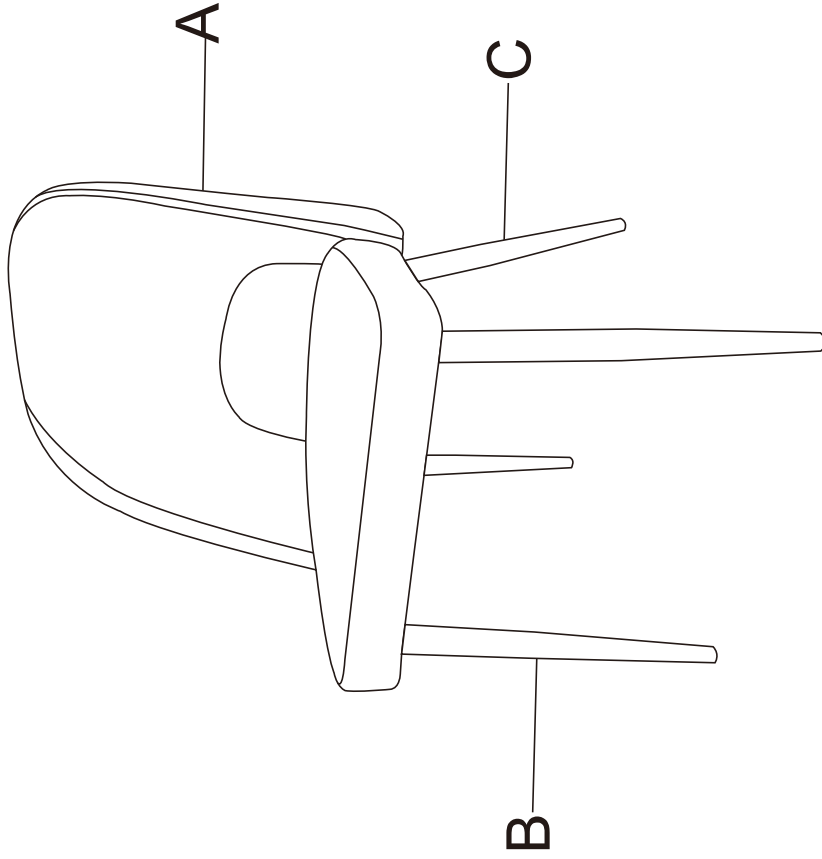

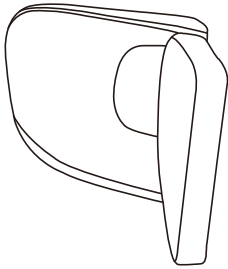ND446-01		
A		X1
B		X2
C		X2
D		X4


Sunset Trading®
 Please Contact us if you are
 Missing Parts or have any
 Questions 877-364-8464
info@sunsettrading.com