


CONTENTS


- 1 Diverter, duct
- 2 Extension, diverter
- 1 Chimney, lower
- 1 Filter, charcoal

INSTALLATION


- 1 Install the duct diverter onto the hood trestle assembly.

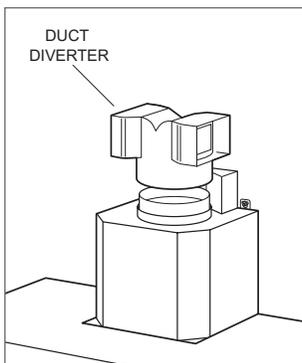


- 2 Install the diverter extensions on both sides of the duct diverter.

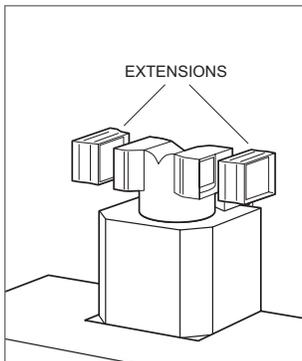

- 3 Place the lower chimney on the hood so the diverter extensions align with the vent holes in the chimney.

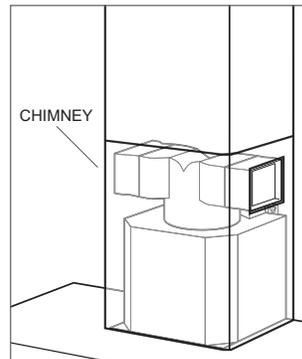

- 4 Install charcoal filter.

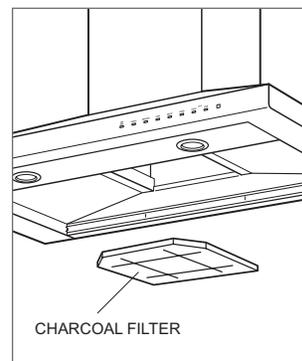

- 5 Install grease filters.

