



ASSEMBLY INSTRUCTION ACME FURNITURE
MODEL # 92905, 92910

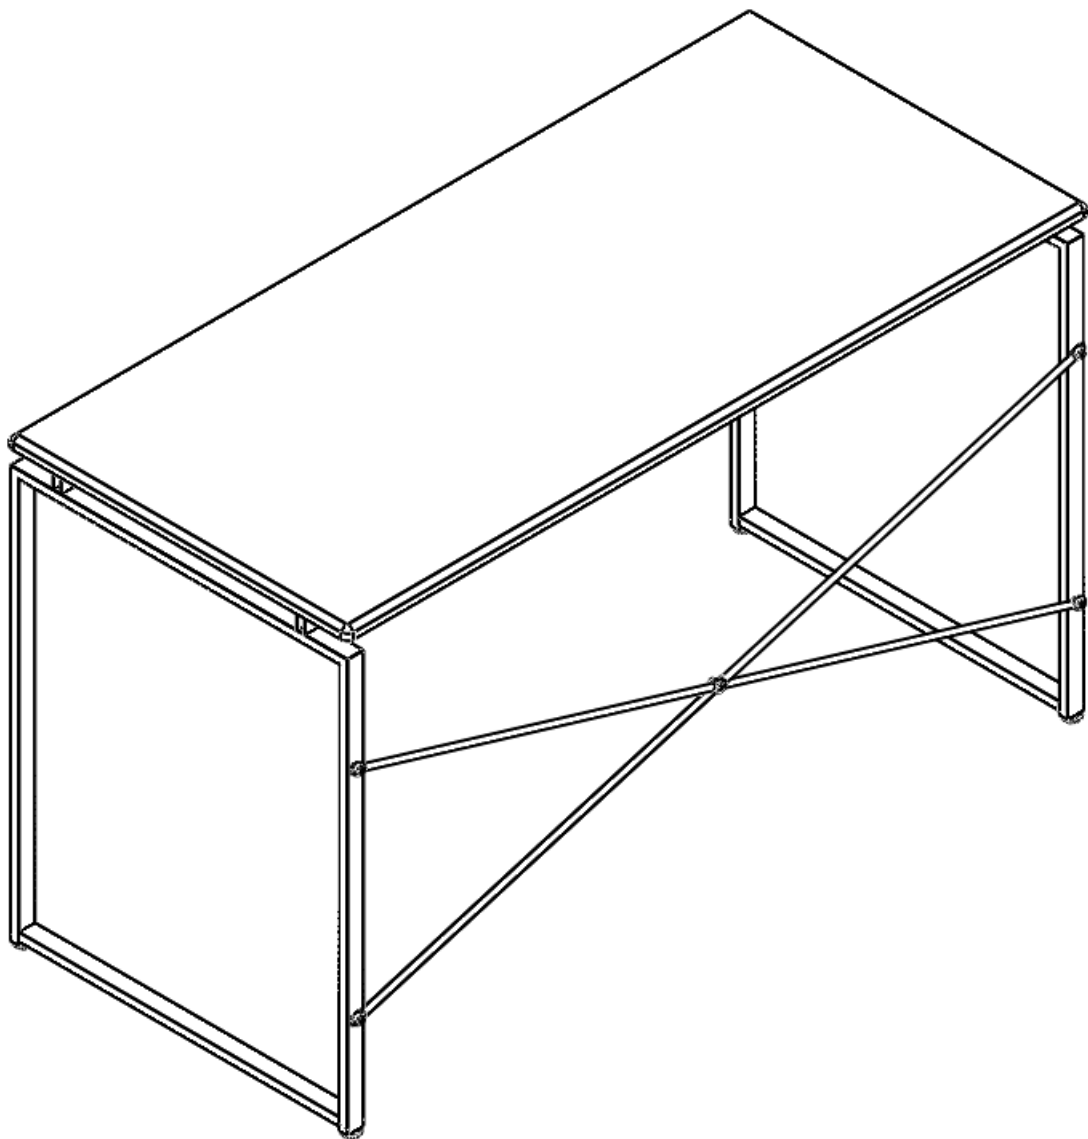


PARTS

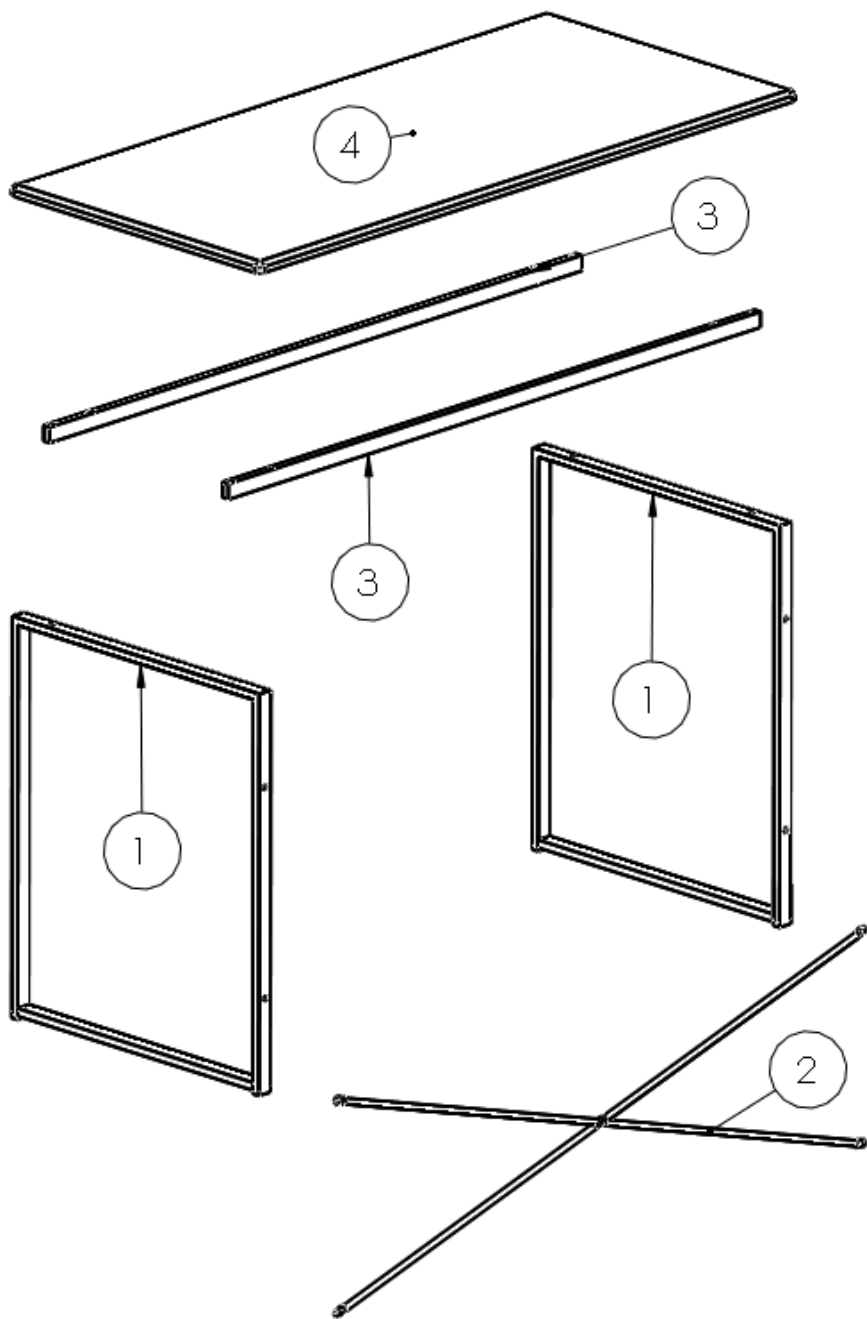


No.			No.			No.			No.		
(A)		5	(B)		4	(C)		4	(D)		1
(E)		4	(F)		1	(G)		4			





STEP.1

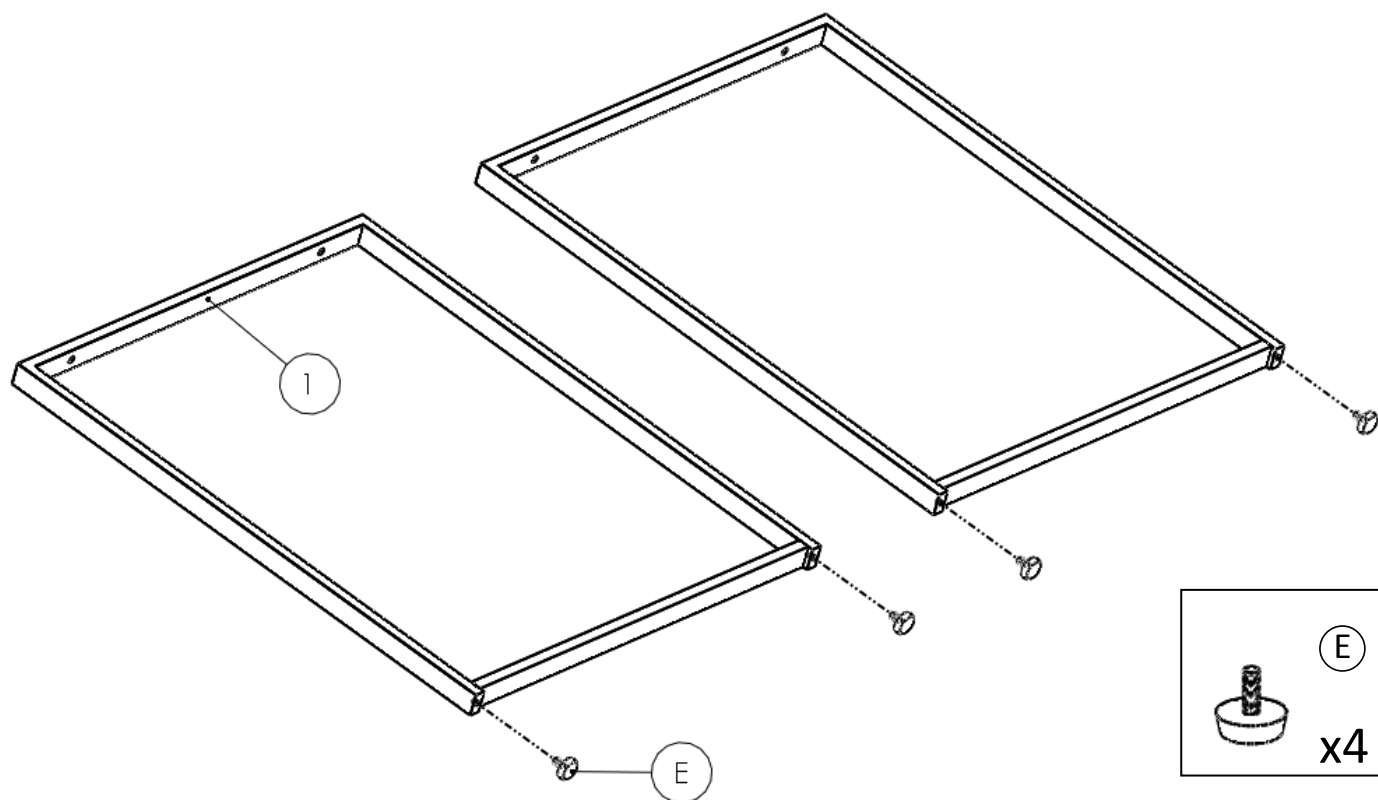

STEP.2

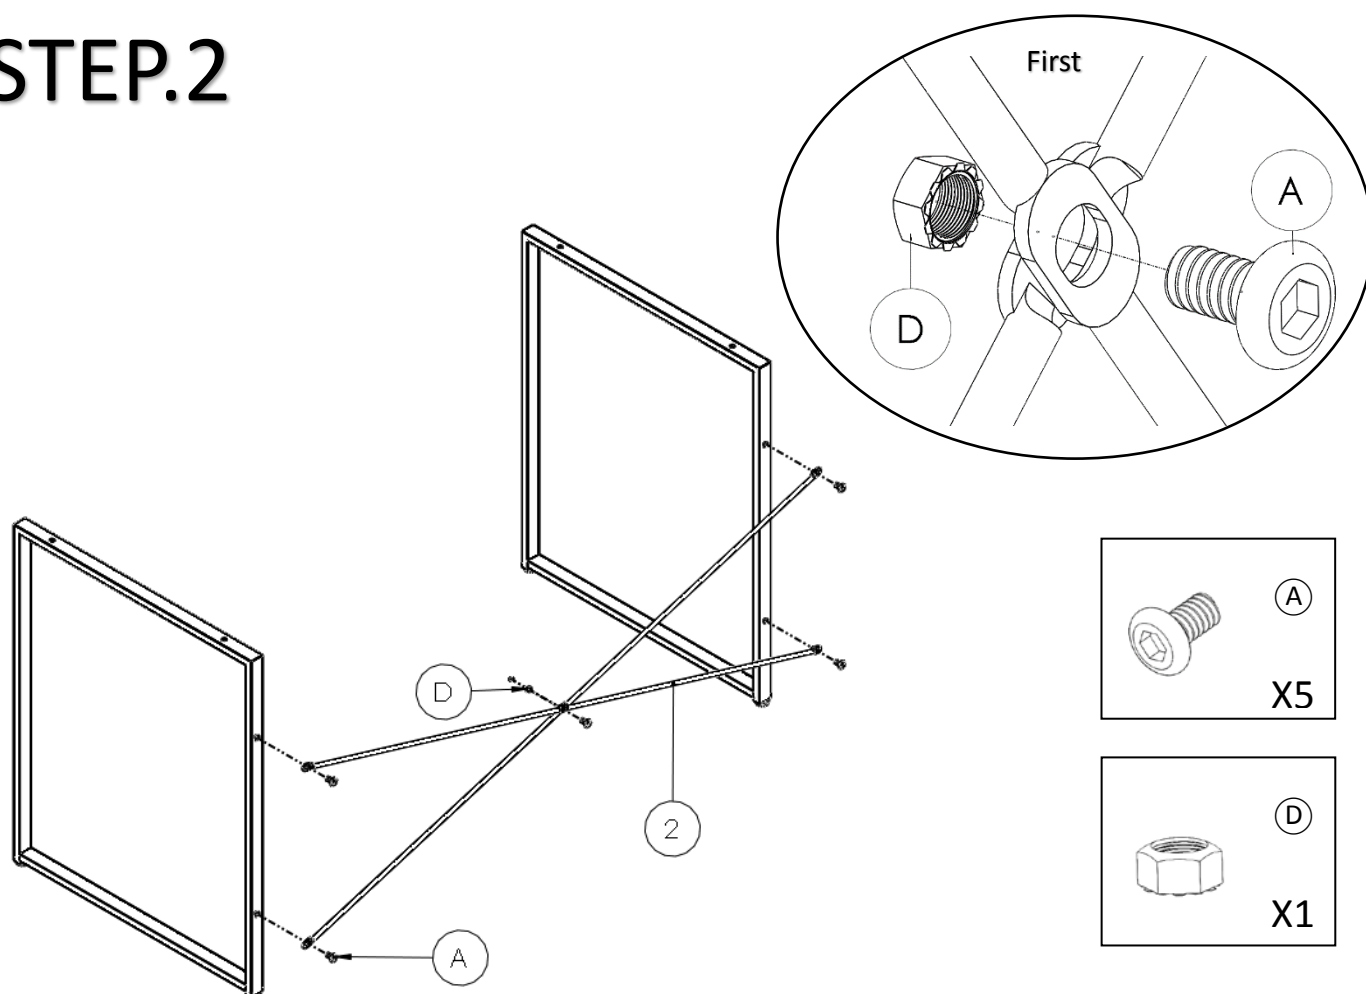

STEP.3

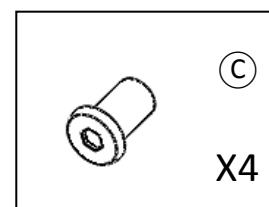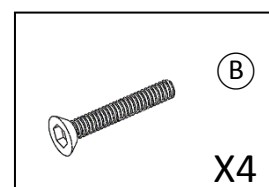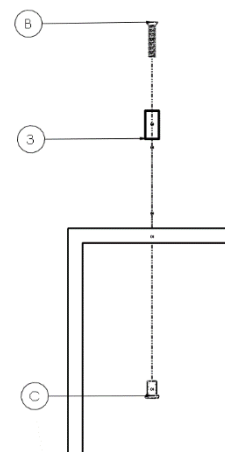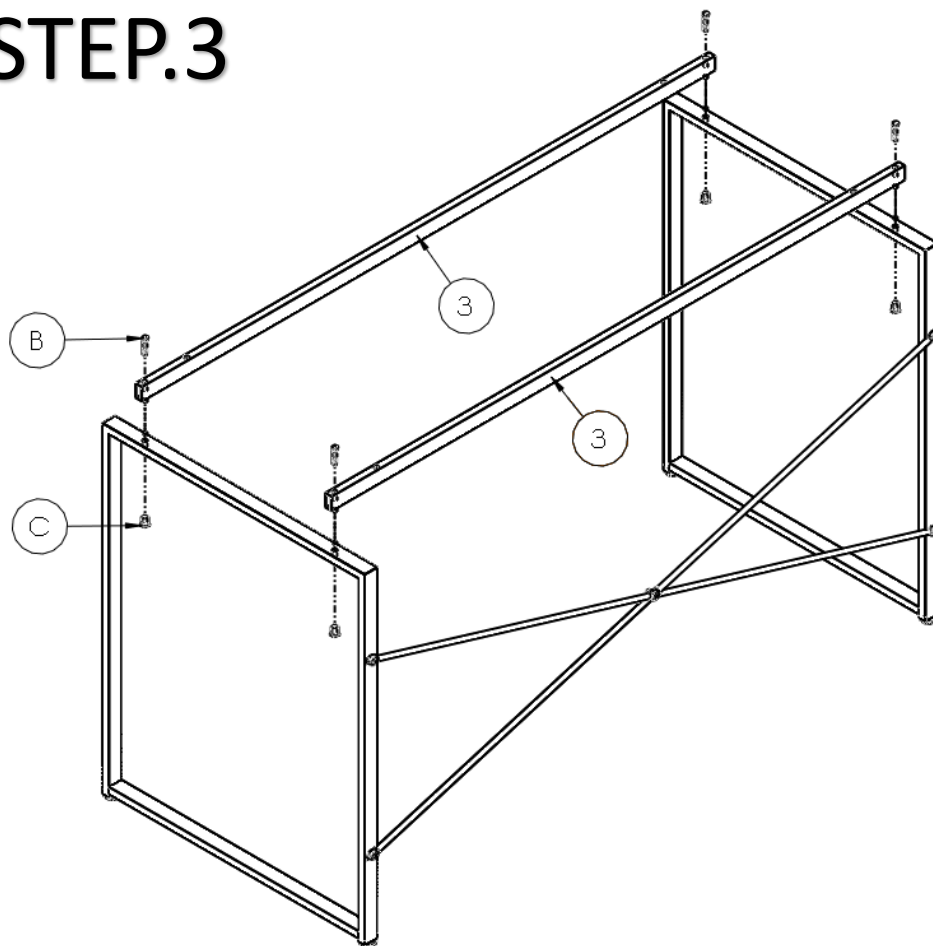

STEP.4

