

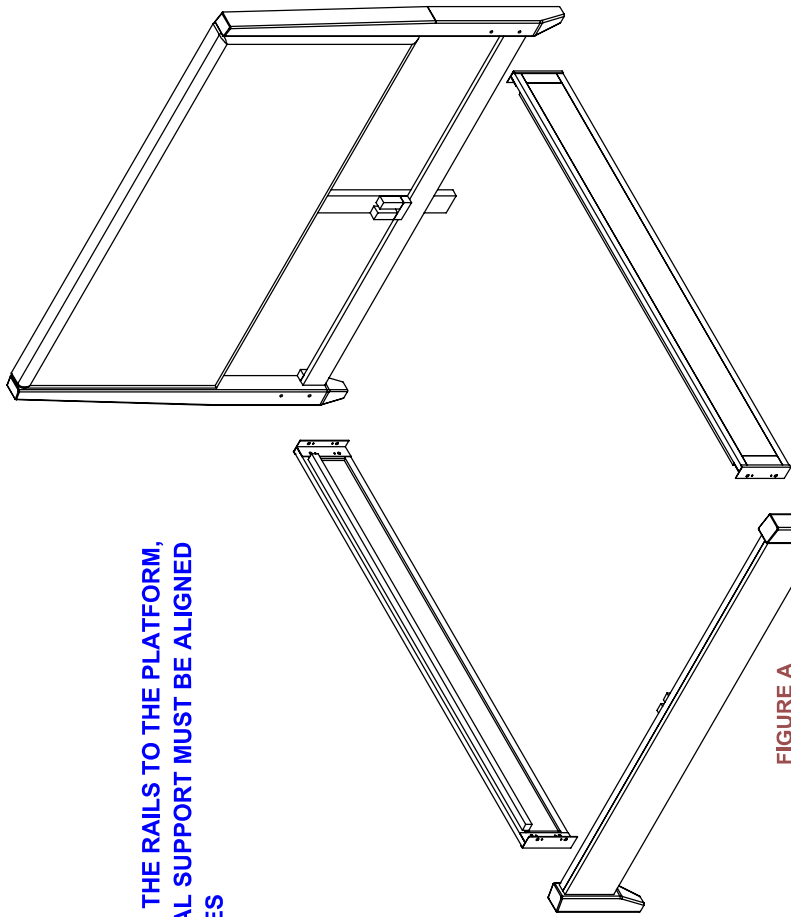


FIGURE A

STEP 1

1.- ALIGN THE RAILS TO THE PLATFORM,
THE METAL SUPPORT MUST BE ALIGNED
THE HOLES

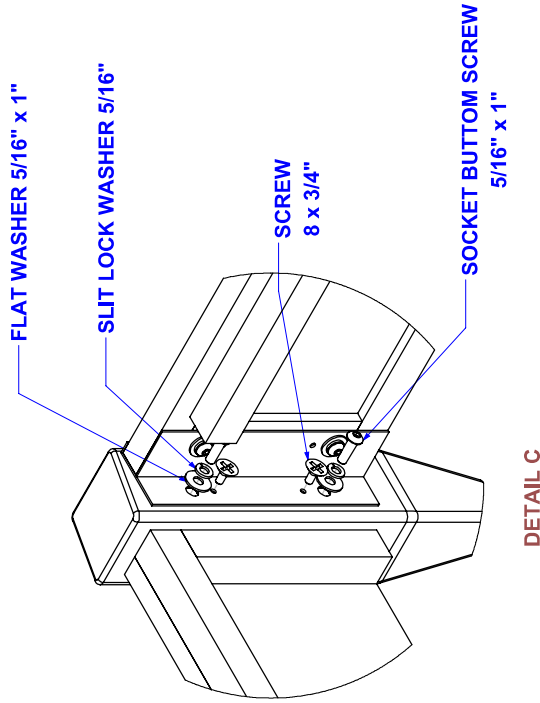


FIGURE B

STEP 2

2.- WHEN THE RAILS ARE ALIGNED INSERT
THE SCREWS AS SHOWN IN DETAIL A AND
B, FIRT THE PLATFORM SIDE AND THEN
THE HEADBOARD SIDE



ASSEMBLING INSTRUCTIONS

I-IFD6212KING

ITEM #	DESCRIPTION	#
1	SCREW 8 x 3/4"	8
2	BUTOM SOCKET SCREW 5/16" x 1"	8
3	FLAT WASHER 5/16"	8
4	SLIT LOCK WASHER 5/16"	8
5	ALLEN KEY 3/16"	1


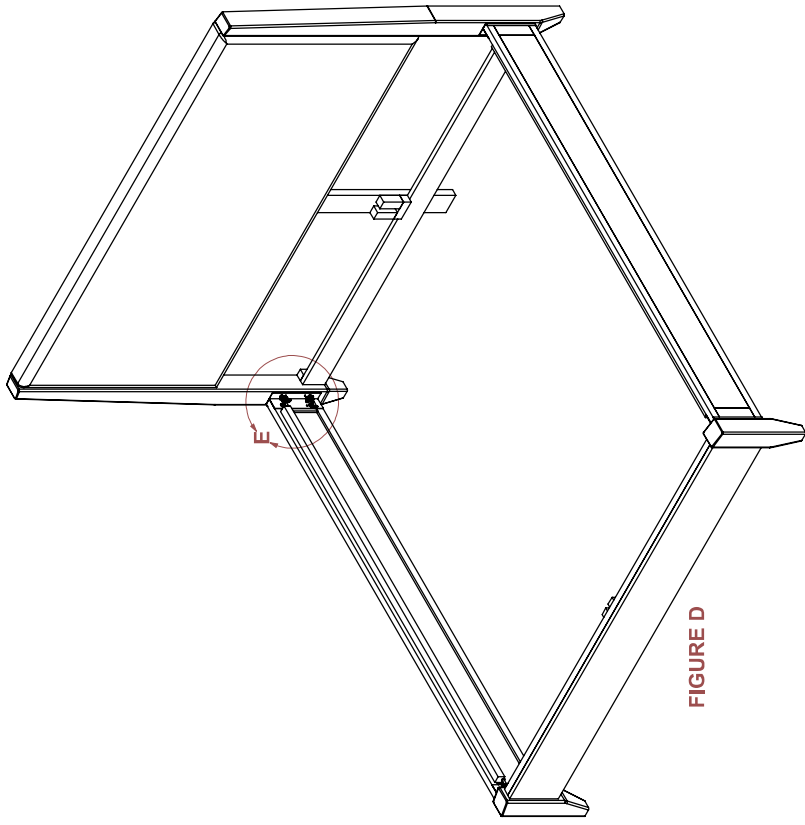


FIGURE D

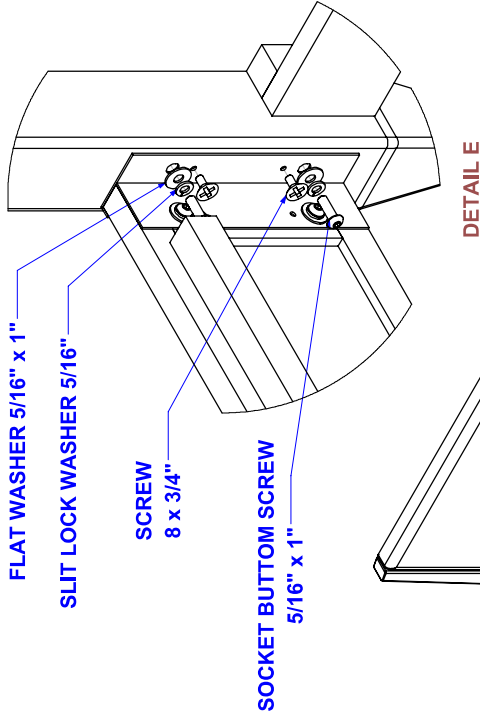

DETAIL E

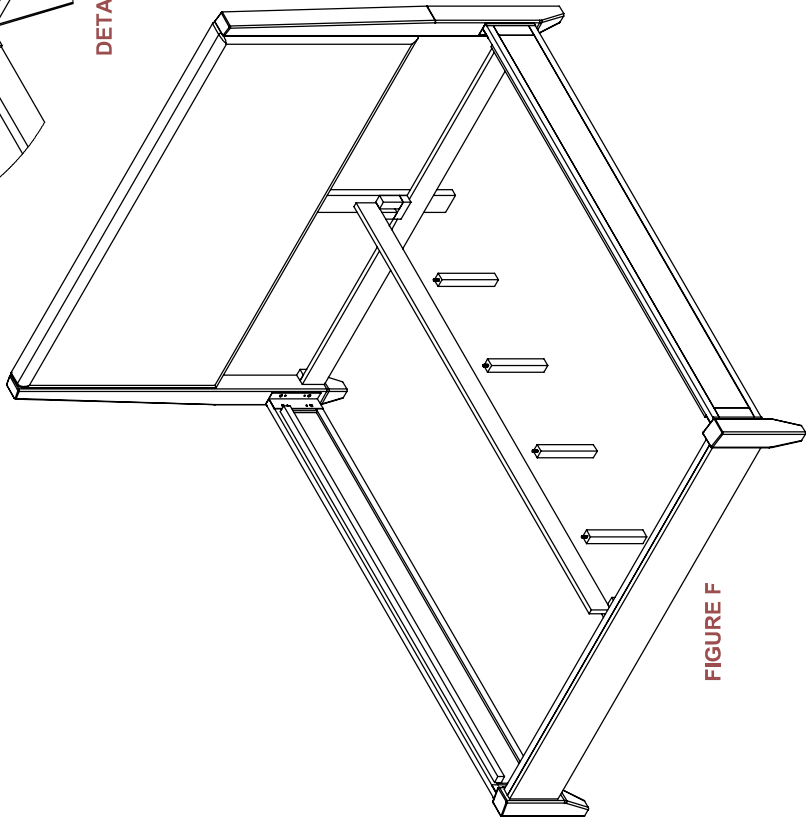


FIGURE F

STEP 3

3.- INSERT THE CENTRAL CROSSBAR AS SHOWN IN FIGURE F AND PLACE THE SUPPORT LEGS IN TO THE CROSSBAR

ITEM #	DESCRIPTION	#
1	SCREW 8 x 3/4"	8
2	BUTOM SOCKET SCREW 5/16" x 1"	8
3	FLAT WASHER 5/16"	8
4	SLIT LOCK WASHER 5/16"	8
5	ALLEN KEY 3/16"	1



ASSEMBLING INSTRUCTIONS

I-IFD6212KING

STEP 4

4.- WHEN THE SUPPORTS LEGS AND THE CROSSBAR ARE IN THE RIGHT PLACE IS TIME TO PLACE THE SLATS THEM OVER THE RAILS AS SHOW IN FIGURE G

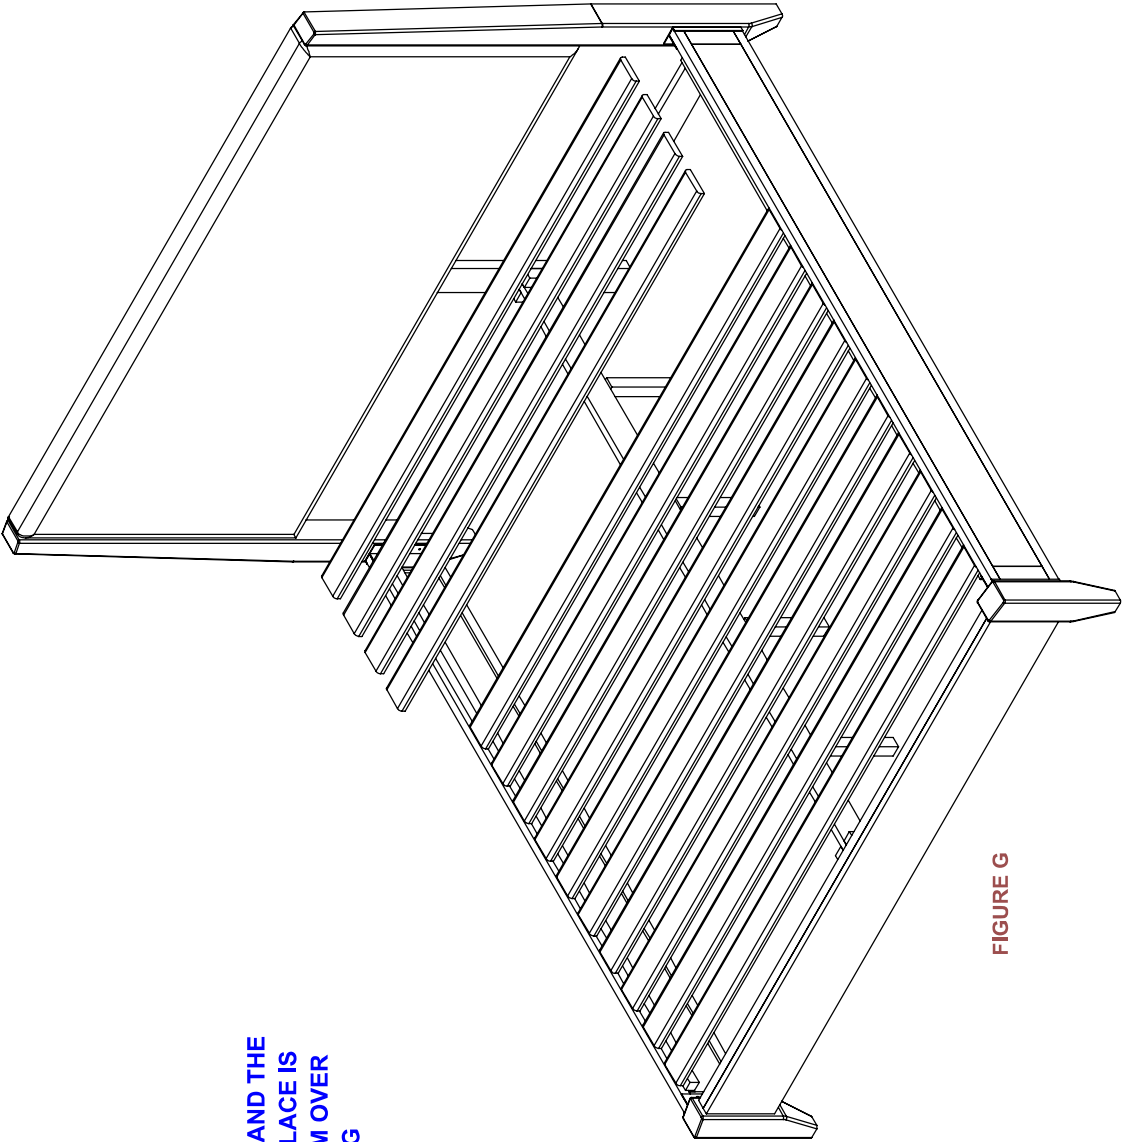


FIGURE G



ASSEMBLING INSTRUCTIONS

I-IFD6212KING

ITEM #	DESCRIPTION	#
1PIJ036	SCREW 8 x 3/4"	8
1TOR008	BUTTOM SOCKET SCREW 5/16" x 1"	8
1RON003	FLAT WASHER 5/16"	8
1RON011	SLIT LOCK WASHER 5/16"	8
1HER251	ALLEN KEY 3/16"	1