


ASSEMBLY INSTRUCTION


QUEEN PANEL BED

24840/27140Q-HB / 24841/27141Q-FB / 24842/27142Q-R

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST:			TOOLS REQUIRED (NOT INCLUDED)	
No.	Description	Q'ty	Description	Sketch
1	HEADBOARD PANEL	1 Pc	Screw Driver	
HARDWARE LIST:				
No.	Sketch	Description	Size	Q'ty
H1		Allen Bolt	5/16"x1-1/2"	4 Pcs
H2		Lock Washer	5/16"	4 Pcs
H3		Flat Washer	5/16"x19mm	4 Pcs
H4		Allen Key	4mm	1 Pc
H5		Wood Screw	8#x30MM	6 Pcs
2	FOOTBOARD PANEL	1 Pc		
3	HEADBOARD POST	2 Pcs		
4	BED SIDE RAILS	2 Pcs		
5	SLATS	3 Pcs		
6	SLAT SUPPORTS	3 Pcs		

STEP 1

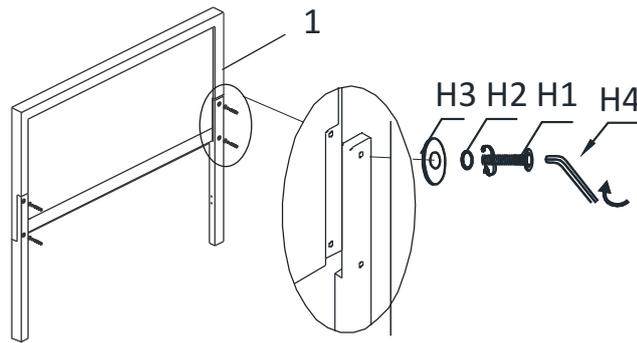

Step 1: Attached Headboard post (L/R) to the headboard using flat washer (H3), Lock washer (H2) and Allen bolt (H1).

STEP 2

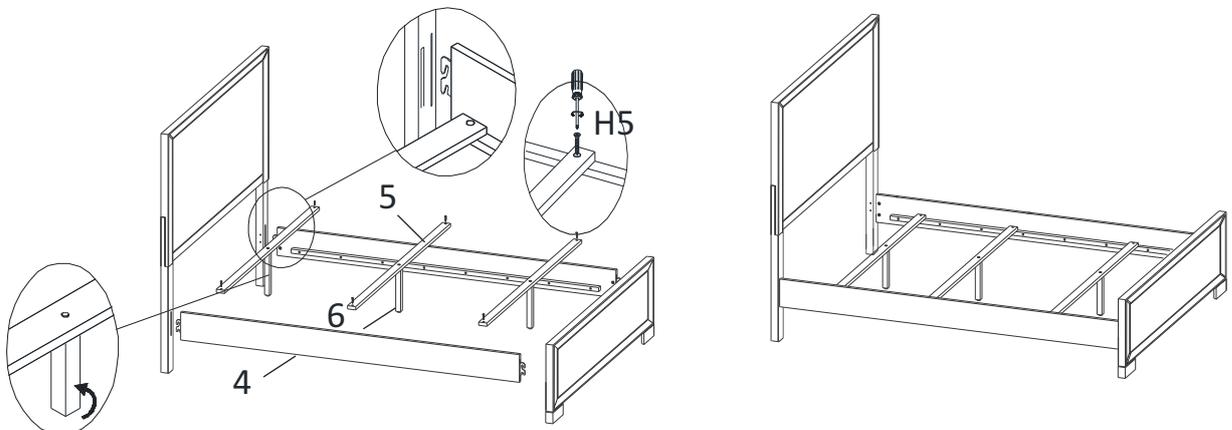

Step 2: Assemble the Bed side rails to headboard and footboard. Attach slat support leg to the slats. Wood screw slat in place.