

# ASSEMBLY INSTRUCTIONS

## AVA COLLECTION


MODEL: B1891-115 AVA 6/6 EK HEADBOARD, FOOTBOARD & SLAT KIT  
B1891-335 AVA 6/6-5/0 EK/Q PANEL SIDE RAILS



Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

Please read all instructions carefully. See the hardware and furniture part listing for guidance. Be sure you have all parts listed before beginning assembly. Place all wooden parts on a clean, flat surface to protect the finish from scratches. Follow the diagram to assemble.

### CAUTION

1. Do not fully tighten the nuts or bolts until the table is fully assembled.
2. Please tighten by hand, not by a drill. Overtightening will damage threads. Do not overtighten.
3. Keep all hardware out of the reach of children.


| PARTS LIST |                                       |                                                                                     |       |
|------------|---------------------------------------|-------------------------------------------------------------------------------------|-------|
| ITEM       | DESCRIPTION                           | SKETCH                                                                              | QTY   |
| A          | HEADBOARD                             |    | 1 PC  |
| B          | RIGHT SIDE FACING (RSF) HEADBOARD LEG |    | 1 PC  |
| C          | LEFT SIDE FACING (LSF) HEADBOARD LEG  |   | 1 PC  |
| D          | FOOTBOARD                             |  | 1 PC  |
| E          | FOOTBOARD LEG                         |  | 2 PCS |
| F          | SIDE RAIL                             |  | 2 PCS |
| G          | SLAT                                  |  | 4 PCS |
| H          | SLAT SUPPORT LEG                      |  | 8 PCS |
| I          | HEADBOARD SUPPORT RAIL                |  | 1 PC  |

| HARDWARE LIST |                           |                                                                                       |        |
|---------------|---------------------------|---------------------------------------------------------------------------------------|--------|
| ITEM          | DESCRIPTION               | SKETCH                                                                                | QTY    |
| 1             | BOLT M8 x 3/4"            |    | 8 PCS  |
| 2             | BOLT M6 x 1/2"            |    | 6 PCS  |
| 3             | BOLT M6 x 1 3/8"          |    | 10 PCS |
| 4             | BOLT M6 x 2"              |    | 6 PCS  |
| 5             | SPRING WASHER M6 x 1/2"   |   | 8 PCS  |
| 6             | FLAT WASHER M6 x 3/4"     |  | 8 PCS  |
| 7             | CSK C/B SCREW M4 x 1 1/4" |  | 8 PCS  |
| 8             | ALLEN KEY M4 x 4"         |  | 1 PC   |
| 9             | ALLEN KEY M5 x 2 1/2"     |  | 1 PC   |


WEIGHT CAPACITY

800 LBS


HARDWARE DIMENSIONS  
VERIFICATION TOOL

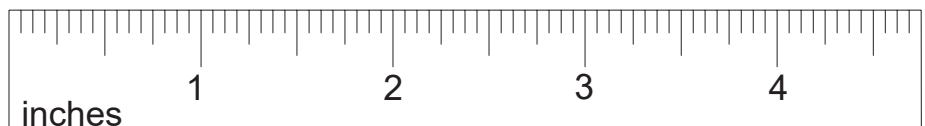


**STEP 1:** Place Headboard (A) face down on a soft and clean area. Attach RSF Headboard Leg (B) and LSF Headboard Leg (C) to the Headboard (A) by using Allen Key (8) with hardware 4, 5, and 6.

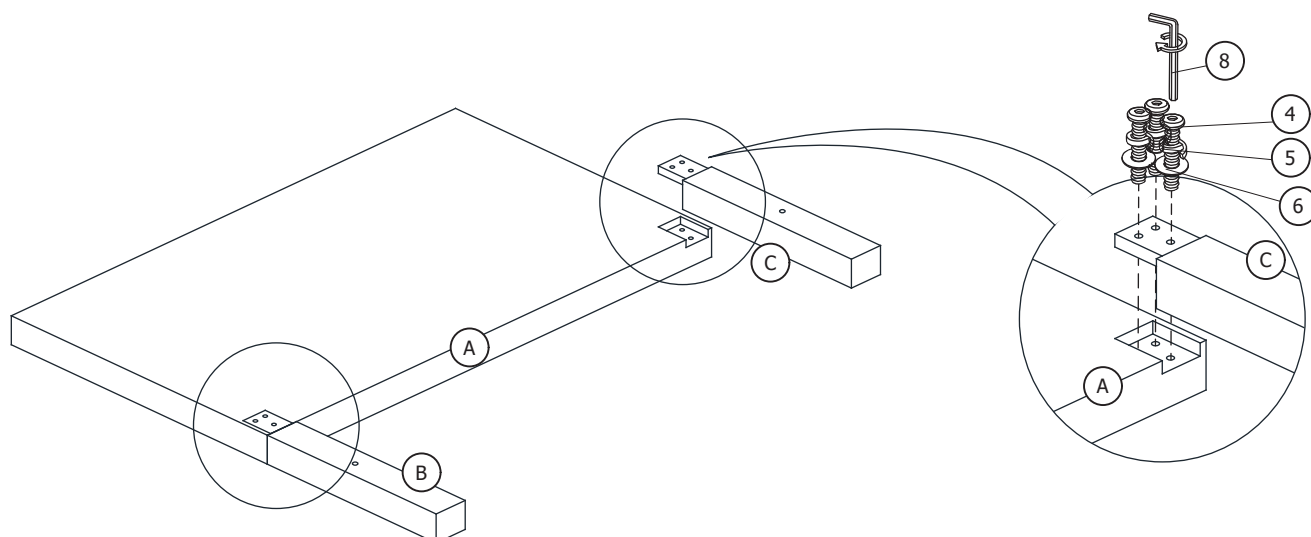


**STEP 2:** Attach the Headboard Support Rail (I) to the RSF Headboard Leg (B) and the LSF Headboard Leg (C) by using Allen Key (8) with hardware 3, 5, and 6.

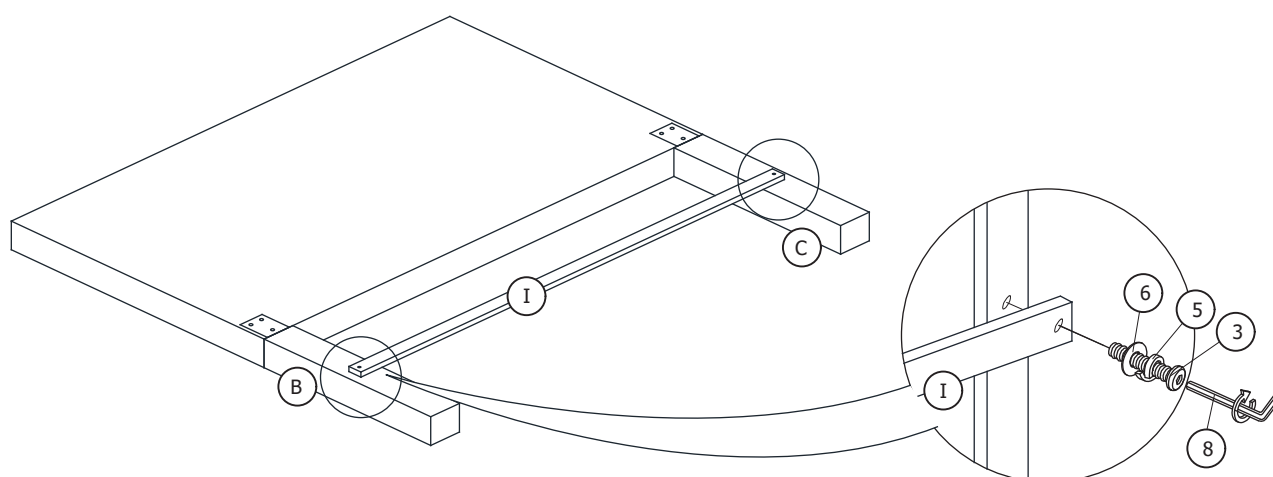


**STEP 3:** Place the Footboard (D) upside down. Attach the Footboard Leg (E) to the Footboard (D) by using Allen Key (8) with hardware 2.

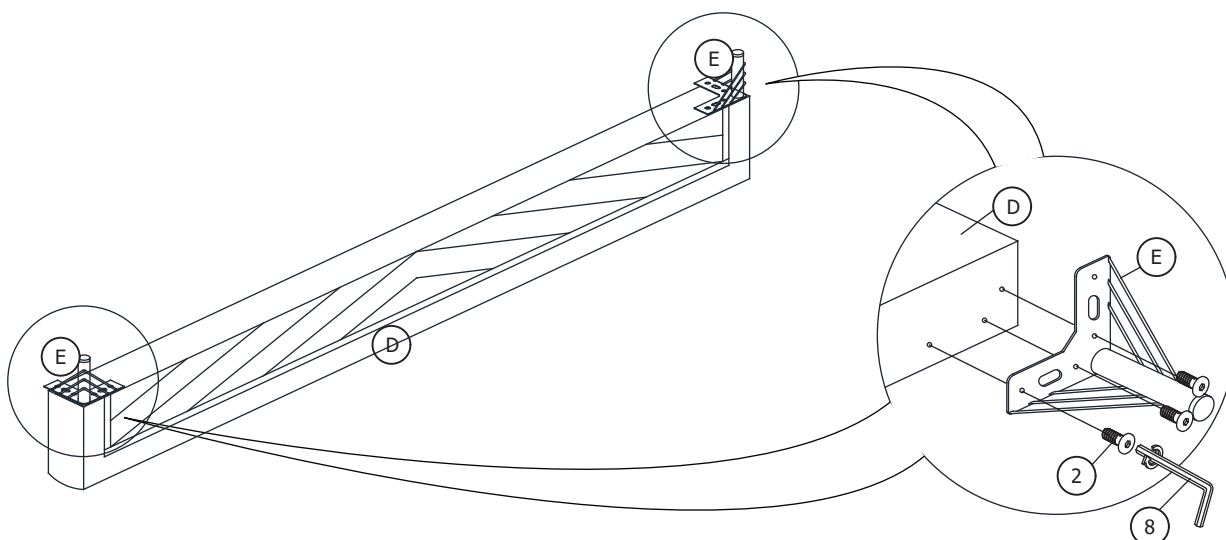


**STEP 4:** Attach the Side Rails (F) to the Headboard Legs (B & C) and to the Footboard (D) by using the Allen Key (9) with hardware 1.

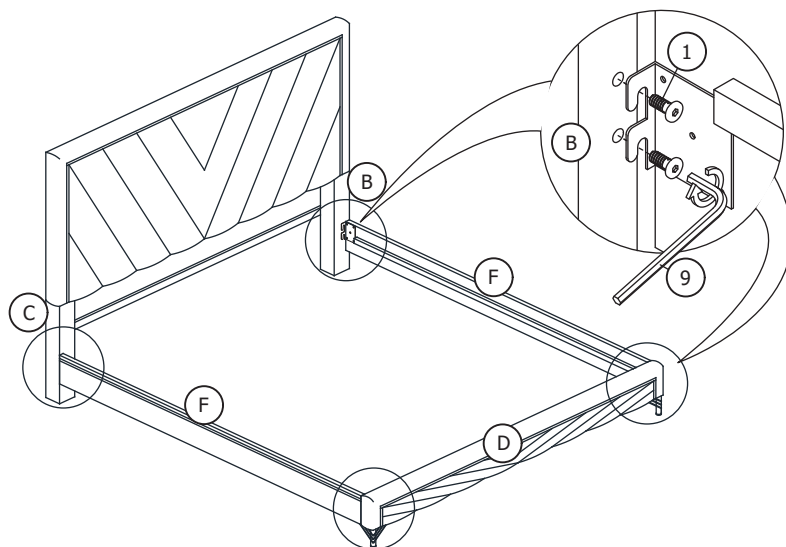


**STEP 5:** Assemble the Slat Support Leg (H) to the Slat (G) by using Allen Key (8) with hardware 3. Repeat for each slat.

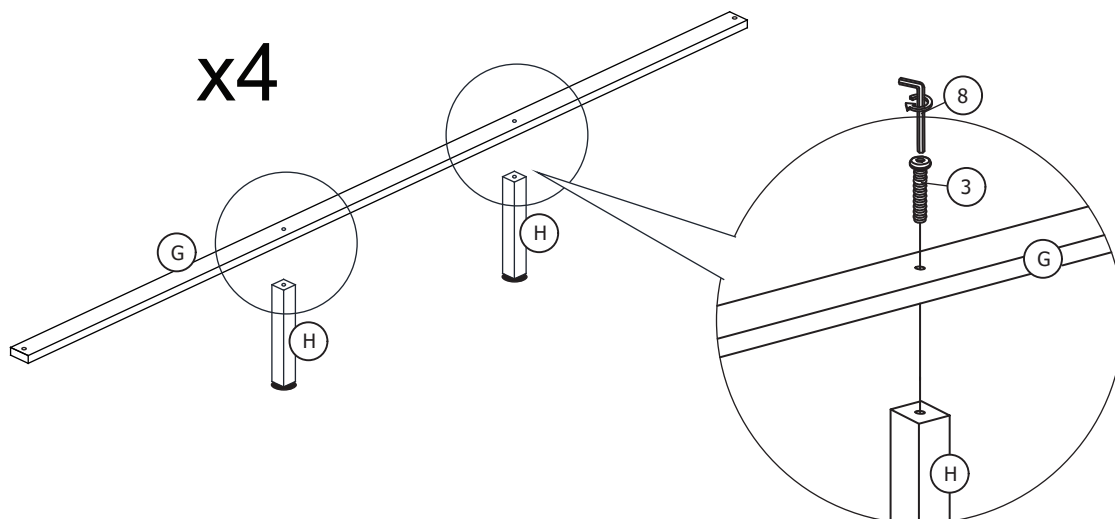

**STEP 6:** Assemble the Slats (G) to the Side Rails (F) by using a screwdriver with hardware (7).

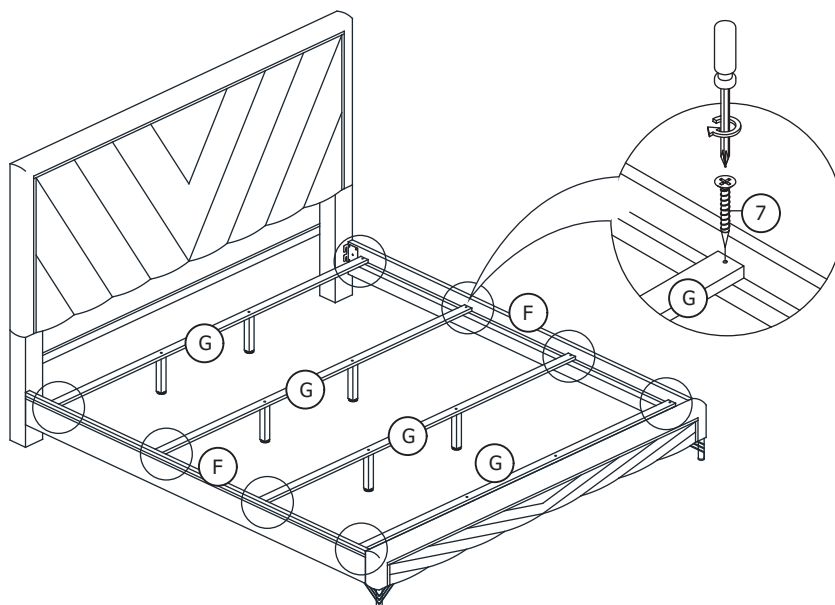

STEP 7 : Complete.

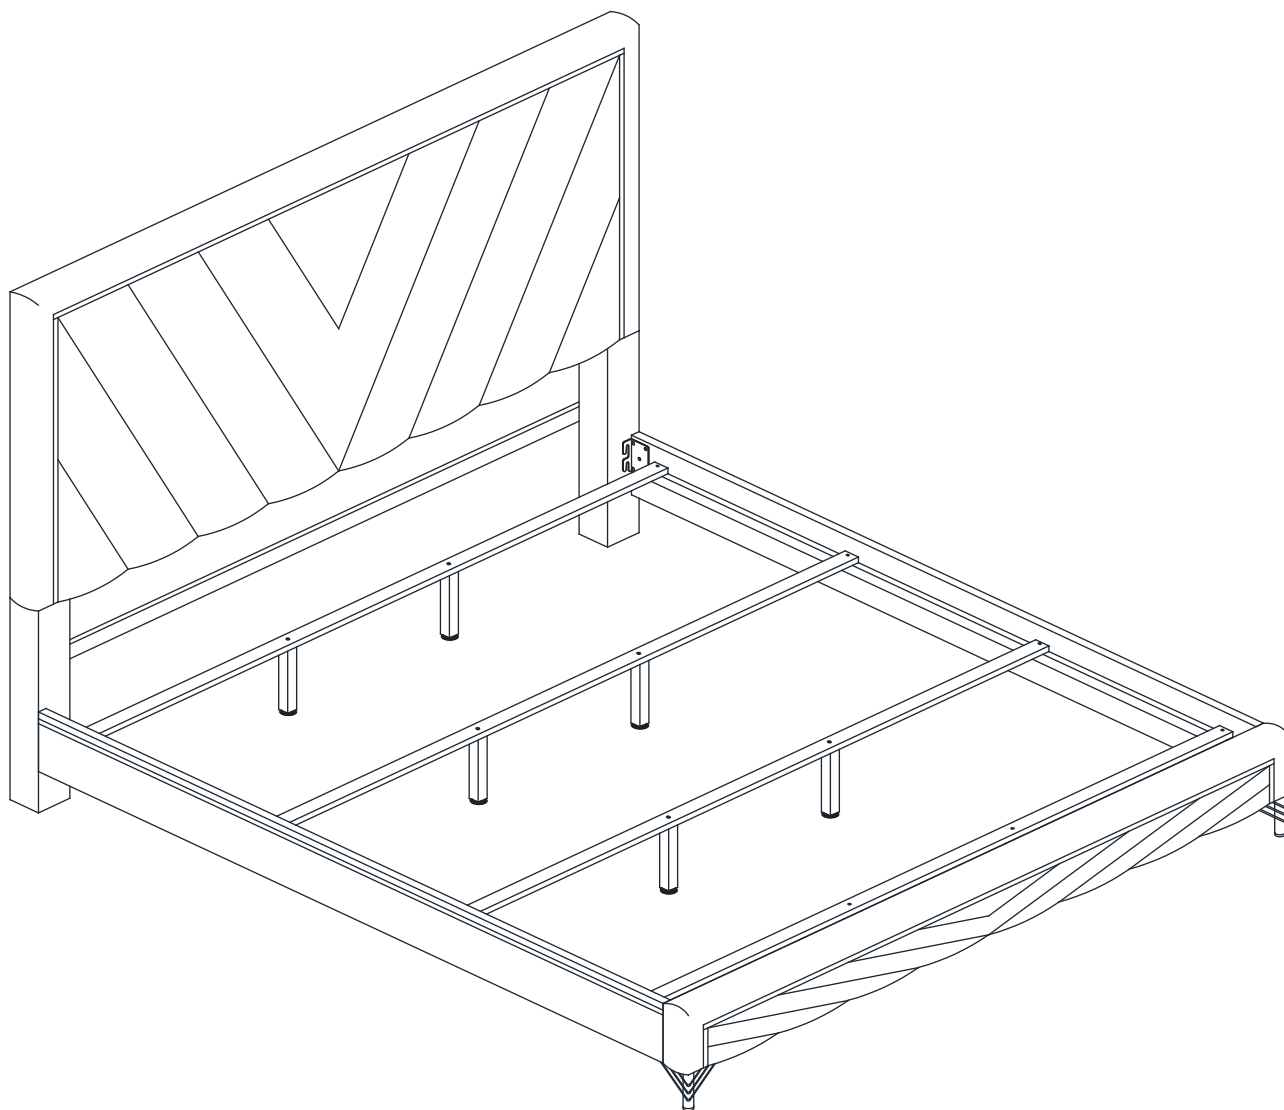

ASSEMBLY COMPLETED  
MADE IN MALAYSIA