

ASSEMBLY INSTRUCTIONS


MODEL # :338-131

MODERN DRESSER


(V#12600HMOVY)

NOTE: KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!!
UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.

STEP 1

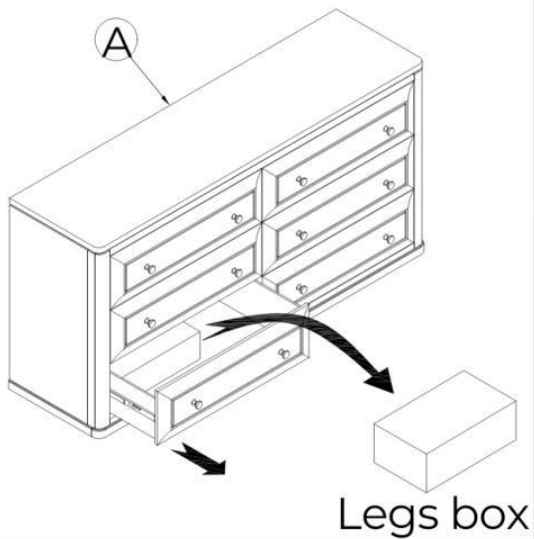

STEP 2

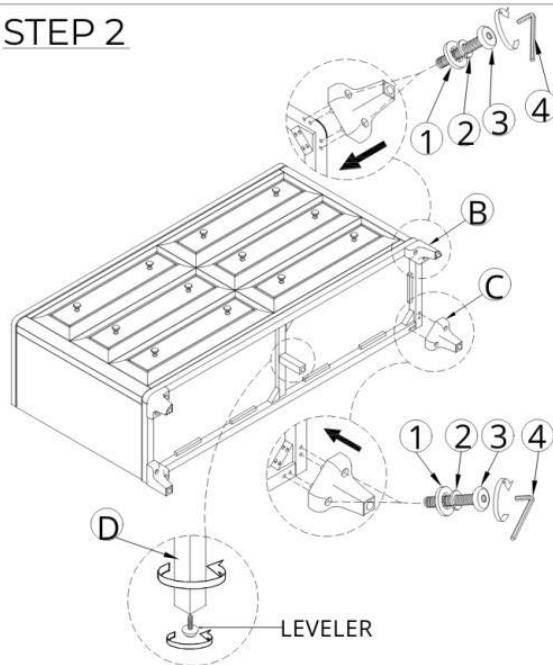

STEP 3

★ Remark: there is a tip restraint kit provided on the back of this product. Please read the directions thoroughly and install immediately when placed in home.



COMPLETED



ASSEMBLY INSTRUCTIONS

MODEL # :338-131 MODERN DRESSER (V#12600HMOVY)

NOTE: KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!!
UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.

No	PART LIST		Q'TY
A		BODY CABINET	1PC
B		FRONT LEG	2PCS
C		BACK LEG	2PCS
D		SUPPORT LEG	1PC

No	HARDWARE LIST			Q'TY
1		FLAT WASHER	ø5/16 x 19 x 1.5mm	8PCS
2		LOCK WASHER	ø5/16 x 13 x 1mm	8PCS
3 4		ALLEN BOLT	ø5/16 x 2"	8PCS
		ALLEN KEY	2-3/8 x 4mm	1PC
5		FURNITURE TIPPING RESTRAINT (Not included screwdriver)		1SET