

Attention


- . For easier assembly do not fully tighten the bolts until the product is fully assembled
- . Work on a protected surface
- . Periodically check and re-tighten all bolts
- . This product is not suitable for standing on
- . Never lean back on chairs
- . Not for commercial usage
- . When ordering parts please refer to and order by the parts list of the assembly instruction

Attention

- . Pour un assemblage plus facile ne serrez pas complètement les vis jusqu'à ce que le produit est entièrement assemblé
- . Travailler sur une surface protégée
- . Vérifier périodiquement et re-serrer tous les boulons
- . Ce produit n'est pas adapté pour le permanent
- . Ne jamais se pencher en arrière sur des chaises
- . Pas d'utilisation commerciale
- . En ordonnant des parties faites s'il vous plaît allusion à et l'ordre par la liste de parties de l'instruction d'assemblage

TA078-24- COUGAR-SMKE CHRCL PARSON 24CS (2PK) TA314-24 - BENGAL-24" STLS CORDN PRSNS

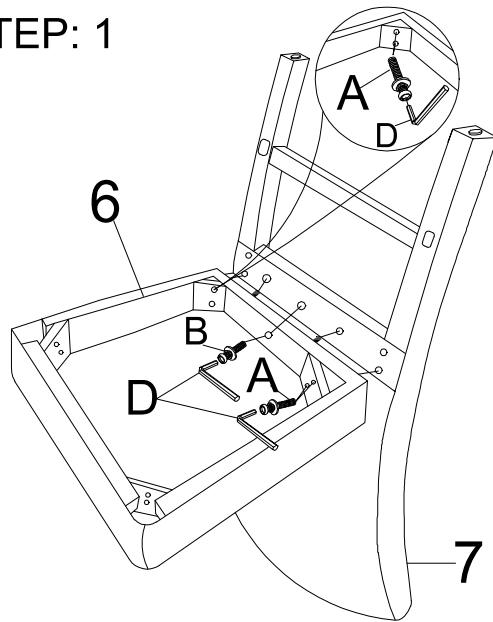
STEP: 1



Attach Seat cushion (6) to Backrest (7) using 1* Bolt (B) in center, 4*Bolt (A) as indicated.

Do not fully tighten bolts

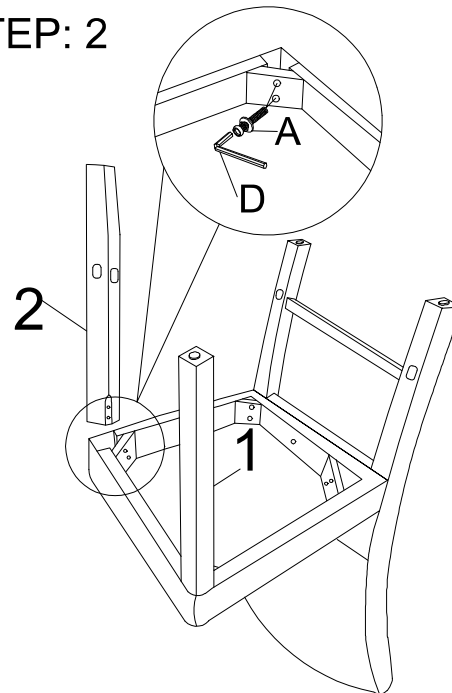
STEP: 2



Attach Left front leg (1) and Right front leg (2) locating as indicated on leg and Seat cushion using 4*Bolt(A).


Do not fully tighten bolts

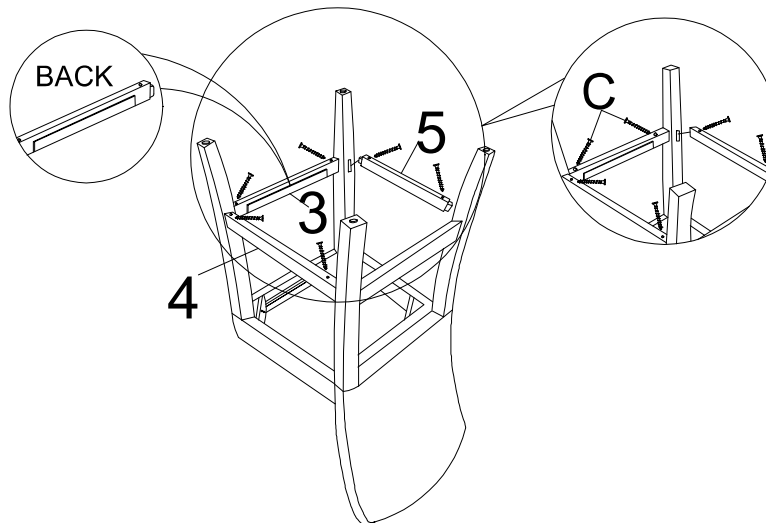STEP: 3











Attach Front stretcher (3), Left stretcher (4), Right stretcher(5) locating left and right as indicated by using 6*Screw (C).

Tighten all screws and bolts fully

A	8 PCS		Bolt Ø5/16"*3"
			Spring Washer 5/16"
			Flat Washer 5/16"
B	1 PC		Bolt Ø1/4"*1-3/4"
			Spring Washer 5/16"
			Flat Washer 5/16"
C	6 PCS		Screw #4*38 mm
D	1 PC		Allen key M4

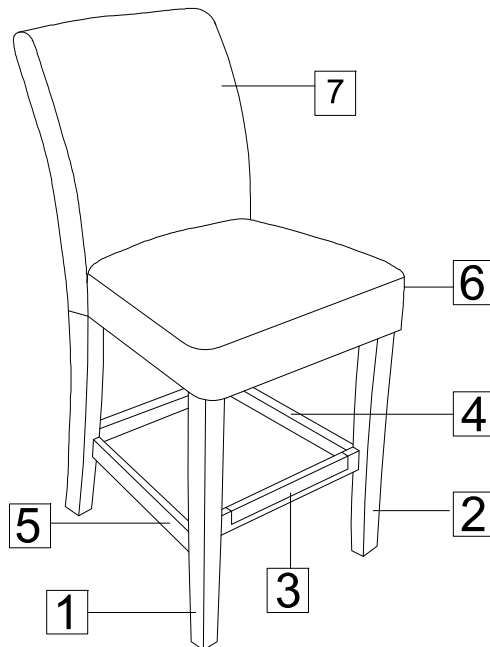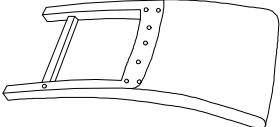TA078-24- COUGAR-SMKE CHRCL PARSON 24CS (2PK)
TA314-24 - BENGAL-24" STLS CORDN PRSNS



1		1 PC
2		1 PC
3		1 PC
4		1 PC
5		1 PC
6		1 PC
7		1 PC