

AL61087, AL61092

ASSEMBLY INSTRUCTION

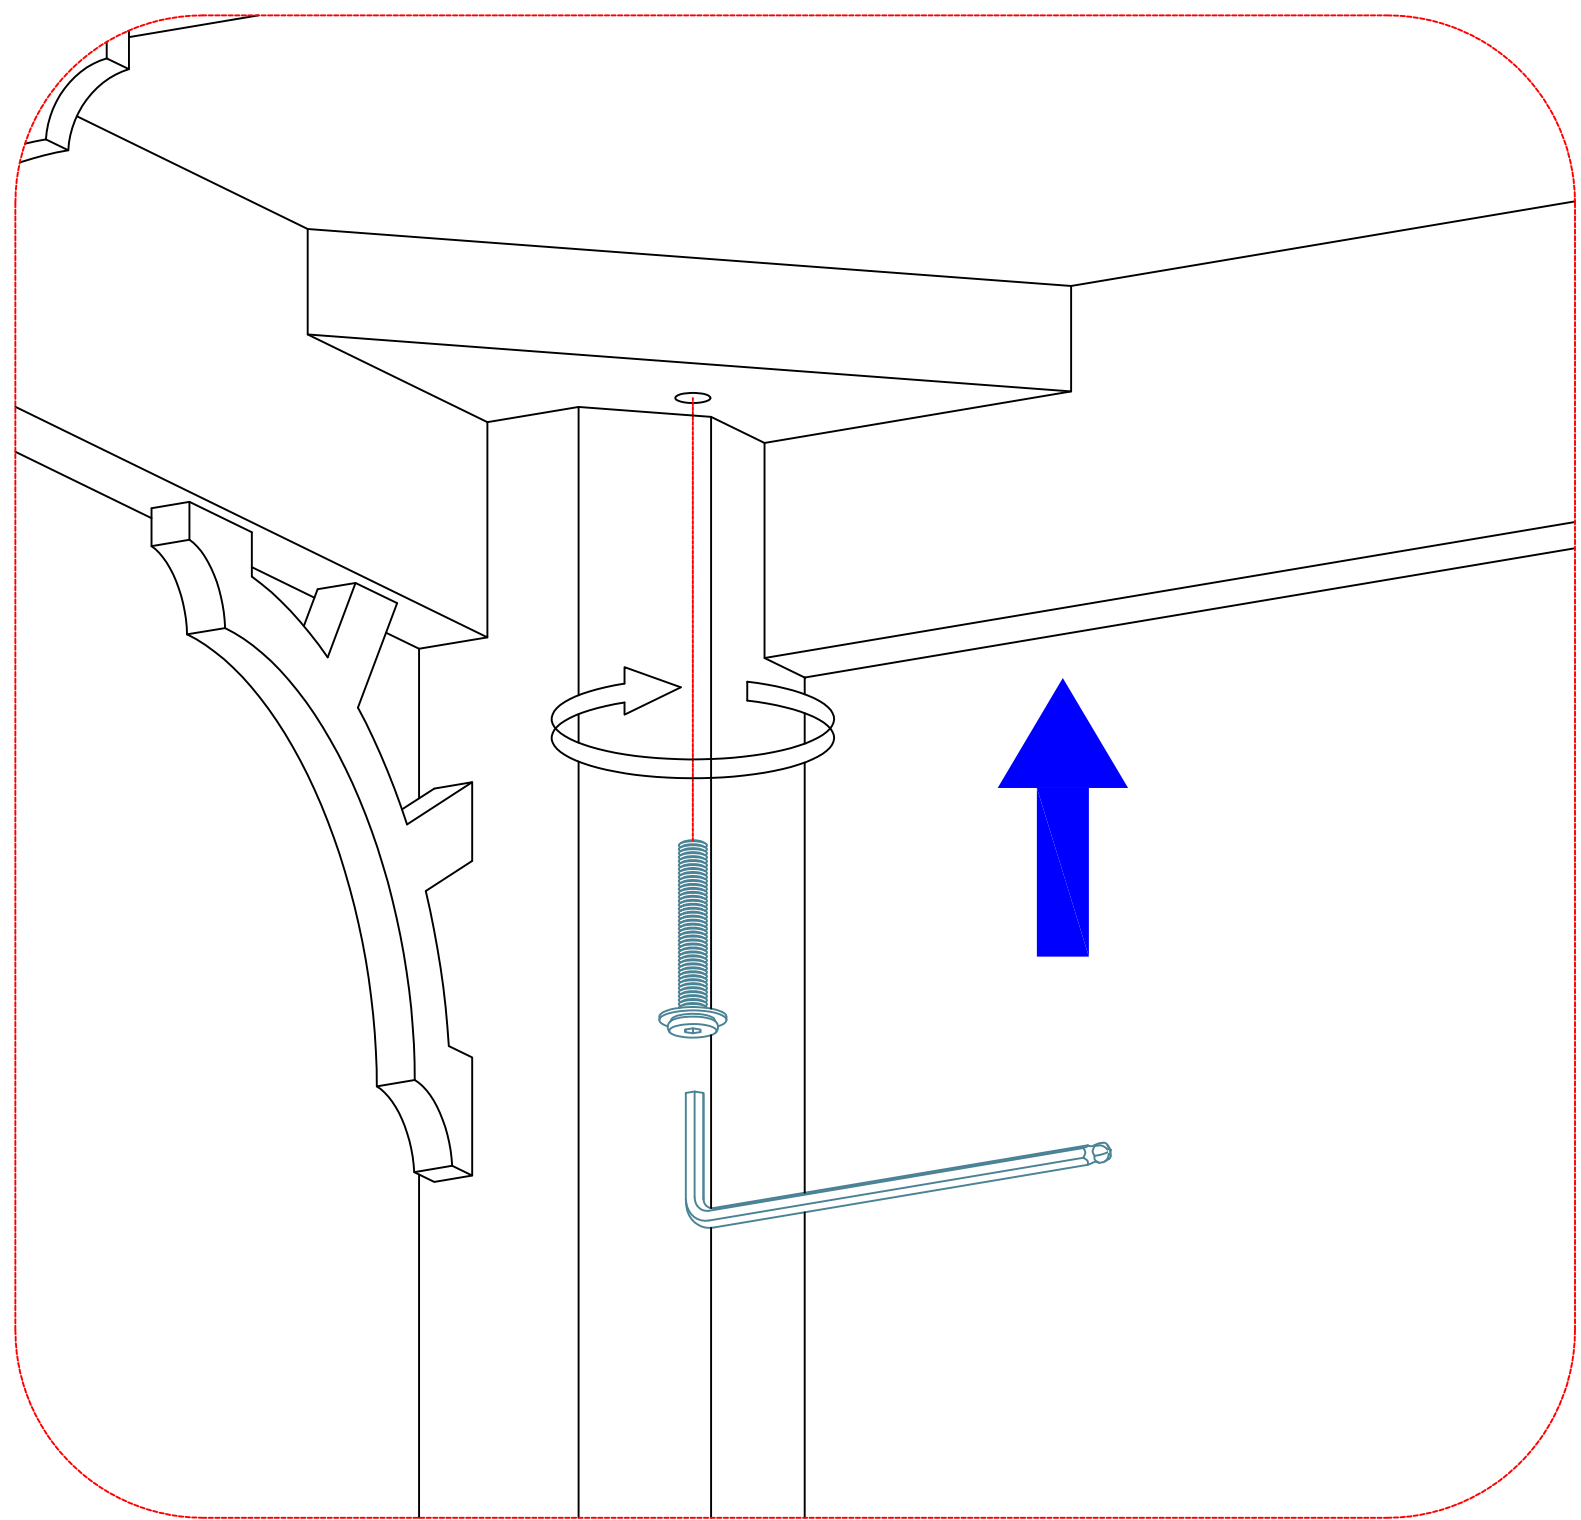
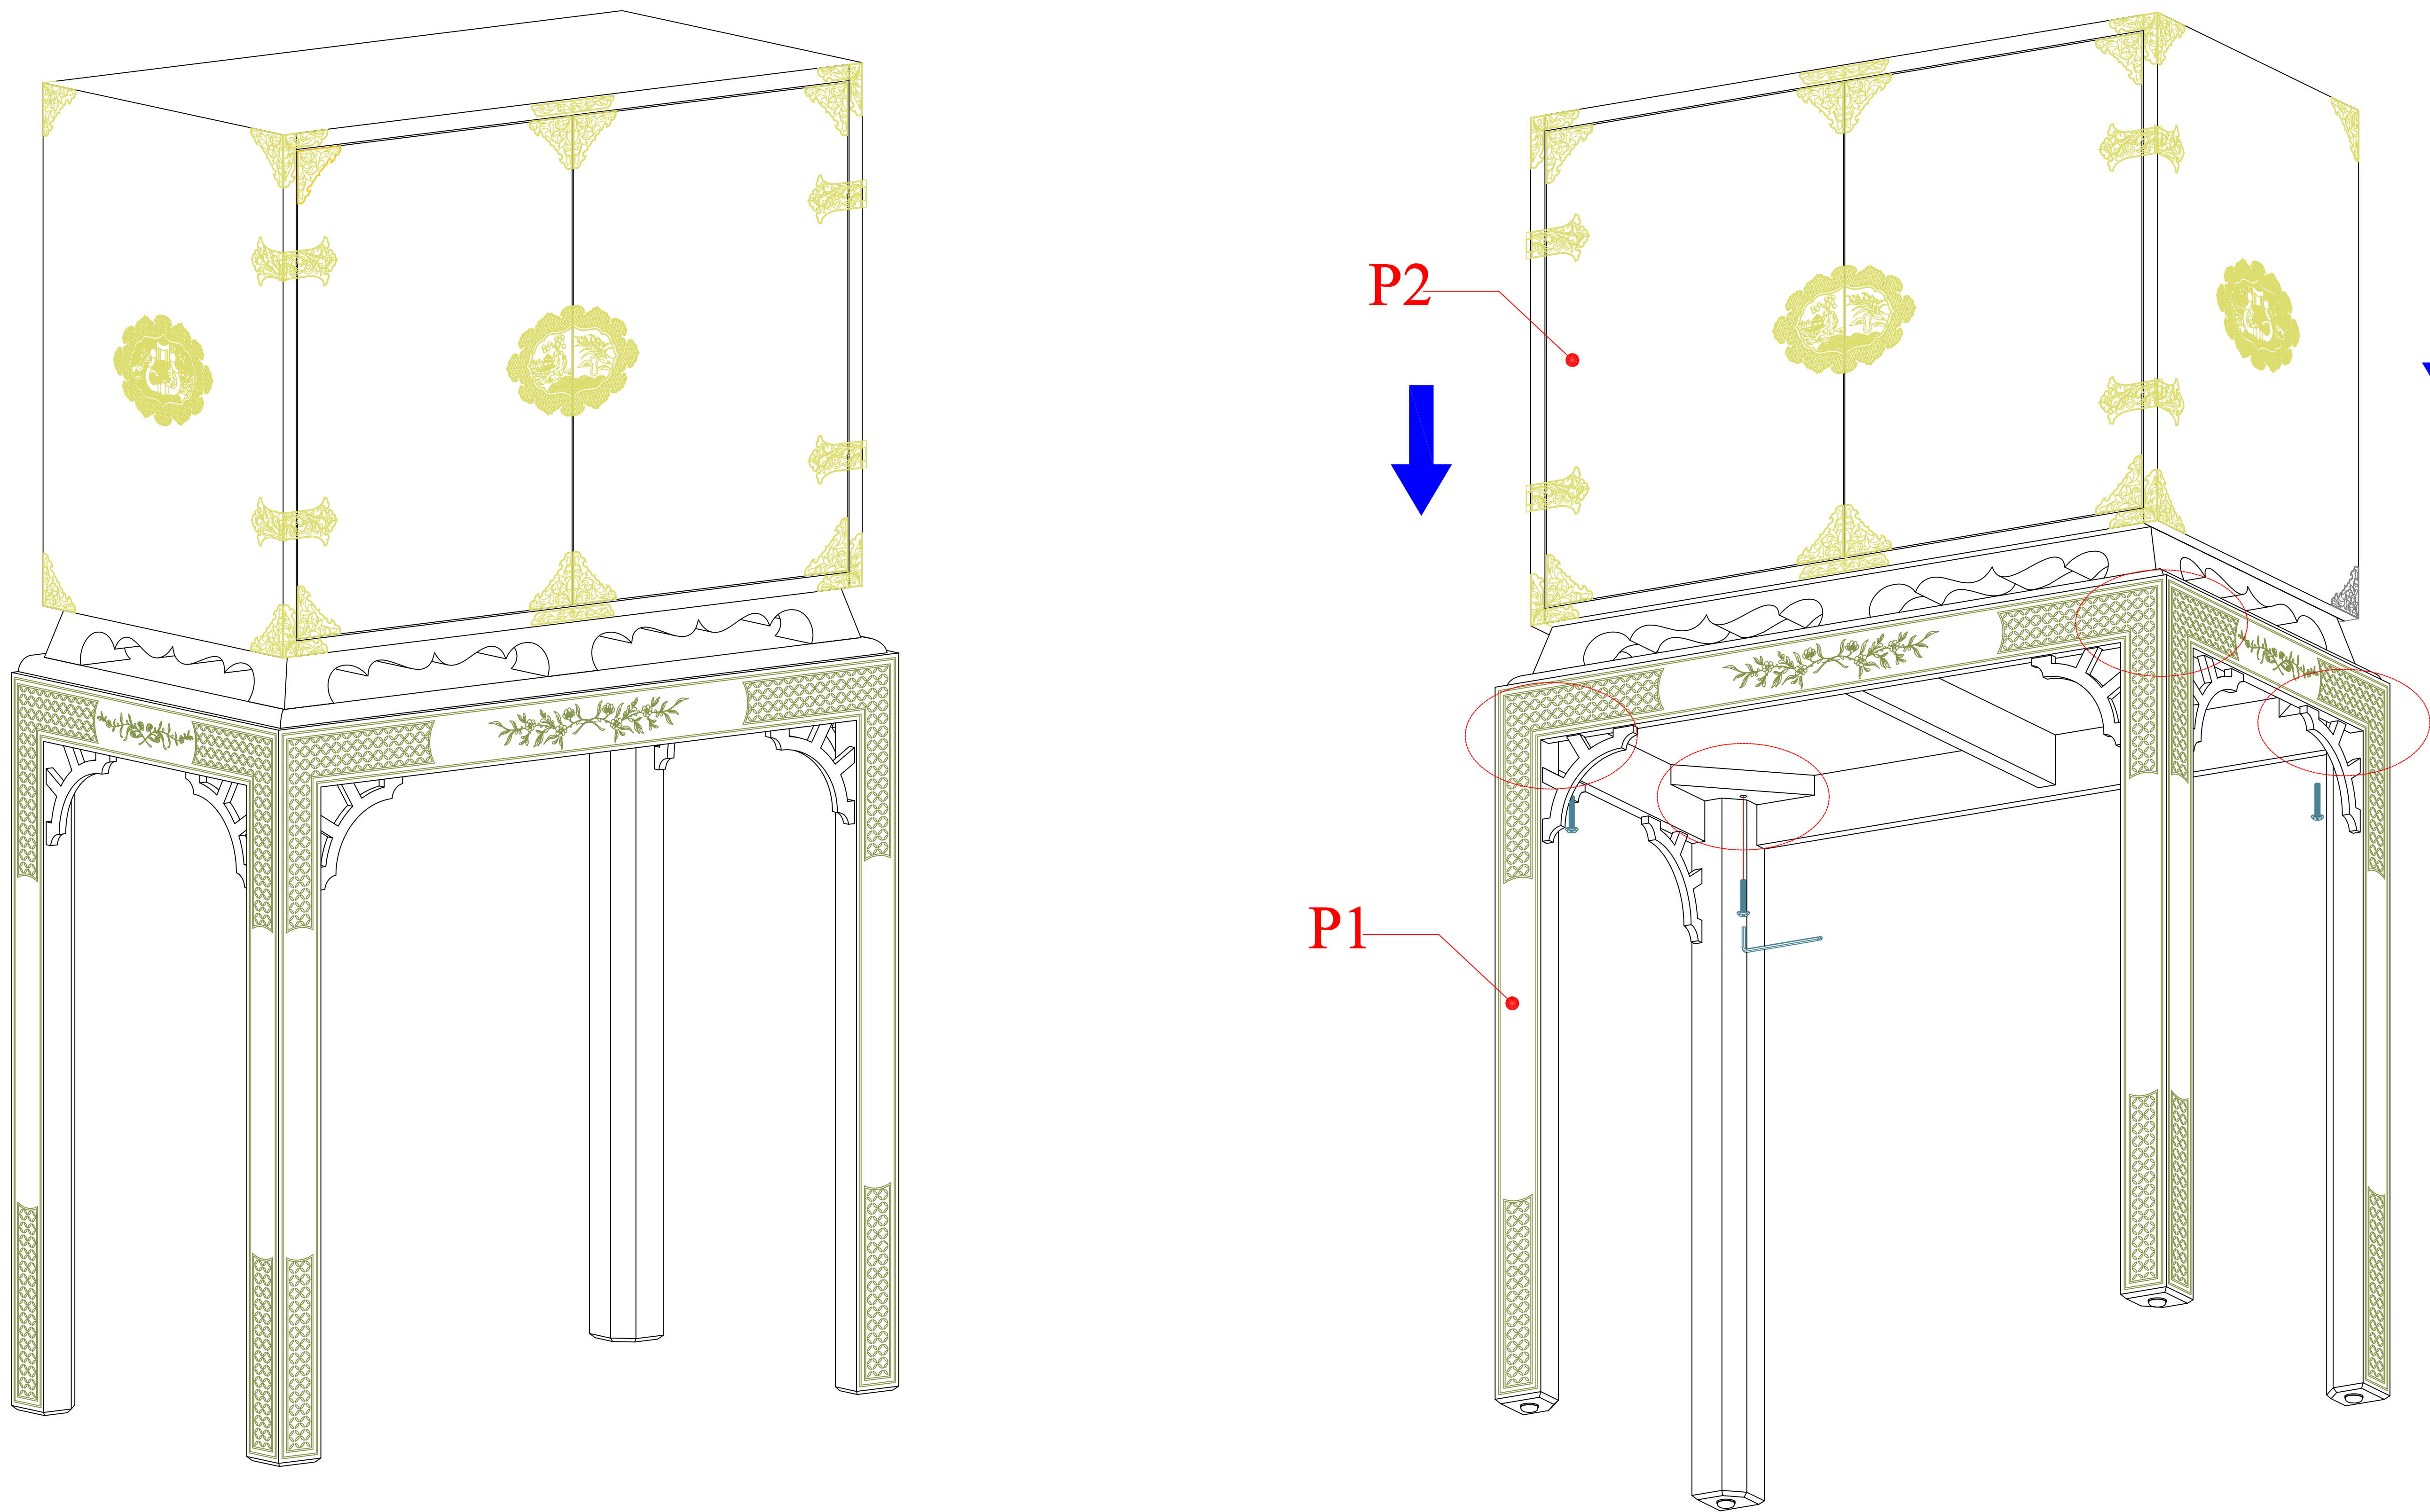
Pg: 1/3
Ver: 01

PACKING LIST

No.!	Name of Item	Q'ty	U/M
P1	Cabinet Base	01	pc
P2	Cabinet Hutch	01	pc
P3	Glass Shelf	02	pcs

HARDWARE

1	Steel allen bolt & washer	04	set
2	Steel allen open wrench	01	pc
3	Hangman Tip Kit	01	set



Detail 'A'

INSTRUCTIONS :

1. Pre-set the cabinet base on your desire location gently place the cabinet hutch on the cabinet base.
2. Fix the cabinet hutch to the cabinet base by using the steel allen bolts with washers. See Detail 'A'.

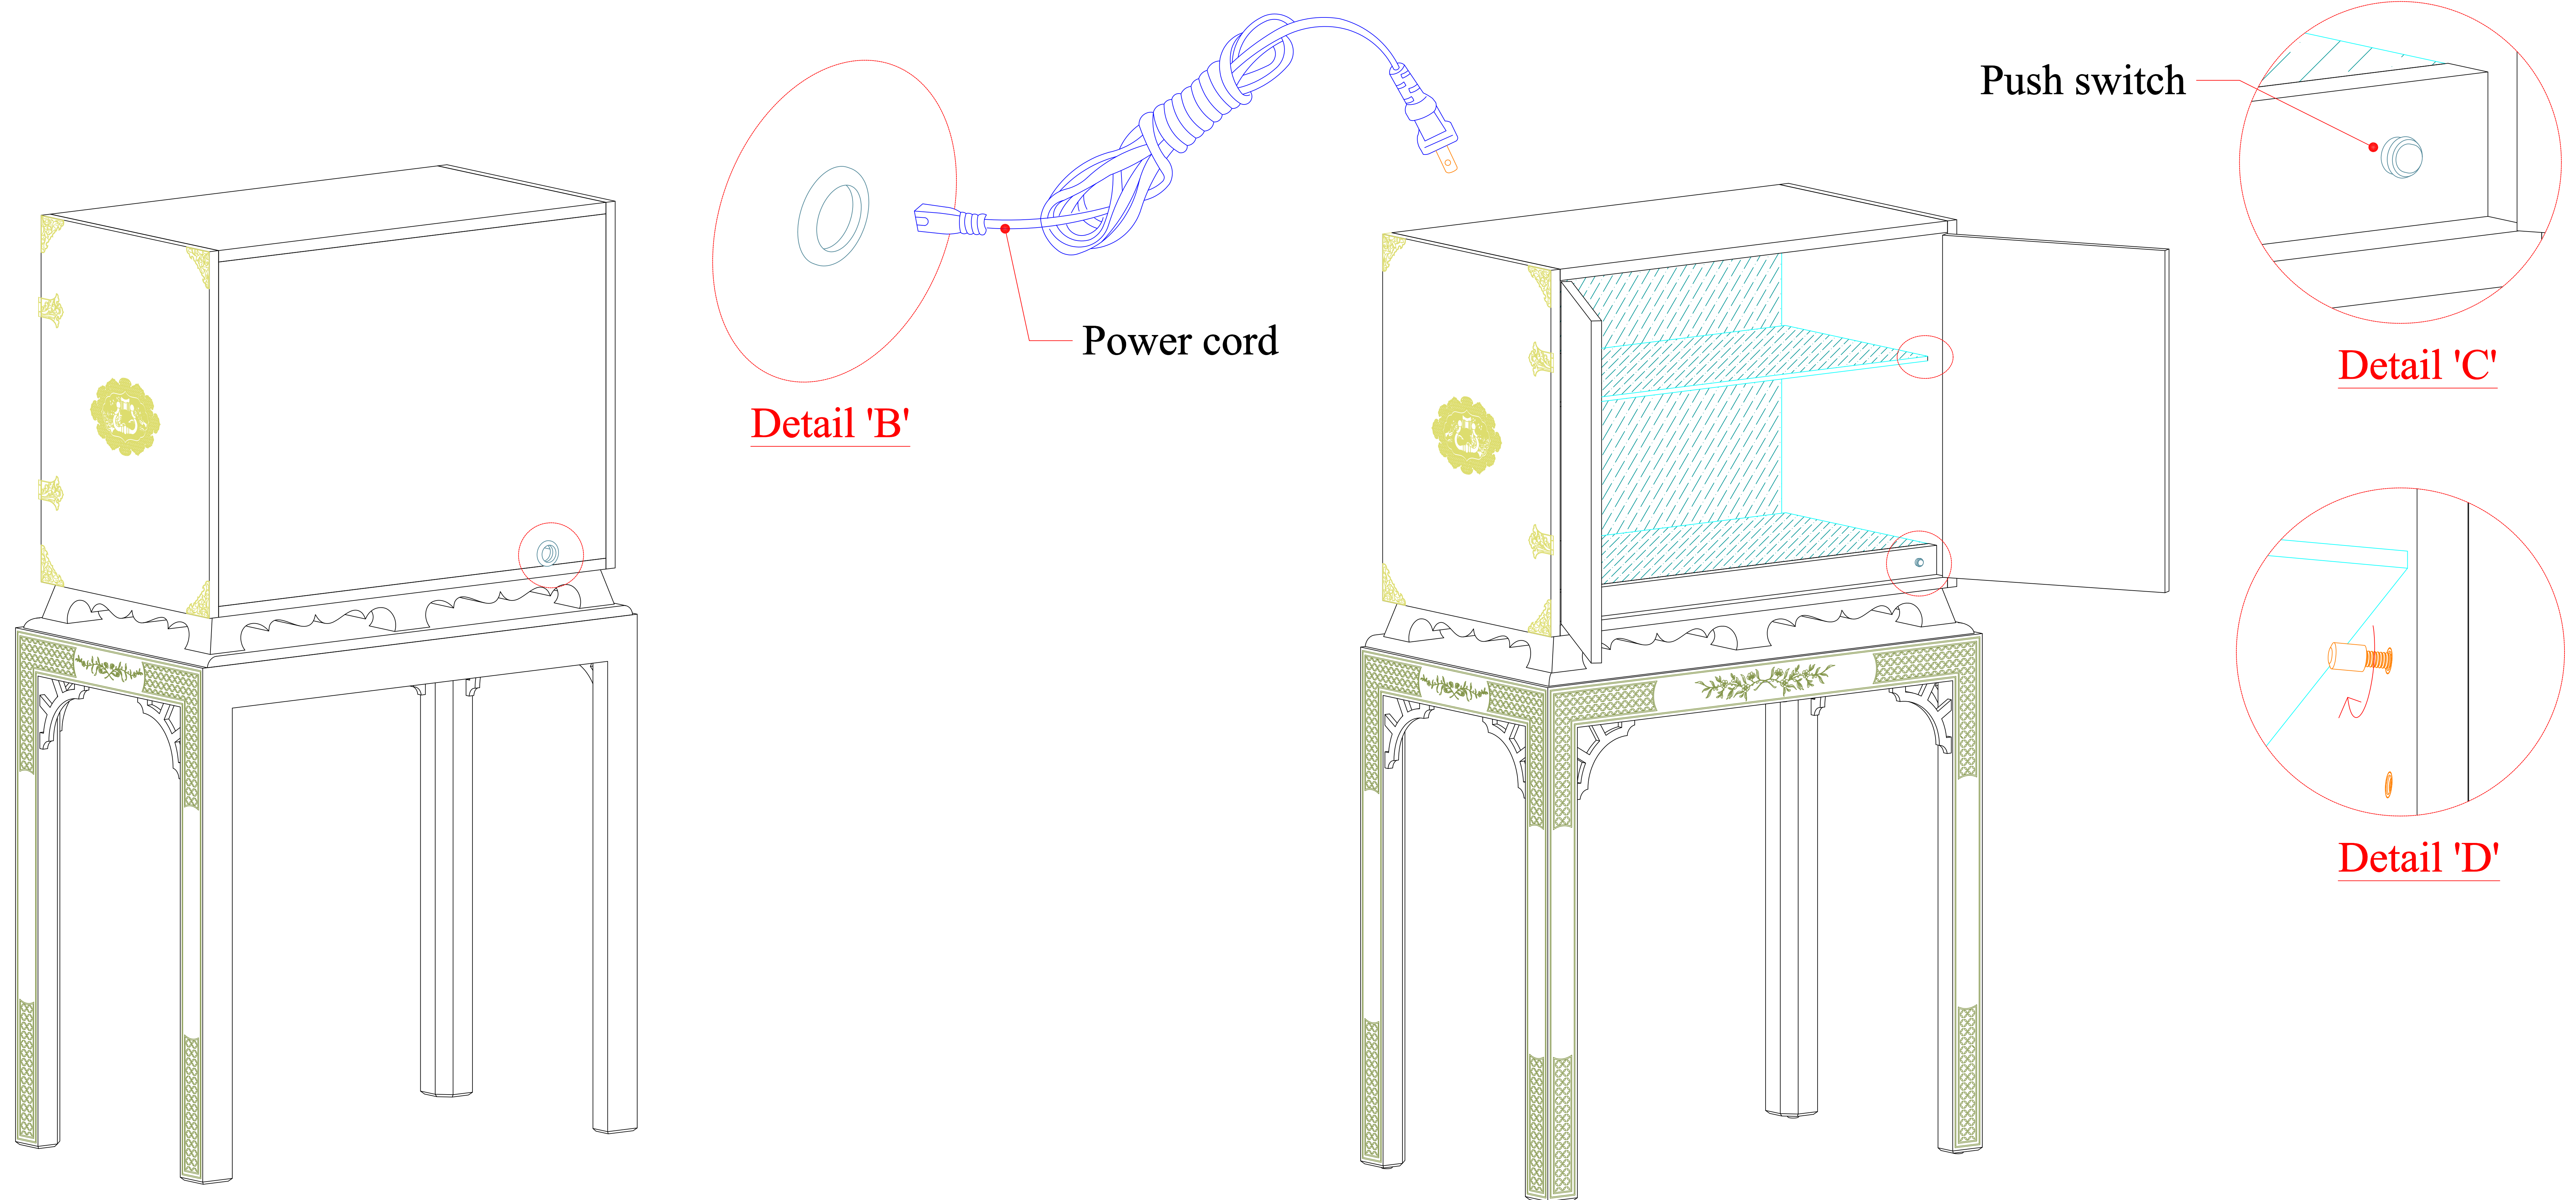
Draw: H Giang
Date: Nov 02, 18

AL61087, AL61092

ASSEMBLY INSTRUCTION

Pg: 2/3

Ver: 01









3. Plug the power cord to the adapter and outlet on the wall then test the lights by pressing on the push switch. You can see the switch on bottom-right of the cabinet hutch. Refer to detail 'B' & 'C'.
// If the light dose not work, please double-check all the connection between the power cord and adaptor outlet on the wall.
4. Open all the doors and install the shelf holder then place the glass shelves on the shelf holder see Detail 'D'.

Draw: H Giang

Date: Nov 02, 18

ANTI TIP KIT INSTALLATION INSTRUCTION

1. Pre-set the furniture against the wall on your desire location. Mark with pencil location of the anti tip kit bracket on the wall. The anti tip kit wall bracket should be near the center position of the furniture top back edge, measured approximately 1" from top back edge of the furniture.
2. Remove the furniture then attach an anti tip kit bracket to center position of the furniture top panel back side or the solid under top back rail (if the solid under top back rail is available). Use the shorter screws. See FIGURE 1.
3. Connect the steel cable to the anti tip kit bracket on the furniture as illustration in FIGURE 2.
4. On the location that you have marked on the wall, attach the second anti tip kit bracket to the wall by using the longer screws as illustration in FIGURE 3. WE DO NOT RECOMMEND TO ATTACH THE ANTI TIP KIT WALL BRACKET TO THE DRY WALL WITHOUT STUDS. IT SHOULD BE ATTACHED INTO A WALL STUD OR CONCRETE WALL.
5. Set the furniture against the wall again and connect the steel cable to the anti tip kit wall bracket. Refer to FIGURE 4.

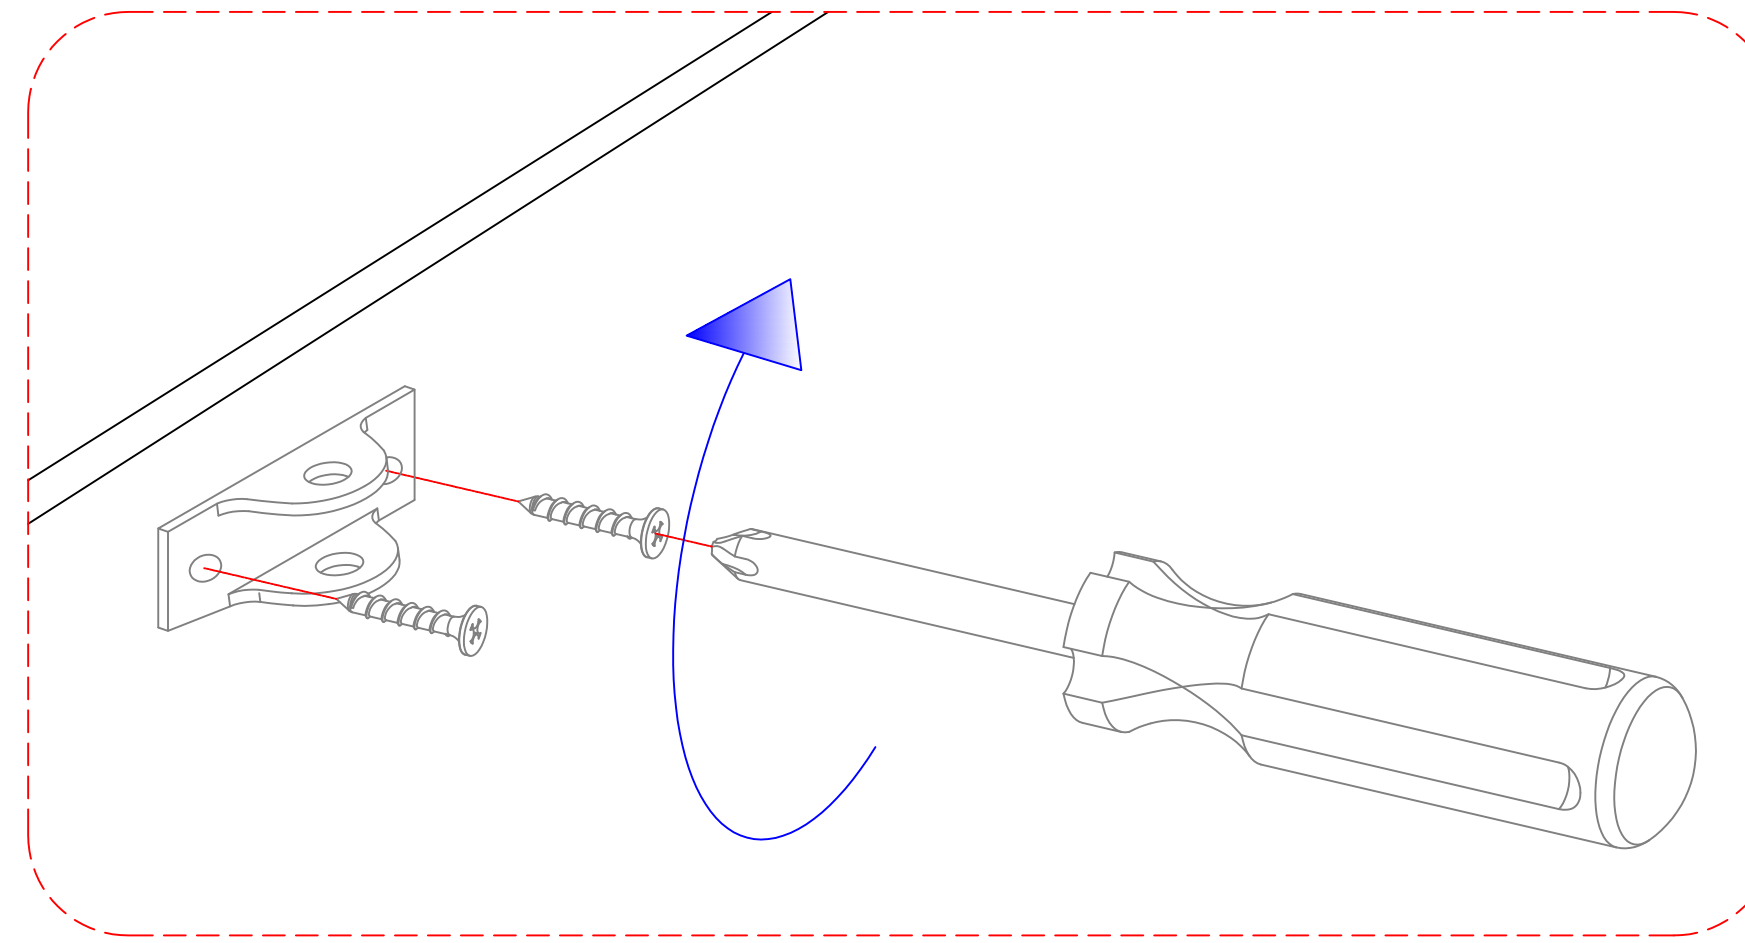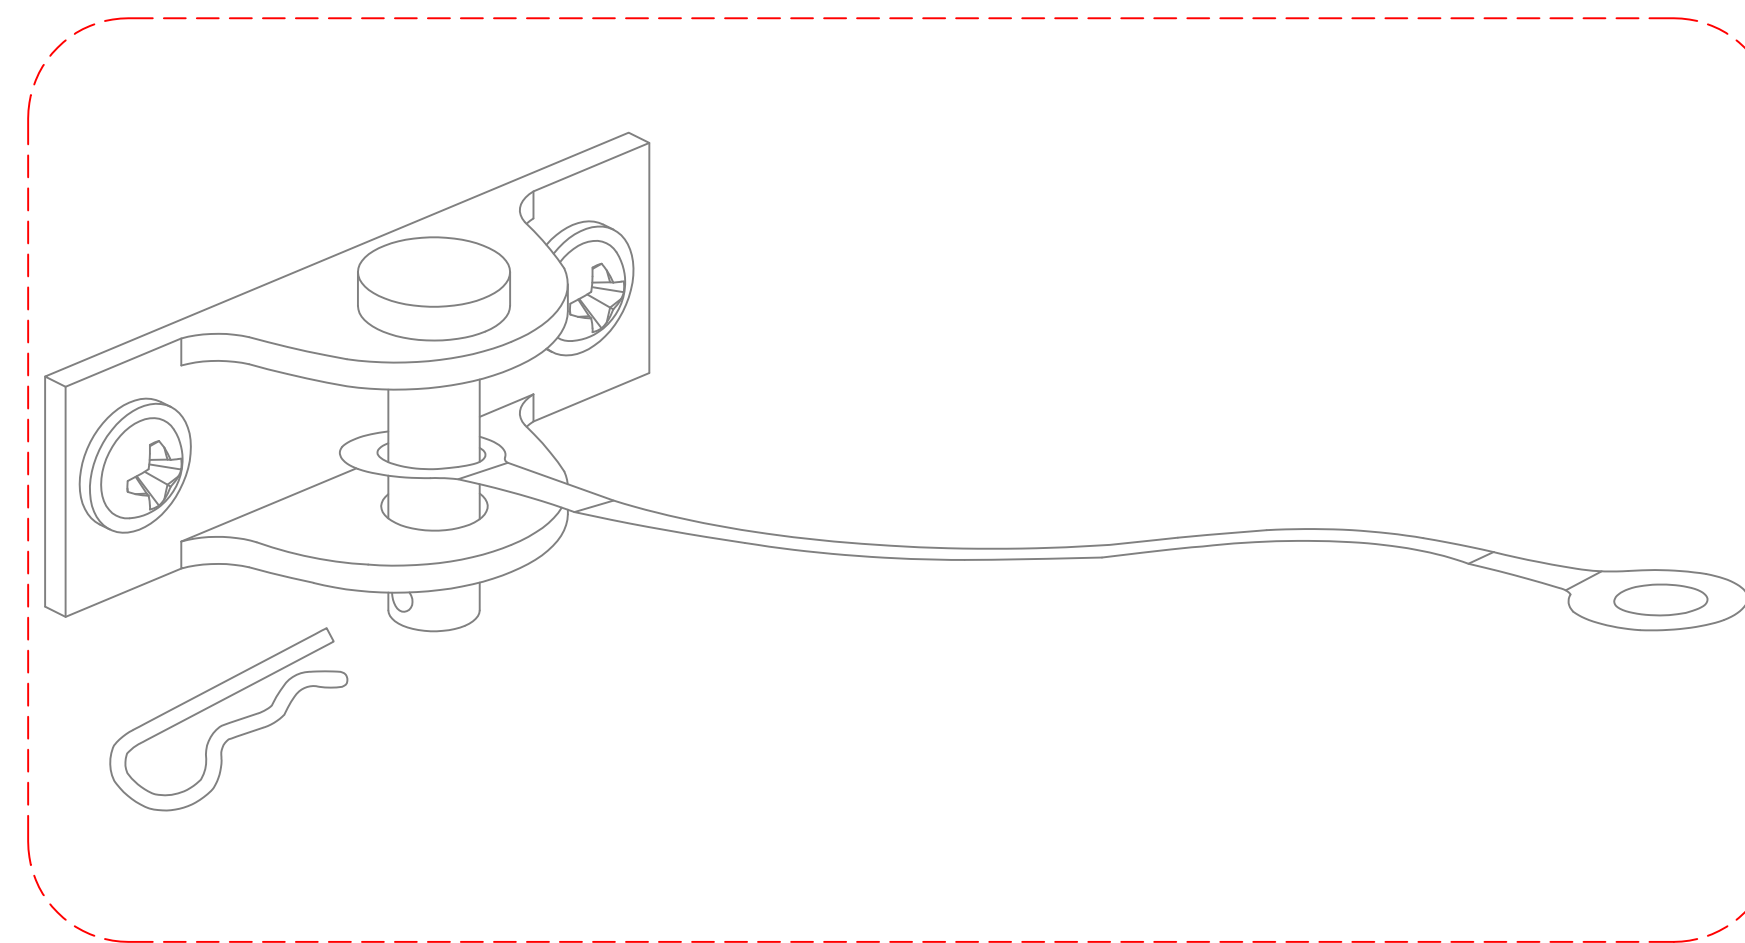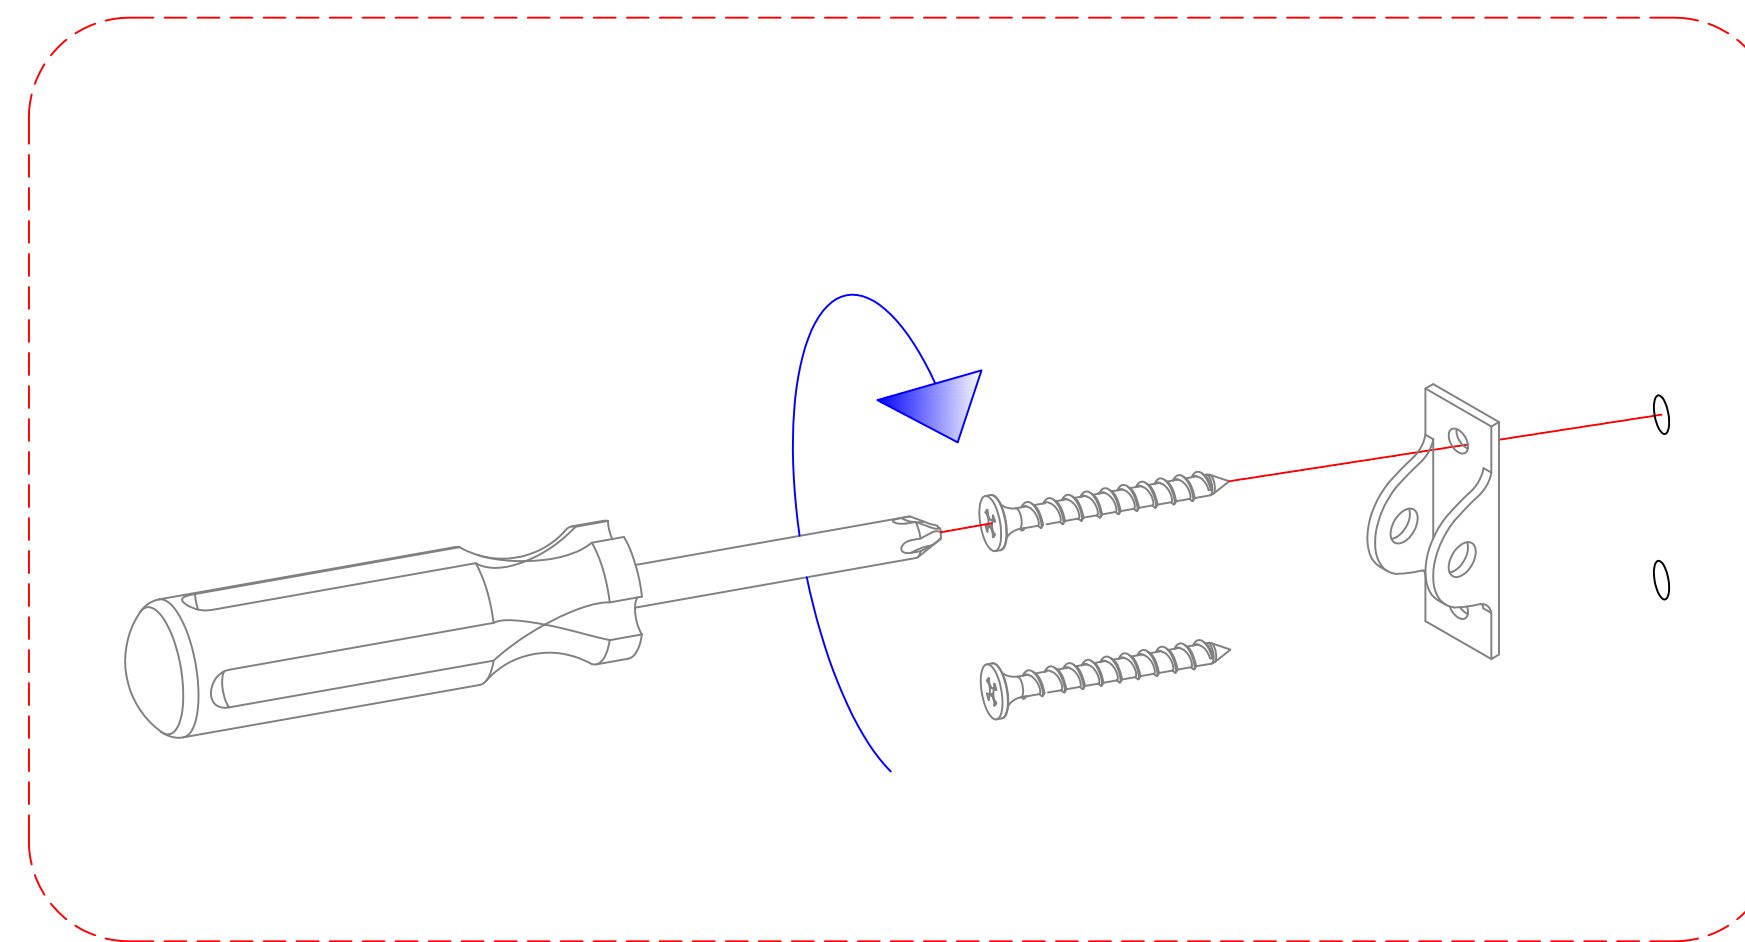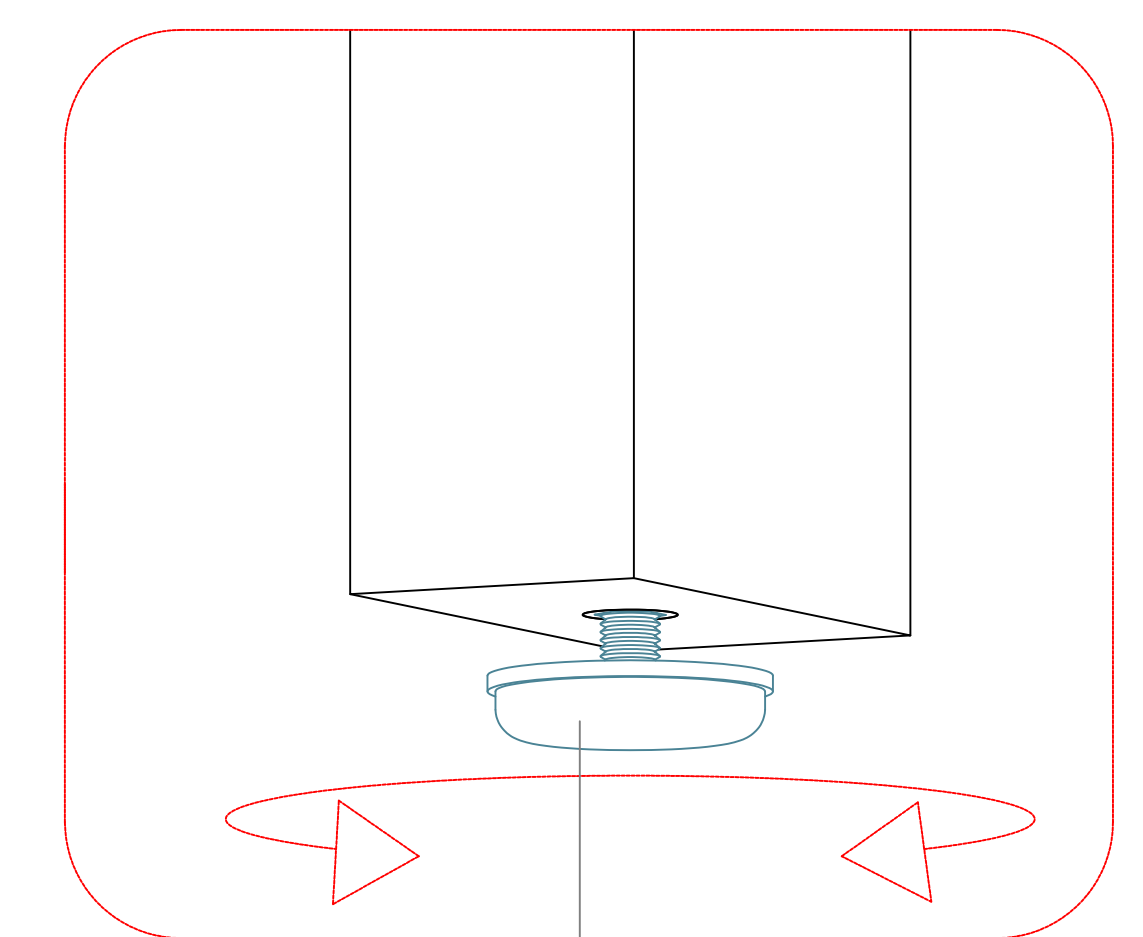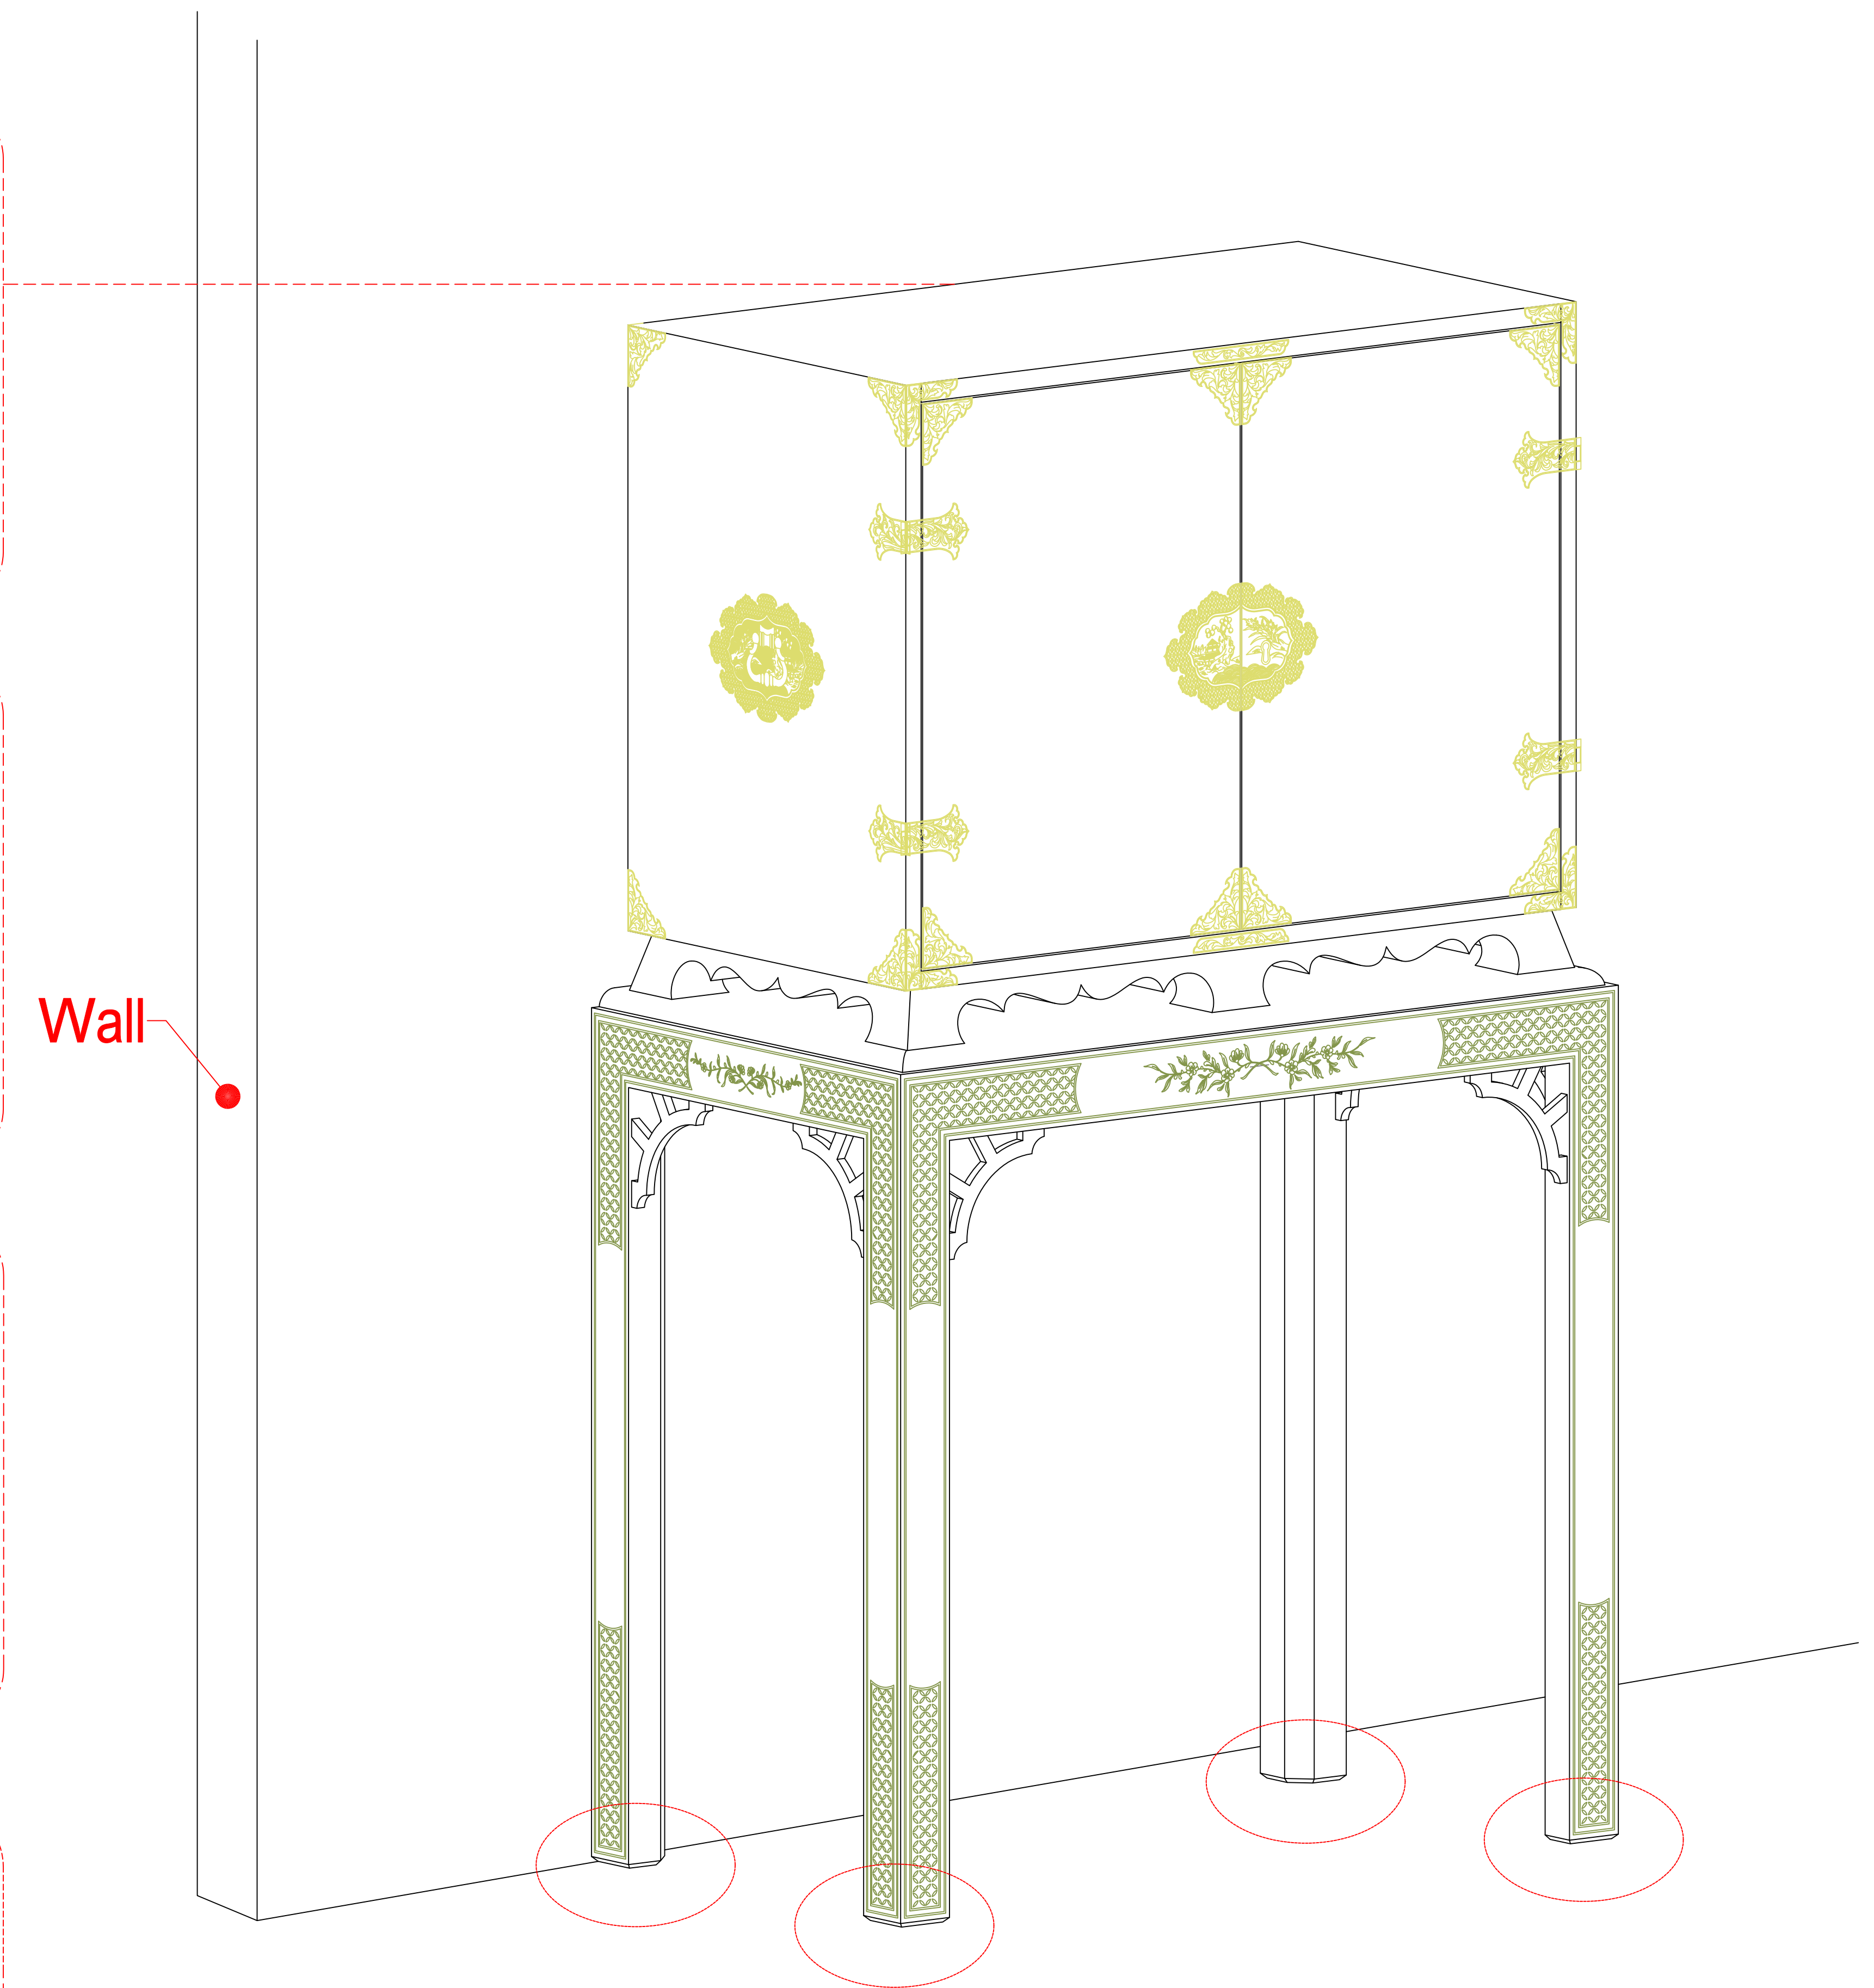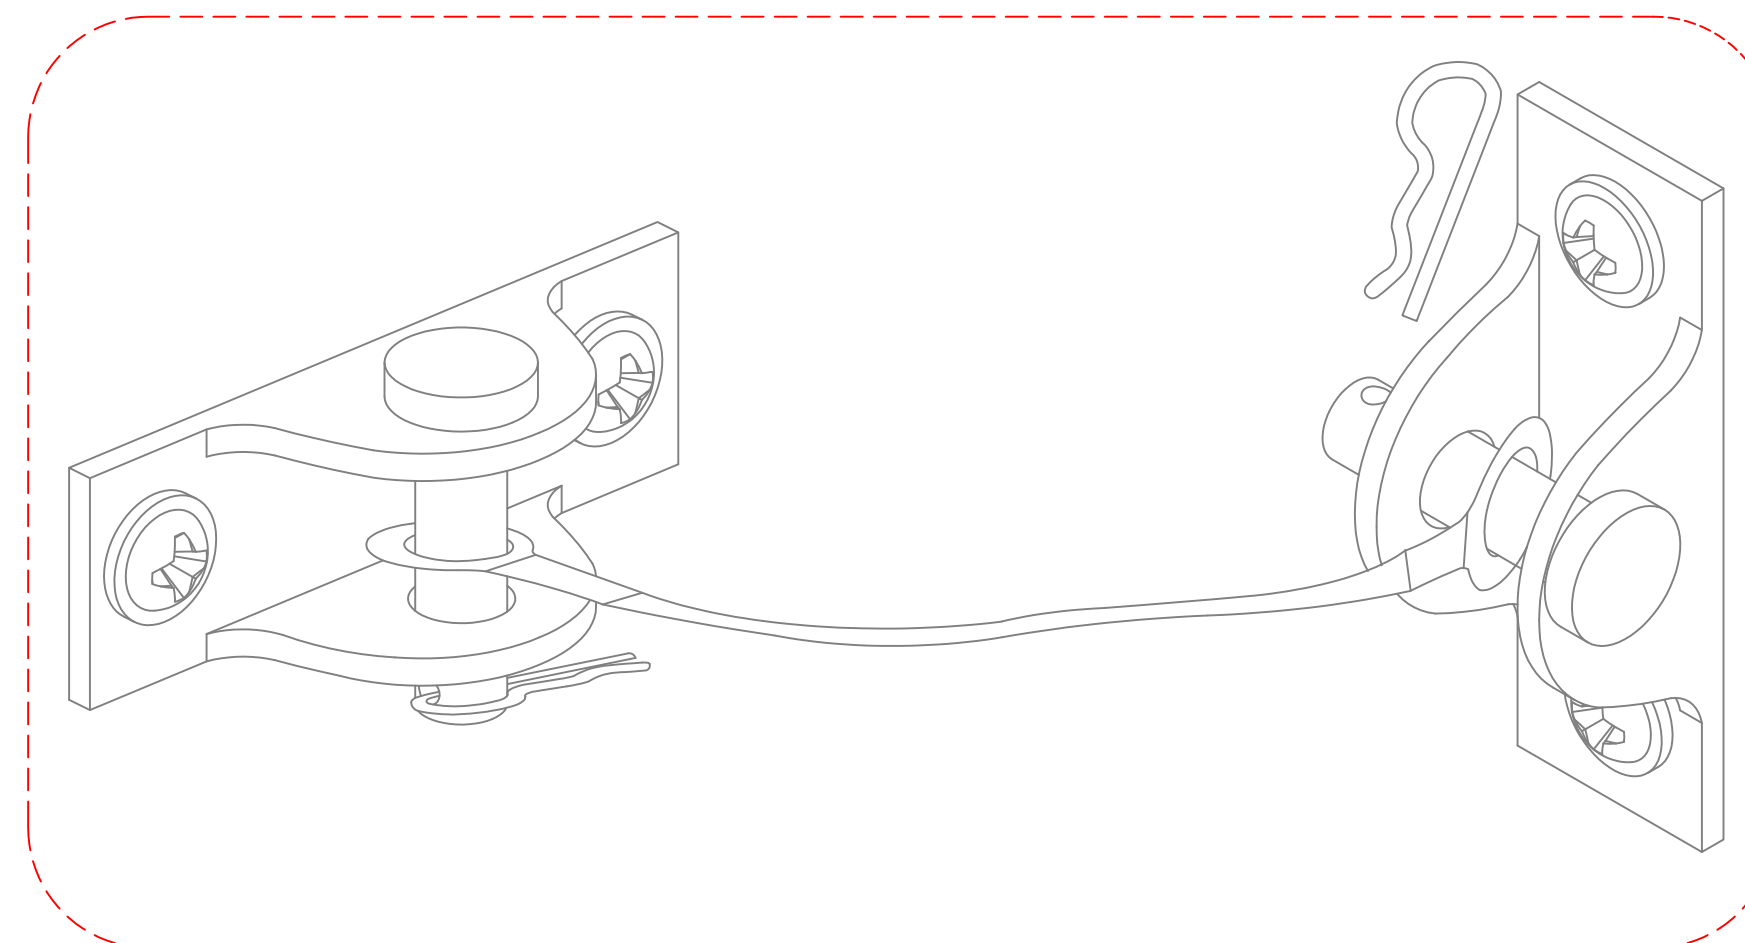FIGURE 1**FIGURE 2****FIGURE 3****FIGURE 4**

Adjust Leveler to level the furniture