


PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

INSTRUCTIONS (A)

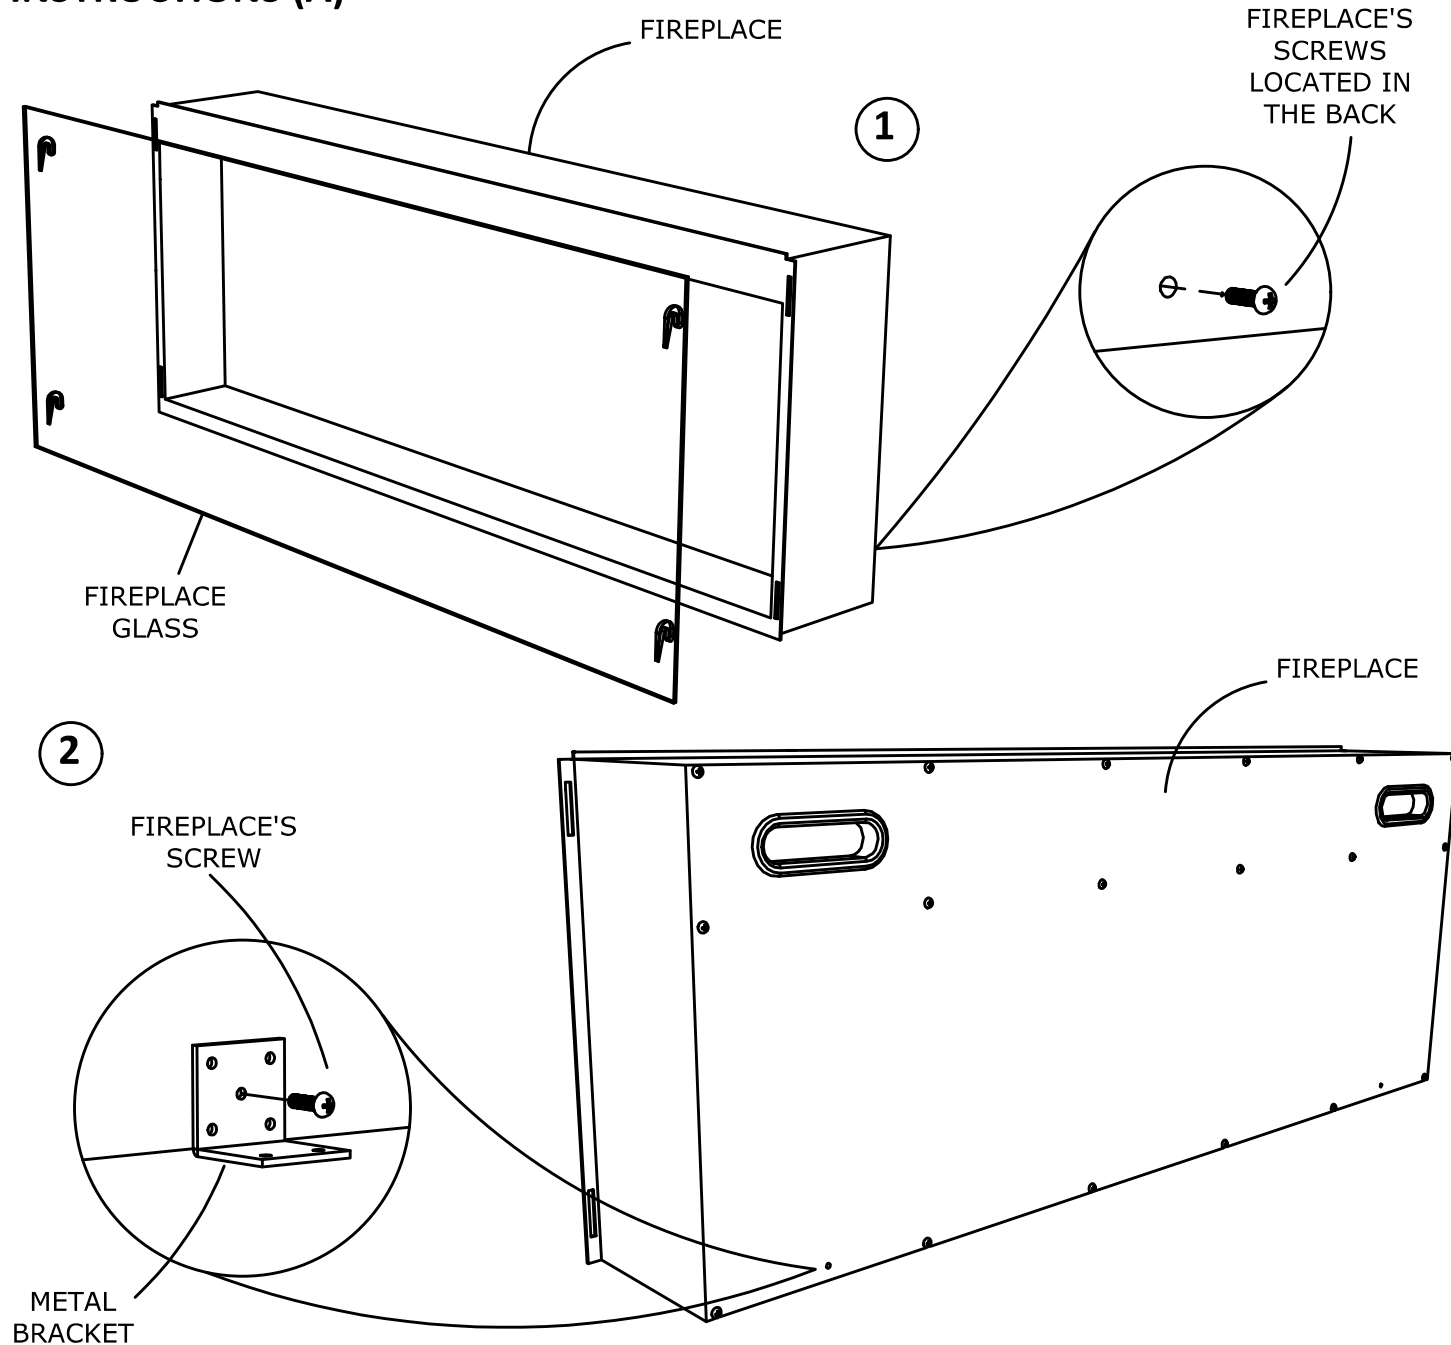

INSTRUCTIONS:

1. BEFORE START ASSEMBLING THE FIREPLACE, YOU MUST TAKE OUT THE GLASS OF THE FIREPLACE AND THE SCREWS, YOU WILL USE THEM LATER.
2. SCREW THE METAL BRACKETS TO THE FURNITURE FLOOR WITH THE TEMPLATE.



ASSEMBLY INSTRUCTIONS

I-EFP-C002

2/2

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

INSTRUCTIONS (B)

FIREPLACE

3

FLAT HEAD
SCREW 6 x 3/4"

4

FIREPLACE
GLASS

FIREPLACE

HARDWARE

DESCRIPTION	# PCS
FLAT HEAD SCREW 6 x 3/4"	4

INSTRUCTIONS:

- WITH SOMEONE HELP, PUT THE FIREPLACE UNTIL YOU CAN SCREW THE METAL BRACKET WITH THE FIREPLACE, AND SCREW THEM.
- PUT THE GLASS PANEL IN THE FIREPLACE.