

# **CLA-024-104H & CLA-024-104F & CLA-024-104R**

## **CARACOLE CLASSIC**

### **ASSEMBLY INSTRUCTIONS**


**PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!**

- 1) Connect the side rails(C,D) and headboard (A) / footboard (B) by bolt (2). Connect nut (3) to bolt (2) and tighten with wrench (5),as shown in diagram ①.
- 2) Screw the support leg (F) into the metal rod (E). Flip the component with the support leg (F) facing downwards.Place both ends of the metal rod (E) into the slots at the headboard and footboard.Connect with bolt (1), and tighten with wrench (6),as shown in diagram②.
- 3) Place the bed slats (H) into the slots on both sides of the side rails (C,D) and secure it with screws (4) from the back,as shown in diagram③.

**\*\*\* NOTE KEEP THIS SHEET \*\*\***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

<b>CLA-024-104H &amp; CLA-024-104F &amp; CLA-024-104R</b>				
<b>CAMPAIGN QUEEN BED HB &amp; FB &amp; SR</b>				
Part List				
NO.	Hardware List	Part Number	QTY	
A		Headboard	<b>CLA-024-104 H -0246</b>	1
B		Footboard	<b>CLA-024-104 F -0362</b>	1
C		LSF side rails	<b>CLA-024-104 R-068</b>	1
D		RSF side rails	<b>CLA-024-104 R-069</b>	1
E		Metal rod	<b>CLA-024-104 R-0184</b>	2
F		Support leg	<b>CLA-024-104 R-0305</b>	2
G		Decorative metal piece	<b>CLA-024-104 H&amp;F-0219</b>	4
H		Bed slats	<b>CLA-024-104 F-067</b>	15
I		Adjustable Floor Glide	<b>CLA-024-104 H&amp;F&amp;R-075</b>	6

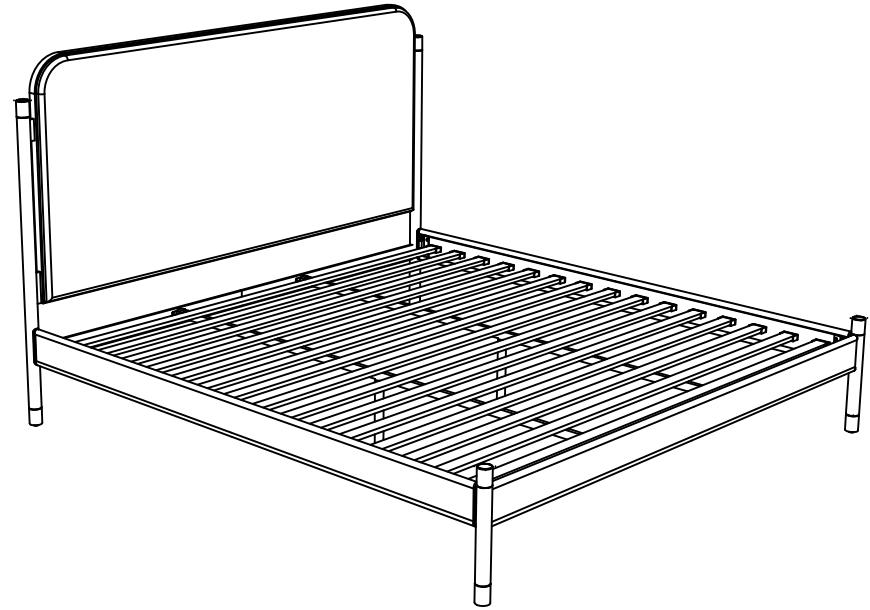

RTA Hardware			
Hardware List			QTY
1		M6*15mm	4
2		M8*40mm	8
3		M8	8
4		4*16mm	30
5		14mm	1
6		M4 Small Wrench	1

**CLA-024-104H&CLA-024-104F&CLA-024-104R**  
**CARACOLE CLASSIC**

Assembly steps:

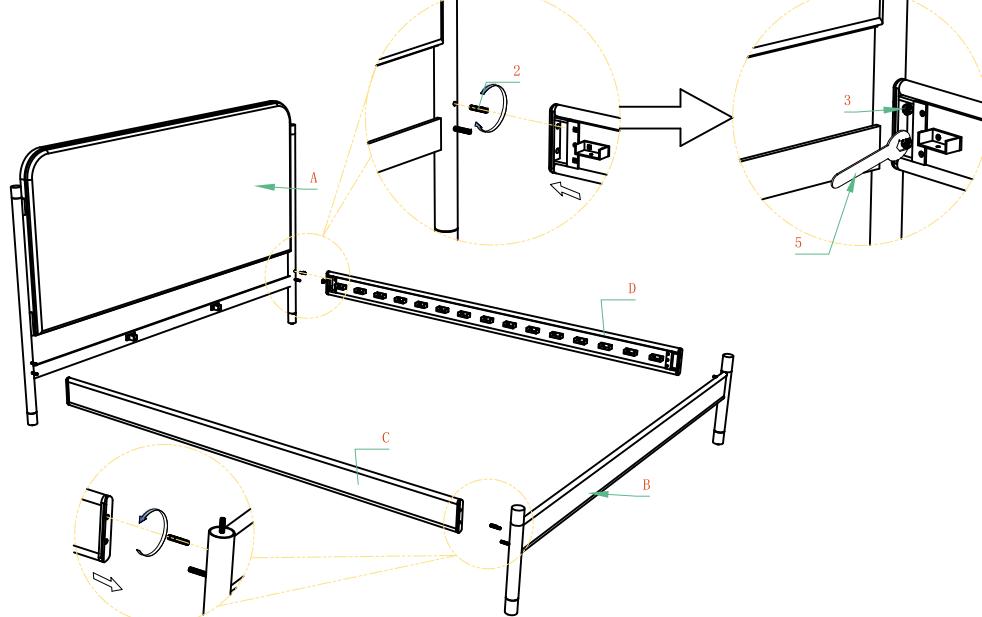


Diagram  
①

Diagram  
②

