


Alaterre Furniture


Wood Stool

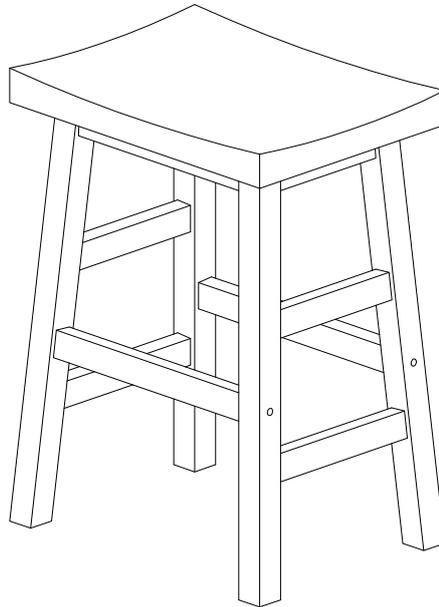

Thank you for purchasing the Wood Stool from ALATERRE FURNITURE. We have found it helpful to have a second person present during the assembly process.

Wood Stool Assembly Instructions

Parts

NO.	DRAWING	DESCRIPTION	QTY
A		TOP	1
B		SIDE ASSEMBLY	2
C		CROSS RAIL	2

NO.	DRAWING	DESCRIPTION	QTY
D		M6x60MM BOLT	8
E		M6x80MM BOLT	4
F		CROSS DOWELS	4
G		ALLEN KEY	1

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non-abrasive surface to prevent damage to the finish


Step 3

Lay Top Assembly (A) upside down on a non-abrasive surface. Attach Side Assembly (B) to underside of Seat using 4-M6x60MM Hex Bolts (D). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

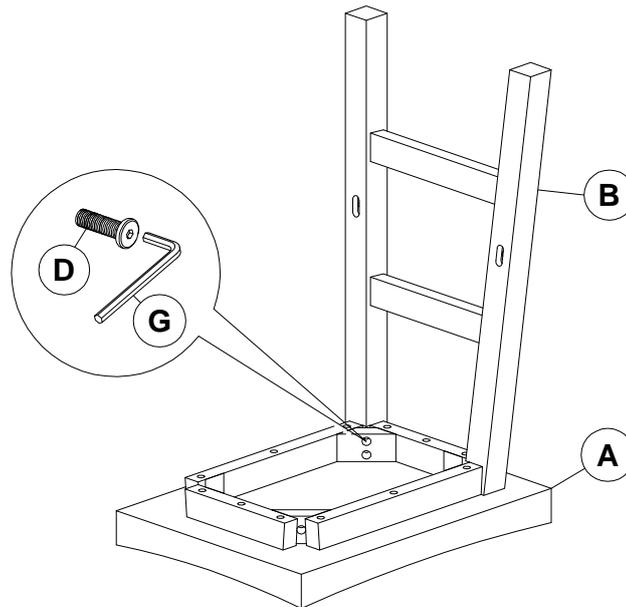



Step 4

Insert Cross Dowels (F) into the hole on Cross Rail (C). Attach Cross Rail (C) to Side Assembly (B) using 2-M6x80MM Hex Bolts (E). Align the Bolts thru the hole in Side Assembly (B) into the Cross Dowels (F) in the Cross Rail. NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

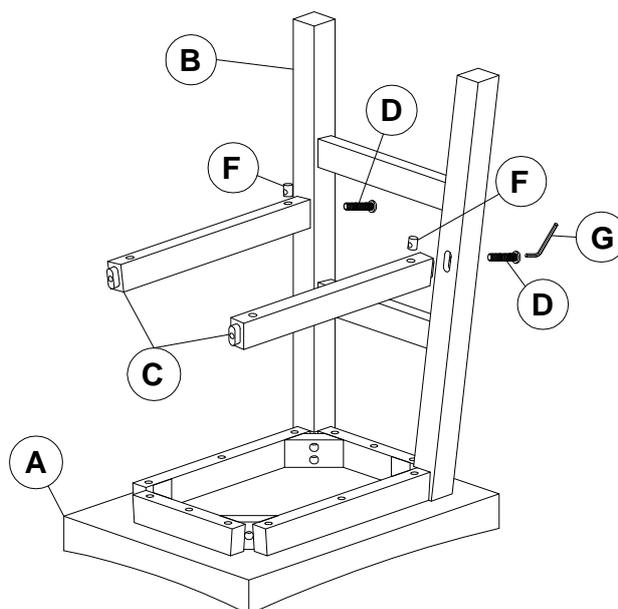

Step 5

Insert Cross Dowels (F) into the hole on Cross Rail (C). Attach Side Assembly (B) to underside of Seat using 4-M6x60MM Hex Bolts (D) to Cross Rails (C) using 2-M6x80MM Hex Bolts (E). Align the Bolts thru the hole in Side Assembly (B) into the Cross Dowels (F) in the Cross Rail. NOTE: TIGHTEN ALL BOLTS AT THIS TIME !

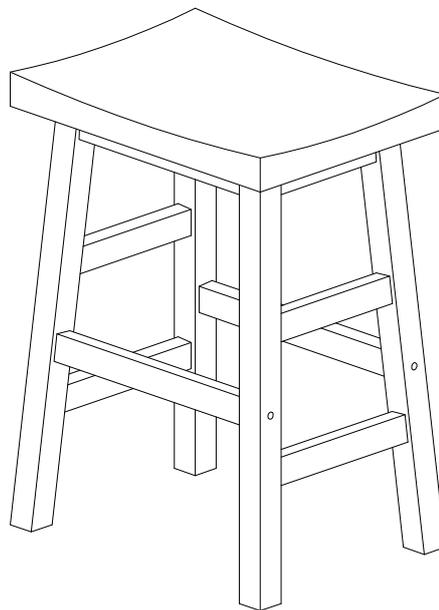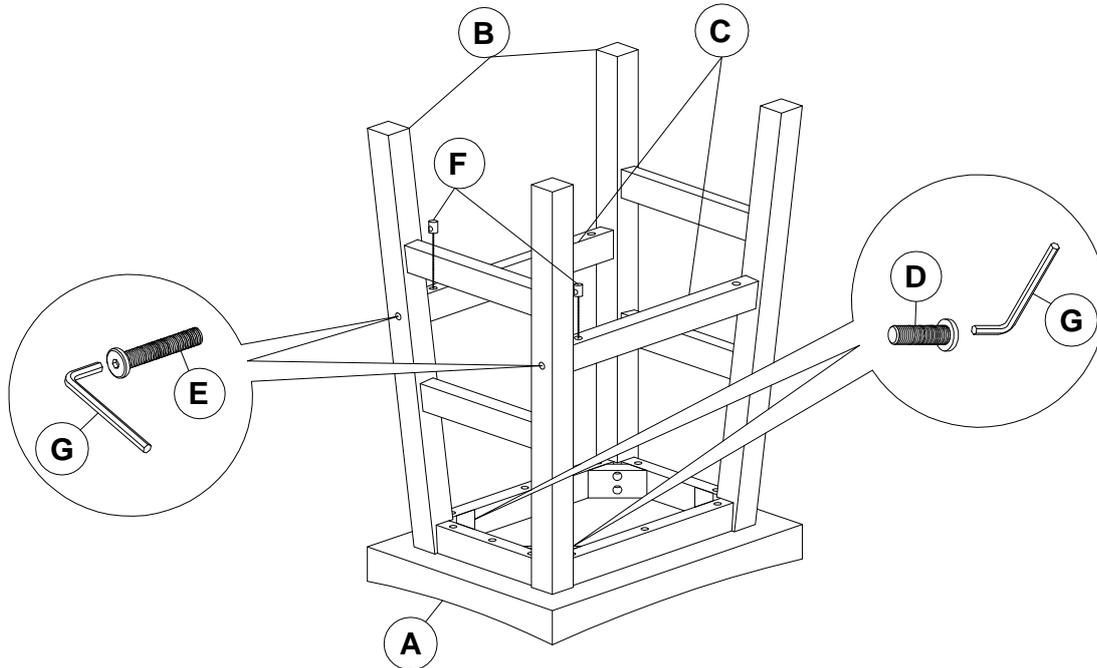

CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!