
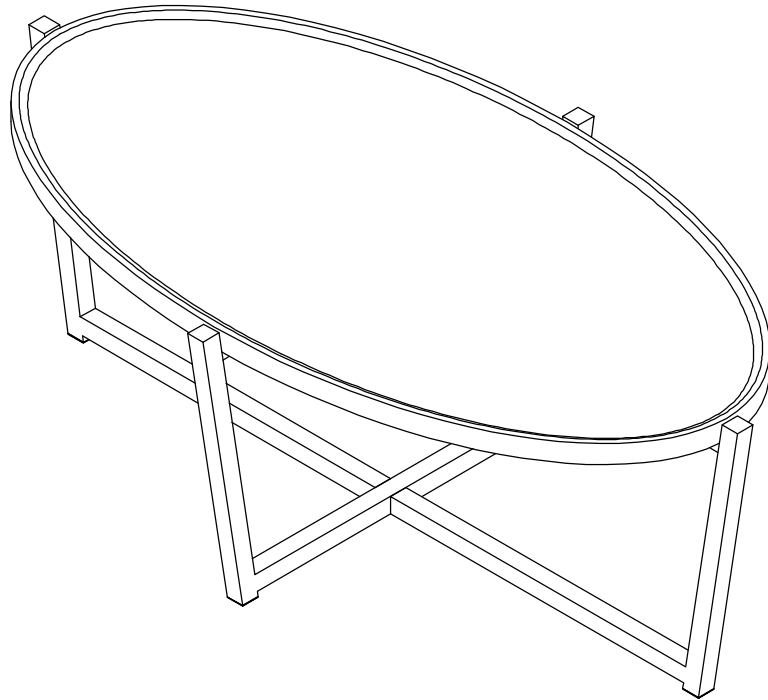
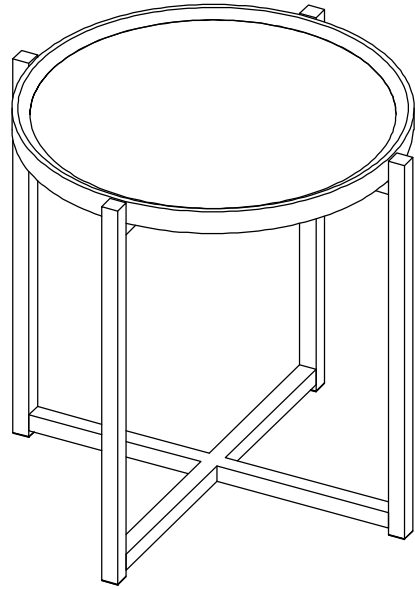







Landry Grey 3 Pack Occasional
Item #: CTLY300OTE
ASSEMBLY INSTRUCTIONS





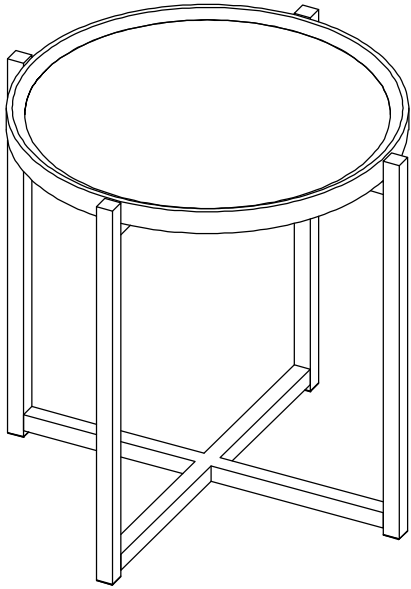



ASSEMBLY INSTRUCTIONS

Item #: CTLY300OTE


Please identify and locate all assembly parts (see parts list) before discarding any packing materials.
Some parts may have become loose during transit.

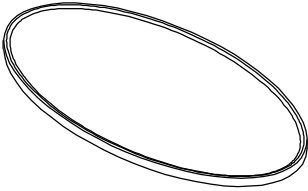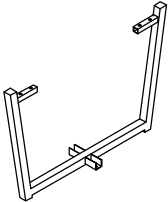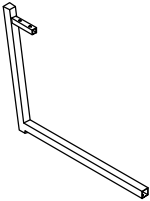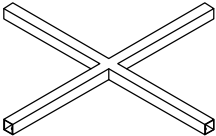PARTS LIST			
NO.	SKETCH	DESCRIPTION	QTY
1		COFFEE TABLE TOP PANEL	1PC
2		COFFEE TABLE FRAME	1PC
3		COFFEE TABLE CROSSBAR	2PCS
4		END TABLE TOP PANEL	2PCS
5		END TABLE FRAME	2PCS

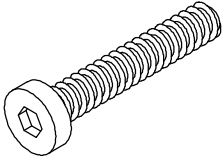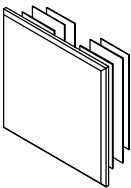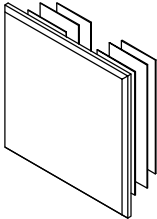
NO.	SKETCH	DESCRIPTION	QTY
6		END TABLE CROSSBAR	8PCS
7		SHORT BOLT 1/4" x 12mm	20PCS
8		LONG BOLT 1/4" x 32mm	24PCS
9		SMALL CAP 20 x 20mm	12PCS
10		MEDIUM CAP 25 x 25mm	8PCS
11		LARGE CAP 30 x 30mm	4PCS

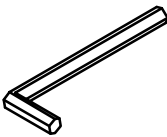NO.	SKETCH	DESCRIPTION	QTY
12		ALLEN KEY 4mm	1PC


NOTE: Do not tighten until each step is completed or instructed.

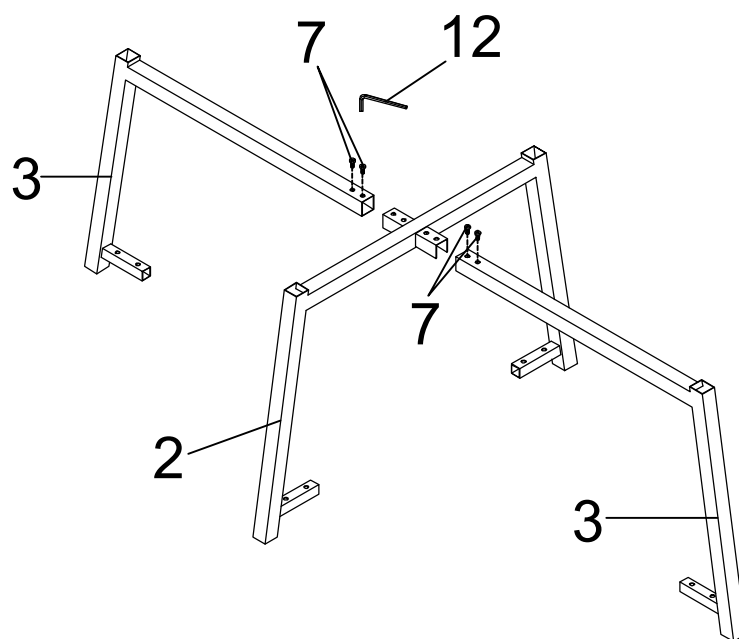


Step 1: Attach Coffee Table Crossbar (3) to Coffee Table Frame (2) using Short Bolt (7) with Allen Key (12) as shown.

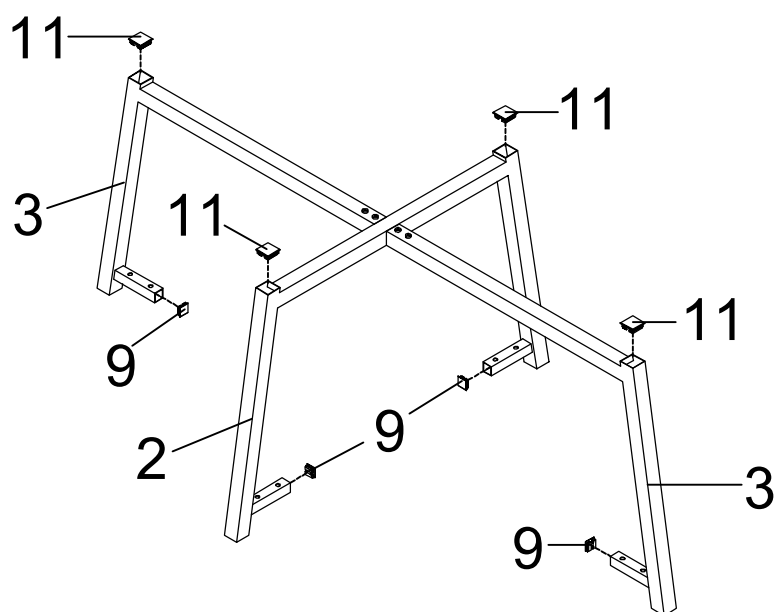


Step 2: Insert Large Cap (11) and Small Cap (9) onto Coffee Table Frame (2) and Coffee Table Crossbar (3) as shown.

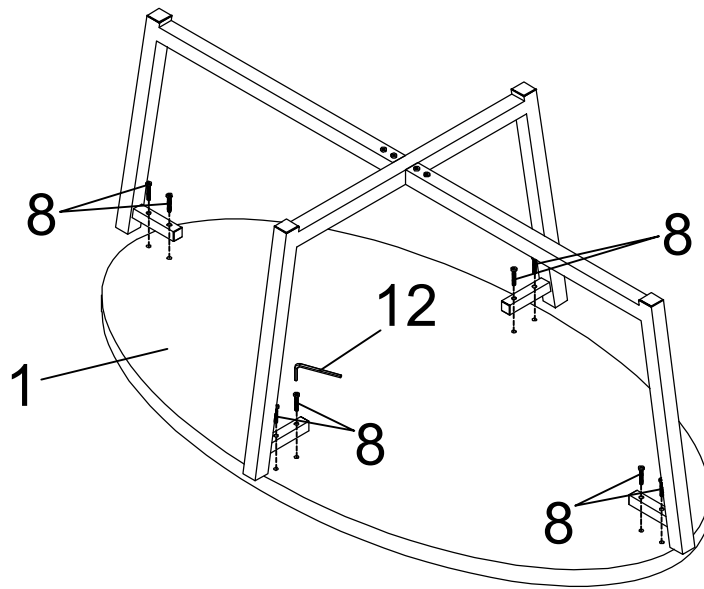


Step 3: Attach the assemble in Step 2 to Coffee Table Top Panel (1) using Long Bolt (8) with Allen Key (12) as shown.

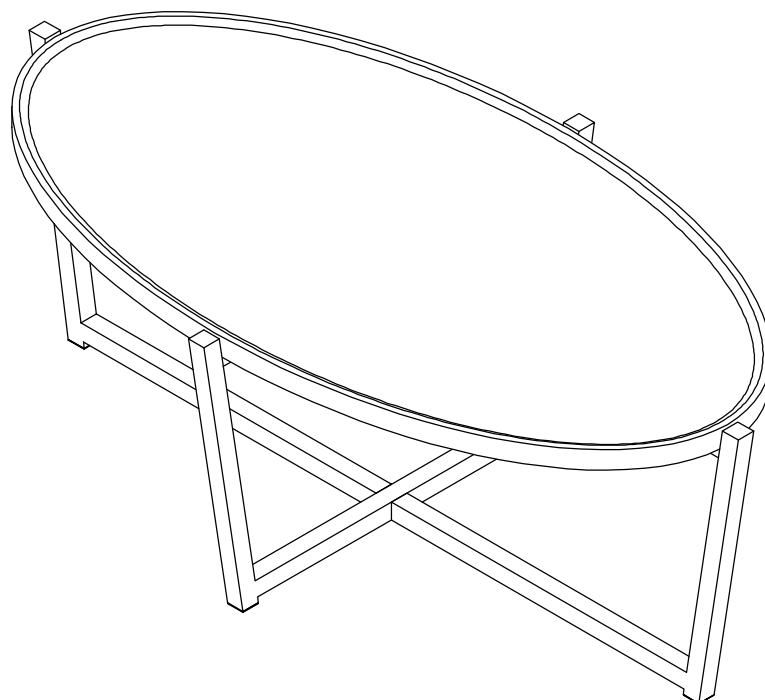


Complete. Congratulations on your assemble success.

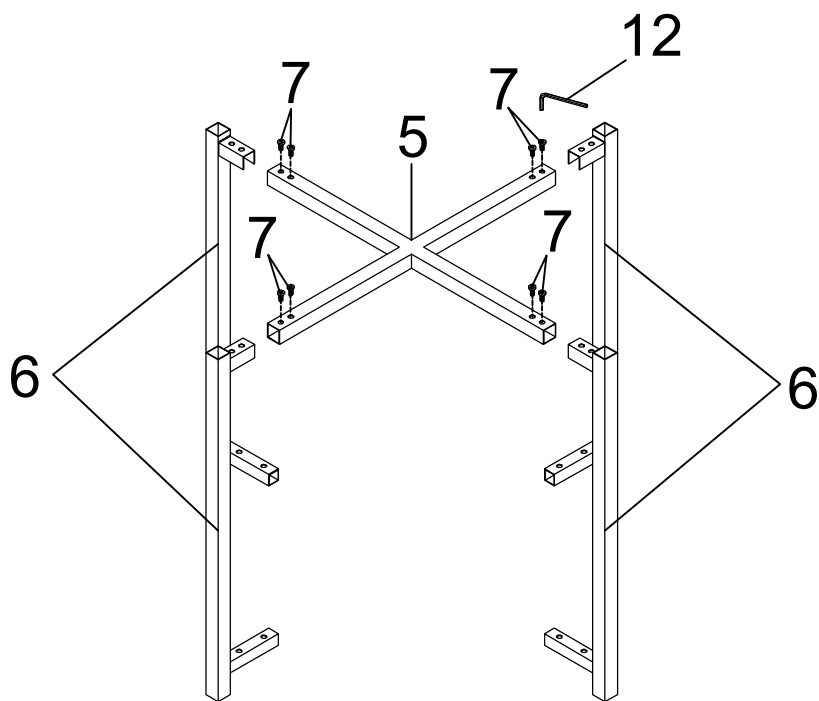


Step 4: Attach End Table Crossbar (6) to End Table Frame (5) using Short Bolt (7) with Allen Key (12) as shown.

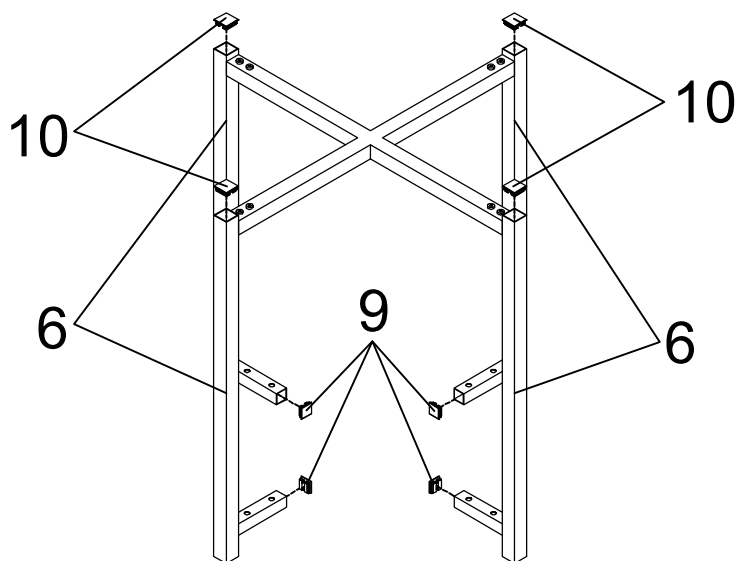

Step 5: Insert Medium Cap (10) and Small Cap (9) onto End Table Crossbar (6) as shown.

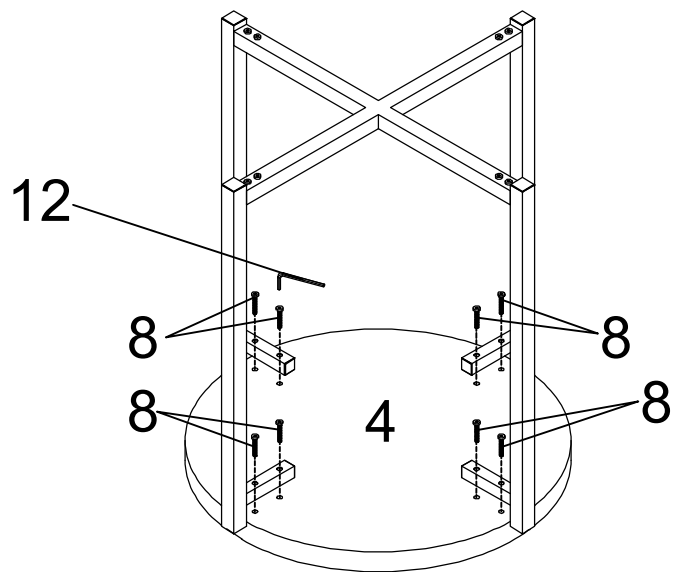

Step 6: Attach the assemble in Step 5 to End Table Top Panel (4) using Long Bolt (8) with Allen Key (12) as shown.

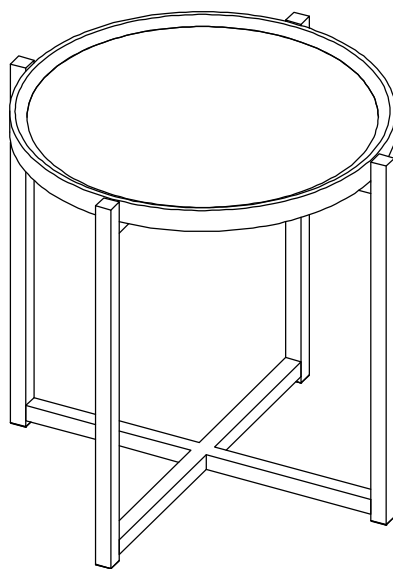

Complete. Congratulations on your assemble success.