



*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

108142
Side Chair

ITEM: 108142

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

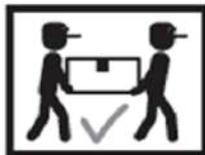

ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

| | | | | | | | |
|---|-----------------|--|-----|---|----------------------|--|-----|
| A | BACK FRAME | | 1PC | E | LEFT SIDE STRETCHER | | 1PC |
| B | SEAT | | 1PC | F | RIGHT SIDE STRETCHER | | 1PC |
| C | LEFT FRONT LEG | | 1PC | G | FRONT STRETCHER | | 1PC |
| D | RIGHT FRONT LEG | | 1PC | | | | |

HARDWARE IDENTIFICATION

| | | | | | | | |
|---|--------------------------------------|--|------|---|--------------------------------------|--|------|
| 1 | LONG BOLT (Ø1/4" x 75mm - RBW) | | 4PCS | 5 | FLAT WASHER (Ø5/16" x 19mm - RBW) | | 9PCS |
| 2 | MEDIUM BOLT (Ø1/4" x 60mm - RBW) | | 4PCS | 6 | FLAT HEAD SCREW (Ø4 x 40mm - RBW) | | 6PCS |
| 3 | SHORT BOLT (Ø1/4" x 35mm - RBW) | | 1PC | 7 | ALLEN WRENCH (M4 x 59mm - RBW) | | 1PC |
| 4 | LOCK WASHER (Ø5/16" x 13mm - RBW) | | 9PCS | | | | |


NOTE:

Phillips head screw driver is required in the assembly process. However, manufacturer does not provide this item.


ITEM: 108142

ASSEMBLY INSTRUCTIONS


STEP 1

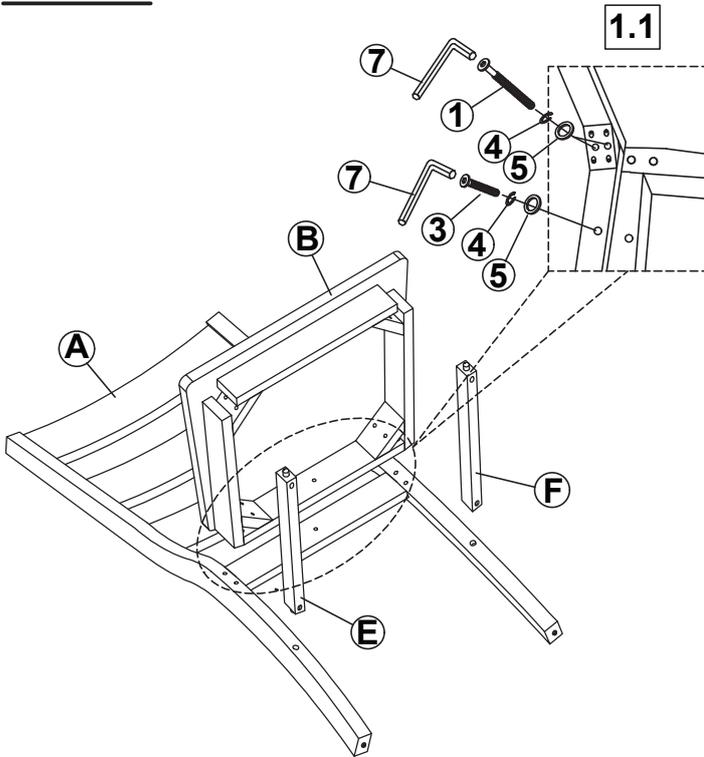


STEP 2

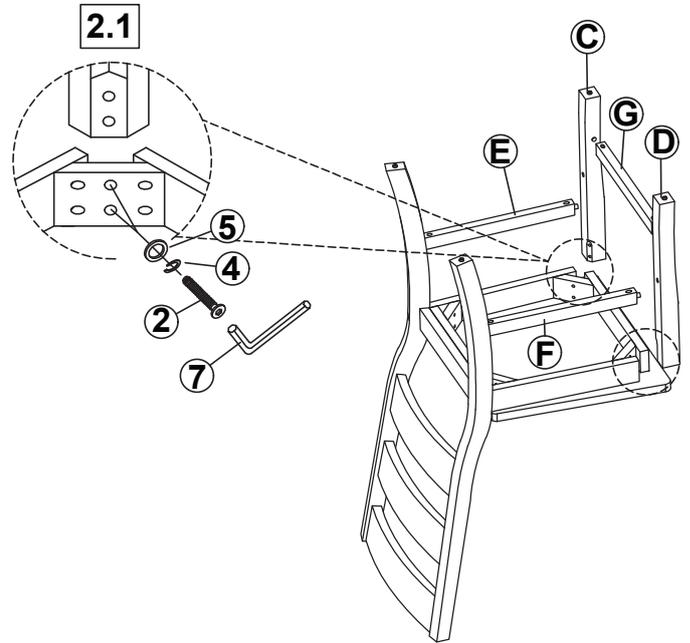


STEP 3

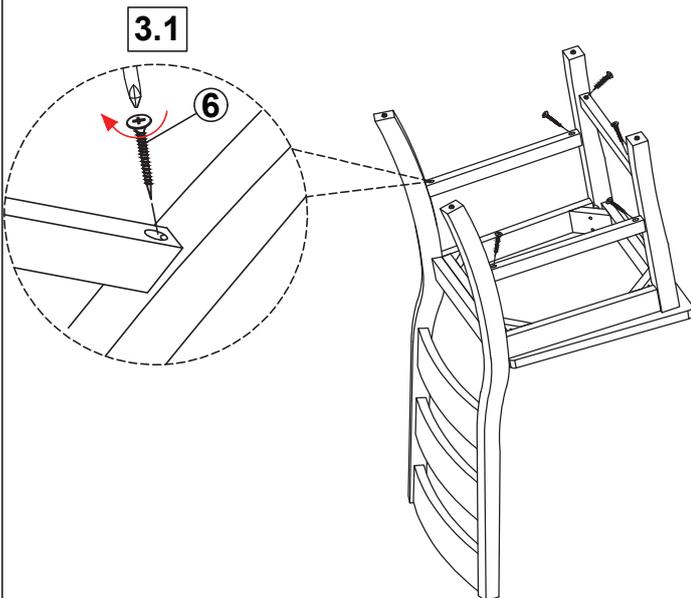

STEP 4 COMPLETE

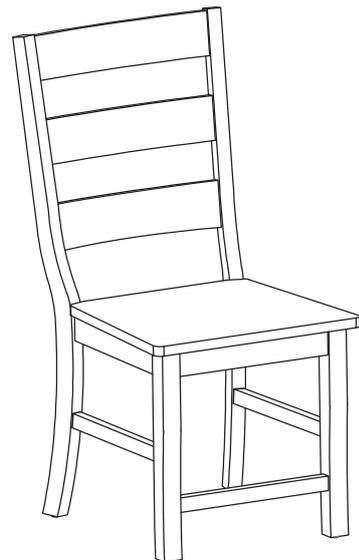

ITEM: 108142

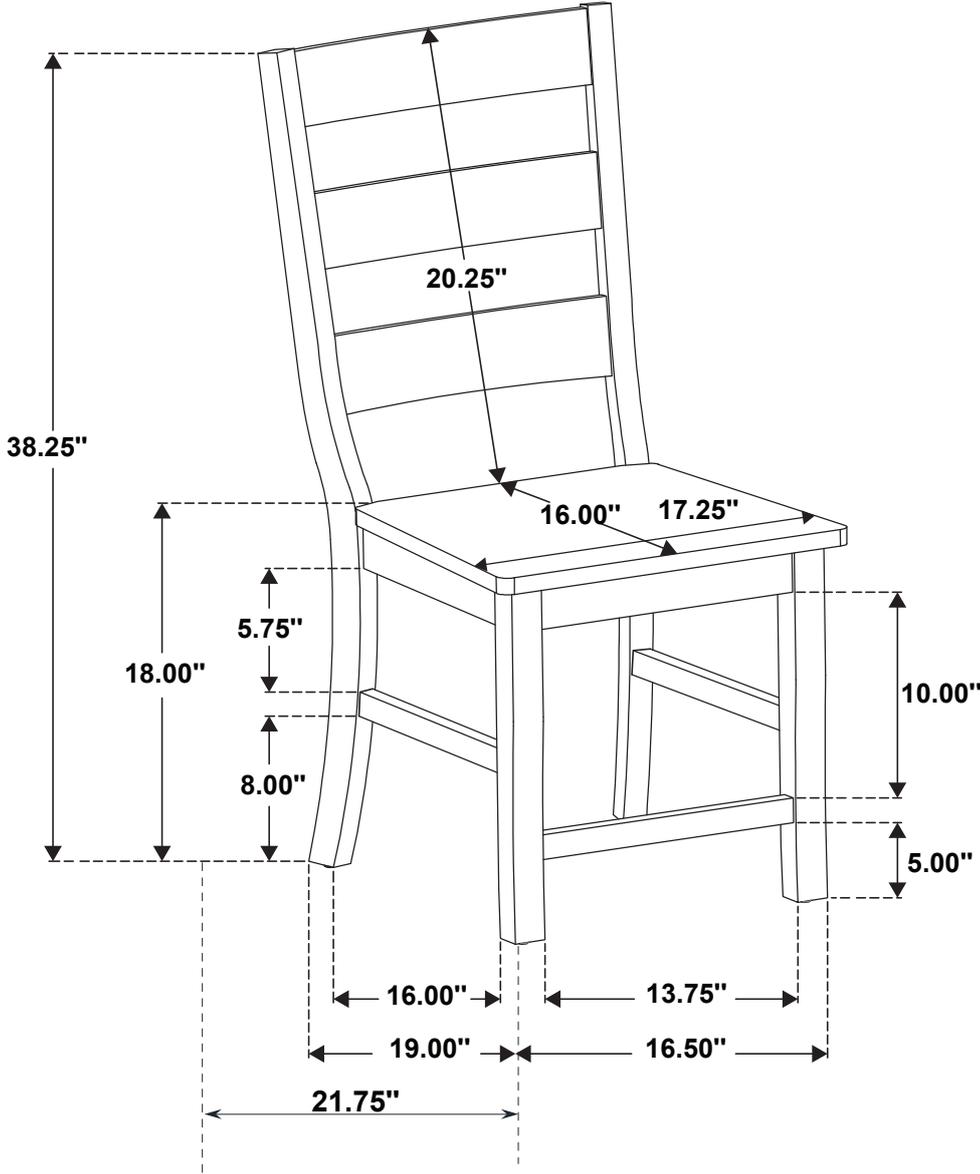

Note: Dimension tolerance $\pm 5\%$