


# GENEVA BED FULL/QUEEN SIZE ASSEMBLY INSTRUCTIONS



## PARTS AND FITTING PACKAGING DETAIL

### BOX #1

- P1. HEADBOARD 1 PC  
P2. WOODEN LEG 2 PCS

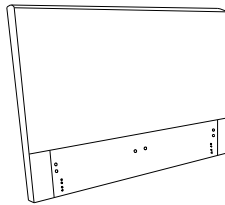


**P1**




**P2**

### BOX #2


- P3. FOOTBOARD 1 PC  
P4. SIDE RAIL 2 PCS  
P5. CENTER SLAT SUPPORT 1 PC  
P6. SLAT 26 PCS  
P7. WOODEN LEG 2 PCS  
P8. SIDE RAIL SLAT CLIP 26 PCS  
P9. CENTER SUPPORT SLAT CLIP 13 PCS  
P10. CENTER SUPPORT LEG 2 PCS

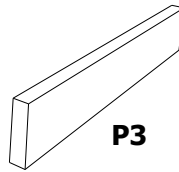


**P3**

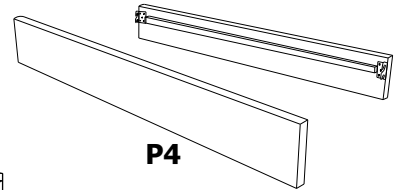


**P4**

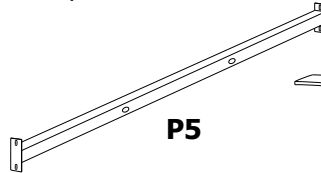


**P5**




**P6**




**P7**



**P8**




**P9**



**P10**

### GENEVA BED ASSEMBLED

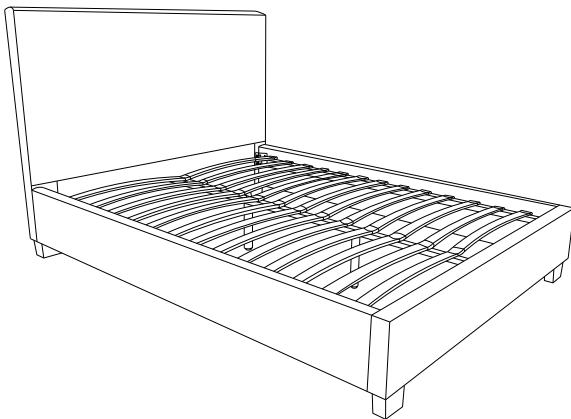

### HARDWARE\* PACKED IN BOX #1


A1	ALLEN KEY 5/16"	1 PC	A2	BOLT 5/16"*3.25"	4 PCS	A3	FLAT WASHER	4 PCS	A4	LOCK WASHER	4 PCS
A5	ALLEN KEY 1/4"	1 PC	A6	BOLT 1/4"*1"	8 PCS	A7	FLAT WASHER	8 PCS	A8	LOCK WASHER	8 PCS

### HARDWARE\* PACKED IN BOX #2


B1	ALLEN KEY 5/16"	1 PC	B2	SPANNER 5/16"	1 PC	B3	BOLT 5/16"*1"	4 PCS	B4	BOLT 5/16"*2.5"	4 PCS
B5	BOLT 5/16"*3.25"	4 PCS	B6	FLAT WASHER	16 PCS	B7	LOCK WASHER	12 PCS	B8	NUT 5/16"	4 PCS

**STEP 1:**

ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF HEADBOARD AND FOOTBOARD.

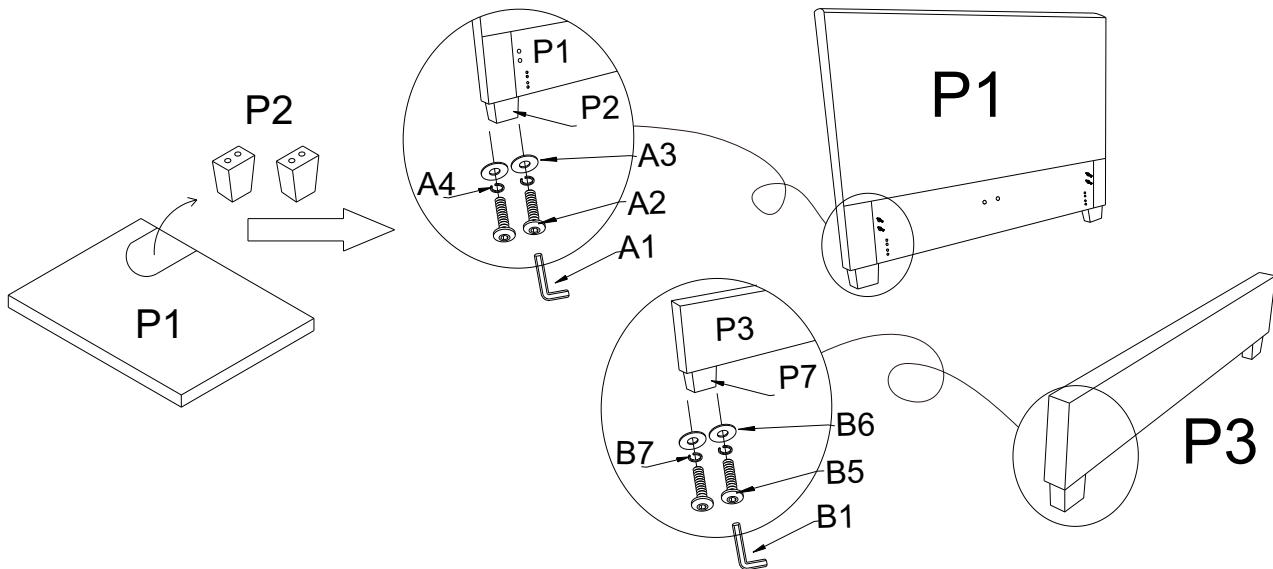**STEP 2 :**


LOOSEN THE BOLTS OF HEADBOARD(P1) & FOOTBOARD(P3). CONNECT THE SIDERAIL(P4) WITH HEADBOARD(P1) AND FOOTBOARD (P3) BY HOOK, TIGHTEN THE PRE-INSTALLED BOLTS BY WRENCH(B1).

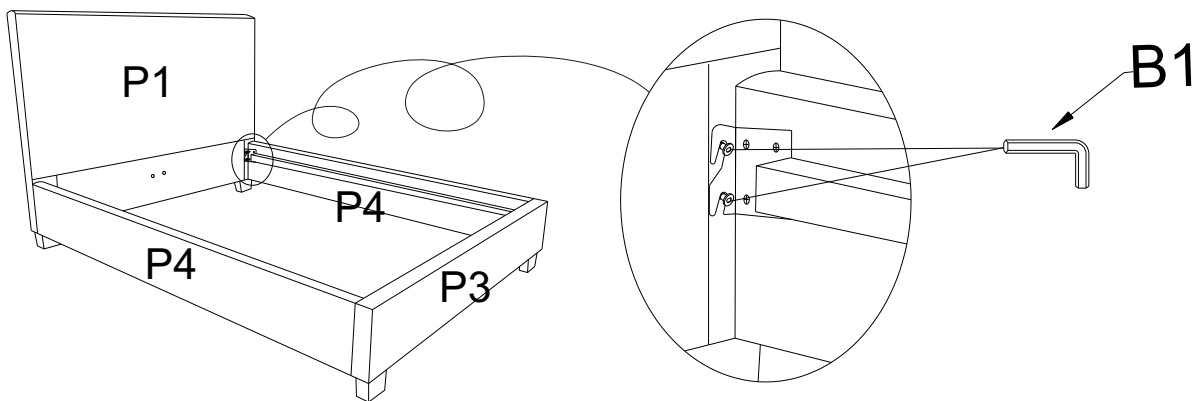**STOP**

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 3,4& 5 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 3.


**STEP 3 :**

CONNECT THE METAL TUBE TO THE HEADBOARD & FOOTBOARD WITH BOLT(B3) BY WRENCH(B1).ASSEMBLE THE SUPPORT LEG(P10) TO THE BOTTOM OF TUBE WITH BOLT (B4) BY WRENCH (B1) .

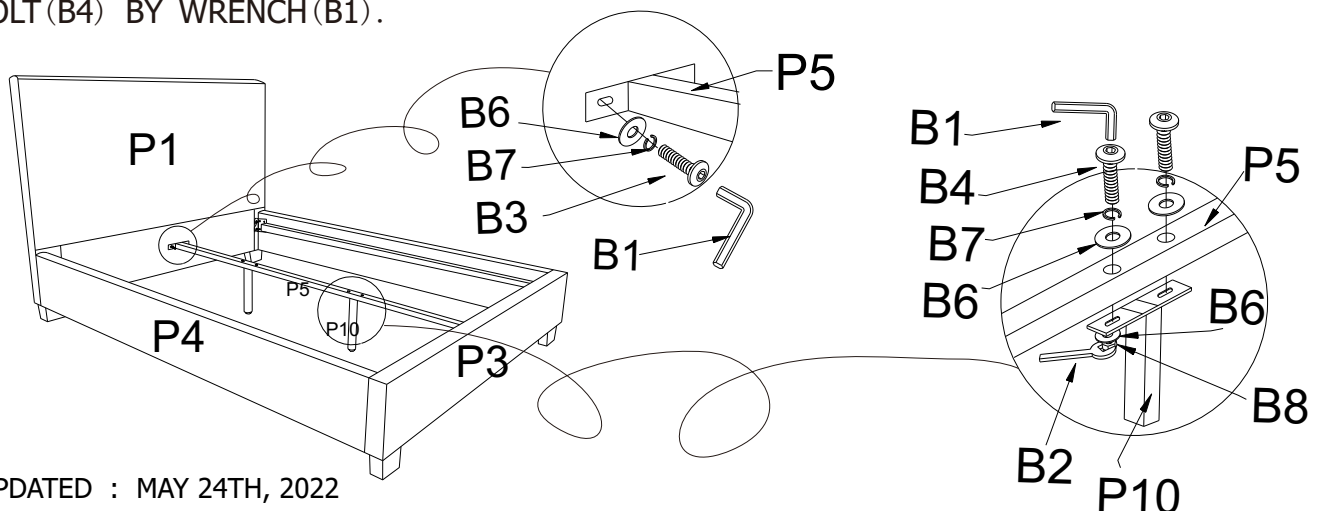


#### STEP 4 :

INSERT CLIPS(P8) TO SIDE RAILS' TUBE.INSERT SLATS TO THE CLIPS(P8),THEN CONNECT THE TWO SIDE'S OF THE SLATS TOGETHER BY CLIPS(P9).

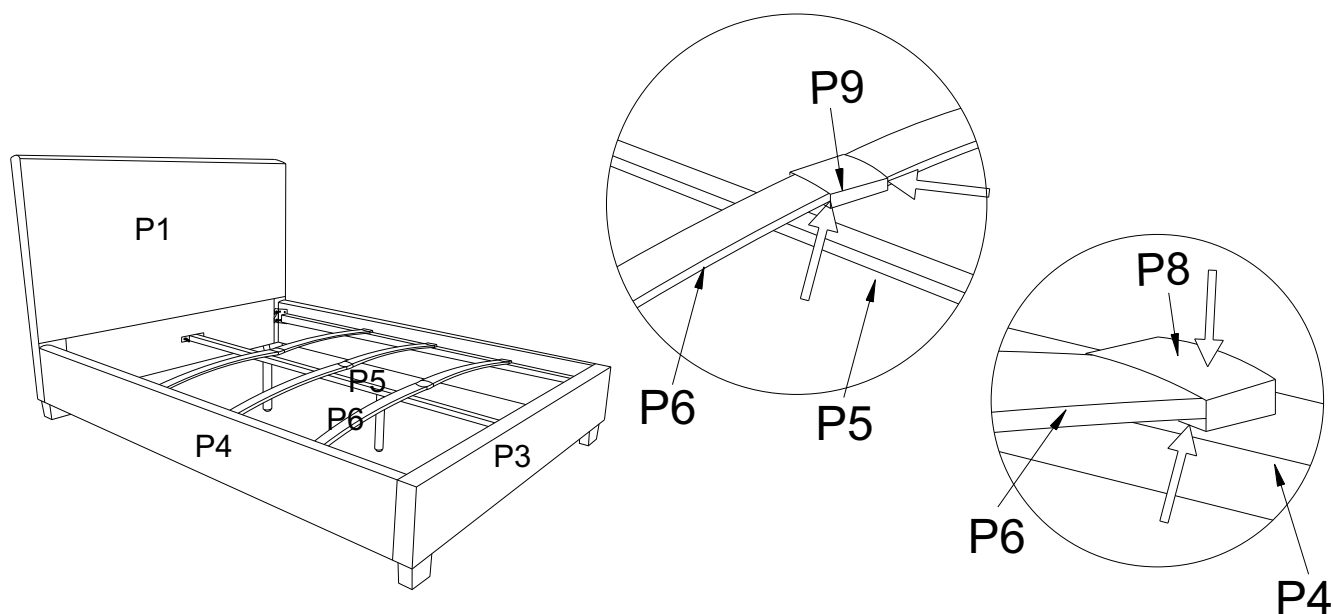

#### STEP 5 :

INSERT CLIPS(P9) INTO THE MIDDLE TUBE OF THE REMAINING SLATS TO THE BED FOUNDATION.

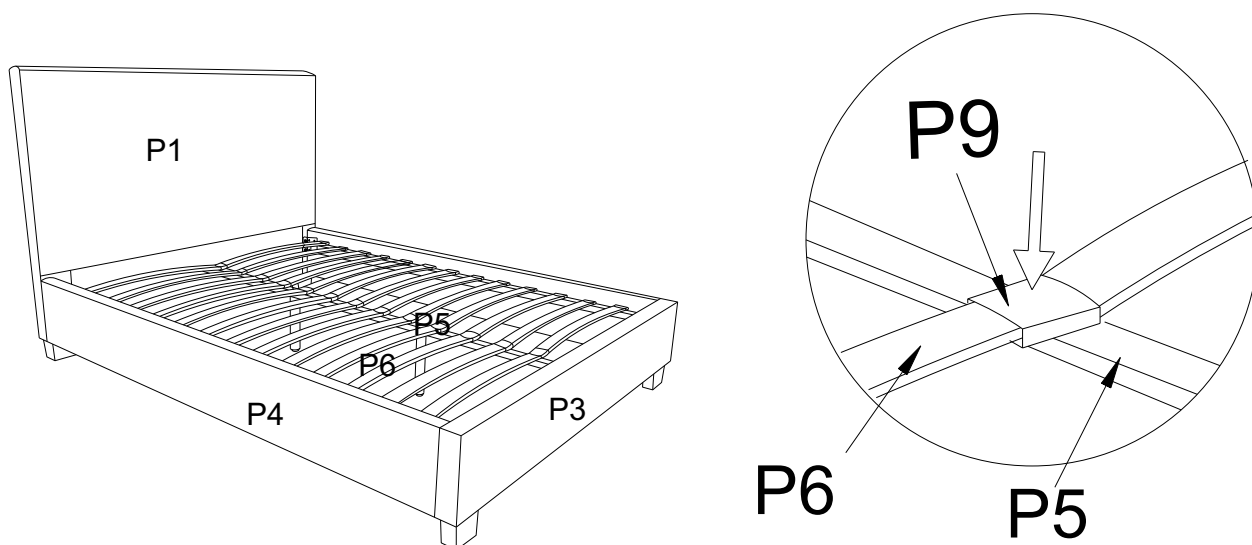


#### INSTRUCTIONS FOR ADJUSTING LEVELERS :

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
SUPPORT LEG (P10).

TURN COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG  
SUPPORT IS APPLYING EQUAL UPWARD  
PRESSURE ON THE CENTER SLAT.

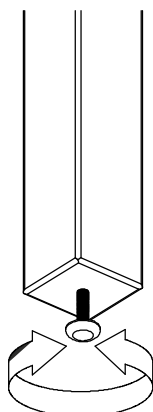

#### MAINTENANCE INSTRUCTIONS :

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# GENEVA BED FULL/QUEEN SIZE ASSEMBLY INSTRUCTIONS



## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### **WARNING!**


SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

### **THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:**

P5. CENTER SLAT SUPPORT	1 PC
P6. SLAT	26 PCS
P8. SIDE RAIL SLAT CLIP	26 PCS
P9. CENTER SUPPORT SLAT CLIP	13 PCS
P10. CENTER SUPPORT LEG	2 PCS

### **STEP 1 :**

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO UNSCREW THE PHILLIPS SCREWS AND REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

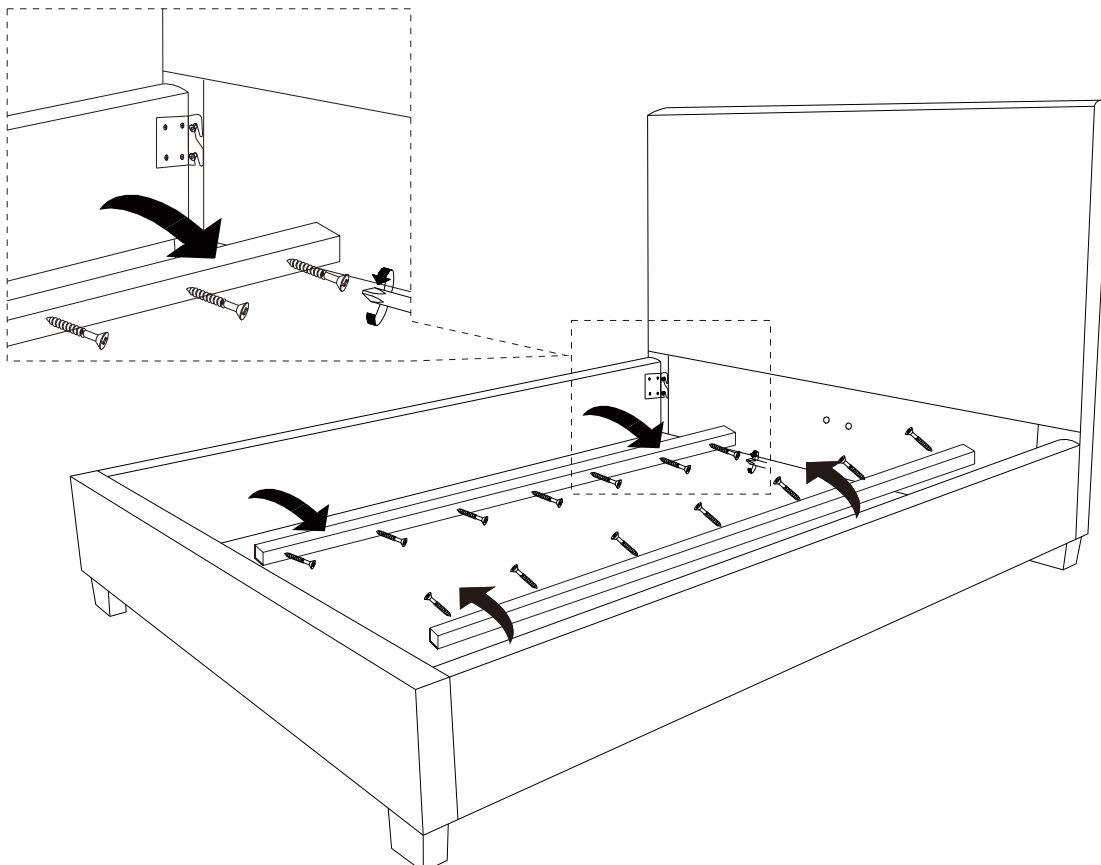


# GENEVA BED C.KING/E.KING ASSEMBLY INSTRUCTIONS




## PARTS AND FITTING PACKAGING DETAIL

### BOX #1

- P1. HEADBOARD 1 PC  
P2. WOODEN LEG 2 PCS

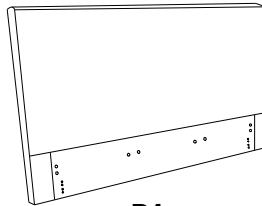


P1




P2

### BOX #2


- P3. FOOTBOARD 1 PC  
P4. SIDE RAIL 2 PCS  
P5. CENTER SLAT SUPPORT 2 PCS  
P6. SLAT 39 PCS  
P7. WOODEN LEG 2 PCS  
P8. SIDE RAIL SLAT CLIP 26 PCS  
P9. CENTER SUPPORT SLAT CLIP 26 PCS  
P10. CENTER SUPPORT LEG 4 PCS

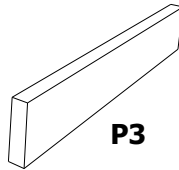


P3

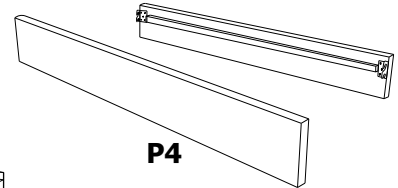


P4

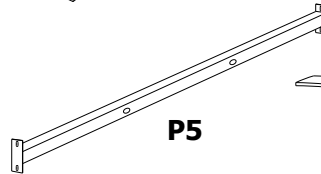


P5



P6




P7



P8




P9



P10

### GENEVA BED ASSEMBLED

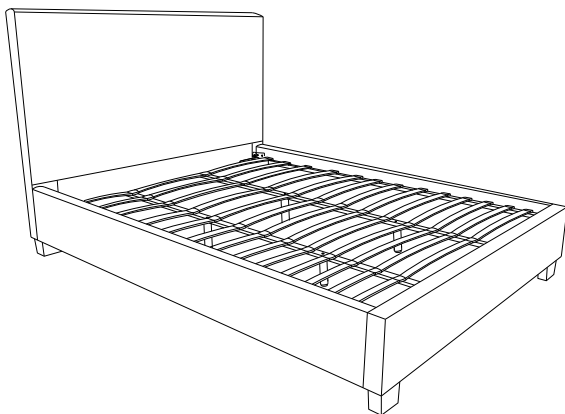

### HARDWARE\* PACKED IN BOX #1


A1	ALLEN KEY 5/16"	1 PC	A2	BOLT 5/16"*3.25"	4 PCS	A3	FLAT WASHER	4 PCS	A4	LOCK WASHER	4 PCS
A5	ALLEN KEY 1/4"	1 PC	A6	BOLT 1/4"*1"	8 PCS	A7	FLAT WASHER	8 PCS	A8	LOCK WASHER	8 PCS

### HARDWARE\* PACKED IN BOX #2


B1	ALLEN KEY 5/16"	1 PC	B2	SPANNER 5/16"	1 PC	B3	BOLT 5/16"*1"	8 PCS	B4	BOLT 5/16"*2.5"	8 PCS
B5	BOLT 5/16"*3.25"	4 PCS	B6	FLAT WASHER	28 PCS	B7	LOCK WASHER	20 PCS	B8	NUT 5/16"	8 PCS

**STEP 1:**

ASSEMBLE THE WOODEN LEGS TO THE BOTTOM OF HEADBOARD AND FOOTBOARD.

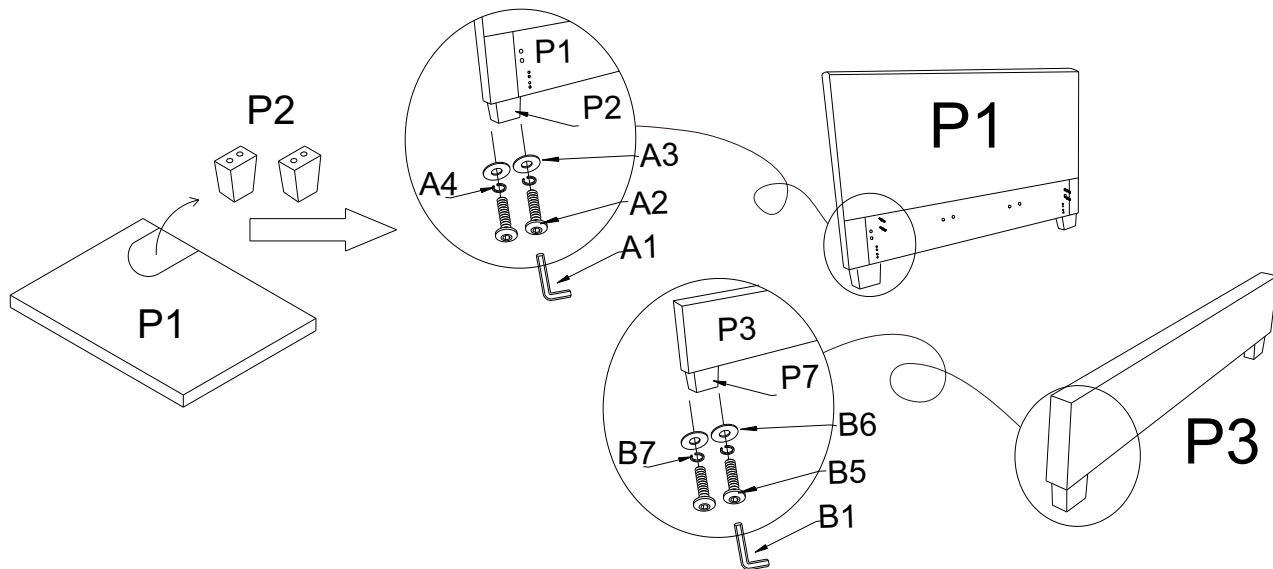**STEP 2 :**


LOOSEN THE BOLTS OF HEADBOARD(P1) & FOOTBOARD(P3). CONNECT THE SIDERAIL(P4) WITH HEADBOARD(P1) AND FOOTBOARD (P3) BY HOOK, TIGHTEN THE PRE-INSTALLED BOLTS BY WRENCH(B1).

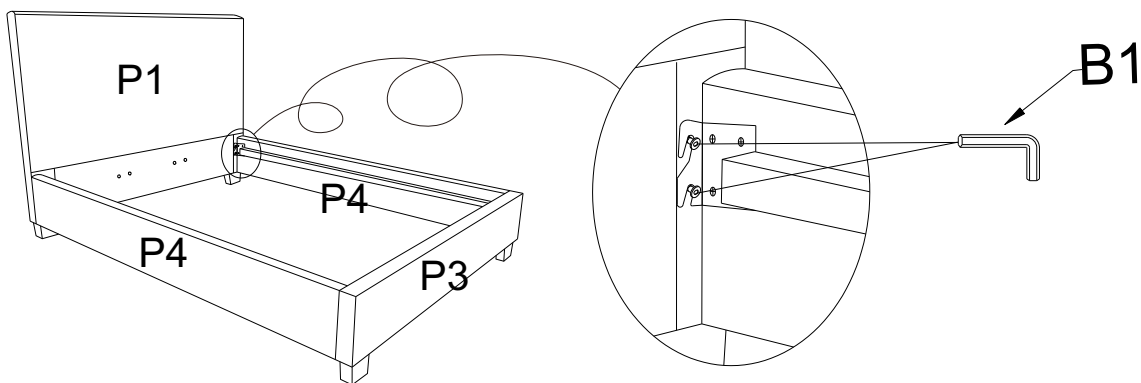**STOP**

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 3,4& 5 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 3.


**STEP 3 :**

CONNECT THE METAL TUBE TO THE HEADBOARD & FOOTBOARD WITH BOLT(B3) BY WRENCH(B1). ASSEMBLE THE SUPPORT LEG(P10) TO THE BOTTOM OF TUBE WITH BOLT (B4) BY WRENCH (B1).

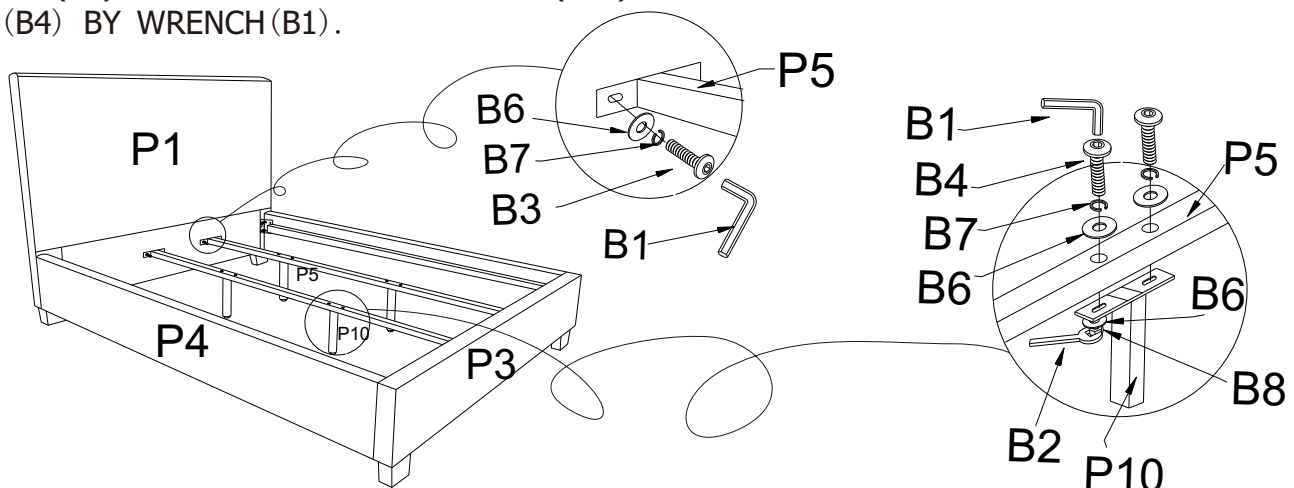


#### STEP 4 :

INSERT CLIPS(P8) TO SIDE RAILS' TUBE.INSERT SLATS TO THE CLIPS(P8),THEN CONNECT THE TWO SIDE'S OF THE SLATS TOGETHER BY CLIPS(P9).

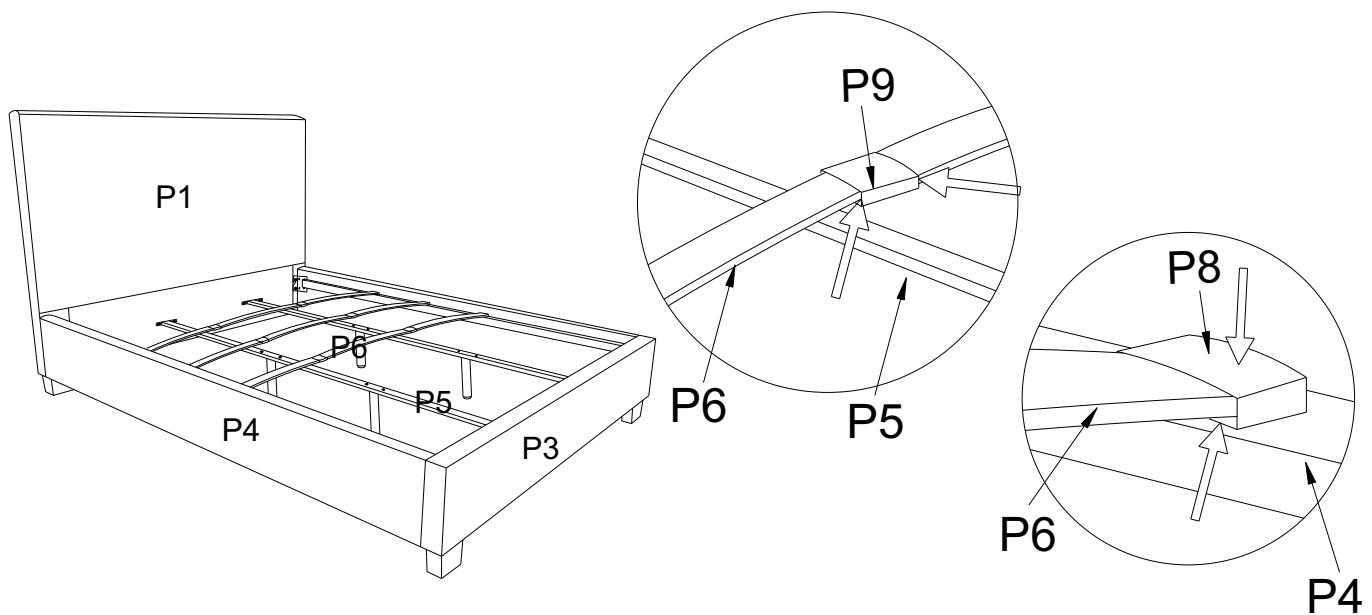

#### STEP 5 :

INSERT CLIPS(P9) INTO THE MIDDLE TUBES OF THE REMAINING SLATS TO THE BED FOUNDATION.

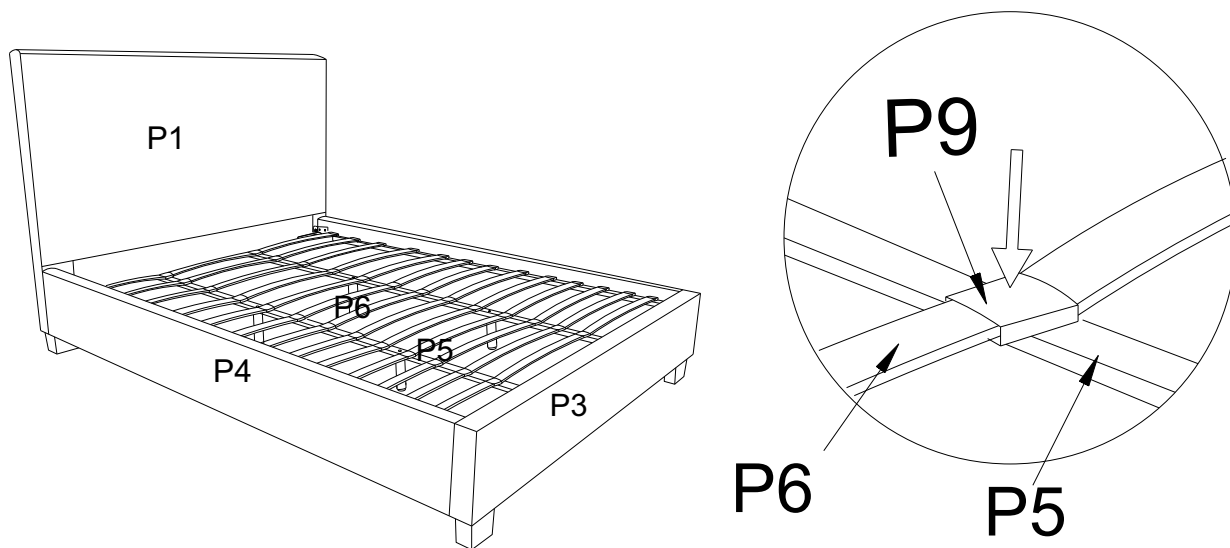


#### INSTRUCTIONS FOR ADJUSTING LEVELERS :

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
SUPPORT LEG (P10).

TURN COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG  
SUPPORT IS APPLYING EQUAL UPWARD  
PRESSURE ON THE CENTER SLAT.

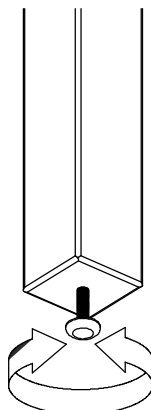

#### MAINTENANCE INSTRUCTIONS :

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.

# GENEVA BED C.KING/E.KING ASSEMBLY INSTRUCTIONS



## APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### **WARNING!**

SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

### **THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:**

P5. CENTER SLAT SUPPORT	2 PCS
P6. SLAT	39 PCS
P8. SIDE RAIL SLAT CLIP	26 PCS
P9. CENTER SUPPORT SLAT CLIP	26 PCS
P10. CENTER SUPPORT LEG	4 PCS

### **STEP 1 :**

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO UNSCREW THE PHILLIPS SCREWS AND REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

